NFPA 70B

Recommended Practice for

Electrical Equipment Maintenance

2006 Edition

Copyright © 2006, National Fire Protection Association, All Rights Reserved

This edition of NFPA 70B, *Recommended Practice for Electrical Equipment Maintenance*, was prepared by the Technical Committee on Electrical Equipment Maintenance. It was issued by the Standards Council on January 27, 2006, with an effective date of February 16, 2006, and supersedes all previous editions.

This edition of NFPA 70B was approved as an American National Standard on February 16, 2006.

Origin and Development of NFPA 70B

In the fall of 1967, the Board of Directors of the National Fire Protection Association authorized the formation of an Ad Hoc Committee on Electrical Equipment Maintenance to determine the need for the development of a suitable document on this subject. The purpose of the document would be to give recommendations on the maintenance of various types of electrical installations, apparatus, and equipment usually found in industrial and large commercial-type installations. Various highly diversified interests and organizations were invited to participate.

At a meeting of the Ad Hoc Committee held January 10, 1968, in New York, with 31 representatives attending, it was pointed out that several requests had been made to the National Electrical Code Committee to include maintenance recommendations in the *National Electrical Code®*. The subject had been discussed by the Correlating Committee of the National Electrical Code Committee, and the decision was made that the Code was not the proper document in which to cover the maintenance of electrical equipment. However, the high frequency of electrical accidents attributed to lack of maintenance, which results annually in numerous fatalities and serious injuries as well as high monetary losses of property, caused the committee to recognize that it was a subject requiring attention.

It was noted that electrical safety information breaks down logically into four main subdivisions: (1) design or product standards, (2) installation standards (as covered by the *National Electrical Code* and the *National Electrical Safety Code*), (3) maintenance recommendations, and (4) use instructions. The problem was to explore whether something Copyright NFPA

more should be done in the interest of electrical safety on the maintenance of electrical equipment and what form activity in this field should take.

It was recognized that much had been done to enunciate maintenance needs for specific types of equipment by the equipment manufacturers and that guidance was available on the general subject from a number of sources. However, it was also felt to be desirable to bring together some of the general guidelines in a single document under the NFPA procedure. The stature of the document would also be enhanced if it could in some way become associated with the *National Electrical Code*. To this end, a tentative scope was drafted for presentation to the Board of Directors of the National Fire Protection Association with a recommendation that an NFPA Committee on Electrical Equipment Maintenance be authorized.

On June 27, 1968, the NFPA Board of Directors authorized the establishment of an NFPA Committee on Electrical Equipment Maintenance with the following scope: "To develop suitable texts relating to preventive maintenance of electrical systems and equipment used in industrial-type applications with the view of reducing loss of life and property. The purpose is to correlate generally applicable procedures for preventive maintenance that have broad application to the more common classes of industrial electrical systems and equipment without duplicating or superseding instructions that manufacturers normally provide. Reports to the Association through the Correlating Committee of the National Electrical Code Committee"

The committee was formed, and an organizational meeting was held December 12, 1968, in Boston. Twenty-nine members or representatives attended. The *Recommended Practice for Electrical Equipment Maintenance* represented the cumulative effort of the entire committee.

In 1973, the committee developed Part II, which became Chapters 5 through 15, and a new addition in the Appendix, "How to Instruct."

In 1976, the committee developed the chapters on Electronic Equipment, Ground-Fault Protection, Wiring Devices, and Maintenance of Electrical Equipment Subject to Long Intervals Between Shutdowns, and new additions in the Appendix, "NEMA Configurations," and "Long-Term Maintenance Guidelines."

In the 1983 edition, the committee developed the chapters on Deenergizing and Grounding of Equipment to Provide Protection for Electrical Maintenance Personnel and on Cable Tray Systems and added Appendix I, "Equipment Storage and Maintenance During Construction."

In the 1987 edition, the committee reorganized and reformatted the former Chapter 7, now Chapter 9, to include distribution transformers as well as power transformers.

In the 1990 edition, the committee developed the chapter on Uninterruptible Power Supply (UPS) Systems. This new chapter was developed with a significant contribution from several nonmembers who joined the Ad Hoc Technical Subcommittee to produce this new material. The committee recognized and extended its appreciation to Mr. Robert Adams, Liebert Corporation; Mr. Russ Grose, Liebert Corporation; and Mr. Ronald Mundt, U.S. Army Corps of Engineers. The chapter on Testing and Test Methods was amended by the addition of diagrams of different wave shapes for detecting problems in motors and generators using Copyright NFPA

surge testing.

In the 1994 edition, the committee added three new chapters to cover power system studies that include short circuit studies, coordination studies, load-flow studies, and reliability studies; power quality and information pertaining to harmonics, the problems created by harmonic distortion, causes of harmonic distortion, harmonic surveying and testing, and recommended solutions to harmonic problems; and vibration analysis pertaining to rotating machinery. The third new chapter included a table on suggested vibration limits and a vibration severity chart for various-sized machines. To more closely follow the NFPA *Manual of Style*, a new Referenced Publications chapter was created. Also, the Bibliography was moved to Appendix J.

For the 1998 edition, the chapter on Power Quality was rewritten and greatly expanded. In addition, the committee updated and revised maintenance techniques for stationary batteries and infrared inspections. Special handling and disposal considerations were introduced, and employee training was focused to emphasize workplace safety.

In the 2002 edition, the committee made several enhancements. The document was restructured to comply with the NFPA *Manual of Style*. The document scope was revised to include preventive maintenance for electronic and communications equipment. A new chapter added for Grounding provided definitions, symptoms, inspection, testing techniques, and solutions to grounding issues. A new section for Gas Insulated Substations was added to Chapter 8 to address the maintenance issues on industrial sites resulting from regulatory changes in the electrical utility industry. Charts were added in Chapter 11 for motor control troubleshooting for motor controllers, switchboards, and panelboards. Chapter 27 was enhanced with information on the latest technology on voltage fluctuation. A new annex was added that specified maintenance intervals for electrical equipment.

The 2006 edition of NFPA 70B includes a significant change concerning safety. Whereas safety precautions and information in previous editions were dispersed throughout the individual equipment chapters, an entire new chapter on safety has been written and placed up front in the document to provide more complete and updated coverage, as well as to emphasize the importance of safety. A series of updated test forms appears in Annex F, revised testing schedules in Chapter 21, and maintenance of supervisory control and data acquisition (SCADA) systems in Chapter 30. An important part of maintenance is having a properly installed system with baseline performance data, and so a new chapter on commissioning the electrical system at a new facility has been added. Because the industry trend is going from routine maintenance to reliability-centered maintenance (RCM), a chapter on how to apply RCM and an extensive annex with detailed reliability data on many types of electrical equipment also have been added. Finally, revisions have been made to update information on equipment cleaning, disconnects, busways, vibration testing, lamps, power quality, and rework and recertification of equipment.

Technical Committee on Electrical Equipment Maintenance

Richard Bingham, *Chair* Dranetz-BMI, NJ [M]

Daniel W. Baker, GE Global Asset Protection Services, NC [I] Rep. GE Global Asset Protection Services

Thomas H. Bishop, Electrical Apparatus Service Association, MO [IM] Rep. Electrical Apparatus Service Association

Jeffrey Hall, Underwriters Laboratories Inc., NC [RT]

Palmer L. Hickman, National Joint Apprentice & Training Committee, MD [L] Rep. International Brotherhood of Electrical Workers

Dick Lussier, Jr., Northeast Electrical Testing Inc., NH [IM] Rep. InterNational Electrical Testing Association, Inc.

Alan Manche, Schneider Electric/Square D Company, KY [M] Rep. National Electrical Manufacturers Association

Ahmad A. Moshiri, Liebert Global Services, OH [M]

Joseph Patterson Roché, Celanese Acetate, SC [M] Rep. American Chemistry Council

Melvin K. Sanders, Things Electrical Co., Inc. (TECo., Inc.), IA [U] Rep. Institute of Electrical & Electronics Engineers, Inc.

Evangelos Stoyas, U.S. Army Corps of Engineers, VA [U]

John W. Troglia, Edison Electric Institute, WI [U] Rep. Edison Electric Institute

Robert Urdinola, U.S. Department of State, DC [U]

Jack Wells, Pass & Seymour/Legrand, NC [M] Rep. National Electrical Manufacturers Association

Bruce G. Wyman, Mount Snow Ltd., VT [U]

Alternates

Timothy M. Croushore, Allegheny Power, PA [U] (Alt. to J. W. Troglia)

David Goodrich, Liebert Corporation, OH [M] (Alt. to A. A. Moshiri)

Michael J. Hittel, GM Worldwide Facilities Group, MI [U]

(Voting Alt. to GM Rep.)

Ronald K. Mundt, U.S. Army Corps of Engineers, VA [U] (Alt. to E. Stoyas)

Greg T. Nienaber, Connector Manufacturing Company, OH [M] (Alt. to J. Wells)

Michael Velvikis, High Voltage Maintenance Corporation, WI [IM] (Alt. to D. Lussier)

Nonvoting

Albert J. Reed, Macungie, PA (Member Emeritus)

Joseph V. Sheehan, NFPA Staff Liaison

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

Committee Scope: This Committee shall have the primary responsibility for documents relating to preventive maintenance of electrical, electronic, and communications systems and equipment used in industrial and commercial type applications with the view of: (1) reducing loss of life and property, and (2) improving reliability, performance, and efficiency in a cost-effective manner. The purpose is to provide generally applicable procedures for preventive maintenance that have broad application to the more common classes of industrial and commercial systems and equipment without duplicating or superseding instructions that manufacturers normally provide. This Committee shall have primary jurisdiction but shall report to the Association through the Technical Correlating Committee of the *National Electrical Code*.

NFPA 70B Recommended Practice for

Electrical Equipment Maintenance 2006 Edition

IMPORTANT NOTE: This NFPA document is made available for use subject to important notices and legal disclaimers. These notices and disclaimers appear in all publications containing this document and may be found under the heading "Important Notices and Disclaimers Concerning NFPA Documents." They can also be obtained on request from NFPA or viewed at www.nfpa.org/disclaimers.

NOTICE: An asterisk (*) following the number or letter designating a paragraph indicates that explanatory material on the paragraph can be found in Annex A.

Changes other than editorial are indicated by a vertical rule beside the paragraph, table, or figure in which the change occurred. These rules are included as an aid to the user in identifying changes from the previous edition. Where one or more complete paragraphs have been deleted, the deletion is indicated by a bullet (•) between the paragraphs that remain.

A reference in brackets [] following a section or paragraph indicates material that has been extracted from another NFPA document. As an aid to the user, the complete title and edition of the source documents for extracts in the recommendations sections of this document are given in Chapter 2 and those for extracts in the informational sections are given in Annex M. Editorial changes to extracted material consist of revising references to an appropriate division in this document or the inclusion of the document number with the division number when the reference is to the original document. Requests for interpretations or revisions of extracted text should be sent to the technical committee responsible for the source document.

Information on referenced publications can be found in Chapter 2 and Annex M.

Chapter 1 Administration

1.1 Scope.

- **1.1.1** This recommended practice applies to preventive maintenance for electrical, electronic, and communication systems and equipment and is not intended to duplicate or supersede instructions that manufacturers normally provide. Systems and equipment covered are typical of those installed in industrial plants, institutional and commercial buildings, and large multifamily residential complexes.
- **1.1.2** Consumer appliances and equipment intended primarily for use in the home are not included.

1.2 Purpose.

The purpose of this recommended practice is to reduce hazards to life and property that can result from failure or malfunction of industrial-type electrical systems and equipment.

- **1.2.1** Chapters 4, 5, and 6 of these recommendations for an effective electrical preventive maintenance (EPM) program have been prepared with the intent of providing a better understanding of benefits, both direct and intangible, that can be derived from a well-administered EPM program.
- **1.2.2** This recommended practice explains the function, requirements, and economic considerations that can be used to establish such an EPM program.

Chapter 2 Referenced Publications

2.1 General.

The documents or portions thereof listed in this chapter are referenced within this recommended practice and should be considered part of the recommendations of this document.

2.2 NFPA Publications.

National Fire Protection Association, 1 Batterymarch Park, Quincy, MA 02169-7471.

NFPA 70, National Electrical Code®, 2005 edition.

NFPA 70E, Standard for Electrical Safety in the Workplace, 2004 edition.

NFPA 496, Standard for Purged and Pressurized Enclosures for Electrical Equipment, 2003 edition.

2.3 Other Publications.

2.3.1 ANSI Publications.

American National Standards Institute, Inc., 25 West 43rd Street, 4th Floor, New York, NY 10036.

ANSI/EASA AR100, Recommended Practice for the Repair of Rotating Electrical Apparatus, 2001.

ANSI Z244.1, Personnel Protection — Lockout/Tagout of Energy Sources — Minimum Safety Requirements, 1982.

2.3.2 ASTM Publications.

American Society for Testing and Materials, 100 Barr Harbor Drive, West Conshohocken, PA 19428-2959.

•

ASTM D 664, Standard Test Method for Acid Number of Petroleum Products by Potentiometric Titration, 2001.

ASTM D 877, Standard Test Method for Dielectric Breakdown Voltage of Insulating Liquids Using Disk Electrodes, 2002.

ASTM D 923, Standard Test Method for Sampling Electrical Insulating Liquids, 1997.

ASTM D 924, Standard Test Method for Dissipation Factor (or Power Factor) and Relative Permittivity (Dielectric Constant) of Electrical Insulating Liquids, 2003.

ASTM D 971, Standard Test Methods for Interfacial Tension of Oil Against Water by the Ring Method, 1999a.

ASTM D 974, Standard Test Methods for Acid and Base Number by Color-Indicator Titration, 2002.

ASTM D 1500, Standard Test Method for ASTM Color of Petroleum Products, 2002.

ASTM D 1524, Standard Test Method for Visual Examination of Used Electrical Insulating

Oils of Petroleum Origin in the Field, 1994 (1999).

ASTM D 1534, Standard Test Method for Approximate Acidity in Electrical Insulating Liquids by Color-Indicator Titration, 1995 (2002).

ASTM D 1816, Standard Test Method for Dielectric Breakdown Voltage of Insulating Oils of Petroleum Origin Using VDE Electrodes, 1997.

ASTM D 2285, Standard Test Method for Interfacial Tension of Electrical Insulating Oils of Petroleum Origin Against Water by the Drop-Weight Method, 1999.

ASTM D 2472, Standard Specification for Sulfur Hexafluoride, 2000.

ASTM D 3284, Standard Test Methods for Combustible Gases in the Gas Space of Electrical Apparatus Using Portable Meters in the Field, 1999.

ASTM D 3612, Standard Test Method for Analysis of Gases Dissolved in Electrical Insulating Oil by Gas Chromatography, 2002.

2.3.3 IEEE Publications.

Institute of Electrical and Electronics Engineers, Three Park Avenue, 17th Floor, New York, NY 10016-5997.

•

ANSI/IEEE 43 (R 1991), Recommended Practice for Testing Insulation Resistance of Rotating Machinery, 2000.

ANSI/IEEE 62, Guide for Diagnostic Field Testing of Electric Power Apparatus—Part 1: Oil Filled Power Transformers, Regulators, and Reactors, 1995.

ANSI/IEEE 80, Guide for Safety in AC Substation Grounding, 1986.

ANSI/IEEE 95, Recommended Practice for Insulation Testing of AC Electric Machinery (2300 V and Above) with High Direct Voltage, 2002.

ANSI/IEEE 141, Recommended Practice for Electric Power Distribution for Industrial Plants (Red Book), 1993.

ANSI/IEEE 142, Recommended Practice for Grounding of Industrial and Commercial Power Systems (Green Book), 1991.

ANSI/IEEE 241, Recommended Practice for Electric Power Systems in Commercial Buildings (Gray Book), 1990.

ANSI/IEEE 242, Recommended Practice for Protection and Coordination of Industrial and Commercial Power Systems (Buff Book), 1986 (reaff. 1991).

ANSI/IEEE 399, Recommended Practice for Industrial and Commercial Power Systems Analysis (Brown Book), 1990.

ANSI/IEEE 400, Guide for Making High-Direct-Voltage Tests on Power Cable Systems in the Field, 1991.

ANSI/IEEE 493, Recommended Practice for the Design of Reliable Industrial and Copyright NFPA

Commercial Power Systems (Gold Book), 1990.

ANSI/IEEE 519, Recommended Practices and Requirements for Harmonic Control in Electrical Power Systems, 1992.

ANSI/IEEE 1100, Recommended Practice for Powering and Grounding Sensitive Electronic Equipment (Emerald Book), 1992.

IEEE 1125, Guide for Moisture Measurement and Control in SF_6 Gas-Insulated Equipment, 1993 (R 2000).

IEEE 1159, Recommended Practice on Monitoring Electric Power Quality, 1995.

ANSI/IEEE C37.13, Standard for Low-Voltage AC Power Circuit Breakers Used in Enclosures, 1990.

IEEE C37.20.1, Standard for Metal-Enclosed Low-Voltage Power Circuit Breaker Switchgear, 2002.

IEEE C37.23, Standard for Metal-Enclosed Bus and Calculating Losses in Isolated-Phase Bus, 1987 (reaff. 1991).

IEEE C37.122.1, IEEE Guide for Gas-Insulated Substations, 1993 (R 2002).

ANSI/IEEE C57.104, Guide for the Interpretation of Gases Generated in Oil-Immersed Transformers, 1991.

ANSI/IEEE C57.110, Recommended Practice for Establishing Transformer Capability When Supplying Nonsinusoidal Load Currents, 1986 (reaff. 1993).

2.3.4 ITI Publication.

Information Technology Industry Council, 1250 Eye Street NW, Suite 200, Washington, DC 20005. 202-737-8880. http://www.itic.org.

2.3.5 NEMA Publications.

National Electrical Manufacturers Association, 1300 North 17th Street, Suite 1847, Rosslyn, VA 22209.

NEMA AB 1-99, Molded Case Circuit Breakers and Molded Case Switches, 1999.

ANSI/NEMA C84.1, *Electric Power Systems and Equipment, Voltage Ratings (60 Hertz)*, 1995.

NEMA MG 1, Motors and Generators, 2003.

NEMA SG 6, Power Switching Equipment, 2000.

NEMA WD 6, Wiring Devices — Dimensional Requirements, 1997.

2.3.6 NETA Publication.

InterNational Electrical Testing Association, P.O. Box 687, Morrison, CO 80465.

NETA Acceptance Testing Specification for Electrical Power Distribution Equipment and Systems, ATS-2003.

NETA Maintenance Testing Specifications for Electrical Power Distribution Equipment and Systems, MTS-2001.

2.3.7 UL Publications.

Underwriters Laboratories Inc., 333 Pfingsten Road, Northbrook, IL 60062-2096.

ANSI/UL 489, Molded-Case Circuit Breakers, Molded-Case Switches and Circuit Breaker Enclosures, Tenth edition, 2002.

UL 943, Standard for Ground-Fault Circuit Interrupters, 1993.

UL 1436, Outlet Circuit Testers and Similar Indicating Devices, 4th edition, 1998.

2.3.8 U.S. Government Publications.

U.S. Government Printing Office, Washington, DC 20402-9328.

Title 29, Code of Federal Regulations, Part 1910.94(a), "Occupational Health and Environmental Control — Ventilation."

Title 29, Code of Federal Regulations, Part 1910.146, "Permit-Required Confined Spaces."

Title 29, Code of Federal Regulations, Part 1910.147, "The Control of Hazardous Energy (Lockout/Tagout)."

Title 29, Code of Federal Regulations, Part 1910.242(b), "Hand and Portable Powered Tools and Other Hand Held Equipment."

Title 29, Code of Federal Regulations, Part 1910.269, "Electric Power Generation, Transmission, and Distribution," Paragraph (e), Enclosed Spaces.

Title 29, Code of Federal Regulations, Parts 1910.331 through 1910.335, "Safety Related Work Practices."

Title 40, Code of Federal Regulations, Part 761, "Protection of Environment — Polychlorinated Biphenyls (PCBs) Manufacturing, Processing, Distribution in Commerce, and Use Prohibitions."

TM 5-698-1, Reliability/Availability of Electrical and Mechanical Systems for Command, Control, Communications, Computer, Intelligence, Surveillance, and Reconnaissance (C4ISR) Facilities, 2003.

TM 5-698-2, Reliability-Centered Maintenance (RCM) for Command, Control, Communications, Computer, Intelligence, Surveillance, and Reconnaissance (C4ISR) Facilities, 2003.

TM 5-698-3, Reliability Primer for Command, Control, Communications, Computer, Intelligence, Surveillance, and Reconnaissance (C4ISR) Facilities, 2003.

2.3.9 Other Publication.

Merriam-Webster's Collegiate Dictionary, 11th edition, Merriam-Webster, Inc., Springfield, MA, 2003.

2.4 References for Extracts in Recommendations Sections.

NFPA 70, National Electrical Code®, 2005 edition.

NFPA 70E, Standard for Electrical Safety in the Workplace, 2004 edition.

Chapter 3 Definitions

3.1 General.

The definitions contained in this chapter apply to the terms used in this recommended practice. Where terms are not defined in this chapter or within another chapter, they should be defined using their ordinarily accepted meanings within the context in which they are used. *Merriam-Webster's Collegiate Dictionary*, 11th edition, is the source for the ordinarily accepted meaning.

3.2 NFPA Official Definitions.

- **3.2.1* Approved.** Acceptable to the authority having jurisdiction.
- **3.2.2* Authority Having Jurisdiction (AHJ).** An organization, office, or individual responsible for enforcing the requirements of a code or standard, or for approving equipment, materials, an installation, or a procedure.
- **3.2.3* Listed.** Equipment, materials, or services included in a list published by an organization that is acceptable to the authority having jurisdiction and concerned with evaluation of products or services, that maintains periodic inspection of production of listed equipment or materials or periodic evaluation of services, and whose listing states that either the equipment, material, or service meets appropriate designated standards or has been tested and found suitable for a specified purpose.
- **3.2.4 Recommended Practice.** A document that is similar in content and structure to a code or standard but that contains only nonmandatory provisions using the word "should" to indicate recommendations in the body of the text.
- **3.2.5** Should. Indicates a recommendation or that which is advised but not required.

3.3 General Definitions.

3.3.1 Bonding (Bonded). The permanent joining of metallic parts to form an electrically conductive path that will ensure electrical continuity and the capacity to conduct safely any current likely to be imposed. The "permanent joining" can be accomplished by the normal devices used to fasten clean, noncorroded parts together. Machine screws, bolts, brackets, or retainers necessary to allow equipment to function properly are items typically employed for this purpose. While welding and brazing can also be utilized, these preclude easy disassembly, and welding can increase rather than decrease resistance across joints. Metallic

parts that are permanently joined to form an electrically conductive path that will ensure electrical continuity and the capacity to conduct safely any current likely to be imposed are bonded.

- **3.3.2 Bonding Jumper.** A reliable conductor to ensure the required electrical conductivity between metal parts required to be electrically connected. This conductor can be solid or stranded or braided, and connected by compatible fittings to separate parts to provide this electrically conductive path. The bonding jumper can also be a screw or a bolt. This bonding jumper can be used alone or in conjunction with other electrically conductive paths. It generally is associated with the equipment-grounding path, but might or might not be electrically linked for a lowest impedance path.
- **3.3.3** Case (Enclosure) Ground. See 3.3.41, Grounding Terminal.
- **3.3.4 Central Grounding Point.** The location where the interconnected parts of the grounding system are connected in a common enclosure. The central grounding point provides a common connection point for termination of the feeder or branch-circuit equipment-grounding conductors.
- **3.3.5 Common Mode Noise.** See 3.3.50.1.
- **3.3.6 Concurrent Maintenance.** The testing, troubleshooting, repair, and/or replacement of a component or subsystem while redundant component(s) or subsystem(s) are serving the load, where the ability to perform concurrent maintenance is critical to attaining the specified reliability/availability criteria for the system or facility.
- **3.3.7 Continuous Duty.** See 3.3.13.1.
- **3.3.8 Coordination (Selective).** Localization of an overcurrent condition to restrict outages to the circuit or equipment affected, accomplished by the choice of overcurrent protective devices and their ratings or settings. [70, 2005]
- **3.3.9 Coordination Study.** A system planning process used to assist in selecting and setting protective devices to improve power system reliability.
- **3.3.10* Corona.** An electrical discharge phenomenon occurring in gaseous substances, such as air.
- **3.3.11 Counterpoise.** A conductor or system of conductors arranged beneath the transmission/distribution supply line; located on, above, or most frequently below the surface of the earth; and connected to the grounding system of the towers or poles supporting the line. (This conductor(s) might or might not be the continuous length of the supply path. It is often used to provide a lower surge impedance path to earth for lightning protection when there is a transition from overhead supply conductors to underground insulated cable.) Counterpoise is also used in communication systems, where it is a system of conductors, physically elevated above and insulated from the ground, forming a lower system of conductors of an antenna. Note that the purpose of a counterpoise is to provide a relatively high capacitance and thus a relatively low impedance path to earth. The counterpoise is sometimes used in medium- and low- frequency applications where it would be more difficult to provide an effective ground connection. Sometimes counterpoise is confused with

equipotential plane. See also 3.3.26, Equipotential Plane.

3.3.12 Down Conductor. A conductor from a lightning protection system to earth ground designed to provide a low impedance path for the current from a lightning strike and/or dissipate the charge buildup that precedes a lightning strike. This conductor typically goes from the air terminals to earth. Due to the very high currents at very high frequencies, the impedance of the entire system is very critical. Normal wiring conductors are not suitable for the down conductor. Typically, they are braided conductors. There might be certain instances where additional investigation about the interconnection between the lightning and the grounding electrode system is warranted.

3.3.13 Duty.

- **3.3.13.1 Continuous Duty.** Operation at a substantially constant load for an indefinitely long time.
- **3.3.13.2 Intermittent Duty.** Operation for alternate intervals of (1) load and no load; (2) load and rest; and (3) load, no load, and rest.
- **3.3.13.3 Periodic Duty.** Intermittent operation in which the load conditions are regularly recurrent.
- **3.3.13.4 Short-Time Duty.** Operation at a substantially constant load for a short and definitely specified time.
- **3.3.13.5** Varying Duty. Operation at loads, and for intervals of time, both of which might be subject to wide variation.
- **3.3.14 Earth Grounding.** The intentional connection to earth through a grounding electrode of sufficiently low impedance to minimize damage to electrical components and prevent an electric shock that can occur from a superimposed voltage from lightning and voltage transients. In addition, earth grounding helps prevent the buildup of static charges on equipment and material. It also establishes a common voltage reference point to enable the proper performance of sensitive electronic and communications equipment.
- **3.3.15 Earthing.** An IEC term for *ground*. See 3.3.27, Ground.
- **3.3.16 Effective Grounding Path.** The path to ground from circuits, equipment, and metal enclosures for conductors shall (1) be permanent and electrically continuous, (2) have capacity to conduct safely any fault current likely to be imposed on it, and (3) have sufficiently low impedance to limit the voltage to ground and to facilitate the operation of the circuit protection devices. The earth should not be used as the sole equipment-grounding conductor.
- **3.3.17 Effectively Grounded (as applied to equipment or structures).** Intentionally connected to earth (or some conducting body in place of earth) through a ground connection or connections of sufficiently low impedance and having sufficient current-carrying capacity to prevent the buildup of voltages that might result in undue hazards to connected equipment or to persons.
- 3.3.18 Effectively Grounded (as applied to systems). This is defined by ratios of

impedance values that must be within prescribed limits.

- **3.3.19 Electrical Equipment.** A general term applied to the material, fittings, devices, fixtures, and apparatus that are part of, or are used in connection with, an electrical installation and includes the electrical power-generating system; substations; distribution systems; utilization equipment; and associated control, protective, and monitoring devices.
- **3.3.20* Electrical Preventive Maintenance (EPM).** A managed program of inspecting, testing, analyzing, and servicing electrical systems and equipment with the purpose of maintaining safe operations and production by reducing or eliminating system interruptions and equipment breakdowns.
- **3.3.21 Electrostatic Discharge (ESD) Grounding.** The conductive path created to reduce or dissipate the electrostatic charge where it builds up as a result of equipment operation or induced from an electrostatically charged person or material coming in contact with the equipment. Also referred to as *static grounding*.
- **3.3.22 Equipment Bonding Jumper.** The connection between two or more portions of the equipment-grounding conductor.
- **3.3.23 Equipment Ground.** An ambiguous term that can mean either case ground, equipment-grounding conductor or equipment bonding jumper; hence, use of this term should be avoided.
- **3.3.24 Equipment-Grounding Conductor.** The conductor used to connect the noncurrent-carrying metal parts of equipment, raceways, and other enclosures to the system grounded conductor, the grounding electrode conductor, or both, at the service equipment or at the source of a separately derived system.
- **3.3.25 Equipotential Bonding.** Electrical connection putting various exposed conductive parts and extraneous conductive parts at a substantially equal potential.
- **3.3.26 Equipotential Plane.** (1) (as applied to livestock) An area accessible to livestock where a wire mesh or other conductive elements are embedded in concrete, are bonded to all metal structures and fixed nonelectrical metal equipment that might become energized, and are connected to the electrical grounding system to prevent a difference in voltage from developing within the plane. (2) (as applied to equipment) A mass or masses of conducting material that, when bonded together, provide a uniformly low impedance to current flow over a large range of frequencies. Sometimes the equipotential plane is confused with counterpoise.
- **3.3.27 Ground.** A conducting connection, whether intentional or accidental, between an electrical circuit or equipment and the earth, or to some conducting body that serves in place of the earth. [70, 2005]
- **3.3.27.1 Lightning Ground.** See 3.3.40, Grounding Electrode System.
- **3.3.27.2 Noise(less) Ground.** The supplemental equipment-grounding electrode installed at machines, or the isolated equipment-grounding conductor, intended to reduce electrical noise.

- **3.3.27.3 Personnel Protective Ground.** Bonding jumper that is intentionally installed to ground deenergized, normally ungrounded circuit conductors when personnel are working on them, to minimize voltage differences between different parts of the equipment and personnel, so as to protect against shock hazard and/or equipment damage.
- **3.3.27.4 Safety Ground.** See 3.3.27.3, Personnel Protective Ground.
- **3.3.28 Ground Fault.** Unintentional contact between an ungrounded conductor and earth or conductive body that serves in place of earth. Within a facility, this is typically a fault between a current-carrying conductor and the equipment-grounding path that results in the operation of the overcurrent protection.
- **3.3.29 Ground Leakage Current.** Current that is introduced into the grounding conductor by normal equipment operation, such as capacitive coupling. Many RFI/EMI filters in electronic equipment have capacitors from current-carrying conductors to the equipment-grounding conductor to shunt noise emitted from or injected into their power supplies. While there are relatively low current level limits imposed by regulatory agencies (e.g., UL specifies maximum 3.5 mA, hospital equipment 0.5 mA), not all equipment is listed. Even with listed equipment, the sum of the current from a large quantity of such equipment in a facility can result in significant ground currents.
- **3.3.30 Ground Loop.** Multiple intentional or unintentional connections from a conductive path to ground or the conductive body that serves in place of earth. Current will flow in the ground loop if there is voltage difference between the connection nodes. Re-grounding of the grounded circuit conductor (neutral) beyond the service point will result in ground loops. This might or might not be harmful depending on the application.
- **3.3.31 Ground Resistance/Impedance Measurement.** The use of special test equipment to measure the grounding electrode resistance or impedance to earth at a single frequency at or near power line frequency.
- **3.3.32 Ground Well.** See 3.3.40, Grounding Electrode System.
- **3.3.33 Grounded.** Connected to earth or to some conducting body that serves in place of the earth. [70, 2005]
- **3.3.34 Grounded Conductor.** A system or circuit conductor that is intentionally grounded. This intentional grounding to earth or some conducting body that serves in place of earth takes place at the premises service location or at a separately derived source. Control circuit transformers are permitted to have a secondary conductor bonded to a metallic surface that is in turn bonded to the supply equipment-grounding conductor. Examples of grounded system conductors would be a grounded system neutral conductor (three phase or split phase) or a grounded phase conductor of a 3-phase, three-wire, delta system.
- **3.3.35* Ground-Fault Circuit Interrupter (GFCI).** A device intended for the protection of personnel that functions to deenergize a circuit or portion thereof within an established period of time when a current to ground exceeds the values established for a Class A device. Note: Class A Ground-Fault Circuit Interrupters trip when the current to ground has a value in the range of 4 mA to 6 mA. For further information, see UL 943, *Standard for*

Ground-Fault Circuit Interrupters. [70, 2005]

3.3.36* Ground-Fault Protection of Equipment (GFP). A system intended to provide protection of equipment from damaging line-to-ground fault currents by operating to cause a disconnecting means to open all ungrounded conductors of the faulted circuit. This protection is provided at current levels less than those required to protect conductors from damage through the operation of a supply circuit overcurrent device. [70, 2005]

3.3.37 Grounding.

- **3.3.37.1 Multipoint Grounding.** Multipoint grounding consists of interconnecting primary and secondary neutrals of the transformer. The secondary and primary neutral are common, and they both utilize the same grounding electrode that connects the system to earth.
- **3.3.37.2 Single Point Grounding.** The single-point grounding of a transformer means connecting the secondary side of the transformer to earth ground through one or more grounding electrodes. This connection should be made at any point on the separately derived system from the source to the first system-disconnecting means or overcurrent device.
- **3.3.37.3 System Grounding.** The intentional connection of an electrical supply system to its associated grounding electrode(s).
- **3.3.38 Grounding Electrode.** A conductive body deliberately inserted into earth to make electrical connection to earth. Typical grounding electrodes include the following: (1) The nearest effectively grounded metal member of the building structure (2) The nearest effectively grounded metal water pipe, but only if the connection to the grounding electrode conductor is within 5 ft of the point of entrance of the water pipe to the building (3) Any metal underground structure that is effectively grounded (4) Concrete encased electrode in the foundation or footing (e.g., Ufer ground) (5) Ground ring completely encircling the building or structure (6) Made electrodes (e.g., ground rods or ground wells) (7) Conductive grid or mat used in substations
- **3.3.39 Grounding Electrode Conductor.** The conductor used to connect the grounding electrode to the equipment-grounding conductor, to the grounded conductor, or to both, of the circuit at the service equipment or at the source of a separately derived system. This conductor must be connected to provide the lowest impedance to earth for surge current due to lightning, switching activities from either or both of the supply and load side, and to reduce touch potentials when equipment insulation failures occur.
- **3.3.40 Grounding Electrode System.** The interconnection of grounding electrodes.
- **3.3.41 Grounding Terminal.** A terminal, lug, or other provision provided on some equipment cases (enclosures) to connect the conductive portion of the enclosure to the equipment-grounding conductor.
- **3.3.42 Grounding-Type Receptacle.** A receptacle with a dedicated terminal that is to be connected to the equipment grounding conductor.
- **3.3.43 Harmonics.** Those voltages or currents whose frequencies are integer multiples of the fundamental frequency.

- **3.3.44 Interharmonics.** Not all frequencies that occur on an electrical power system are integer multiples of the fundamental frequency (usually 60 Hz), as are harmonics. Some loads draw currents that result in voltages that are between harmonic frequencies or less than the fundamental frequency. These frequencies are referred to as interharmonics and can be made of discrete frequencies or as a wide-band spectrum. A special category of these interharmonics is called subharmonics, in which the frequencies involved are less than the fundamental power line frequency.
- **3.3.45 Intermittent Duty.** See 3.3.13.2.
- **3.3.46 Isolated Equipment-Grounding Conductor.** An insulated equipment-grounding conductor that has one intentional connection to the equipment-grounding system. The isolated equipment-grounding conductor is typically connected to an equipment-grounding terminal either in the facility's service enclosure or in the first applicable enclosure of a separately derived system. The isolated equipment-grounding conductor should be connected to the equipment-grounding system within the circuits' derived system.
- **3.3.47 Lightning Ground.** See 3.3.27.1.
- **3.3.48 Long Duration Undervoltage.** A decrease of the supply voltage to less than 90 percent of the nominal voltage for a time duration greater than 1 minute. [See IEEE 1159, Recommended Practice on Monitoring Electric Power Quality, Table 4-2.]
- **3.3.49 Multipoint Grounding.** Multipoint grounding consists of interconnecting primary and secondary neutrals of the transformer. The secondary and primary neutral are common, and they both utilize the same grounding electrode that connects the system to earth.
- **3.3.50** Noise. Undesirable electrical signals in an electrical or electronic circuit.
- **3.3.50.1** Common Mode Noise. Undesirable electrical signals that exist between a circuit conductor and the grounding conductor.
- **3.3.50.2 Transverse Mode Noise.** Undesirable electrical signals that exist between a pair of circuit conductors. These signals are sometimes referred to as normal or differential mode noise.
- **3.3.51 Noise(less) Ground.** See 3.3.27.2.
- **3.3.52 Periodic Duty.** See 3.3.13.3.
- 3.3.53 Personnel Protective Ground. See 3.3.27.3.
- **3.3.54 Power Transformers.** Determines the type of transformer and is defined as those larger than 500 kVA, while distribution transformers are those 500 kVA or smaller.
- **3.3.55 Protective Bonding Circuit.** See 3.3.25, Equipotential Bonding.
- **3.3.56 Protective Conductor.** A conductor required by some measures for protection against electric shock for electrically connecting any of the following parts: exposed conductive parts, extraneous conductive parts, or main (grounding) earthing terminal. Also identified in some instances as the protective external (PE) conductor. (See also 29.1.6.15, Equipment-Grounding Conductor.)

- 3.3.57 Protective Ground. See 3.3.25, Equipotential Bonding.
- **3.3.58 Qualified Person.** One who has the skills and knowledge related to the construction and operation of the electrical equipment and installations and has received safety training on the hazards involved.
- **3.3.59 RFI/EMI Grounding.** See 3.3.29, Ground Leakage Current.
- **3.3.60 Safety Ground.** See 3.3.27.3, Personnel Protective Ground.
- **3.3.61** Sag. A decrease to between 10 percent and 90 percent of the normal voltage at the power frequency for durations of 0.5 cycle to 1 minute. (If the voltage drops below 10 percent of the normal voltage, then this is classified as an interruption.) It is further classified into three categories: (1) Instantaneous 0.5 cycle to 30 cycles; (2) Momentary 30 cycles to 3 seconds; and (3) Temporary 3 seconds to 1 minute.
- **3.3.62 Separately Derived System.** A premises wiring system whose power is derived from a battery, a solar photovoltaic system, or from a generator, transformer, or converter windings, and that has no direct electrical connection, including a solidly connected grounded circuit conductor, to supply conductors originating in another system. Equipment-grounding conductors are not supply conductors and are to be interconnected.
- **3.3.63 Shield Ground.** Intentional grounding of one or both ends of the shield of a cable.
- **3.3.63.1 Data Communications Cables.** The shield of data communication cables can be connected to the equipment-grounding conductor at either one end of the cable (single end) or at both ends (double ended). When both ends of a shield are grounded, another shield should be provided inside the outer shield and that one single end grounded.
- **3.3.63.2 Shield Ground, Power Cables.** The shield of power cables can be connected to the equipment-grounding conductor at either one end of the cable (single end) or at both ends (double ended). Shielding will ensure uniform dielectric stress along the length of the cable. When grounded at both ends, cable derating might be necessary because of heat due to ground loop current.
- **3.3.64 Short-Time Duty.** See 3.3.13.4.
- 3.3.65 Single-Point Grounding. See 3.3.37.2.
- **3.3.66 Substation Ground.** Grounding electrode system (grid) in a substation. See 29.1.6.28, Grounding Electrode System.
- **3.3.67 Survey.** The collection of accurate data on the electrical system and the evaluation of this data to obtain the necessary information for developing the EPM program. The systems and equipment covered in specific parts of the survey should be based on logical divisions of the electrical system.
- **3.3.68 Sustained Voltage Interruption.** The loss of the supply voltage to less than 10 percent on one or more phases for a period greater than 1 minute.
- **3.3.69** Swell. An increase to between 110 percent and 180 percent in normal voltage at the power frequency durations from 0.5 cycle to 1 minute. It is further classified into three

- categories: (1) instantaneous 0.5 cycle–30 cycles; (2) momentary 30 cycles–3 sec; and (3) temporary 3 sec–1 min.
- **3.3.70 System Grounding.** See 3.3.37.3.
- **3.3.71 Transformer.** A device for changing energy in an alternating current system from one voltage to another; usually includes two or more insulated coils on an iron core.
- **3.3.72 Transients.** Transients (formerly referred to as surges, spikes, or impulses) are very short duration, high amplitude excursions outside of the limits of the normal voltage and current waveform. Waveshapes of the excursions are usually unidirectional pulses or decaying amplitude, high frequency oscillations. Durations range from fractions of a microsecond to milliseconds, and the maximum duration is in the order of one half-cycle of the power frequency. Instantaneous amplitudes of voltage transients can reach thousands of volts.
- 3.3.73 Transverse Mode Noise. See 3.3.50.2.
- **3.3.74 Unbalanced Voltages.** Unequal voltage values on 3-phase circuits that can exist anywhere on the power distribution system.
- **3.3.75 Varying Duty.** See 3.3.13.5.

Chapter 4 Why an Effective Electrical Preventive Maintenance (EPM) Program Pays Dividends

4.1 Why EPM?

- **4.1.1** Electrical equipment deterioration is normal, but equipment failure is not inevitable. As soon as new equipment is installed, a process of normal deterioration begins. Unchecked, the deterioration process can cause malfunction or an electrical failure. Deterioration can be accelerated by factors such as a hostile environment, overload, or severe duty cycle. An effective EPM program identifies and recognizes these factors and provides measures for coping with them.
- **4.1.2** In addition to normal deterioration, other potential causes of equipment failure can be detected and corrected through EPM. Among these are load changes or additions, circuit alterations, improperly set or improperly selected protective devices, and changing voltage conditions.
- **4.1.3** Without an EPM program, management assumes a greatly increased risk of a serious electrical failure and its consequences.

4.2 Value and Benefits of a Properly Administered EPM Program.

4.2.1 A well-administered EPM program reduces accidents, saves lives, and minimizes costly breakdowns and unplanned shutdowns of production equipment. Impending troubles can be identified — and solutions applied — before they become major problems requiring more expensive, time-consuming solutions.

- **4.2.2** Benefits of an effective EPM program fall into two general categories. Direct, measurable economic benefits are derived from reduced cost of repairs and reduced equipment downtime. Less measurable but very real benefits result from improved safety. To understand fully how personnel and equipment safety are served by an EPM program, the mechanics of the program inspection, testing, and repair procedures should be understood. Such an understanding explains other intangible benefits such as improved employee morale, better workmanship and increased productivity, reduced absenteeism, reduced interruption of production, and improved insurance considerations. Improved morale comes with employee awareness of a conscious management effort to promote safety by reducing the likelihood of electrical injuries or fatalities, electrical explosions, and fires. Reduced personnel injuries and property loss claims can help keep insurance premiums at favorable rates.
- **4.2.3** Although the benefits that result from improved safety are difficult to measure, direct, measurable economic benefits can be documented by equipment repair cost and equipment downtime records after an EPM program has been implemented.
- **4.2.4** Dependability can be engineered and built into equipment, but effective maintenance is required to keep it dependable. Experience shows that equipment lasts longer and performs better when it is covered by an EPM program. In many cases, the investment in EPM is small compared with the cost of equipment repair and the production losses associated with an unexpected equipment shutdown.
- **4.2.5** Careful planning is the key to the economic success of an EPM program. With proper planning, maintenance costs can be held to a practical minimum, while production is maintained at a practical maximum.
- **4.2.6** An EPM program requires the support of top management, because top management provides the funds that are required to initiate and maintain the program. The maintenance of industrial electrical equipment is essentially a matter of business economics. Maintenance costs can be placed in either of two basic categories: preventive maintenance or breakdown repairs. The money spent for preventive maintenance will be reflected as less money required for breakdown repairs. An effective EPM program holds the sum of these two expenditures to a minimum. Figure 4.2.6 is a typical curve illustrating this principle. According to this curve, as the interval of time between EPM inspections increases, the cost of the EPM diminishes and the cost of breakdown repairs and replacement of failed equipment increases. The lowest total annual expense is realized by maintaining an inspection frequency that keeps the sum of repair/replacement and EPM costs at a minimum.

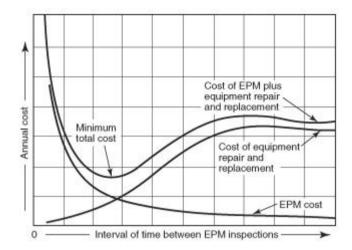


FIGURE 4.2.6 Effect of EPM Inspection Frequency on Overall Costs.

- **4.2.7** An EPM program is a form of protection against accidents, lost production, and loss of profit. An EPM program enables management to place a dollar value on the cost of such protection. An effective EPM program satisfies an important part of management's responsibility for keeping costs down and production up.
- **4.2.8*** Insurance statistics document the high cost of inadequate electrical maintenance.

4.3 EPM and Energy Conservation.

Energy conservation is one of the worthwhile benefits associated with an EPM program, saving dollars and vital resources. Equipment that is well maintained operates more efficiently and utilizes less energy.

4.4 Case Histories.

- **4.4.1** In one industrial plant, the failure of a transformer caused a total plant shutdown. Contamination of the transformer's insulating oil caused the failure. The contamination went undetected because the oil had not been tested for several years. Fire damage and equipment replacement costs amounted to \$50,000, exclusive of the cost of plant downtime. This amount would have paid for the cost of operating an EPM program covering the entire plant's electrical distribution system for several years.
- **4.4.2** In another industrial plant, damage amounting to \$100,000 was attributed to the failure of the main switchgear. Fouling by dirt, gummy deposits, and iron filings caused the failure. The cost of this failure would have supported a comprehensive EPM program covering all of the plant's electrical distribution system for several years.
- **4.4.3** McCormick Place, a large exhibition hall in Chicago, was destroyed by a fire believed to have been started because of a defective extension cord serving a display booth. Direct property loss was \$60 million, and loss of the facility cost an additional \$100 million to the economy in the Chicago area. This fire might have been prevented if a program had been in effect to ensure that worn cords were replaced, that only heavy-duty cords were used, and that cords and their supply circuits were not overloaded.

4.4.4 The failure of a large motor shut down an entire industrial plant for 12 days. The cause of the failure was overheating resulting from dust-plugged cooling ducts. An EPM inspection would have detected the clogged ducts and averted the failure and accompanying plant outage.

Chapter 5 What Is an Effective Electrical Preventive Maintenance (EPM) Program?

5.1 Introduction.

An effective electrical preventive maintenance (EPM) program should enhance safety and also reduce equipment failure to a minimum consistent with good economic judgment.

- **5.1.1** An effective electrical preventive maintenance program should include the following basic ingredients:
- (1) Personnel qualified to carry out the program
- (2) Regularly scheduled inspection, testing, and servicing of equipment
- **5.1.2** A successful program should also include the following:
- (1) Application of sound judgment in evaluating and interpreting results of inspections and tests
- (2) Keeping of concise but complete records

5.2 Planning an EPM Program.

The basic factors listed in 5.2.1 through 5.2.3 should be considered in the planning of an EPM program.

- **5.2.1 Personnel Safety.** Will an equipment failure endanger or threaten the safety of any personnel? What can be done to ensure personnel safety?
- **5.2.2 Equipment Loss.** Is installed equipment both electrical and mechanical complex or so unique that required repairs would be unusually expensive?
- **5.2.3 Production Economics.** Will breakdown repairs or replacement of failed equipment require extensive downtime? How many production dollars will be lost in the event of an equipment failure? Which equipment is most vital to production?

5.3 Main Parts of an EPM Program.

An EPM program should consist of the following essential ingredients:

- (1) Responsible and qualified personnel
- (2) Survey and analysis of electrical equipment and systems to determine maintenance requirements and priorities

- (3) Programmed routine inspections and suitable tests
- (4) Accurate analysis of inspection and test reports so that proper corrective measures can be prescribed
- (5) Performance of necessary work
- (6) Concise but complete records

5.3.1 Personnel.

- **5.3.1.1** A well-qualified individual should be in charge of the program.
- **5.3.1.2** Personnel assigned to inspection and testing duties should be selected from the best maintenance personnel in the plant.
- **5.3.1.3** Where in-plant personnel are not qualified, a maintenance contractor should be employed.

5.3.2 Survey and Analysis.

- **5.3.2.1** Survey and analysis should cover equipment and systems that have been determined to be essential in accordance with a priority plan.
- **5.3.2.2** Regardless of the size of the program being contemplated, the EPM supervisor should determine the extent of the work to be done and where to begin.
- **5.3.2.3** All electrical equipment motors, transformers, circuit breakers, controls, and the like should receive a thorough inspection and evaluation to permit the EPM supervisor to make a qualified judgment as to how, where, and when each piece of equipment should fit into the program.
- **5.3.2.4** In addition to determining the equipment's physical condition, the survey should determine if the equipment is operating within its rating.
- **5.3.2.5** In the course of the survey, the condition of electrical protective devices such as fuses, circuit breakers, protective relays, and motor overload relays should be checked. These devices are the safety valves of an electrical system, and their proper operating condition ensures the safety of personnel, protection of equipment, and reduction of economic loss.
- **5.3.2.6** After the survey has been completed, data should be evaluated to determine equipment condition. Equipment condition will reveal repair work to be done, as well as the nature and frequency of required inspections and tests.
- **5.3.3 Programmed Inspections.** Inspection and testing procedures should be carefully tailored to requirements. In some plants, regularly scheduled tests will call for scheduled outages of production or process equipment. In such cases, close coordination between maintenance and production personnel is necessary.
- **5.3.3.1 Analysis of Inspection and Test Reports.** Analysis of inspection and test reports should be followed by implementation of appropriate corrective measures. Follow-through with necessary repairs, replacement, and adjustment is the end purpose of an effective EPM

program.

- **5.3.3.2** Records.
- **5.3.3.2.1** Records should be accurate and contain all vital information.
- **5.3.3.2.2** Care should be taken to ensure that extraneous information does not become part of the record, because excessive record keeping can hamper the program.
- **5.3.4 EPM Support Procedures.**
- **5.3.4.1 Design for Ease of Maintenance.** Effective electrical preventive maintenance begins with good design. In the design of new facilities, a conscious effort to ensure optimum maintainability is recommended. Dual circuits, tie circuits, auxiliary power sources, and drawout protective devices make it easier to schedule maintenance and to perform maintenance work with minimum interruption of production. Other effective design techniques include equipment rooms to provide environmental protection, grouping of equipment for more convenience and accessibility, and standardization of equipment and components.
- 5.3.5 Training for Safety and Technical Skills.
- **5.3.5.1 Training Requirements.**
- **5.3.5.1.1** All employees who face a risk of electrical hazard should be trained to understand the specific hazards associated with electrical energy.
- **5.3.5.1.2** All employees should be trained in safety-related work practices and required procedures as necessary to provide protection from electrical hazards associated with their jobs or task assignments.
- **5.3.5.1.3** Employees should be trained to identify and understand the relationship between electrical hazards and possible injury.
- **5.3.5.1.4** Refresher training should be provided as required.
- **5.3.5.2 Type of Training.** The training can be in the classroom, on the job, or both. The type of training should be determined by the needs of the employee.
- **5.3.5.3** Emergency Procedures.
- **5.3.5.3.1** Employees working on or near exposed energized electrical conductors or circuit parts should be trained in methods of release of victims from contact with exposed energized conductors or circuit parts.
- **5.3.5.3.2** Employees working on or near exposed energized electrical conductors or circuit parts should be instructed regularly in methods of first aid and emergency procedures, such as approved methods of resuscitation.
- **5.3.5.4 Training Scope.** Employees should be trained and knowledgeable in the following:
- (1) Construction and operation of equipment
- (2) Specific work method

- (3) Electrical hazards that can be present with respect to specific equipment or work method
- (4) Proper use of special precautionary techniques, personal protective equipment, insulating and shielding materials, and insulated tools and test equipment
- (5) Skills and techniques necessary to distinguish exposed, energized parts from other parts of electrical equipment
- (6) Skills and techniques necessary to determine the nominal voltage of exposed energized parts
- (7) Decision-making process necessary to determine the degree and extent of hazard
- (8) Job planning necessary to perform the task safely
- **5.3.5.5 Record Keeping.** Records of training should be maintained for each employee.
- **5.3.6 Outside Service Agencies.** Some maintenance and testing operations, such as relay and circuit-breaker inspection and testing, require specialized skills and special equipment. In small organizations, it might be impractical to develop the skills and acquire the equipment needed for this type of work. In such cases, it might be advisable to contract the work to firms that specialize in providing such services.
- **5.3.7 Tools and Instruments.** Proper tools and instruments are an important part of an EPM program, and safety protective gear is an essential part of the necessary equipment. Proper tools, instruments, and other equipment should be used to ensure maximum safety and productivity from the maintenance crew. Where specialized instruments and test equipment are needed only occasionally, they can be rented from a variety of sources.

Chapter 6 Planning and Developing an Electrical Preventive Maintenance (EPM) Program

6.1 Introduction.

- **6.1.1** The purpose of an EPM program is to reduce hazard to life and property that can result from the failure or malfunction of electrical systems and equipment. The first part of these recommendations for an effective EPM program has been prepared with the intent of providing a better understanding of benefits both direct and intangible that can be derived from a well-administered EPM program. This chapter explains the function, requirements, and economic considerations that can be used to establish such a program.
- **6.1.2** The following four basic steps should be taken in the planning and development of an EPM program. In their simplest form, they are as follows:
- (1) Compile a listing of all equipment and systems.
- (2) Determine which equipment and systems are most critical and most important.
- (3) Develop a system for keeping up with what needs to be done.

- (4) Train people for the work that needs to be done or contract the special services that are needed.
- **6.1.3** The success of an EPM program depends on the caliber of personnel responsible for its implementation.
- **6.1.3.1** The primary responsibility for EPM program implementation and its success should lie with a single individual.
- **6.1.3.2** This individual responsible for the EPM program should be given the authority to do the job and should have the cooperation of management, production, and other departments whose operations might affect the EPM program.
- **6.1.3.3** Ideally, the person designated to head the EPM program should have the following qualifications:
- (1) *Technical competence*. The person should, by education, training, and experience, be well-rounded in all aspects of electrical maintenance.
- (2) Administrative and supervisory skills. The person should be skilled in the planning and development of long-range objectives to achieve specific results and should be able to command respect and solicit the cooperation of all persons involved in the program.
- **6.1.4** The maintenance supervisor should have open lines of communication with design supervision. Frequently, an unsafe installation or one that requires excessive maintenance can be traced to improper design or construction methods or misapplication of hardware.
- **6.1.5** The work center of each maintenance work group should be conveniently located. This work center should contain the following:
- (1) Copies of all the inspection and testing procedures for that zone
- (2) Copies of previous reports
- (3) Single-line diagrams
- (4) Schematic diagrams
- (5) Records of complete nameplate data
- (6) Vendors' catalogs
- (7) Facility stores' catalogs
- (8) Supplies of report forms
- **6.1.5.1** There should be adequate storage facilities for tools and test equipment that are common to the group.
- **6.1.6** In a continuously operating facility, running inspections (inspections made with equipment operating) play a vital role in the continuity of service. The development of running inspection procedures varies with the type of operation. Running inspection procedures should be as thorough as practicable within the limits of safety and the skill of the

craftsman. These procedures should be reviewed regularly in order to keep them current. Each failure of electrical equipment, be it an electrical or a mechanical failure, should be reviewed against the running inspection procedure to determine if some other inspection technique would have indicated the impending failure. If so, the procedure should be modified to reflect the findings.

- **6.1.7** Supervisors find their best motivational opportunities through handling the results of running inspections. When the electrical maintenance supervisor initiates corrective action, the craftsperson should be so informed. The craftsperson who found the condition will then feel that his or her job was worthwhile and will be motivated to try even harder. However, if nothing is done, individual motivation might be affected adversely.
- **6.1.8** Trends in failure rates are hard to change and take a long time to reverse. For this reason, the inspection should continue and resulting work orders should be written, even though the work force might have been reduced. Using the backlog of work orders as an indicator, the electrical maintenance supervisor can predict trends before they develop. With the accumulation of a sizable backlog of work orders, an increase in electrical failures and production downtime can be expected.

6.2 Survey of Electrical Installation.

6.2.1 Data Collection.

- **6.2.1.1** The first step in organizing a survey should be to take a look at the total package. Will the available manpower permit the survey of an entire system, process, or building, or should it be divided into segments?
- **6.2.1.2** Next, a priority should be assigned to each segment. Segments found to be sequential should be identified before the actual work commences.
- **6.2.1.3** The third step should be the assembling of all documentation. This might necessitate a search of desks, cabinets, and such, and might also require that manufacturers be contacted, to replace lost documents. All of the documents should be brought to a central location and marked immediately with some form of effective identification.
- **6.2.2 Diagrams and Data.** The availability of up-to-date, accurate, and complete diagrams is the foundation of a successful EPM program. No EPM program can operate without them, and their importance cannot be overemphasized. The diagrams discussed in 6.2.2.1 through 6.2.2.8.2 are some of those in common use.
- **6.2.2.1** Single-line diagrams should show the electrical circuitry down to, and often including, the major items of utilization equipment. They should show all electrical equipment in the power system and give all pertinent ratings. In making this type of diagram, it is basic that voltage, frequency, phase, and normal operating position be included. No less important, but perhaps less obvious, are items such as transformer impedance, available short-circuit current, and equipment continuous and interrupting ratings. Other items include current and potential transformers and their ratios, surge capacitors, and protective relays. If one diagram cannot cover all the equipment involved, additional diagrams, appropriately noted on the main diagram, can be drawn.

- **6.2.2.2** Short-circuit and coordination studies are important. Many managers have the misconception that these engineering studies are part of the initial facility design, after which the subject can be forgotten. However, a number of factors can affect the available short-circuit current in an electrical system. Among these factors are changes in the supply capacity of the utility company, changes in size or percent impedance of transformers, changes in conductor size, addition of motors, and changes in system operating conditions.
- (A) In the course of periodic maintenance testing of protective equipment, such as relays and series or shunt-trip devices, equipment settings should be evaluated. Along with the proper sizing of fuses, this evaluation is part of the coordination study.
- (B) In a small facility, one receiving electrical energy at utilization voltage or from a single step-down transformer, the short-circuit study is simple. The available incoming short-circuit current can be obtained from the utility company sales engineer.
- **(C)** In a larger system, it might be desirable to develop a computerized short-circuit study to improve accuracy and reduce engineering time. Should resources not be available within the plant organization, the short-circuit study can be performed on a contract basis. The short-circuit data are used to determine the required momentary and interrupting ratings of circuit breakers, fuses, and other equipment.
- **(D)** Fuses are rated on the basis of their current-carrying and interrupting capacities. These ratings should be determined and recorded. Other protective devices are usually adjustable as to pickup point and time-current characteristics. The settings of such protective devices should be determined, verified by electrical tests, and recorded for future reference.
- **(E)** Personnel performing the tests should be trained and qualified in proper test procedures. Various organizations and manufacturers of power and test equipment periodically schedule seminars in which participants are taught the principles of maintenance and testing of electrical protective devices.
- (F) Additional guidance on electrical systems can be found in Chapter 25.
- **6.2.2.3** Circuit-routing diagrams, cable maps, or raceway layouts should show the physical location of conductor runs. In addition to voltage, such diagrams should also indicate the type of raceway, number and size of conductors, and type of insulation.
- (A) Where control conductors or conductors of different systems are contained within the same raceway, the coding appropriate to each conductor should be noted.
- **(B)** Vertical and horizontal runs with the location of taps, headers, and pull boxes should be shown.
- (C) Access points should be noted where raceways pass through tunnels or shafts with limited access.
- **6.2.2.4** Layout diagrams, plot plans, equipment location plans, or facility maps should show the physical layout (and in some cases, the elevations) of all equipment in place.
- (A) Switching equipment, transformers, control panels, mains, and feeders should be identified.

- (B) Voltage and current ratings should be shown for each piece of equipment.
- **6.2.2.5** Schematic diagrams should be arranged for simplicity and ease of understanding circuits without regard for the actual physical location of any components. The schematic should always be drawn with switches and contacts shown in a deenergized position.
- **6.2.2.6** Wiring diagrams, like schematics, should show all components in the circuit but arranged in their actual physical location.
- **6.2.2.6.1** Electromechanical components and strictly mechanical components interacting with electrical components should be shown. Of particular value is the designation of terminals and terminal strips with their appropriate numbers, letters, or colors.
- **6.2.2.6.2** Wiring diagrams should identify all equipment parts and devices by standard methods, symbols, and markings.
- **6.2.2.7** An effective EPM program should have manufacturers' service manuals and instructions. These manuals should include recommended practices and procedures for the following:
- (1) Installation
- (2) Disassembly/assembly (interconnections)
- (3) Wiring diagrams, schematics, bills of materials
- (4) Operation (set-up and adjustment)
- (5) Maintenance (including parts list and recommended spares)
- (6) Software program (if applicable)
- (7) Troubleshooting
- **6.2.2.8 Electrical Equipment Installation Change.** The documentation of the changes that result from engineering decisions, planned revisions, and so on, should be the responsibility of the engineering group that initiates the revisions.
- **6.2.2.8.1** Periodically, changes occur as a result of an EPM program. The EPM program might also uncover undocumented practices or installations.
- **6.2.2.8.2** A responsibility of the EPM program is to highlight these changes, note them in an appropriate manner, and formally submit the revisions to the organization responsible for the maintenance of the documentation.
- **6.2.3 System Diagrams.** System diagrams should be provided to complete the data being assembled. The importance of the system determines the extent of information shown. The information can be shown on the most appropriate type of diagram but should include the same basic information, source and type of power, conductor and raceway information, and switching and protective devices with their physical locations. It is vital to show where the system might interface with another system, such as with emergency power; hydraulic, pneumatic, or mechanical systems; security and fire-alarm systems; and monitoring and control systems. Some of the more common of these are described in 6.2.3.1 through

- **6.2.3.1 Lighting System Diagrams.** Lighting system diagrams (normal and emergency) can terminate at the branch circuit panelboard, listing the number of fixtures, type and lamp size for each area, and design lighting level. The diagram should show watchman lights and probably an automatic transfer switch to the emergency power system.
- **6.2.3.2 Ventilation.** Ventilation systems normally comprise the heating, cooling, and air-filtering system. Exceptions include furnace, dryer, oven, casting, and similar areas where process heat is excessive and air conditioning is not practical. Numerous fans are used to exhaust the heated and possibly foul air. In some industries, such as chemical plants and those using large amounts of flammable solvents, large volumes of air are needed to remove hazardous vapors. Basic information, including motor and fan sizes, motor or pneumatically operated dampers, and so on, should be shown. Additionally, many safety features can be involved to ensure that fans start before the process airflow switches to shut down an operation on loss of ventilation and other interlocks of similar nature. Each of these should be identified with respect to type, function, physical location, and operating limits.
- **6.2.3.3 Heating and Air Conditioning.** Heating and air-conditioning systems are usually manufactured and installed as a unit, furnished with diagrams and operating and maintenance manuals. This information should be updated as the system is changed or modified. Because these systems are often critical to the facility operation, additional equipment might have been incorporated: for example, humidity, lint, and dust control for textile, electronic, and similar processes and corrosive and flammable vapor control for chemical and related industries. Invariably, these systems interface with other electrical or nonelectrical systems: pneumatic or electromechanical operation of dampers, valves, and so on; electric operation for normal and abnormal temperature control; and manual control stations for emergency smoke removal are just a few. There might be others, but all should be shown and complete information given for each.
- **6.2.3.4 Control and Monitoring.** Control and monitoring system diagrams should be provided to describe how these complicated systems function. They usually are in the form of a schematic diagram and can refer to specific wiring diagrams. Maximum benefit can be obtained only when every switching device is shown, its function is indicated, and it is identified for ease in finding a replacement. These devices often involve interfaces with other systems, whether electromechanical (heating or cooling medium) pumps and valves, electro-pneumatic temperature and damper controls, or safety and emergency operations. A sequence-of-operation chart and a list of safety precautions should be included to promote the safety of personnel and equipment. Understanding these complex circuits is best accomplished by breaking down the circuits into their natural functions, such as heating, cooling, process, or humidity controls. The knowledge of how each function relates to another enables the craftsperson to have a better concept of the entire system and thus perform assignments more efficiently.
- **6.2.4 Emergency Procedures.** Emergency procedures should list, step by step, the action to be taken in case of emergency or for the safe shutdown or start-up of equipment or systems. Optimum use of these procedures is made when they are bound for quick reference and posted in the area of the equipment or systems. Some possible items to consider for inclusion

in the emergency procedures are interlock types and locations, interconnections with other systems, and tagging procedures of the equipment or systems. Accurate single-line diagrams posted in strategic places are particularly helpful in emergency situations. The production of such diagrams in anticipation of an emergency is essential to a complete EPM program. Diagrams are a particularly important training tool in developing a state of preparedness. Complete and up-to-date diagrams provide a quick review of the emergency plan. During an actual emergency, when time is at a premium, they provide a simple, quick reference guide.

6.2.5 Test and Maintenance Equipment.

- **6.2.5.1** All maintenance work requires the use of proper tools and equipment to properly perform the task to be done. In addition to their ordinary tools, craftspersons (such as carpenters, pipe fitters, and machinists) use special tools or equipment based on the nature of the work to be performed. The electrician is no exception, but for EPM, additional equipment not found in the toolbox should be readily available. The size of the plant, the nature of its operations, and the extent of its maintenance, repair, and test facilities are all factors that determine the use frequency of the equipment. Economics seldom justify purchasing an infrequently used, expensive tool when it can be rented. However, a corporation having a number of plants in the area might well justify common ownership of the same device for joint use, making it quickly available at any time to any plant. Typical examples might be high-current or dc high-potential test equipment or a ground-fault locator.
- **6.2.5.2** Because a certain amount of mechanical maintenance is often a part of the EPM program being conducted on associated equipment, the electrical craftsperson should have ready access to such items as the following:
- (1) Assorted lubrication tools and equipment
- (2) Various types and sizes of wrenches
- (3) Nonmetallic hammers and blocks to protect against injury to machined surfaces
- (4) Wheel pullers
- (5) Feeler gauges to function as inside- and outside-diameter measuring gauges
- (6) Instruments for measuring torque, tension, compression, vibration, and speed
- (7) Standard and special mirrors with light sources for visual inspection
- (8) Industrial-type portable blowers and vacuums having insulated nozzles for removal of dust and foreign matter
- (9) Nontoxic, nonflammable cleaning solvents
- (10) Clean, lint-free wiping cloths
- **6.2.5.3** The use of well-maintained safety equipment is essential and should be mandatory for work on or near live electrical equipment. Prior to performing maintenance on or near live electrical equipment, NFPA 70E, *Standard for Electrical Safety in the Workplace*, should be used to identify the degree of personal protective equipment (PPE) required.

Some of the more important equipment that should be provided includes the following:

- (1) Heavy leather gloves
- (2) Insulating gloves, mats, blankets, baskets, boots, jackets, and coats
- (3) Insulated hand tools such as screwdrivers and pliers
- (4) Nonmetallic hard hats with clear insulating face shields for protection against arcs
- (5) Poles with hooks and hot sticks to safely open isolating switches
- **6.2.5.3.1** A statiscope is recommended to indicate the presence of high voltage on certain types of equipment.
- **6.2.5.4** Portable electric lighting should be provided, particularly in emergencies involving the power supply. Portable electric lighting used for maintenance areas that are normally wet or where personnel will be working within grounded metal structures such as drums, tanks, and vessels should be operated at an appropriate low voltage from an isolating transformer or other isolated source. This voltage level is a function of the ambient condition in which the portable lighting is used. The aim is to limit the exposure of personnel to hazardous current levels by limiting the voltage. Ample supply of battery lanterns and extra batteries should be available. Suitable extension cords should be provided.
- 6.2.5.5 Portable meters and instruments are necessary for testing and troubleshooting, especially on circuits of 600 volts or less. These include general-purpose volt meters, volt-ohmmeters, and clamp-on-type ammeters with multiscale ranges. In addition to conventional instruments, recording meters are useful for measuring magnitudes and fluctuations of current, voltage, power factor, watts, and volt-amperes versus time values. These instruments are a definite aid in defining specific electrical problems and determining if equipment malfunction is due to abnormal electrical conditions. Other valuable test equipment includes devices to measure the insulation resistance of motors and similar equipment in the megohm range and similar instruments in the low range for determining ground resistance, lightning protection systems, and grounding systems. Continuity testers are particularly valuable for checking control circuits and for circuit identification.
- **6.2.5.6** Special instruments can be used to test the impedance of the grounding circuit conductor or the grounding path of energized low-voltage distribution systems and equipment. These instruments can be used to test the equipment-grounding circuit path of electrical equipment.
- **6.2.5.7** Insulation-resistance-measuring equipment should be used to indicate insulation values at the time equipment is put into service. Later measurements might indicate any deterioration trend of the insulation values of the equipment. High-potential ac and dc testers are used effectively to indicate dielectric strength and insulation resistance of the insulation, respectively. It should be recognized that the possibility of breakdown under test due to concealed weakness is always present. High-potential testing should be performed with caution and only by qualified operators.
- **6.2.5.8** Portable ground-fault locators can be used to test ungrounded power systems. Such devices will indicate ground location while the power system is energized. They thus provide

a valuable aid for safe operation by indicating where to take corrective steps before an insulation breakdown occurs on another phase.

- **6.2.5.9** Receptacle circuit testers are devices that, by a pattern of lights, indicate some types of incorrect wiring of 15- and 20-ampere, 125-volt grounding-type receptacles.
- **6.2.5.9.1** Although these test devices can provide useful and easily acquired information, some have limitations, and the test results should be used with caution. For example, a high-resistance ground can give a correct wiring display, as can some multiple wiring errors. An incorrect display can be considered a valid indication that there is an incorrect situation, but a correct wiring display should not be accepted without further investigation.

6.3 Identification of Critical Equipment.

- **6.3.1** Equipment (electric or otherwise) should be considered critical if its failure to operate normally and under complete control will cause a serious threat to people, property, or the product. Electric power, like process steam, water, and so forth, might be essential to the operation of a machine, but unless loss of one or more of these supplies causes the machine to become hazardous to people, property, or production, that machine might not be critical. The combined knowledge and experience of several people might be needed to make this determination. In a small plant, the plant engineer or master mechanic working with the operating superintendent should be able to make this determination.
- **6.3.1.1** A large operation should use a team comprising the following qualified people:
- (1) The electrical foreman or superintendent
- (2) Production personnel thoroughly familiar with the operation capabilities of the equipment and the effect its loss will have on final production
- (3) The senior maintenance person who is generally familiar with the maintenance and repair history of the equipment or process
- (4) A technical person knowledgeable in the theoretical fundamentals of the process and its hazards (in a chemical plant, a chemist; in a mine, a geologist; etc.)
- (5) A safety engineer or the person responsible for the overall security of the plant and its personnel against fire and accidents of all kinds
- **6.3.1.2** The team should go over the entire plant or each of its operating segments in detail, considering each unit of equipment as related to the entire operation and the effect of its loss on safety and production.
- **6.3.2** There are entire systems that might be critical by their very nature. Depending on the size and complexity of the operation, a plant can contain any or all of the following examples: emergency power, emergency lighting, fire-alarm systems, fire pumps, and certain communications systems. There should be no problem in establishing whether a system is critical and in having the proper amount of emphasis placed on its maintenance.
- **6.3.3** More difficult to identify are the parts of a system that are critical because of the function of the utilization equipment and its associated hardware. Some examples are as

follows:

- (1) The agitator drive motor for a kettle-type reactor can be extremely critical in that, if it fails to run for some period of time, when the charge materials are added to the reactor, the catalyst stratifies. If the motor is then started, a rapid reaction, rather than a slow, controlled reaction, could result that might run away, overpressurize, and destroy the reactor.
- (2) The cooling water source of an exothermic reactor might have associated with it some electrical equipment such as a drive motor, solenoid valves, controls, or the like. Failure of the cooling water might allow the exothermic reaction to go beyond the stable point and overpressurize and destroy the vessel.
- (3) A process furnace recirculating fan drive motor or fan might fail, nullifying the effects of temperature-sensing points and thus allowing hot spots to develop, with serious side reactions.
- (4) The failure of gas analysis equipment and interlocks in a drying oven or annealing furnace might allow the atmosphere in the drying oven or furnace to become flammable, with the possibility of an explosion.
- (5) The failure of any of the safety combustion controls on a large firebox, such as a boiler or an incinerator, can cause a serious explosion.
- (6) Two paralleled pump motors might be needed to provide the total requirements of a continuous process. Failure of either motor can cause a complete shutdown, rather than simply reduce production.
- **6.3.4** There are parts of the system that are critical because they reduce the widespread effect of a fault in electrical equipment. The determination of these parts should be primarily the responsibility of the electrical person on the team. Among the things that fall into this category are the following:
- (1) Source overcurrent protective devices, such as circuit breakers or fuses, including the relays, control circuits, and coordination of trip characteristics of the devices
- (2) Automatic bus transfer switches or other transfer switches that would supply critical loads with power from the emergency power source if the primary source failed; includes instrument power supplies as well as load power supplies
- 6.3.5 Parts of the control system are critical because they monitor the process and automatically shut down equipment or take other action to prevent catastrophe. These items are the interlocks, cutout devices, or shutdown devices installed throughout the plant or operation. Each interlock or shutdown device should be considered carefully by the entire team to establish whether it is a critical shutdown or a "convenience" shutdown. The maintenance group should thoroughly understand which shutdowns are critical and which are convenience. Critical shutdown devices are normally characterized by a sensing device separate from the normal control device. They probably have separate, final, or end devices that cause action to take place. Once the critical shutdown systems have been determined, they should be distinctly identified on drawings, on records, and on the hardware itself. Some examples of critical shutdown devices are overspeed trips; high or low temperature, Copyright NFPA

pressure, flow, or level trips; low-lube-oil pressure trips; pressure-relief valves; overcurrent trips; and low-voltage trips.

6.3.6 There are parts of the system that are critical because they alert operating personnel to dangerous or out-of-control conditions. These are normally referred to as alarms. Like shutdown devices, alarms fall into at least three categories: (1) those that signify a true pending catastrophe, (2) those that indicate out-of-control conditions, and (3) those that indicate the end of an operation or similar condition. The entire team should consider each alarm in the system with the same thoroughness with which they have considered the shutdown circuits. A truly critical alarm should be characterized by its separate sensing device, a separate readout device, and, preferably, separate circuitry and power source. The maintenance department should thoroughly understand the critical level of each alarm. The critical alarms and their significance should be distinctly marked on drawings, in records, and on the operating unit. For an alarm to be critical does not necessarily mean that it is complex or related to complex action. A simple valve position indicator can be one of the most critical alarms in an operating unit.

6.4 Establishment of a Systematic Program.

The purpose of any inspection and testing program is to establish the condition of equipment to determine what work should be done and to verify that it will continue to function until the next scheduled servicing occurs. Inspection and testing are best done in conjunction with routine maintenance. In this way, many minor items that require no special tools, training, or equipment can be corrected as they are found. The inspection and testing program is probably the most important function of a maintenance department in that it establishes what should be done to keep the system in service to perform the function for which it is required.

6.4.1 Atmosphere or Environment.

- **6.4.1.1** The atmosphere or environment in which electrical equipment is located has a definite effect on its operating capabilities and the degree of maintenance required. An ideal environment is one in which the air is (1) clean or filtered to remove dust, harmful vapor, excess moisture, and so on; (2) maintained in the temperature range of 15°C to 29°C (60°F to 85°F); and (3) in the range of 40 percent to 70 percent humidity. Under such conditions, the need for maintenance will be minimized. Where these conditions are not maintained, the performance of electrical equipment will be adversely affected. Good housekeeping contributes to a good environment and reduced maintenance.
- **6.4.1.2** Dust can foul cooling passages and thus reduce the capabilities of motors, transformers, switchgear, and so on, by raising their operating temperatures above rated limits, decreasing operating efficiencies, and increasing fire hazard. Similarly, chemicals and vapors can coat and reduce the heat transfer capabilities of heating and cooling equipment. Chemicals, dusts, and vapors can be highly flammable, explosive, or conductive, increasing the hazard of fire, explosion, ground faults, and short circuits. Chemicals and corrosive vapors can cause high contact resistance that will decrease contact life and increase contact power losses with possible fire hazard or false overload conditions due to excess heat. Large temperature changes combined with high humidity can cause condensation problems, malfunction of operating and safety devices, and lubrication problems. High ambient

temperatures in areas where thermally sensitive protective equipment is located can cause such protective equipment to operate below its intended operating point. Ideally, both the electrical apparatus and its protective equipment should be located within the same ambient temperature. Where the ambient-temperature difference between equipment and its protective device is extreme, compensation in the protective equipment should be made.

6.4.1.3 Electrical equipment installed in hazardous (classified) locations as described in NFPA 70, *National Electrical Code*, requires special maintenance considerations. (See Section 23.2.)

6.4.2 Load Conditions.

- **6.4.2.1** Equipment is designed and rated to perform satisfactorily when subjected to specific operating and load conditions. A motor designed for safe continuous operation at rated load might not be satisfactory for frequent intermittent operation, which can produce excessive winding temperatures or mechanical trouble. The resistance grid or transformer of a reduced-voltage starter will overheat if left in the starting position. So-called "jogging" or "inching" service imposes severe demands on equipment such as motors, starters, and controls. Each type of duty influences the type of equipment used and the extent of maintenance required. The five most common types of duty are defined in NFPA 70, *National Electrical Code*, and they are repeated in 6.4.2.2.
- **6.4.2.2** The following definitions can be found in Chapter 3 and are unique to this chapter:
- (1) Continuous duty (See 3.3.13.1.)
- (2) Intermittent duty (See 3.3.13.2.)
- (3) Periodic duty (See 3.3.13.3.)
- (4) Short-time duty (See 3.3.13.4.)
- (5) Varying duty (See 3.3.13.5.)
- **6.4.2.3** Some devices used in establishing a proper maintenance period are running-time meters (to measure total "on" or "use" time); counters to measure number of starts, stops, or load-on, load-off, and rest periods; and recording ammeters to graphically record load and no-load conditions. These devices can be applied to any system or equipment and will help classify the duty. They will help establish a proper frequency of preventive maintenance.
- **6.4.2.4** Safety and limit controls are devices whose sole function is to ensure that values remain within the safe design level of the system. Because these devices function only during an abnormal situation in which an undesirable or unsafe condition is reached, each device should be periodically and carefully inspected, checked, and tested to be certain that it is in reliable operating condition.
- **6.4.3** Wherever practical, a history of each electrical system should be developed for all equipment or parts of a system vital to a plant's operation, production, or process. The record should include all pertinent information for proper operation and maintenance. This information is useful in developing repair cost trends, items replaced, design changes or modifications, significant trouble or failure patterns, and replacement parts or devices that

should be stocked. System and equipment information should include the following:

- (1) Types of electrical equipment, such as motors, starters, contactors, heaters, relays
- (2) Types of mechanical equipment, such as valves, controls, and so on, and driven equipment, such as pumps, compressors, fans, and whether they are direct, geared, or belt driven
- (3) Nameplate data
- (4) Equipment use
- (5) Installation date
- (6) Available replacement parts
- (7) Maintenance test and inspection dates: type and frequency of lubrication; electrical inspections, test, and repair; mechanical inspections, test, and repair; replacement parts list with manufacturer's identification; electrical and mechanical drawings for assembly, repair, and operation
- **6.4.4 Inspection Frequency.** Those pieces of equipment found to be critical should require the most frequent inspections and tests. Depending on the degree of reliability required, other items can be inspected and tested much less frequently.
- **6.4.4.1** Manufacturers' service manuals should have a recommended frequency of inspection. The frequency given is based on standard or usual operating conditions and environments. It would be impossible for a manufacturer to list all combinations of environmental and operating conditions. However, a manufacturer's service manual is a good basis from which to begin considering the frequency for inspection and testing.
- **6.4.4.2** There are several points to consider in establishing the initial frequency of inspections and tests. Electrical equipment located in a separate air-conditioned control room or switch room certainly would not be considered normal, so the inspection interval might be extended 30 percent. However, if the equipment is located near another unit or operating plant that discharges dust or corrosive vapors, this time might be reduced by as much as 50 percent.
- **6.4.4.3** Continuously operating units with steady loads or with less than the rated full load tend to operate much longer and more reliably than intermittently operated or standby units. For this reason, the interval between inspections might be extended 10 to 20 percent for continuously operating equipment and possibly reduced by 20 to 40 percent for standby or infrequently operated equipment.
- **6.4.4.4** Once the initial frequency for inspection and tests has been established, this frequency should be adhered to for at least four maintenance cycles unless undue failures occur. For equipment that has unexpected failures, the interval between inspections should be reduced by 50 percent as soon as the trouble occurs. On the other hand, after four cycles of inspections have been completed, a pattern should have developed. If equipment consistently goes through more than two inspections without requiring service, the inspection period can be extended by 50 percent. Loss of production due to an emergency shutdown is almost always more expensive than loss of production due to a planned Copyright NFPA

shutdown. Accordingly, the interval between inspections should be planned to avoid the diminishing returns of either too long or too short an interval.

- **6.4.4.5** Adjustment in the interval between inspections should continue until the optimum interval is reached. This adjustment time can be minimized and the optimum interval approximated more closely initially by providing the person responsible for establishing the first interval with as much pertinent history and technology as possible.
- **6.4.4.6** The frequency of inspection for similar equipment operating under differing conditions can differ widely. Typical examples are as follows:
- (1) In a continuously operating plant having a good load factor and located in a favorable environment, the high-voltage oil circuit breakers might need an inspection only every two years. On the other hand, an electrolytic process plant using similar oil circuit breakers for controlling furnaces might find it necessary to inspect and service them as frequently as every 7 to 10 days.
- (2) An emergency generator to provide power for noncritical loads can be tested on a monthly basis. Yet the same generator in another plant having processes sensitive to explosion on loss of power might need to be tested during each shift.

6.5 Methods and Procedures.

6.5.1 General.

- **6.5.1.1** If a system is to operate without failure, not only should the discrete components of the system be maintained, but the connections between these components also should be covered by a thorough set of methods and procedures. Overlooking this important link in the system causes many companies to suffer high losses every year.
- **6.5.1.2** Other areas where the maintenance department should develop its own procedures are shutdown safeguards, interlocks, and alarms. Although the individual pieces of equipment can have testing and calibrating procedures furnished by the manufacturer, the application is probably unique, so the system per se should have an inspection and testing procedure developed for it.

6.5.2 Forms.

- **6.5.2.1** A variety of forms can go along with the inspection, testing, and repair (IT&R) procedure; these forms should be detailed and direct, yet simple and durable enough to be used in the field. Field notes should be legibly transcribed. One copy of reports should go in the working file of the piece of equipment and one in the master file maintained by first line supervision. These forms should be used by the electrical maintenance personnel; they are not for general distribution. If reports to production or engineering are needed, they should be separate, and inspection reports should not be used.
- **6.5.2.2** The IT&R procedure folder for a piece of equipment should list the following items:
- (1) All the special tools, materials, and equipment necessary to do the job
- (2) The estimated or actual average time to do the job

- (3) Appropriate references to technical manuals
- (4) Previous work done on the equipment
- (5) Points for special attention indicated by previous IT&R
- (6) If major work was predicted at the last IT&R, a copy of the purchase order and receiving reports for the parts to do the work and references to unusual incidents reported by production that might be associated with the equipment
- **6.5.2.3** Special precautions relative to operation, such as the following, should be part of the IT&R document:
- (1) What other equipment is affected and in what way?
- (2) Who has to be informed that the IT&R is going to be done?
- (3) How long will the equipment be out of service if all goes well? How long if major problems are uncovered?

6.5.3 Planning.

- **6.5.3.1** After the IT&R procedures have been developed and the frequency has been established (even though preliminary), the task of scheduling should be handled. Scheduling in a continuous-process plant (as opposed to a batch-process plant) is most critically affected by availability of equipment in blocks consistent with maintenance manpower capabilities. In general, facilities should be shut down on some regular basis for overall maintenance and repair. Some of the electrical maintenance items should be done at this time. IT&R that could be done while equipment is in service should be done prior to shutdown. Only work that needs to be done during shutdown should be scheduled at that time, to level out manpower requirements and limit downtime.
- **6.5.3.2** The very exercise of scheduling IT&R will point out design weaknesses that require excessive manpower during critical shutdown periods or that require excessive downtime to do the job with the personnel available. Once these weaknesses have been uncovered, consideration can be given to rectifying them. For example, the addition of one circuit breaker and a little cable can change a shutdown from three days to one day.
- **6.5.3.3** Availability of spare equipment affects scheduling in many ways. Older facilities might have installed spares for a major part of the equipment, or the facility might be made up of many parallel lines so that they can be shut down, one at a time, without seriously curtailing operations. This concept is particularly adaptable to electrical distribution. The use of a circuit breaker and a transfer bus can extend the interval between total shutdown on a main transformer station from once a year to once in 5 years or more.
- **6.5.3.4** In many continuous-process plants, particularly newer ones, the trend is toward a large single-process line with no installed spares. This method of operation requires inspections and tests, since there will be a natural desire to extend the time between maintenance shutdowns. Downtime in such plants is particularly costly, so it is desirable to build as much monitoring into the electrical systems as possible.
- **6.5.3.5** Planning running inspections can vary from a simple desk calendar to a computer Copyright NFPA

program. Any program for scheduling should have the following four facets:

- (1) A reminder to order parts and equipment with sufficient lead time to have them on the job when needed
- (2) The date and man-hours to do the job
- (3) A check to see that the job has been completed
- (4) Noticing if parts will be needed for the next IT&R and when they should be ordered
- **6.5.3.6** Planning shutdown IT&R is governed by the time between shutdowns, established by the limitations of the process or production units involved. Reliability of electrical equipment can and should be built in to correspond to almost any length of time.
- **6.5.3.7** Small plants should use, in an abbreviated form, the following shutdown recommendations of a large plant IT&R:
- (1) Know how many personnel-shifts the work will take.
- (2) Know how many persons will be available.
- (3) Inform production of how many shifts the electrical maintenance will require.
- (4) Have all the necessary tools, materials, and spare parts assembled on the job site. Overage is better than shortage.
- (5) Plan the work so that each person is used to best suit his or her skills.
- (6) Plan what each person will be doing during each hour of the shutdown. Allow sufficient off time so that if a job is not finished as scheduled, the person working on that job can be held over without becoming overtired for the next shift. This procedure will allow the schedule to be kept.
- (7) Additional clerical people during shutdown IT&R will make the job go more smoothly, help prevent omission of some important function, and allow an easier transition back to normal.
- (8) Supply copies of the electrical group plan to the overall shutdown coordinator so it can be incorporated into the overall plan. The overall plan should be presented in a form that is easy to use by all levels of supervision. In a large, complex operation, a critical path program or some similar program should be used.
- **6.5.3.8** Automatic shutdown systems and alarm systems that have been determined as critical should be designed and maintained so that nuisance tripping does not destroy operator confidence. Loss of operator confidence can and will cause these systems to be bypassed and the intended safety lost. Maintenance should prove that each operation was valid and caused by an unsafe condition.
- **6.5.3.9** A good electrical preventive maintenance program should identify the less critical jobs, so it is clear to first-line supervision which EPM can be delayed to make personnel available for emergency breakdown repair.

6.5.4 Analysis of Safety Procedures.

- **6.5.4.1** It is beyond the scope of this recommended practice to cover the details of safety procedures for each IT&R activity. Manufacturers' instructions contain safety procedures required in using their test equipment.
- **6.5.4.2** The test equipment (high voltage, high current, or other uses) should be inspected in accordance with vendor recommendations before the job is started. Any unsafe condition should be corrected before proceeding.
- **6.5.4.3** The people doing the IT&R should be briefed to be sure that all facets of safety before, during, and after the IT&R are understood. It is important that all protective equipment is in good condition and is on the job.
- **6.5.4.4** Screens, ropes, guards, and signs needed to protect people other than the IT&R team should be provided and used.
- **6.5.4.5** A procedure should be developed, understood, and used for leaving the test site in a safe condition when unattended at times such as a smoke break, a lunch break, or overnight.
- **6.5.4.6** A procedure should be developed, understood, and used to ensure safety to and from the process before, during, and after the IT&R. The process or other operation should be put in a safe condition for the IT&R by the operating people before the work is started. The procedure should include such checks as are necessary to ensure that the unit is ready for operation after the IT&R is completed and before the operation is restarted.

6.5.5 Records.

- **6.5.5.1 General.** Sufficient records should be kept by maintenance management to evaluate results. Analysis of the records should guide the spending level for EPM and breakdown repair.
- **6.5.5.2 Records of Cost.** Figures should be kept to show the total cost of each breakdown. This should be the actual cost plus an estimated cost of the business interruption. This figure is a powerful indicator for the guidance of expenditures for EPM.
- **6.5.5.3 Records Kept by First-Line Supervisor of EPM.** Of the many approaches to this phase of the program, the following approach is a typical one that fulfills the minimum requirements.
- **(A) Inspection Schedule.** The first-line supervisor should maintain, in some easy-to-use form, a schedule of inspections so that he or she can plan manpower requirements.
- **(B)** Work Order Log. An active log should be kept of unfinished work orders. A greater susceptibility to imminent breakdown is indicated by a large number of outstanding work orders resulting from the inspection function.
- **(C)** Unusual Event Log. As the name implies, this log lists unusual events that affect the electrical system in any way. This record is derived from reports of operating and other personnel and is a good tool for finding likely problems after the supervisor has learned to interpret and evaluate the reports. Near misses can be recorded and credit given for averting trouble.
- **6.5.6 Emergency Procedures.** It should be recognized that properly trained electrical Copyright NFPA

maintenance personnel have the potential to make an important contribution in the emergency situations that are most likely to occur. However, most such situations will also involve other crafts and disciplines, such as operating personnel, pipe fitters, and mechanics. An overall emergency procedure for each anticipated emergency situation should be developed cooperatively by the qualified personnel of each discipline involved, detailing steps to be followed, sequence of steps, and assignment of responsibility. The total procedure should then be run periodically as an emergency drill to ensure that all involved personnel are kept thoroughly familiar with the tasks they are to perform.

6.6 Maintenance of Imported Electrical Equipment.

Imported equipment poses some additional maintenance considerations.

- **6.6.1** Quick delivery of replacement parts cannot be taken for granted. Suppliers should be identified, and the replacement parts problem should be reflected in the in-plant spare parts inventory. In addition to considering possible slow delivery of replacement parts, knowledgeable outside sources of engineering services for the imported equipment should be established.
- **6.6.2** Parts catalogs, maintenance manuals, and drawings should be available in the language of the user. Documents created in a different language and then translated should not be presumed to be understandable. Problems in translation should be identified as soon as literature is received to ensure that material will be fully understood later, when actual maintenance must be performed.
- **6.7 Maintenance of Electrical Equipment for Use in Hazardous (Classified) Locations.** See Section 23.2.

•

Chapter 7 Personnel Safety

7.1 Introduction.

- **7.1.1** NFPA 70E, Standard for Electrical Safety in the Workplace, deals with the issues of safety-related work practices (Chapter 1 of NFPA 70E) and safety-related maintenance requirements (Chapter 2 of NFPA 70E). NFPA 70E and the appropriate OSHA safety-related documents should be utilized for the development of programs and procedures associated with maintenance activities.
- **7.1.2** Personnel safety should be given prime consideration in system design and in establishing maintenance practices. Safety rules should be instituted and practiced to prevent injury to personnel, both persons who are performing tasks and others who might be exposed to the hazard. The principal personnel danger from electricity is that of shock, electrocution, and/or severe burns from the electrical arc or its effects, which can be similar to that of an explosion.

7.2 Qualified Personnel.

Copyright NFPA

Maintenance should be performed only by qualified personnel who are trained in safe maintenance practices and the special considerations necessary to maintain electrical equipment. These individuals should be familiar with the requirements for obtaining safe electrical installations. All employees who face a risk of electrical hazard should be trained to understand the specific hazards associated with electrical energy, such as backfeed.

- **7.2.1** A person does not have to be fully trained in all categories so long as the specific task information provided and the safety-related information provided are adequate and the employee has demonstrated he/she understands the procedure.
- **7.2.2** The "qualified person(s)" is expected to know the proper personal protection equipment (PPE) to avoid or mitigate electrical shock or burn exposure.
- **7.2.2.1** The qualified person should determine if the hazard exposure is limited and restricted against those not qualified for the particular task (so a person not qualified for a specific task, even though fully qualified in all other ways, should not be exposed to the hazard of that specific task.
- **7.2.2.2** Personnel should be alert to any signs of fatigue, nervousness, and/or inattention to duty/detail in themselves as well as their fellow workers while near the exposed hazard.

7.3 Personnel Training.

All employees should be trained in safety-related work practices and required procedures as necessary to provide protection from electrical hazards associated with their respective jobs or task assignments. They should be able to identify and understand the relationship between electrical hazards and possible injury. Employees working on or near exposed energized electrical conductors or circuit parts should be instructed regularly in methods of first aid and emergency procedures, such as approved methods of resuscitation. They also should be trained in methods of release of victims from contact with exposed energized conductors or circuit parts. Employees should be instructed to report all shocks immediately, no matter how minor.

- **7.3.1** Specific training should be determined by the needs of the employee.
- **7.3.1.1** For example, the training should include applicable portions of NFPA 70E, *Standard for Electrical Safety in the Workplace*; NFPA 70, *National Electrical Code*; ANSI/IEEE C2, *National Electrical Safety Code*; ac electrical circuits, dc electrical circuits, and voltage levels to be encountered; motor connection and troubleshooting; transformer application and connections; equipment and personnel elevator systems onsite; electrical theory and principles; and additional statutory and federal electrical codes that apply.
- **7.3.1.2** The training should include information on the type of tools to be utilized. Instruction should be given in selecting the proper tool for the job and the limitations of the tool.
- **7.3.1.3** It is useful to be knowledgeable of the international standards affecting the task, including record keeping requirements. Safe workplace practices might be taught and demonstrated for material handling, machine/equipment handling, electrical devices, basic blueprint reading, advance wiring diagrams reading, and various power, hand, and calibration

Copyright NFPA

tools.

- **7.3.1.4** It is important to know where material safety data sheets (MSDS) are located and understood as to their application.
- **7.3.1.5** The training can be in the classroom, on the job, or both.
- **7.3.1.6** Refresher training should be provided as required.
- 7.4 Establishing an Electrically Safe Work Condition.
- 7.4.1 Electrically Safe Work Condition.
- **7.4.1.1** Prior to maintenance being performed on electrical circuits or equipment, NFPA 70E, *Standard for Electrical Safety in the Workplace*, requires the establishment of an electrically safe work condition, unless the employer can demonstrate that deenergizing introduces additional or increased hazards or is infeasible due to equipment design or operational limitations. [**70E**: 130.1]
- **7.4.1.2** An electrically safe work condition is a state in which the conductor or circuit part to be worked on or near has been disconnected from energized parts, locked/tagged in accordance with established standards (see 7.4.4), tested to ensure the absence of voltage, and grounded when determined necessary.
- **7.4.2** Achieving an Electrically Safe Work Condition. An electrically safe work condition is achieved when performed in accordance with the procedures of Section 120.2 of NFPA 70E, Standard for Electrical Safety in the Workplace, and verified by the following process:
- (1) Determine all possible sources of electrical supply to the specific equipment. Check applicable up-to-date drawings, diagrams, and identification tags.
- (2) After properly interrupting the load current, open the disconnecting device(s) for each source.
- (3) Wherever possible, visually verify that all blades of the disconnecting devices are fully open or that drawout-type circuit breakers are withdrawn to the fully disconnected position.
- (4) Apply lockout/tagout devices in accordance with a documented and established policy.
- (5) Use an adequately rated voltage detector to test each phase conductor or circuit part to verify they are deenergized. Test each phase conductor or circuit part both phase-to-phase and phase-to-ground. Before and after each test, determine that the voltage detector is operating satisfactorily.
- (6) Where the possibility of induced voltages or stored electrical energy exists, ground the phase conductors or circuit parts before touching them. Where it could be reasonably anticipated that the conductors or circuit parts being deenergized could contact other exposed energized conductors or circuit parts, apply ground-connecting devices rated for the available fault duty. [70E:120.1]
- **7.4.3 Personnel.** All personnel connected with the work should be involved. Each individual Copyright NFPA

should be personally satisfied that all necessary steps have been executed in the proper manner.

- **7.4.4 Lockout/Tagout.** 29 CFR 1910.333, "Occupational Safety and Health Act" (OSHA), requires each disconnecting means used to deenergize circuits and equipment on which work is to be performed be locked and tagged in the open position. ANSI Z244.1 2003, Personnel Protection Lockout/Tagout of Energy Sources Minimum Safety Requirements, and NFPA 70E, Standard for Electrical Safety in the Workplace, are also strongly recommended as guides in the development of an effective lockout/tagout for electrical and other energy sources. The lockout/tagout procedure given in NFPA 70E meets or exceeds OSHA requirements.
- **7.4.4.1** OSHA requires the lock to be attached so as to prevent persons from operating the disconnecting means unless they resort to undue force or the use of tools. OSHA requires each tag to contain a statement prohibiting unauthorized operation of the disconnecting means and removal of the tag. The tag is to provide information as to why the circuit is open and the name of the person having the key for the lock.
- **7.4.4.2** OSHA allows for the use of a tag without a lock only if the equipment precludes the installation of a lock, and the tag shall be supplemented by at least one safety measure that provides a level of safety equivalent to that obtained by the use of a lock. Some examples of such safety measures include the removal of an isolating circuit element, blocking of a controlling switch, or opening of an extra disconnecting device.
- **7.4.4.3** OSHA provides for installation of a lock without a tag only under all of the following conditions:
- (1) Only one circuit or piece of equipment is deenergized.
- (2) The lockout period does not extend beyond the work shift.
- (3) Employees exposed to the hazards associated with reenergizing the circuit of equipment are familiar with this procedure.
- **7.4.5** Work On or Near Live Parts. Article 130 of NFPA 70E, *Standard for Electrical Safety in the Workplace*, requires that electrical conductors and circuit parts that have not been deenergized or that have been disconnected [but not under lockout/tagout, tested, and grounded (where appropriate)] not be considered to be in an electrically safe work condition and that safe work practices appropriate for the circuit voltage and energy level be used.
- **7.4.5.1** When it is necessary to work in the vicinity of energized equipment, safety precautions should be followed, such as roping off the dangerous area, using insulating rubber blankets for isolation, and using insulating rubber gloves and properly insulated tools and equipment.
- **7.4.5.2** Prior to maintenance being performed on or near live electrical equipment, NFPA 70E, *Standard for Electrical Safety in the Workplace*, should be used to identify the degree of personal protective equipment (PPE) required.
- **7.4.5.3** All insulating tools and PPE should be tested periodically. 29 CFR 1910.137, "Electrical Protective Devices," has requirements for the testing, care, marking, and use of

rubber goods, such as insulating blankets, matting, covers, line hose, gloves, and sleeves.

- **7.4.5.4** The use of well-maintained safety equipment is essential and should be mandatory when working on or near live electrical equipment. Some of the more important articles that should be provided are as follows:
- (1) Heavy leather gloves
- (2) Insulating gloves with leather protectors, mats, blankets, baskets, boots, jackets, and coats
- (3) Insulated hand tools such as screwdrivers and pliers
- (4) Nonmetallic hard hats with suitable arc-rated face protection
- (5) Poles with hooks and hot sticks to safely open isolating switches

7.5 Job Task Safety Analysis.

A safety review of the job task to be accomplished should be completed prior to job initiation.

- **7.5.1** The personnel doing the job task should be briefed prior to starting the task to ensure that all facets affecting safety are understood.
- **7.5.2** All test instruments and tools should be used in compliance with the manufacturers' instructions. Failure to follow those instructions can result in injury to personnel.
- **7.5.2.1** When electrical tests are conducted within hazardous (classified) locations, the area should be verified as non-classified if the test equipment is not of an intrinsically safe type. The area should be verified as being non-classified during the period if non-intrinsically safe test equipment is used.
- **7.5.3** Use of wiring devices such as attachment plugs and receptacles to disconnect some equipment under some load conditions such as welders and running or stalled motors can be hazardous. Other load-interrupting means intended for this purpose should be used.
- **7.5.4** The following safety precautions should be observed:
- (1) Personnel should wear personal protective equipment (PPE) such as goggles, gloves, aprons, and respirators when working with solvents.
- (2) Care should be exercised in the selection of cleaning agents for any particular task, following all applicable environmental regulations.
- (3) Adequate ventilation should be provided where cleaning agents are used, to avoid fire, explosion, and health hazards.
- (4) A metal nozzle used for spraying flammable cleaning agents should be bonded to the supply drum and to the equipment being sprayed.
- (5) Screens, ropes, guards, and signs should be provided to prohibit access to persons other than those necessary to perform the task.
- (6) A procedure should be established to leave the test site in a safe condition when Copyright NFPA

unattended.

7.5.5 The review process should include such checks as are necessary to ensure the equipment is ready for operation at the completion of the task.

7.6 Arc Flash Hazard.


Switchboards, panelboards, industrial control panels, and motor control centers that are likely to require examination, adjustment, servicing, or maintenance while energized should be field marked to warn qualified persons of potential electric arc flash hazards. The marking should be located so as to be clearly visible to qualified persons before examination, adjustment, servicing, or maintenance of the equipment.

7.7 Grounding of Equipment to Provide Protection for Electrical Maintenance Personnel.

- 7.7.1 As described in 7.4.5, personnel working on, or in close proximity to, deenergized lines or conductors in electrical equipment should be protected against shock hazard and flash burns that could occur if the circuit were to be inadvertently reenergized. Sound judgment should be exercised in deciding the extent of protection to be provided and determining the type of protective equipment and procedures that should be applied. The extent of protection that should be provided will be dictated by specific circumstances. Optimum protection should be provided. A high level of protection should be provided for any work on high- and medium-voltage circuits; on the other hand, minimal protection might be sufficient for work on minor branch circuits. Balance should be struck between the two extremes of optimum and minimal-but-adequate protection.
- **7.7.2** The following possible conditions and occurrences should be considered in determining the type and extent of protection to be provided:
- (1) Induced voltages from adjacent energized conductors, which can be appreciably increased when high fault currents flow in adjacent circuits
- (2) Switching errors causing inadvertent reenergizing of the circuit
- (3) Any unusual condition that might bring an energized conductor into electrical contact with the deenergized circuit
- (4) Extremely high voltages caused by direct or nearby lightning strikes
- (5) Stored charges from capacitors or other equipment
- **7.7.3** Providing proper protection begins with establishing an electrically safe work condition as described in Section 7.4.
- **7.7.4** In spite of all precautions, deenergized circuits can be inadvertently reenergized. When this occurs, adequate grounding is the only protection for personnel working on those circuits. For this reason, it is especially important that adequate grounding procedures be established and rigidly enforced.
- **7.7.4.1** A variety of terms are used to identify the grounding of deenergized electrical equipment to permit personnel to safely perform work on it without using special insulated Copyright NFPA

- tools. Some of these terms are *safety grounding*, *temporary grounding*, and *personnel grounding*. Throughout this chapter, the word *grounding* is used to refer to this activity; it does not refer to permanent grounding of system neutrals or non-current-carrying metal parts of electrical equipment.
- 7.7.4.2 Grounding equipment consists mainly of special heavy-duty clamps that are connected to cables of adequate capacity for the system fault current. This current, which might well be in excess of 100,000 amperes, will flow until the circuit overcurrent protective devices operate to deenergize the conductors. The grounding equipment should not be larger than necessary, because bulkiness and weight hinder personnel connecting them to the conductors, especially when they are working with hot-line sticks. Selection of grounding equipment should take the provisions of 7.7.4.2.1 through 7.7.4.2.5 into consideration.
- 7.7.4.2.1 Grounding clamps should be of proper size to fit the conductors and have adequate capacity for the fault current. An inadequate clamp can melt or be blown off under fault conditions. Hot-line clamps should not be used for grounding deenergized conductors because they are not designed to carry the high current that would flow if the circuit were to be inadvertently reenergized. They are intended to be used only for connecting tap conductors to energized overhead lines by means of hot-line sticks and are designed to carry only normal load current. If hot-line clamps are used for grounding, high fault current could melt or blow them off without operating the overcurrent protective devices to deenergize the conductors, thereby exposing personnel to lethal voltages and arc burns.
- **7.7.4.2.2** Grounding cables should be of adequate capacity, which, in some instances, might require two or more to be paralleled. Three factors contribute to adequate capacity: (1) terminal strength, which largely depends on the ferrules installed on the cable ends; (2) size to carry maximum current without melting; and (3) low resistance to keep the voltage drop across the areas in which the personnel are working at a safe level during any period of inadvertent reenergization.
- **7.7.4.2.3** Solid metal-to-metal connections are essential between grounding clamps and the deenergized conductors. Conductors are often corroded and are sometimes covered with paint. Ground clamps should have serrated jaws because it is often impractical to clean the conductors. The clamps should be slightly tightened in place, given a slight rotation on the conductors to provide cleaning action by the serrated jaws, and then securely tightened. Ground clamps that attach to the steel tower, switchgear, or station ground bus are equipped with pointed or cupped set screws that should be tightened to ensure penetration through corrosion and paint, to provide adequate connections.
- **7.7.4.2.4** Grounding cables should be no longer than is necessary to keep resistance as low as possible and to minimize slack in cables to prevent their violent movement under fault conditions. If the circuit should be inadvertently reenergized, the fault current and resultant magnetic forces could cause severe and dangerous movement of slack grounding cables in the area where personnel are working. Proper routing of grounding cables to avoid excessive slack is essential for personnel safety.
- **7.7.4.2.5** Grounding cables should be connected between phases to the grounded structure and to the system neutral (when available) to minimize the voltage drop across the work area

if inadvertent reenergization should occur. The arrangement is shown in Figure 7.7.4.2.5 with the equivalent electrical diagram.

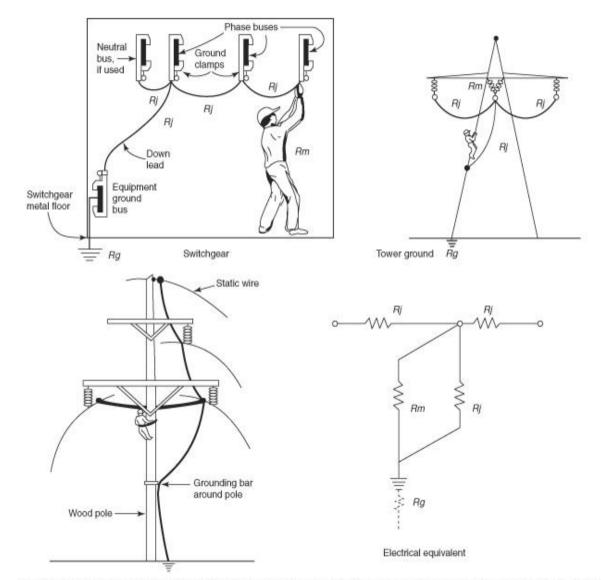

In the electrical equivalent diagram, it can be presumed that the resistance of the person's body (*Rm*) is 500 ohms. He or she is in parallel with only the resistance of a single cable (*Rij*), which can be on the order of 0.001 ohm. *Rg* is the ground resistance of the switchgear or structure area. If a 1000-ampere current should flow in the circuit grounded in this manner, the person would be subjected to only about 1 voit imposed across the work area; therefore, the current flow through his or her body would be negligible.

FIGURE 7.7.4.2.5 Preferred Grounding Arrangement.

7.7.4.3 In Figure 7.7.4.2.5 electrical equivalent diagram, it can be presumed that the resistance of the worker's body (Rm) is 500 ohms. The worker is in parallel with only the resistance of a single cable (Rj), which can be on the order of 0.001 ohm. Rg is the ground resistance of the switchgear or structure area. If a 1000-ampere current should flow in the circuit grounded in this manner, the worker in Figure 7.7.4.2.5 would be subjected to only about 1 volt imposed across the work area; therefore, the current flow through the worker's body would be negligible.

- **7.7.4.4** Connecting the phase conductors together with short cables and clamps of adequate capacity, as shown in Figure 7.7.4.2.5, minimizes resistance between phases for fast action of the circuit overcurrent protective devices to deenergize the circuit, if it is inadvertently reenergized. The short down-lead cable between the jumpered phase conductors and the grounded tower or switchgear ground bus reduces resistance to ground and the amount of cable that can move violently in the work area during high current flow. If there is a system neutral conductor at the work location, a cable should also be connected to that conductor for more complete protection and to ensure lowest resistance in the ground return path to the source. Figure 7.7.4.2.5 shows buses and a person working inside switchgear; the same conditions would apply to personnel on overhead line towers and outdoor substation steel structures. Someone working on such properly grounded areas is in parallel with a minimum of resistance so he or she would be exposed to minimum voltage drop in the event of current flow in the system, and the low resistance would cause rapid operation of the fuses or circuit breakers, thus minimizing the time the person is exposed to the voltage drop.
- **7.7.4.5** Prior to installation, grounding equipment should be inspected for broken strands in the conductors, loose connections to the clamp terminals, and defective clamp mechanisms. Defective equipment should not be used.
- **7.7.4.6** Grounding equipment should be installed at each point where work is being performed on deenergized equipment. Often it is advisable to install grounding equipment on each side of a work point or at each end of a deenergized circuit.
- **7.7.4.7** One end of the grounding down lead should be connected to the metal structure or ground bus of the switchgear before the other end is connected to a phase conductor of the deenergized equipment. Then, and only then, should the grounding cables be connected between phase conductors.
- **7.7.4.8** When grounding equipment is removed, the above installation procedure should be reversed by first disconnecting the cables between phases, then disconnecting the down lead from the phase conductor, and, finally, disconnecting the down lead from the metal structure or ground bus.
- **7.7.4.9** Removal of grounding equipment before the circuit is intentionally reenergized is equally as important as was its initial installation, but for other reasons. If grounding equipment is forgotten or overlooked after the work is completed and the circuit is intentionally reenergized, the supply circuit overcurrent protective devices will immediately open because the conductors are jumpered and grounded. The short-circuit current can damage the contacts of a breaker having adequate interrupting capacity and can cause an inadequate breaker or fuses to explode. If the grounding cables are inadequate, they can melt and initiate damaging power arcs. A procedure should be established to ensure removal of all grounding equipment before the circuit is intentionally reenergized. Recommendations for such a procedure are as follows:
- (1) An identification number should be assigned to each grounding equipment set, and all sets that are available for use by all parties, including contractor personnel, should be rigidly controlled.
 - (a) The number and location of each set that is installed should be recorded.

- (b) That number should be crossed off the record when each set is removed.
- (2) Before the circuit is reenergized, all sets of grounding equipment should be accounted for by number to ensure that all have been removed.
- (3) Doors should not be allowed to be closed nor should covers be allowed to be replaced where a set of grounding equipment has been installed inside switchgear. If it is necessary to do so to conceal grounding equipment, a highly visible sign should be placed on the door or cover to remind personnel that a ground is inside.
- (4) Before reenergizing the circuit, personnel should inspect interiors of equipment to verify that all grounding sets, including small ones used in testing potential transformers, relays, and so on, have been removed.
- (5) Before the circuit is reenergized, all conductors should be tested with a megohmmeter to ascertain if any are grounded. If so, the cause should be determined and corrective action taken.
- **7.7.4.10** Use of insulated hot-line sticks, rubber gloves, or similar protective equipment by personnel is advisable while installing grounding equipment on ungrounded, deenergized overhead line conductors and also while removing the grounding equipment.
- **7.7.4.11** Data available from grounding-equipment manufacturers should be referred to for ampacities of cables and clamps and for detailed application information.
- **7.7.4.12** In some instances, specialized grounding equipment might be required, such as traveling grounds on new overhead line conductors being strung adjacent to energized circuits.
- 7.7.4.13 Drawout-type grounding and testing devices are available for insertion into some models of switchgear to temporarily replace circuit breakers. These devices provide a positive and convenient grounding means for switchgear buses or associated circuits by connecting to the switchgear buses or line stabs in the same manner as drawout breakers. One such device has two sets of primary disconnecting stabs: the set designated "BUS" connects to the switchgear bus stabs, and the other set, designated "LINE," connects to the switchgear supply line or load circuit stabs. Another type of grounding device has only one set of primary disconnecting stabs that can be positioned to connect to either the switchgear "BUS" stabs or the "LINE" stabs. Grounding cables can be connected from the selected disconnecting stud terminals in one of these devices to the switchgear ground bus. When the device is fully inserted into the switchgear, it grounds the deenergized buses or lines that were previously selected. Utmost care should be exercised when using these devices to prevent the inadvertent grounding of an energized bus or circuit. Such a mistake could expose personnel to flash burns and could seriously damage the switchgear. Before a device with grounding cables connected to it is inserted into switchgear, it is essential that the stabs that are to be grounded are tested for NO VOLTAGE and to verify that only the proper and matching disconnecting stud terminals in the device are grounded.

Chapter 8 Fundamentals of Electrical Equipment Maintenance

8.1 Design to Accommodate Maintenance.

- **8.1.1** Equipment should be deenergized for inspections, tests, repairs, and other servicing. Such maintenance tasks can be performed when the equipment is energized, provided provisions are made to allow maintenance to be performed safely. For the purposes of this chapter, *deenergized* means locked and tagged out in accordance with 7.4.4. See Chapter 7 for examples of typical safety-related work practices that might need to be implemented.
- **8.1.1.1** Many maintenance tasks require equipment to be shut down and deenergized for effective results.
- **8.1.1.2** Other maintenance tasks might specifically require or permit equipment to be energized and in service while the tasks are performed. Examples include taking transformer oil samples and observing and recording operating temperatures, load conditions, corona, noise, or lamp output.
- **8.1.1.3** Coordinating maintenance with planned production outages and providing system flexibility such as by duplication of equipment and processes are two recommended means to avoid major disruptions of operations. An example of flexibility is a selective radial distribution system incorporating double-ended low-voltage substations. This system permits maintenance and testing to be performed on equipment such as the primary feeders, transformers, and main and tie circuit breakers during periods of light loads.
- **8.1.2** Larger production equipment, such as air compressors, air-conditioning units, and pumps, that can be difficult to repair or replace quickly is often installed in multiples to provide reserve capacity. Duplication of equipment enables maintenance to be performed economically without costly premium time and ensures continuous production in the event of an accidental breakdown.
- **8.1.3** Selection of quality equipment that is adequate for the present and projected load growth is a prime factor in reducing maintenance cost. Overloaded equipment or equipment not suited for the application will have a short service life and will be costly to maintain. Abnormal conditions, such as a corrosive atmosphere, excessive temperature, high humidity, abrasive or conducting particles, and frequent starting and stopping, require special consideration in the selection of the equipment in order to minimize maintenance cost.
- **8.1.4** Too often, installation cost without sufficient regard for efficient and economic maintenance influences system design. Within a few years, the added cost of performing maintenance plus production loss from forced outages due to lack of maintenance will more than offset the savings in initial cost.
- **8.1.5** As equipment grows older and is possibly worked harder, scheduling outages to perform accelerated maintenance could become a major problem.

8.2 Scheduling Maintenance.

8.2.1 In larger plants, routine maintenance scheduling is often done by a computer program that prints out the work orders for projects to be accomplished on a weekly or monthly basis. In smaller plants, the maintenance schedule is often carried in the maintenance supervisor's

head. It goes without saying that an effective maintenance program requires a positive mechanism for scheduling and recording the work that has been accomplished.

- **8.2.2** A thankless task is that of working with production management in attempting to obtain production outages necessary to accommodate maintenance. Many production managers still look at maintenance as a necessary evil. Maintenance outages, particularly in plants that operate 24 hours a day, 7 days a week, are difficult to schedule; however, there are some areas that can be relieved with a nominal investment.
- **8.2.2.1** For example, low-voltage power circuit breakers should be inspected on an annual basis and tested under simulated overload and fault conditions every 3 to 5 years. An investment in a few spare circuit breakers, one or two of each make and size in use, would allow them to be inspected, overhauled, and tested at almost any convenient time. The in-service breakers could then be exchanged with spares at an opportune time, with negligible production downtime.
- **8.2.3** Many plants schedule vacation shutdowns of 1 to 3 weeks duration to perform needed periodic maintenance on vital production apparatus that cannot be taken out of service at any other time. A total plant shutdown resolves the problem of scheduling partial outages around limited production operations. Even so, some difficulty might be encountered in providing power requirements for maintenance operations and still performing the needed maintenance on the electrical system.
- **8.2.4** The scope of the work should be confined to the limited time and available personnel. Contracting out preventive maintenance to qualified electrical contractors can relieve these and other problems associated with preventive maintenance. Electrical contractors who specialize in this type of work have trained mechanics and the proper tools and equipment. Many of them carry inventories of spare electrical equipment.
- **8.2.5** It is necessary to establish intervals for performing specific tasks when scheduling maintenance. The following considerations should be reviewed during development of a routine maintenance schedule:
- (1) The potential of equipment failure to endanger or threaten personnel safety (See Section 5.2.)
- (2) Manufacturers' service manual recommended practices and procedures (See 6.4.4.2.)
- (3) Operating environment (See 5.3.3, 6.4.1, 6.4.3.)
- (4) Operating load conditions and equipment rating (See 5.3.4, 6.4.2, 6.4.4.4.)
- (5) Unusually expensive equipment repairs (See Section 5.2.)
- (6) Failure and repair of failed equipment causing extensive downtime and lost production dollars (See Section 5.2.)
- (7) Equipment condition (See 6.3.3, 6.3.5.)
- (8) Operating load conditions and equipment rating (See 5.3.4 and 5.3.5.)
- (9) Production and operating schedules (See 6.1.6, 6.5.3.)

- (10) Ability to take equipment out of service (See 6.1.6.)
- (11) Failure history (See 6.1.6, 6.4.4.5.)
- (12) Inspection history (See 6.4.4.5.)
- **8.2.5.1** A guide for maintenance intervals is included in Annex I.

8.3 Equipment Safety.

- **8.3.1** Equipment safety demands sensitive and effective protection. The protective device should be capable of immediately sensing an abnormality and causing it to be isolated with the least destruction and minimum disturbance to the system. The degree of sensitivity and speed of response is vital to the effectiveness of the protection.
- **8.3.2** The protective device, fuse, relay, and series or static trip on low-voltage breakers generally sense overcurrent. Ideally, the device should not be applied or set to respond to normal load excursions, yet it should function on a low-level fault. This is an impossible situation unless ground-fault protection is utilized, since the magnitude of a phase-to-ground fault could be less than normal load current.
- **8.3.3** Destructive energy, capable of disintegrating an entire switchgear assembly in a matter of a few minutes, can be released in a low-voltage phase-to-phase or phase-to-enclosure, sustained arcing fault. The fault current, in the order of thousands of amperes, multiplied by the arc voltage drop (approximately 100 volts on a 480Y/277 system) multiplied by the duration of the arc in seconds is a measure of the energy released (watt-seconds).

8.4 Protective Scheme.

- **8.4.1** While the application of circuit protection, as developed in a short-circuit and coordination study, is an engineering function and hence recognized as a facet of system design, assurance the this designed protection remains in operation is a maintenance responsibility. Applying the settings and periodic testing of the protective devices, relays, and series and static trip elements is definitely a maintenance function. Similarly, checking the proper type and ampere rating of the fuses used in the system is part of the maintenance function.
- **8.4.2** In larger plants, interpretation of the short-circuit and coordination study is generally made by plant engineering, and the settings and test points for the adjustable protective devices are furnished by the maintenance department, as are the type and ampere rating of the fuses. While the maintenance personnel need not be able to formulate the engineering study, they should be able to interpret the time-current curves in understanding the performance of the protective device being tested.
- **8.4.3** An up-to-date short-circuit and coordination study is essential for the safety of personnel and equipment. The momentary and interrupting rating requirements of the protective devices should be analyzed, that is, will the circuit breaker or fuse safely interrupt the fault or explode in attempting to perform this function?
- **8.4.3.1** Another phase of the study is that of developing the application of the protective Copyright NFPA

device to realize minimum equipment damage and the least disturbance to the system in the event of a fault.

8.5 Acceptance Testing.

The initial acceptance testing of the electrical system is part of design and plant construction and hence not part of maintenance. However, the acceptance test data do provide the benchmarks for subsequent maintenance testing. The acceptance testing should be witnessed by the owner's representative, and a copy of the test reports should be forwarded to the plant engineer for the maintenance records.

8.6 Guidelines and Impact of Additions/Rework to Retrofitting Equipment.

- **8.6.1** Rework, remanufacturing, or retrofitting of equipment typically involves replacement or refurbishing of major components of equipment or systems.
- **8.6.2** Repairs or modifications not authorized by the original equipment manufacturer might void the equipment warranties and third-party certifications.
- **8.6.3** Equipment can be factory reconditioned under rebuilding programs.
- **8.6.4** The rework, remanufacturing, or retrofitting process can be conducted by the original manufacturer or by another party with sufficient facilities, technical knowledge, and manufacturing skills (as evaluated by an accepted certification organization). Safety certifications should be sought for repaired or rebuilt equipment.
- **8.6.5** Refurbished or remanufactured equipment should be marked to identify it as such.

8.7 Equipment Cleaning.

8.7.1 General. The cleaning method used should be determined by the type of contamination to be removed and whether the apparatus is to be returned to use immediately. Drying is necessary after using a solvent or water. Insulation should be tested to determine whether it has been properly reconditioned. Enclosure and substation room filters should be cleaned at regular intervals and replaced if they are damaged or clogged. Loose hardware and debris should be removed from the enclosures (new or unusual wear or loss of parts occurring after the cleaning can be detected during subsequent maintenance).

8.7.2 Methods of Cleaning.

- **8.7.2.1** Wiping off dirt with a clean, dry, lint-free cloth or soft brush is usually satisfactory if the apparatus is small, the surfaces to be cleaned are accessible, and only dry dirt is to be removed. Waste rags should not be used because lint will adhere to the insulation and act as a further dirt-collecting agent. Care should be used to avoid damage to delicate parts.
- **8.7.2.2** To remove loose dust, dirt, and particles, suction cleaning methods should be used. Blowing out with compressed air is likely to spread contamination and damage insulation.
- **8.7.2.3** Where dirt cannot be removed by wiping or vacuuming, compressed-air blowing might be necessary. Care should be exercised because the use of compressed air can cause contaminants to become airborne, which can compromise the integrity of insulation surfaces

or foul the mechanical operation of nearby equipment. Provisions might need to be made to remove the equipment to a suitable location for cleaning or to cover other equipment to guard it from cross contamination. Air should be dry and directed in a manner to avoid further blockage of ventilation ducts and recesses in insulations.

CAUTION: Cleaning with compressed air can create a hazard to personnel and cause equipment to fail or malfunction.

- **8.7.2.3.1** If compressed air is used, protection should be provided against injury to workers' faces and eyes from flying debris and to their lungs from dust inhalation. The use of compressed air should comply with OSHA regulations in 29 CFR 1910.242(b), "Hand and Portable Powered Tools and Other Hand Held Equipment," including limiting air pressure for such cleaning to less than a gauge pressure of 208.85 kPa (30 psi) and the provision of effective chip guarding and appropriate personal protective equipment.
- **8.7.2.3.2** Protection might also be needed against contamination of other equipment if the insulation is cleaned in place with compressed air. Equipment should be removed to a suitable location for cleaning, or other exposed equipment should be covered before cleaning starts to keep the debris out.
- **8.7.2.4** Accumulated dirt, oil, or grease might require a solvent to remove it. A rag barely moistened (not wet) with a nonflammable solvent can be used for wiping. Solvents used for cleaning of electrical equipment should be selected carefully to ensure compatibility with materials being cleaned. Liquid cleaners, including spray cleaners, are not recommended unless specified by the equipment manufacturer, because of the risk of residues causing damage, interfering with electrical or mechanical functions, or compromising the integrity of insulation surfaces.
- **8.7.2.5** Equipment might require cleaning by nonconductive sandblasting.
- **8.7.2.5.1** Shot blasting should not be used.

CAUTION: Cleaning with abrasives or abrasive blasting methods can create a hazard to personnel and might cause equipment to fail or malfunction.

- **8.7.2.5.2** Abrasive blasting operations should comply with OSHA regulations in 29 CFR 1910.94(a), "Occupational Health and Environmental Control Ventilation." Protection should be provided against injury to workers' faces and eyes from abrasives and flying debris and to their lungs from dust inhalation.
- **8.7.2.6** Asbestos is a toxic substance subject to government regulations. A knowledge of government regulations is required in handling asbestos and other such materials. (Copies of the Toxic Substances Control Act as defined in the U.S. Code of Federal Regulations can be obtained from the Industry Office of Toxic Substances, Environmental Protection Agency, Washington, DC 20460. Call 202-554-1404.)
- **8.7.2.7** If sweeping of a substation room is required, a sweeping compound should be used to limit the amount of dirt and dust becoming airborne. During mopping, the mop bucket should be kept as far as practical from the switchgear.

8.8 Special Handling and Disposal Considerations.

- **8.8.1** The handling and disposal of certain electrical equipment, components, and materials can present special maintenance obligations. Examples of such materials are given in 8.8.1(A) through 8.8.1(I).
- (A) Asbestos. Asbestos-containing materials can be present in equipment such as wire, switches, circuit protectors, panelboards, and circuit breakers, particularly in various arc chute constructions. Airborne asbestos fibers can endanger health. (See 8.7.2.6.)
- **(B)** Polychlorinated Biphenyls (PCBs). Askarels and other PCBs previously were used as a noncombustible dielectric fluid or added to transformer oil. Although PCBs are no longer manufactured in the United States and are no longer put in new equipment, PCBs might still exist in older transformers, power capacitors, oil-insulated cables, and fluorescent lighting ballasts. (See 10.2.1.3.)
- **(C)** Lead. The disposal of paper-insulated, lead-covered cables can be an environmental concern. Abandoning a lead product, like a lead-covered cable, in the ground is prohibited in some jurisdictions. The lead can leach soluble lead salts into the environment. Reclaiming and reusing the lead or treating the lead to curtail leaching are two means of handling the environmental threat.
- **(D) Mineral Oil.** The disposal of ordinary transformer oil can be an environmental concern. Spent oil should be sent to a manufacturer or processor for recycling. In the United States, certain oil spills require state and regional EPA notification.
- **(E) Tetrachlorethylene.** Some transformers contain tetrachlorethylene, a toxic substance. Where possible, recycling should be considered.
- **(F) Trichloroethane.** Vapors from trichloroethane, an electrical cleaning and degreasing solvent, are toxic and an environmental threat. Handling and disposal of the liquid require special precautions because trichloroethane is an ozone-depleting chemical. Some jurisdictions have already banned the use of trichlor products.
- **(G) Mercury Vapor and Phosphor Coatings.** Fluorescent lamps and similar gas tubes can contain mercury vapor and phosphor coatings. If the tube breaks, these materials can escape into the environment. The disposal of large quantities of tubes warrants capturing these materials
- **(H) Radioactive Materials.** Devices containing radioactive materials can require special precautions.
- (I) Other Harmful Agents. Hazards presented by materials and processes should be reviewed whenever changes are planned. For example, a substitute cleaning agent might be more hazardous than the old cleaner, and special handling precautions might be needed for the new cleaner. Or, because of a planned change in operations, a fabric filter might soon be collecting a toxic chemical, and new procedures for filter replacement and disposal might be needed

- **8.8.2** Those responsible for establishing and sustaining maintenance programs should keep abreast of relevant material-handling and -disposal issues, including knowledge of toxic substances, environmental threats, and the latest technologies for waste handling and salvage. Testing might be required to determine the presence of toxic substances.
- **8.8.3** Health and environmental issues, governmental regulations, and salvage values should all be addressed in disposal-planning programs.

8.9 Lubrication.

Lubrication is the application of grease or oil to the bearings of motors, rotating shafts, gears, and so on. It can also include light lubrication to door hinges or other sliding surfaces on the equipment. Some special parts are identified as being prelubricated for life and should require no further lubrication.

Chapter 9 Substations and Switchgear Assemblies

9.1 Substations.

9.1.1 Introduction.

- **9.1.1.1** Substations in an electrical system perform the functions of voltage transformation, system protection, power factor correction metering, and circuit switching. They are comprised of electrical power products, such as transformers, regulators, air switches, circuit breakers, capacitors, and lightning arresters.
- **9.1.1.2** Maintenance of the substation is of a general nature. Maintenance of the individual power products are discussed under the appropriate headings. (See Section 9.8 for additional consideration in the maintenance of gas-insulated substations and gas-insulated equipment.)
- **9.1.1.3** The recommended frequency of maintenance depends on the environment in which the substation is operating. In many cases, it is an outdoor installation and exposed to the atmospheric contaminations in the neighborhood. In areas of industrial contamination or in coastal areas where ocean vapors are prevalent, inspections are recommended at intervals of 6 weeks to 2 months. Less frequent inspections are recommended in areas of relatively clean atmosphere.

9.1.2 Insulators.

- **9.1.2.1** Insulators should be inspected for evidence of contaminated surfaces or physical damage, such as cracked or broken segments. Contaminated insulator surfaces should be cleaned, and damaged insulators replaced.
- **9.1.2.2** Evidence of violent corona when the substation is energized should be reported. (See 3.3.10 for the definition of corona.) Ultrasonic detection and light amplification (night vision) equipment are useful for detecting corona.
- **9.1.2.3** Mild corona might be normal and is more pronounced when humidity is high.

Copyright NFPA

9.1.3 Conductors. All exposed conductors should be inspected for evidence of overheating at bolted joints. Extreme overheating will discolor copper conductors. If the substation is deenergized, bolted connections should be checked for tightness. Bolts should be tightened where required, with care being taken not to overstress the bolts. There are infrared detectors that can be used on energized systems to check for overheating by scanning from a distance. Where aluminum-to-copper joints exist, they should be inspected carefully for evidence of corrosion, overheating, or looseness.

9.1.4 Air-Disconnecting Switches.

- **9.1.4.1** Air-disconnecting switches are normally operated infrequently in service and usually are energized during routine substation maintenance. In that case, maintenance of the switch is limited to those areas that can be approached safely. The insulators and conducting parts should be examined as described earlier in 9.1.2 and 9.1.3. Interphase linkages and operating rods should be inspected to make sure that the linkage has not been bent or distorted and that all fastenings are secure. The position of the toggle latch of the switch-operating linkage should be observed on all closed switches to verify that the switch is mechanically locked in a closed position.
- **9.1.4.2** Power-operated switches should be operated periodically to ensure that the switches and their mechanism and control features are functioning properly. When the circuit condition does not permit operating the switch while energized and the circuit cannot be deenergized for routine maintenance, the operating mechanism should be disengaged from the linkage to allow the control circuits and mechanism to be checked, provided that this method does not adversely affect the overall adjustment.
- **9.1.4.2.1** The maintenance instructions of the particular manufacturer of each mechanism should be followed.
- **9.1.4.2.2** In addition, the following features should be checked:
- (1) Limit switch adjustment
- (2) Associated relays for poor contacts, burned-out coils, and inadequate supply voltage
- (3) Any other condition that might prevent proper functioning of the switch assembly
- **9.1.4.3** If the switches cannot be deenergized during routine maintenance, a scheduled outage should be planned periodically and thorough maintenance performed as follows:
- (1) The switch should be operated several times manually and checked for approximate simultaneous closing of all blades and for complete contact closing, and the blade lock or latch should be checked in the fully closed position.
- (2) If so equipped, the switch should be power operated and checked in accordance with the procedure in 9.1.4.3(1).
- (3) Contacts should be inspected for alignment, pressure, burns, or corrosion.
 - (a) Pitted or badly burned contacts should be replaced.
 - (b) If pitting is of a minor nature, the surface should be smoothed down with clean,

fine sandpaper.

- (c) Arcing horns should be inspected for signs of excessive burning and should be replaced if necessary.
- (4) Insulation should be inspected for breaks, cracks, or burns and cleaned where abnormal conditions, such as salt deposits, cement dust, or acid fumes, prevail.
- (5) Gear boxes should be checked for moisture that could cause corrosion or difficulty in the switch due to ice formation.
- (6) Flexible braids or slip ring contacts commonly used for grounding the operating handle should be inspected, and braids showing signs of corrosion, wear, or broken strands should be replaced.
- (7) All safety interlocks should be inspected, checked, and tested for proper operation.
- **9.1.4.4** If it is known that a switch has carried heavy short-circuit current, special effort should be made to inspect it at the earliest possible time, since the ability of the switch to carry rated load current or fault current might be seriously impaired if the contacts are not maintained properly.
- **9.1.5 Grounding Equipment.** All the station grounds, enclosure grounds, and apparatus grounds should be inspected and tested when possible. All grounding connections should be inspected for tightness and absence of corrosion.
- **9.1.6 Enclosures.** The security of fences or other enclosures should be checked to ensure against entry of animals or unauthorized personnel. The gates or doors, especially where equipped with panic hardware, should be checked for security and proper operation. The enclosed area should not be used for storage of anything other than the most frequently used spare parts directly associated with the enclosed equipment.

9.1.7 Miscellaneous Equipment.

- **9.1.7.1** The availability and condition of rack-out devices, hoisting or handling apparatus, grounding equipment, hot sticks, rubber gloves, statiscopes, and other test equipment should be checked
- **9.1.7.2** The proper operation of floodlights and other auxiliary apparatus, such as cooling fans on transformers, should be checked.
- **9.1.7.3** Any indication of warning lights or warning flags on temperature gauges, pressure gauges, or liquid level gauges should be reported.

9.2 Switchgear Assemblies.

9.2.1 Introduction.

9.2.1.1 A switchgear assembly is assembled equipment (indoor or outdoor) that includes, but is not limited to, one or more of the following: switching, interrupting, control, metering, protective, or regulating devices together with their supporting structure, enclosure, conductors, electric interconnections, and accessories.

- **9.2.1.2** A switchgear assembly can be an open type, as part of a substation assembly, or an enclosed type. The open type was covered in Section 9.1. This section covers enclosed-type assemblies and, more specifically, metal-enclosed assemblies, because other types of enclosures are rarely found.
- **9.2.1.3** Metal-enclosed switchgear assemblies are enclosed on all sides and at the top with sheet metal. Access into the enclosure is provided by doors or a removable cover. The bus and bus connections are bare in all except metal-clad-type switchgear assemblies. Although the bus and the connections are insulated in metal-clad switchgear assemblies, the insulation is not designed to protect against electrical shock. Contact with the bus or its connections should be avoided when the switchgear is energized.
- **9.2.1.4** Low-voltage metal-enclosed switchgear assemblies have a maximum nominal voltage rating of 600 volts. Medium- and high-voltage metal-enclosed switchgear assemblies have nominal voltage ratings from 5,000 volts to 69,000 volts inclusive.
- **9.2.1.5** These switchgear assemblies are normally constructed in modules or cubicles, each of which contains either one or more interrupting devices (low-voltage cubicles usually contain two or more interrupting devices, whereas medium- and high-voltage cubicles contain only one device) or auxiliary equipment, such as metering transformers, auxiliary power transformer, control relaying, and battery chargers. Power is fed throughout the assembly by the main power bus.
- **9.2.1.6** Metal-enclosed switchgear assemblies are normally connected to one or more supply transformers, either closely connected to the transformer throat or remotely connected by cable or metal-enclosed bus. They might be found outdoors as a part of a substation or indoors as a power distribution center.

9.2.2 Frequency of Maintenance.

- **9.2.2.1** Recommended frequency of maintenance depends on environmental and operating conditions, so no fixed rule can govern all applications.
- **9.2.2.1.1** An annual inspection of the entire switchgear assembly, including withdrawable elements during the first 3 years of service, is usually suggested as a minimum when no other criteria can be identified.
- **9.2.2.1.2** Inspection frequency can be increased or decreased depending on observations and experience. It is good practice to follow specific manufacturers' recommendations regarding inspection and maintenance until sufficient knowledge is accumulated that permits modifying these practices based on experience. It is recommended that frequent inspections be made initially; the interval can then be gradually extended as conditions warrant.
- **9.2.2.2** The following factors affect the decision on when to inspect:
- (1) Scheduled shutdowns
- (2) Emergency shutdowns
- (3) Periods of sustained unusual or abnormal operating conditions (e.g., switching or lightning surges and sustained overloads)

- (4) Feeder, bus, or system fault occurrence
- (5) Extremes in atmospheric conditions, such as heat, cold, heavy dust, high winds, rain, snow, fog, smog, fumes of many kinds, fly ash, salt spray, high humidity, unusual temperature changes, and lightning
- (6) Maintenance requirements and schedules for related equipment, either component parts of the switchgear assembly or items apart from but connected to the switchgear circuits (Time is the most universal criterion, but other indicators, such as number of operations, can be used as a guide.)
- **9.2.2.3** Partial inspections can be made even when the entire switchgear assembly cannot be deenergized.
- **9.2.2.4** Specific circuits can be taken out of service even though the main bus is not deenergized. This permits an insulation inspection of bus risers and supports in the load side or "off" side of the switchgear unit.
- **9.2.2.5** Where operating conditions are such that a full shutdown of an entire switchgear assembly for inspection of insulation is impractical, partial inspections can dictate the decision on whether a full shutdown is mandatory to avoid a potential developing failure. Conditions in those areas accessible for partial inspection, however, cannot be guaranteed to be indicative of conditions in areas not accessible for inspection under energized conditions.
- **9.2.3 Enclosure.** A good maintenance program will ensure the continuation of the two functions of an enclosure:
- (1) To prevent exposure of live parts and operating mechanisms
- (2) To protect the equipment from exposure to moisture and air contaminants outside the enclosure
- **9.2.4 Security.** All doors and access panels should be inspected to ensure that all hardware is in place and in good condition. Hinges, locks, and latches should be lubricated. Screens covering ventilation openings should be in place to prevent entry of rodents or small animals.
- **9.2.5** Leakage. On outdoor assemblies, roof or wall seams should be checked for evidence of leakage, and any leaking seams should be caulked. Although leakage might not be prevalent at the time of inspection, prior leakage can be identified by rust or water marks on surfaces adjacent to and below leaky seams. The base should be checked for openings that could permit water to drain into the interior, and any such openings should be caulked or grouted.

9.2.6 Moisture.

9.2.6.1 Moisture accumulation might occur on internal surfaces of enclosures even though they are weathertight. The source of this moisture is condensation. When the temperature of any surface drops below the dew point of the air with which it is in contact, condensation will occur. Humidity of the outside atmosphere cannot be controlled as it enters the enclosure. However, water vapor can be added to the internal atmosphere if there are pools of water at the base of the enclosure in the vicinity of floor openings or bottom wall

ventilation openings. All floor openings, other than those specifically provided for drainage purposes, should be effectively sealed. All unused conduits or openings around cables at entrance ducts should be sealed with an electrical grade of caulking compound. Water pools should be eliminated permanently.

- **9.2.6.2** Conditions causing condensation are intermittent and might not be prevalent at the time of inspection. All internal surfaces should be examined for signs of previous moisture such as the following:
- (1) Droplet depressions or craters on heavily dust-laden surfaces
- (2) Dust patterns, such as those that occur if an auto is subjected to a light rain shower shortly after it has been driven on a dusty road
- (3) Deposit patterns, such as those that might occur where a film of dirty water is left to evaporate on a flat surface
- (4) Excessive rust anywhere on the metal housing
- **9.2.6.3** Moisture accumulation is prevented by heat and air circulation. It is important, therefore, to make sure the heating and ventilating systems are functioning properly.
- **9.2.7 Heating.** Heat losses in switchgear assemblies carrying not less than 75 percent full load will probably prevent condensation except in those cubicles containing auxiliary equipment. Where space heaters are provided in each cubicle and in outdoor metal-enclosed bus runs to supply supplementary heat, they should be checked to ensure that they are in good condition and are operating properly. If they are thermostatically controlled, the thermostat should be checked for proper operation and setting. A thermostat set too low will not control the heaters properly under all climatic conditions.
- **9.2.8 Ventilation.** Where ventilators are supplied on enclosures, including metal-enclosed bus enclosures, they should be checked to ensure that they are clear of obstructions and that the air filters are clean and in good condition. Base foundations should be examined to ensure that structural members have not blocked floor ventilation.
- **9.2.9 Lighting and Housekeeping.** All interior and exterior lighting should be checked for proper operation. Availability of spare equipment and handling devices should be checked. They should be stored in such a manner as to be readily available yet not hamper normal manual operation or block ventilation passages.

9.2.10 Insulation.

- **9.2.10.1** With proper maintenance, the insulation of metal-enclosed switchgear assemblies is designed and expected to withstand operating voltages for periods on the order of 20 to 30 years. During this time, the insulation will be subject to an accumulation of deteriorating conditions that detract from its voltage-withstanding capability.
- **9.2.10.2** Moisture combined with dirt is the greatest deteriorating factor for insulation. Perfectly dry dirt is mostly harmless, but even small amounts of moisture, such as condensation, will result in electrical leakage that leads to tracking and eventual flashover if allowed to continue to accumulate. It is important in the maintenance of switchgear to know the condition of the insulation. This is especially true in the older installations in unfavorable Copyright NFPA

locations where deteriorating effects might be significant.

0.2.10.2 The surfaces of all insulating members

ust removal and repeated after cleaning. Moisture droplets often leave little craters or depressions in a heavy dust layer without staining the member under the dust. Conversely, a carbon track starting to form on a bus support sometime prior to inspection might be completely masked by later deposits of dust.

- **9.2.11 Electrical Distress.** The following specific areas in which electrical distress is more likely to occur should be given special attention:
- (1) Boundaries between two adjoining insulators
- (2) Boundaries between an insulating member and the grounded metal structure
- (3) Taped or compounded splices or junctions
- (4) Bridging paths across insulating surfaces, either phase-to-phase or phase-to-ground
- (5) Hidden surfaces such as the adjacent edges between the upper and lower members of split-type bus supports or the edges of a slot through which a bus bar protrudes
- (6) Edges of insulation surrounding mounting hardware either grounded to the metal structure or floating within the insulating member
- **9.2.11.1** Damage caused by electrical distress normally is evident on the surface of insulating members in the form of corona erosion or markings or tracking paths.

9.2.12 Corona.

- **9.2.12.1** If corona occurs in switchgear assemblies, it is usually localized in thin air gaps that exist between a high-voltage bus bar and its adjacent insulation or between two adjacent insulating members. It might form around bolt heads or other sharp projections that are not properly insulated or shielded. Corona in low-voltage switchgear is practically nonexistent.
- **9.2.12.2** Organic insulating materials, when exposed to corona discharge, initially develop white powdery deposits on their surface. These deposits can be wiped off with solvent. If the surface has not eroded, further maintenance is not required. Prolonged exposure to corona discharge will result in erosion of the surface of the insulating material. In some materials, corona deterioration has the appearance of worm-eaten wood. If the corrosion paths have not progressed to significant depths, surface repair probably can be accomplished. Manufacturers' recommendations should be followed for such repair.

9.2.13 Tracking.

- **9.2.13.1** Tracking is an electrical discharge phenomenon caused by electrical stress on insulation. This stress can occur phase-to-phase or phase-to-ground. Although tracking can occur internally in certain insulating materials, these materials as a rule are not used in medium- or high-voltage switchgear insulation. Tracking, when it occurs in switchgear assemblies, normally is found on insulation surfaces.
- **9.2.13.2** Tracking develops in the form of streamers or sputter arcs on the surface of insulation, usually adjacent to high-voltage electrodes. One or more irregular carbon lines in

Copyright NFPA

the shape of tree branches is the most common sign of tracking.

- **9.2.13.3** Surface tracking can occur on the surfaces of organic insulation or on contaminated surfaces of inorganic insulation. The signs of tracking on organic materials are eroded surfaces with carbon lines. On track-resistant organic materials, these erosion patterns are essentially free of carbon.
- **9.2.13.3.1** Tracking can propagate from either the high-voltage terminal or the ground terminal. It does not necessarily progress in a regular pattern or by the shortest possible path.
- **9.2.13.4** Tracking conditions on surfaces of inorganic material can be completely removed by cleaning its surfaces, because no actual damage to the material occurs. In the case of organic material, the surface is damaged in varying degrees, depending on the intensity of the electric discharge and the duration of exposure. If the damage is not too severe, it can be repaired by sanding and application of track-resistant varnish in accordance with the manufacturers' instructions.

9.2.14 Thermal Damage.

- **9.2.14.1** Temperatures even slightly over design levels for prolonged periods can significantly shorten the electrical life of organic insulating materials. Prolonged exposure to higher than rated temperatures can cause physical deterioration of the materials, resulting in lowered mechanical strength.
- **9.2.14.2** Localized heating (hot spots) can sometimes occur, but they can be masked because the overall temperature of the surroundings is not raised appreciably. Loosely bolted connections in a bus bar splice or void spaces (dead air) in a taped assembly are examples of this difficult problem.
- **9.2.14.3** Because power should be removed prior to inspection, it is relatively unlikely that temperature itself can be relied on to signal potentially damaging heat. Other external conditions, therefore, form the basis for detecting heat damage, including the following:
- (1) Discoloration, usually a darkening, of materials or finishes
- (2) Crazing, cracking, and flaking of varnish coatings
- (3) Embrittlement of tapes and cable insulation
- (4) Delamination
- (5) Generalized carbonization of materials or finishes
- (6) Melting, oozing, or exuding of substances from within an insulating assembly
- **9.2.14.3.1** Insulating materials that have been physically damaged should be replaced. Mild discoloration is permissible if the cause of overheating is corrected.
- **9.2.14.3.2** In summary, there are two important things to remember in maintenance of insulation: KEEP IT CLEAN and KEEP IT DRY.

9.3 Circuit Interrupters.

Circuit interrupters in switchgear assemblies are either circuit breakers or interrupter Copyright NFPA

switches. Technically, fuses are interrupters, but they are covered separately in Chapter 16.

9.4 Air Circuit Breakers.

9.4.1 Introduction.

- **9.4.1.1** Before any maintenance work is performed, manufacturers' instruction manuals should be obtained and read carefully. If the breaker is a drawout type, it should be removed from its cubicle and placed in a secure, convenient location for maintenance. A stored-energy-type circuit breaker or its mechanism never should be worked on while its closing spring is charged.
- **9.4.1.2** Maintenance on fixed- or bolted-type circuit breakers normally should be performed with the breaker in place inside its cubicle. Special precaution should be exercised to ensure that the equipment is deenergized and the circuit in which it is connected is properly secured from a safety standpoint. All control circuits should be deenergized. Stored-energy closing mechanisms should be discharged.
- **9.4.1.3** Subsections 9.4.2 through 9.5.3 break down maintenance operations on air circuit breakers into five categories: insulation, contacts, arc interrupters, operating mechanisms, and breaker auxiliary devices.
- **9.4.2 Insulation.** Interphase barriers should be removed and then cleaned, along with all other insulating surfaces, with a vacuum cleaner or clean lint-free rags and solvents as recommended by the manufacturer, if needed, to remove hardened or encrusted contamination. An inspection should be made for signs of corona, tracking, or thermal damage as described in 9.2.12 through 9.2.14. The maintenance theme here again is KEEP IT CLEAN and KEEP IT DRY.

9.4.3 Contacts.

- **9.4.3.1** The major function of the air circuit breaker depends on, among other things, correct operation of its contacts. Air circuit breakers normally have at least two distinct sets of contacts on each pole, main and arcing. Some have an intermediate pair of contacts that open after the main current-carrying contacts and before the arcing contacts. When closed, practically the entire load current passes through the main contacts. Also, high-overload or short-circuit current passes through them during opening or closing faulted lines. If the resistance of these contacts becomes high, they will overheat. Increased contact resistance can be caused by pitted contact surfaces, foreign material embedded on contact surfaces, or weakened contact spring pressure. This resistance will cause excessive current to be diverted through the arcing contacts, with consequent overheating and burning. The pressure should be kept normal, which is usually described in the manufacturer's instructions.
- **9.4.3.2** Arcing contacts are the last to open; any arcing normally originates on them. In circuit interruption, they carry current only momentarily, but that current might be equal to the interrupting rating of the breaker. In closing against a short circuit, they can momentarily carry considerably more than the short-circuit interrupting rating. Therefore, there must be positive contact when they are touching. If not, the main contacts can be badly burned, interrupting heavy faults. Failure to interrupt might also result.

- **9.4.3.2.1** On magnetic blow-out air breakers, the arc is quickly removed from the arcing contacts by a magnetic blow-out field and travels to arcing horns, or runners, in the arc interrupter. The arcing contacts are expendable and will eventually burn enough to require replacement.
- **9.4.3.3** The general rules for maintaining contacts on all types of breakers are as follows:
- (1) They should be kept clean, smooth, and in good alignment.
- (2) The pressure should be kept normal, as prescribed in the manufacturers' literature.
- **9.4.3.4** The main contact surfaces should be clean and bright. Discoloration of the silvered surfaces, however, is not usually harmful unless it is caused by insulating deposits. Insulating deposits should be removed with alcohol or a silver cleaner. Slight impressions on the stationary contacts are caused by the pressure and wiping action of the movable contacts. Minor burrs or pitting are allowed, and projecting burrs can be removed by dressing. Nothing more abrasive than crocus cloth should be used on the silvered contact surfaces. Where serious overheating is indicated by discoloration of metal and surrounding insulation, the contacts and spring assemblies should be replaced in line with the manufacturers' instructions.
- **9.4.3.5** The circuit breaker should be closed manually to check for proper wipe, pressure, and contact alignment and to ensure that all contacts are made at approximately the same time. The spacing between stationary and movable contacts should be checked in the fully open position. Adjustments should be made in accordance with the manufacturers' recommendations.
- **9.4.3.6** Laminated copper or brush-style contacts found on older circuit breakers should be replaced when they are badly burned. Repairs are impractical because the laminations tend to weld together when burning occurs, and contact pressure and wipe are greatly reduced. They can be dressed with a file to remove burrs or to restore their original shape. They should be replaced when they are burned sufficiently to prevent adequate circuit-breaker operation or when half of the contact surface is burned away. Carbon contacts, used on older circuit breakers, require little maintenance. However, inadequate contact pressure caused by erosion or repeated dressing might cause overheating or interfere with their function as arcing contacts.
- **9.4.3.7** The drawout contacts on the circuit breaker and the stationary contacts in the cubicle should be cleaned and inspected for overheating, proper alignment, and broken or weak springs. The contact surfaces should be lightly coated with a contact lubricant to facilitate ease of the mating operation.

9.4.4 Arc Interrupters.

9.4.4.1 Modern arc interrupters of medium-voltage magnetic blow-out air circuit breakers are built with only inorganic materials exposed to the arc. Such materials line the throats of the interrupter and constitute the interrupter plates or fins, which act to cool and disperse the arc. The insulation parts of the interrupter remain in the circuit across contacts at all times. During the time that the contacts are open, these insulating parts are subject to full potential across the breaker. The ability to withstand this potential depends on the care given the Copyright NFPA

insulation.

- **9.4.4.2** Particular care should be taken at all times to keep the interrupter assembly dry. The materials are not affected much by humidity, but the ceramic material especially will absorb water.
- **9.4.4.3** The interrupters should be inspected each time the contacts are inspected. Any residue, dirt, or arc products should be removed with a cloth or by a light sanding. A wire brush or emery cloth should not be used for this purpose because of the possibility of embedding conducting particles in the ceramic material.
- **9.4.4.4** An interrupter should be inspected for broken or cracked ceramic parts, erosion of ceramics, and dirt.
- (A) Broken or Cracked Ceramic Parts. Small pieces broken from the ceramics or small cracks are not important. Large breaks or expansive cracks, however, can interfere with top performance of the interrupter. Hence, if more than one or two broken or badly cracked plates are apparent, renewal of the ceramic stack is indicated.
- **(B)** Erosion of Ceramics. When an arc strikes a ceramic part in the interrupter, the surface of the ceramic will be melted slightly. When solidified again, the surface will have a glazed, whitish appearance. At low and medium currents, the effect is slight. However, large-current arcs repeated many times can boil away appreciable amounts of the ceramic. When that happens, the ceramic stack assembly should be replaced.
- (C) Dirt in Interrupter. While in service, the arc chute assembly can become dirty. Dust or loose soot deposited on the inside surface of the arc chute can be removed by vacuuming or by wiping with cloths that are free of grease or metallic particles. Deposits can accumulate on ceramic arc shields from the arcing process. These deposits, from the metal vapors boiled out of the contacts and arc horns, can accumulate to a harmful amount in breakers that receive many operations at low- or medium-interrupting currents. Particular attention should be paid to any dirt on the plastic surfaces below the ceramic arc shield. These surfaces should be wiped clean, if possible, especially if the dirt contains carbon or metallic deposits. On breakers that operate thousands of times at low and medium currents, sufficient tightly adhering dirt can accumulate on the ceramic arc shields to impair proper interrupting performance. These arc chutes are of a very hard material, and a hard nonconducting abrasive is necessary for cleaning. A flexible, abrasive aluminum oxide disc on an electric drill can be useful in cleaning arc chutes. The ceramic arc shields might appear dirty and yet have sufficient dielectric strength. The following insulation test can be used as a guide in determining when a complete or major cleaning operation is required. The arc chutes of medium-voltage circuit breakers should withstand the 60 Hz-rated maximum voltage for 1 minute between the front and rear arc horns. In some applications, circuit breakers can be exposed to overvoltages, in which case such circuit breakers should have an appropriate overpotential test applied across the open contacts. Some manufacturers also recommend a surface dielectric test of the ceramic surfaces near the contacts to verify adequate dielectric strength of these surfaces.
- **9.4.4.5** Air-puffer devices used to blow the arc up into the interrupter should be checked for proper operation. One accepted method is as follows. With the interrupter mounted on the

breaker in its normal position, a piece of tissue paper is placed over the discharge area of the interrupter and observed for movement when the breaker is opened. Any perceptible movement of the paper indicates that the puffer is functioning properly.

- **9.4.4.6** Low-voltage air circuit—breaker arc chutes are of relatively simple construction, consisting primarily of a wedge-shaped vertical stack of splitter plates enclosed in an insulating jacket. An arc chute is mounted on each pole unit directly above the main contacts. Arc interruptions produce erosion of the splitter plates. The lower inside surfaces of the insulating jackets will also experience some erosion and sooty discoloration.
- **9.4.4.6.1** The arc chutes should be removed and examined as part of routine maintenance. If the splitter plates are seriously eroded, they should be replaced. If the interior surfaces of the enclosing jackets are discolored or contaminated with arc products, they should be sanded with sandpaper or replaced. Occasionally, the whole arc chute might need replacing, depending on the severity of the duty.

9.4.5 Operating Mechanism.

- **9.4.5.1** The purpose of the operating mechanism is to open and close the contacts. This usually is done by linkages connected, for most power breakers, to a power-operating device such as a solenoid or closing spring for closing, and that contains one or more small solenoids or other types of electromagnets for tripping. Tripping is accomplished mechanically, independently from the closing device, so that the breaker contacts will open even though the closing device still might be in the closed position. This combination is called a mechanically trip-free mechanism. After closing, the primary function of the operating mechanism is to open the breaker when it is desired, which is whenever the tripping coil is energized at above its rated minimum operating voltage.
- **9.4.5.2** The operating mechanism should be inspected for loose or broken parts, missing cotter pins or retaining keepers, missing nuts and bolts, and binding or excessive wear. All moving parts are subject to wear. Long-wearing and corrosion-resistant materials are used by manufacturers, and some wear can be tolerated before improper operation occurs.
- **9.4.5.2.1** Excessive wear usually results in the loss of travel of the breaker contacts. It can affect operation of latches; they could stick or slip off and prematurely trip the breaker. Adjustments for wear are provided in certain parts. In others, replacement is necessary.
- **9.4.5.2.2** The closing and tripping action should be quick and positive. Any binding, slow action, delay in operation, or failure to trip or latch must be corrected prior to returning to service.
- **9.4.5.3** The two essentials to apply in maintenance of the operating mechanism are KEEP IT SNUG and KEEP IT FRICTION FREE.

9.4.6 Breaker Auxiliary Devices.

- **9.4.6.1** The closing motor or solenoid, shunt trip, auxiliary switches, and bell alarm switch should be inspected for correct operation, insulation condition, and tightness of connections.
- **9.4.6.2** On/off indicators, spring-charge indicators, mechanical and electrical interlocks, key interlocks, and padlocking fixtures should be checked for proper operation and should be

Copyright NFPA

lubricated where required. In particular, the positive interlock feature that prevents the insertion and withdrawal of the circuit breaker should be tested while it is in the closed position.

- **9.4.6.3** The protective relay circuits should be checked by closing the breaker in the test position and manually closing the contacts of each protective relay to trip the circuit breaker. Test procedures are given in 21.10.3.
- **9.4.6.4** Trip devices on low-voltage breakers might be the electromechanical series overcurrent type with an air or fluid dashpot for time delay. These devices should be tested periodically for proper calibration and operation with low-voltage/high-current test devices. Calibration tests should be made to verify that the performance of the breaker is within the manufacturer's published curves. It is important that manufacturers' calibration curves for each specific breaker rating be used. The fact that current–time curves are plotted as a band of values rather than a single line curve should be taken into account. It should be realized that short-time calibration cannot be checked accurately because factory calibration equipment has synchronized timing devices to ensure symmetrical currents, whereas field-test equipment features random closing and might produce asymmetrical currents that result in faulty readings. If the trip devices do not operate properly, the calibration and timing components should be repaired or replaced in line with the manufacturer's recommendations.
- **9.4.6.5** If the breakers are equipped with static-tripping devices, they should be checked for proper operation and timing in line with the manufacturer's recommendations. Some manufacturers recommend replacement of electromagnetic devices with static devices in the interest of realizing more precision and a higher degree of reliability with the latter devices.

9.5 Vacuum Circuit Breakers.

- **9.5.1** The principal difference between vacuum circuit breakers and air circuit breakers is in the main contact and interrupter equipment. In the vacuum circuit breaker, these components are in the vacuum bottle and are not available for cleaning, repair, or adjustment. Contact-wear indicators are available for measuring contact wear.
- **9.5.2** Vacuum integrity is checked by application of test voltage across the open contacts of the bottle. This test should be performed strictly in accordance with the manufacturer's instructions.

CAUTION: Application of high voltage across an open gap in vacuum can produce x-ray emission.

- **9.5.2.1** The level of x-ray emission from a vacuum breaker with proper contact spacing and subjected to standard test voltages is extremely small and well below the maximum level permitted by standards. In view of the possibility that the contacts are out of adjustment or that the applied voltage is greater than prescribed, it is advisable that during the overvoltage test all personnel stand behind the front steel barrier and remain farther from the breaker than would otherwise be necessary for reasons of electrical safety. During the high-voltage test, the vapor shield inside the interrupter can acquire an electrostatic charge. This charge should be bled off immediately after the test.
- **9.5.3** All other maintenance on vacuum circuit breakers should be performed in accordance Copyright NFPA

with that recommended on air circuit breakers.

9.6 Oil Circuit Breakers.

9.6.1 Introduction.

- **9.6.1.1** Oil circuit breakers are seldom found in modern metal-enclosed switchgear assemblies. They are prevalent in older metal-enclosed switchgear assemblies and in open-type outdoor substations.
- **9.6.1.2** Although oil circuit breakers perform the same function in switchgear assemblies as air circuit breakers, they are different in appearance and mechanical construction. The principal insulating medium is oil rather than air.

9.6.2 Insulation.

- **9.6.2.1** External insulation is provided by insulating bushings. Outdoor oil circuit breakers have porcelain bushings, whereas indoor breakers can have either porcelain bushings or organic tubing. The bushings should be examined for evidence of damage or surface contamination. If they are damaged to the extent that the electrical creepage path has been reduced or the glazed surface on porcelain bushings damaged, they should be replaced. Otherwise they should be cleaned thoroughly as required to remove all surface contamination.
- **9.6.2.2** The oil, in addition to providing insulation, acts as an arc-extinguishing medium in current interrupters. In this process, it absorbs arc products and experiences some decomposition in the process. For that reason, maintenance of the oil is important. Oil maintenance involves detection and correction of any condition that would lower its quality. The principal contaminants are moisture, carbon, and sludge. Moisture will appear as droplets on horizontal members, while free water will accumulate in the bottom of the tank. Sludge caused by oxidation will appear as a milky translucent substance. Carbon initially appears as a black trace. It eventually will disperse and go into suspension, causing the oil to darken.
- **9.6.2.3** A dielectric breakdown test is a positive method of determining the insulating value of the oil. Samples can be taken and tested as covered in ASTM D 877, *Standard Test Method for Dielectric Breakdown Voltage of Insulating Liquids Using Disk Electrodes*, and as outlined in 10.2.8.1 and 10.2.8.2. Oil that tests too low should be immediately reconditioned and retested or replaced with new oil. Oil should be tested periodically or following a fault interruption.
- **9.6.2.4** In replacing the oil, only the oil recommended by the manufacturer should be used, and it should have been stored in sealed containers. In addition, the oil should be given a dielectric breakdown test immediately prior to use and to avoid air entrapment when it is added. An oil pump or other means should be used, to avoid aeration.
- **9.6.2.5** In the event entrapment of air cannot be avoided, the entrapped air should be removed by application of vacuum, or the equipment should be allowed to stand for 8 to 12 hours prior to being energized.
- **9.6.3** Contacts. The main contacts of an oil circuit breaker are not readily accessible for Copyright NFPA

routine inspection. Contact resistance should be measured. Contact engagement can be measured by measuring the travel of the lift rod from the start of contact opening to the point where contacts separate, as indicated by an ohmmeter.

9.6.3.1 More extensive maintenance on main contacts might require removal of the oil and lowering the tank and should therefore be performed less frequently than routine maintenance. The frequency should be determined by the severity of the breaker duty, for example, the number of operations and operating current levels. Any time the breaker has interrupted a fault current at or near its maximum rating, this type of maintenance should be performed. The contacts should be inspected for erosion or pitting. Contact pressures and alignment should be checked. All bolted connections and contact springs should be inspected for looseness.

9.6.4 Arc-Quenching Assemblies.

- **9.6.4.1** Arc-quenching assemblies should be inspected for carbon deposits or other surface contamination in the areas of arc interruption.
- **9.6.4.2** If cleaning of these surfaces is necessary, manufacturers' instructions should be followed.
- **9.6.5 Operating Mechanism.** Maintenance of the operating mechanism should follow the same procedure as recommended for air circuit breakers. (See 9.4.5.)
- **9.6.6 Breaker Auxiliary Devices.** Breaker-auxiliary-device maintenance should follow the same procedure as recommended for air circuit breakers (see 9.4.6) when applicable. Other accessories, such as oil level gauges, sight glasses, valves, gaskets, breathers, oil lines, and tank lifters should be inspected. The breaker should be taken out of service immediately if the oil level is below the level gauge or sight glass.

9.7 Interrupter Switches.

- **9.7.1** A medium-voltage interrupter switch is an air switch equipped with an interrupter for making or breaking specified currents, or both. It can be either the fixed mounted type or the draw-out type and can be either manually or electrically operated. If fixed mounted, it will be interlocked with access doors or panels to prevent access to closed switches.
- **9.7.2** Maintenance procedures should correspond to those recommended for air circuit breakers except for the interrupter device. This device, on most interrupter switches, is of simple open-type construction and can be inspected and cleaned easily without being removed from the switch. Enclosed interrupters should be removed from the switch and disassembled for maintenance in accordance with the manufacturer's recommendation. Dielectric tests are not required as a part of maintenance. Air puffers are not employed in this type of interrupter.

9.8 Gas-Insulated Substations and Gas-Insulated Equipment.

9.8.1 Introduction. A gas-insulated substation (GIS) is a manufactured assembly of gas-insulated equipment (GIE) typically installed on electric systems rated 72.5 kV and above. While a few GISs are operated by industrials, most are operated by utilities. A GIS

- might include such GIE as circuit breakers, disconnect switches, ground switches, voltage transformers, current transformers, capacitors, gas-to-air bushings, gas-to-cable terminations, buses, associated enclosures, and control and monitoring equipment.
- **9.8.1.1** GIE is installed as components such as circuit breakers for application on industrial medium- and high-voltage electrical systems. In addition to the general guidelines provided in this document, manufacturers' maintenance procedures for GIE should be followed.
- **9.8.1.2** Some circuit-interrupting devices are inside a hermetically sealed enclosure containing a prescribed amount of sulfur hexafluoride (SF₆) gas and are not serviceable. These devices typically are found in some medium-voltage metal-enclosed switchgear and medium-voltage outdoor power circuit breakers, and they also are used in some medium-and high-voltage interrupter switches. Generally, this equipment utilizes devices that provide a visual indication of loss of gas. Replacement of the entire sealed unit is required when this occurs.
- **9.8.1.3** Other GIE units contain gas density gauges to monitor temperature and pressure, providing indication of sufficient gas to maintain the equipment ratings.
- 9.8.2 Sulfur Hexafluoride (SF₆) Gas.
- **9.8.2.1** SF₆ gas, under pressure, is used as the dielectric and interrupting medium in circuit breakers and switches. SF₆ has been identified as a "greenhouse gas," whose release to the environment could contribute to global warming. Therefore, SF₆ gas should be reused and recycled whenever possible and should never be released into the atmosphere unnecessarily. SF₆ in its pure state is odorless, colorless, tasteless, nonflammable, noncorrosive, and nontoxic. It is five times heavier than air and will settle to the bottom of an enclosed vessel, displacing any breathable air to the top of the vessel. Although nontoxic, SF₆ gas does not support life by itself and will result in asphyxiation. For that reason, any vessel previously containing SF₆ gas should not be entered unless thorough ventilation has been achieved and the oxygen content verified. See OSHA 29 CFR 1910.146, "Occupational Safety and Health Standards," for practices and procedures to protect employees from the hazards of entry into permit-required confined spaces and Part 7 of Title 29 CFR 1910.269, "Electric Power Generation, Transmission, and Distribution," paragraph (e), for enclosed space entry.
- **9.8.2.2** SF $_6$ gas used in GIE can be tested and should conform to ASTM D 2472, *Standard Specification for Sulfur Hexafluoride*.
- **9.8.3 Causes of SF₆ Decomposition.** SF₆ decomposes as a result of excessive heating, electric sparks, power arcs, and partial discharges. The rate of decomposition of the gas during operation is determined by the equipment design and the inclusion of desiccants and adsorbents within the equipment. A power arc associated with a fault in the equipment results in decomposition of SF_6 within a compartment and the generation of gaseous and solid by-products.
- 9.8.4 Decomposition By-Products.
- **9.8.4.1 Gaseous By-Products.** The major gaseous by-products include S_2F_2 , SOF_2 , SO_2F_2 ,

- SF_4 , SO_2 , and HF. Some of these gases are highly toxic. The reaction of some of these gases with available moisture produces additional quantities of toxic gases. Arcing causes SF_6 to decompose into other sulfur fluorides and, in the presence of moisture, hydrogen fluoride. These decomposition products are toxic and harmful to the eyes, nose, and lungs. When arcing has occurred, breathing of any SF_6 by-products should be avoided. A rotten-egg odor in the vicinity of the equipment is indicative of contaminated SF_6 .
- **9.8.4.1.1** DO NOT vent gas from the equipment or attempt to sniff it.
- **9.8.4.2 Solid Arcing By-Products.** Solid decomposition by-products are produced in the form of a fine, talcum-like powder. This powder is a metal fluoride and is white or tan in color. The danger from solid arcing by-products comes more from the gases adsorbed on the surface area of the powder than from the toxicity of the base material. The aluminum fluoride (AlF₃) powder that normally dominates solid arcing by-products is so fine that the lungs do not easily expel it.
- 9.8.5 Maintenance and Repair of the GIS and GIE.
- 9.8.5.1 General.
- **9.8.5.1.1** Instruction books or equipment manuals furnished with the GIS or GIE are necessary for operating and maintenance personnel. This instructional literature should include information pertaining to safe operating and maintenance procedures.
- **9.8.5.1.2** Safety during maintenance and repair requires that the components on which work is to be performed are electrically isolated, deenergized, grounded, and locked/tagged out.
- **9.8.5.1.3** Equipment should never be depressurized until it is deenergized and grounded.
- **9.8.5.1.4** Cleanliness, in accordance with manufacturer's instructions, should be observed at all times. The area around the access point to be opened, including supporting steel and other parts from which dirt or contaminants could fall or be blown into the enclosure, should be vacuumed and wiped with lint-free cloths.
- **9.8.5.1.5** Do not stand or step on small piping or connections.
- **9.8.5.1.6** Gas is handled through commercially available gas-processing trailers (carts) that contain vacuum-pumping equipment, gas storage tanks, compressors, filters, and dryers. Suitable evacuating equipment and a heat source to counteract the chilling effect of the expanding gas can permit filling directly from gas cylinders or gas-handling equipment. The specific requirements for gas purity, handling, processing, filling, and refilling that the equipment manufacturer provides should be followed to ensure proper equipment operation.
- **9.8.5.1.7** Evacuate to 133 Pa all gas from the compartment by a closed evacuation system and pass it through a filter capable of removing arc decomposition by-products. Allow dry air to enter and refill the compartment to atmospheric pressure (101 kPa) before opening the access port.
- **9.8.5.1.8** Upon opening of the compartment, ensure proper ventilation and oxygen content of enclosure prior to personnel entry.

- **9.8.5.1.9** Maintenance workers who conduct the initial opening of the faulted gas compartment and removal of the solid arcing by-products should employ air respirators and wear disposable protective clothing covering all garments, boots, hair, and hands. Avoid direct contact with arc decomposition by-products (fine powder).
- **9.8.5.1.10** Work quickly because the exposure of the solid arcing by-products to moist air will result in toxic fumes with a strong rotten-egg odor. Immediate removal of the solid by-products should be the first priority, because they will become sticky and more difficult to remove with continued exposure to moist air.
- **9.8.5.1.11** A commercial-type vacuum cleaner with high-efficiency particulate air (HEPA) filters and nonmetallic accessories should be used to remove the arc solid by-products. Precautions should be taken to avoid breathing the exhaust air from the vacuum cleaner, since dust particles might go through the collection system. Following vacuuming, the affected area should be wiped down with a solvent (typically ethyl alcohol denatured with 5 percent or 10 percent methyl alcohol) by workers continuing to wear respirators, appropriate personal protective equipment, and disposable clothing.
- **9.8.5.1.12** All work should be completed safely and as quickly as possible. When delays are encountered, any open sections should be covered immediately with suitable seals. It might also be necessary to add heat to prevent condensation. When any section is left overnight or longer, it should be pressurized with dry air to a pressure of approximately 136 kPa to avoid condensation or entrance of moist air.
- **9.8.5.1.13** To achieve the required fill density, it is important that the gas pressure and temperature curve from the manufacturer's instruction book be used. Sufficient time should be allowed for equalization of the gas temperature.
- **9.8.5.1.14** After recharging, several measurements of the moisture content of the gas in the equipment should be taken to ensure that the moisture content of the SF₆ remains within acceptable limits. If the moisture content of the gas rises to an unacceptable level, recirculation through the dehydration portion of the gas-processing trailer (cart) is required to remove the excess moisture. (See ANSI/IEEE 1125, Guide for Moisture Measurement and Control in SF₆ Gas-Insulated Equipment.)
- **9.8.5.2 References.** For specific maintenance, repair considerations, and procedures, consult the equipment manufacturer's instructions; NETA *Maintenance Testing Specifications for Electrical Power Distribution Equipment and Systems*, Section 7.5.4, SF₆ Switches, and Section 7.6.4, SF₆ HV Circuit Breakers; and the following sections of IEEE C37.122.1, *IEEE Guide for Gas-Insulated Substations*:
- (1) 4.2, Installation and equipment handling
- (2) 4.4, Gas handling-SF₆ and GIS
- (3) 4.5, Safe operating procedures
- (4) 4.8, Partial discharge (PD) testing
- (5) 4.10, Field dielectric testing

9.9 Auxiliary Equipment.

(6)

9.9.1 Fuses. Fuse maintenance is covered as a separate category of electrical equipment in Chapter 16.

9.9.2 Surge Arresters.

- **9.9.2.1** Surge arresters should be inspected periodically for evidence of damage to the porcelain housing or surface contamination. If the porcelain is damaged to the extent that the creepage path over its surface is reduced or the porcelain glazed surface is seriously damaged, the arrester should be replaced. Otherwise, the porcelain surface should be cleaned thoroughly as required to remove all surface contamination.
- **9.9.2.2** There are no simple practical field tests that will determine the complete protective characteristics of lightning arresters. There are, however, certain tests that can be made with apparatus usually available that will give sufficient information to determine whether the arrester can be relied on to be an insulator under normal conditions. These tests are 60-cycle spark-over and hold tests, watts-loss and leakage-current tests, insulation resistance tests, and grounding-electrode circuit-resistance tests. These tests should be done strictly in accordance with the manufacturers' recommendations and the results interpreted in line with manufacturers' criteria.

9.9.3 Capacitors.

9.9.3.1 Capacitors should always be discharged before handling or making connections by closing the ground devices that are usually installed with large capacitor banks. An insulated short-circuit jumper should be used for dissipating the charge; however, it should be applied only with full knowledge of the circuit and with the use of appropriate protective equipment.

CAUTION: Capacitors, even though they have discharge resistors, might possess a stored charge that is capable of injuring a person coming into contact with the terminals.

- **9.9.3.2** The capacitor case, the insulating bushings, and any connections that are dirty or corroded should be cleaned. Each capacitor case should be inspected for leaks, bulges, or discoloration. Any liquid-filled capacitor found to be bulging or leaking should be replaced. (See Section 10.2 on liquid-filled transformers.)
- **9.9.3.3** Power capacitors are generally provided with individual fuses to protect the system in case of a short circuit within the capacitor. In addition to a faulty capacitor, a fuse can also be blown by an abnormal voltage surge. A check should be made for blown fuses, which should be replaced with the type recommended by the manufacturer. Fuses should not be removed by hand until the capacitor has been discharged completely.
- **9.9.3.4** Adequate ventilation is necessary to remove the heat generated by continuous full-load duty. Any obstructions at ventilation openings in capacitor housings should be removed, and adequate ventilation must be provided and maintained.

9.9.4 Stationary Batteries and Battery Chargers.

- **9.9.4.1 General.** Stationary batteries are a primary power source for critical systems, ac power generation equipment, switchgear, and control circuits. Stationary batteries also provide backup power for essential equipment during outages of the primary power supply. Because these applications require reliable service, stationary batteries should be serviced regularly. The maintenance required depends on each battery's application, type, construction features and materials, and environment.
- **9.9.4.1.1** Lead—acid batteries are of two technologies: flooded wet cell design and sealed valve regulated lead—acid (VRLA) designs. Stationary batteries are typically lead—acid batteries with lead—antimony or lead—calcium grids. Some stationary batteries are nickel—cadmium (Ni-Cad) units. VRLA batteries have a shorter service life than flooded cells, cannot be tested in the same manner, and are not addressed in this document.
- **9.9.4.1.2** Battery chargers play a critical role in battery maintenance because they supply normal dc requirements and maintain batteries at appropriate levels of charge. Chargers should be set and maintained according to manufacturers' instructions.
- **9.9.4.2 Maintenance Program.** Battery maintenance normally consists of periodic inspections and tests. Visual inspections include checking electrolyte level and internal conditions in jar-type cells. Many battery problems can be detected by visual inspections. Tests aid in evaluating performance and permit comparisons with standards and with historical test results. Battery manufacturers are good sources of information for maintenance programs.
- **9.9.4.3 Safety Guidelines.** Personnel should be aware of the hazards associated with stationary batteries. A battery can produce and emit a mixture of hydrogen and oxygen gas that is explosive. Exposing skin and eyes to electrolyte can cause severe burns and blindness. Voltages present can cause injury and death. As a minimum, the safety precautions in 9.9.4.3.1 through 9.9.4.3.7 should be observed.
- **9.9.4.3.1** Maintenance personnel should be trained to perform the tasks properly. Training should include using personal protective equipment, handling the electrolyte safely, using the proper tools, and following the battery manufacturer's service and maintenance instructions.
- **9.9.4.3.2** The room or compartment in which operating lead—acid batteries are located should be ventilated adequately.
- **9.9.4.3.3** Appropriate safety equipment should be worn, including goggles, gloves, and aprons, by persons working with the batteries. Eyewash and quick drench facilities should be provided near the batteries.
- **9.9.4.3.4** Open flames, sparks, hot plates, and other ignition sources should be kept away from storage batteries, gas ventilation paths, and places where hydrogen can accumulate.
- **9.9.4.3.5** Metal objects should not be placed on battery cells. Insulated tools should be used to protect against shorting of cells.
- **9.9.4.3.6** When electrolyte is being prepared, personal protective equipment should include a full face shield. POUR ACID INTO WATER, NOT WATER INTO ACID. If the electrolyte comes in contact with skin or eyes, the affected area should be immediately

flushed with water and medical assistance obtained.

- **9.9.4.3.7** Unauthorized access to the battery area should be prohibited.
- 9.9.4.4 Guide for Visual Inspections and Associated Servicing.
- **9.9.4.4.1** Jars and covers should be checked for cracks and structural damage. Maintenance of flame arrester—type vent caps should consist of rinsing them in clear water and air drying. Damaged units and vent caps should be replaced.
- **9.9.4.4.2** Plates of clear jars should be checked for buckling, warping, scaling, swelling, cracking, and changes in color. Damaged cells should be replaced.
- **9.9.4.4.3** The charger should be checked for proper operation. Interconnection cables, cell connectors, and other conductors should be examined for wear, contamination, corrosion, and discoloration. Racks should be checked for corrosion, cleanliness, and structural integrity.
- **9.9.4.4.4** A check should be made for spilled electrolyte. Bicarbonate of soda solution should be used to neutralize lead—acid battery spills, and boric acid solution should be used for Ni-Cad spills.
- **9.9.4.4.5** The electrolyte level should be checked. It should be determined that electrolyte and cells are clear, with minimal deposits, gassing, or rings, and that there is only minor sediment below the plates. The amounts of water added to the cells should be recorded. Excessive water consumption can be a sign of overcharging. For lead—antimony batteries, water consumption increases gradually with age. Distilled water should be used unless otherwise recommended by the battery manufacturer.

CAUTION: Never add acid to a battery when refilling.

- **9.9.4.4.6** Ventilation and the suitability and condition of electrical equipment in the area should be checked. Battery proximity to combustibles and ignition sources should be evaluated. Local sources of heat can create cell temperature differentials that cause battery damage.
- **9.9.4.4.7** Ambient temperature should be checked. The optimum ambient operating temperature for lead—acid batteries is 25°C (77°F). Ni-Cad batteries can operate satisfactorily over a range of temperatures, generally from 25°C to 45°C (77°F to 113°F). High ambient temperatures reduce cell life. Every 9°C (15°F) increase in temperature above 25°C (77°F) reduces lead—acid cell life 50 percent and Ni-Cad cell life 20 percent. Lower ambient cell temperatures reduce cell capacity. A battery operating at 16°C (60°F) loses about 10 percent of its designed capacity.
- **9.9.4.4.8** Area heating, air conditioning, seismic protection, dc circuit overcurrent protection, distilled water supply, alarm circuits, grounding connections, cable clamps, and all other installed protective systems and devices should be checked.
- 9.9.4.5 Mechanical and Miscellaneous Investigation Guidelines.
- **9.9.4.5.1** Terminal connectors, battery posts, and cable ends should be checked and all corrosion and dirt removed. Battery posts should be cleaned according to manufacturers'

recommendations.

- **9.9.4.5.2** Lead—acid battery surfaces should be cleaned with water and sodium bicarbonate to avoid leakage currents caused by electrolyte on the battery. Ni-Cad battery surfaces should be cleaned with a boric acid solution. Cleaners, soaps, or solvents should not be used to clean battery jars and covers, since damage can result.
- **9.9.4.5.3** The intercell connectors (links) should be checked annually and torqued to specified values.
- **9.9.4.5.4** Alarm relays, lights, and horns should be checked for proper operation. The battery room emergency light should be checked.
- **9.9.4.5.5** Ventilation openings should be checked to be sure they are clear of obstructions.
- 9.9.4.6 General Observations.
- **9.9.4.6.1** Excessive gassing can result from overcharging.
- **9.9.4.6.2** Vibration reduces battery life. Excessive vibration can be detected by observing vibration of plates and sediment in the jar.
- **9.9.4.6.3** A lead—acid battery electrolyte begins to freeze at -29°C (-20°F), but it can freeze at warmer temperatures if its specific gravity is low. Once ice crystals form, damage to the cell is irreparable.
- **9.9.4.6.4** Hydration occurs when a lead—acid battery is overdischarged without an immediate recharge, or when a dry-charge battery is accidentally filled with water. A sign of hydration is a whitish ring in the jar, which eventually shorts the positive and negative plates. Hydration is an irreversible condition.
- **9.9.4.6.5** Overcharging of lead-acid cells or charging at excessive rates leads to mossing. Mossing is the development of sponge-like material high on the negative plates and the resulting sedimentation in the cells. Continued mossing shorts out the plates.
- **9.9.4.6.6** The average battery tolerates approximately 50 full discharges in its life. Fully discharging a stationary battery more than twice in one year can reduce its life.
- **9.9.4.7 Battery Test and Measurement Guidelines.** Tests should be performed and results recorded to establish trends that can be used in predicting battery life. For lead-acid batteries, a pilot cell from each group of six cells should be selected to obtain a representative temperature while the recommended voltage and specific gravity measurements are made. Alternate pilot cells should be chosen quarterly to minimize cell electrolyte loss and contamination during testing.
- **9.9.4.7.1** Pilot cell voltage, specific gravity, and electrolyte temperature should be measured and recorded monthly. Common float voltage range for lead-calcium cells is 2.20 volts to 2.30 volts per cell. Lead-antimony cells float at about 2.17 volts to 2.21 volts per cell. Ni-Cad cells charge at approximately 1.42 volts per cell. Manufacturers' literature should be referred to for specific charge potentials.
- 9.9.4.7.2 For lead-acid batteries, the specific gravity of electrolyte in all pilot cells should be

measured and recorded monthly. The specific gravity of electrolyte in all cells should be measured and recorded quarterly. Specific gravity readings should be adjusted for pilot cell temperature. Test results should be as indicated by the manufacturer, usually between 1.205 and 1.225. For accurate results, specific gravity should not be measured within 72 hours after application of an equalizing charge or after water has been added to the battery. Specific gravity readings are not required for Ni-Cad batteries.

- **9.9.4.7.3** A capacity test should be performed within the first 2 years of installation and every 3 to 5 years thereafter, depending on the load reliability requirements and environmental conditions of the installation. The frequency of battery tests should be increased to yearly when the battery reaches 85 percent of its service life or when it shows signs of deterioration. Once the capacity drops by 20 percent in extended operation, the cell should be replaced.
- **9.9.4.7.4** A sample (e.g., 25 percent) of intercell connectors and terminal connection resistances should be measured quarterly, in accordance with the manufacturers' instructions.
- **9.9.4.7.5** Batteries should be examined under load with an infrared scanning device. The abnormal temperature of a cell, a poor connection at a battery post, and a deteriorated link, strap, or conductor are some of the problems that can be readily identified by thermographic surveys.
- **9.9.4.8 Other Tests.** Test readings should be recorded for future reference along with log notations of the visual inspection and corrective action. A copy of the battery record is included as Figure F.21.

9.9.5 Instrument Transformers and Auxiliary Transformers.

- **9.9.5.1** Instrument transformers and auxiliary transformers might be the outdoor type, although in some cases they can be mounted inside metal-enclosed switchgear assemblies. These transformers are similar to other outdoor transformers in that they are liquid filled and equipped with outdoor bushings. All recommendations for maintenance of outdoor transformers apply.
- **9.9.5.2** Indoor-type instrument and auxiliary transformers are normally dry type, except that potential transformers might be enclosed in compound-filled metal cases. All of the transformers above are of the completely molded type, with only the terminals exposed. Maintenance recommendations for indoor transformer types are the same as those for metal-enclosed switchgear assemblies insulation (see 9.2.16). The same conditions of environment and electrical and thermal distress prevail. In other words, KEEP THEM CLEAN and KEEP THEM DRY.

9.9.6 Alarm and Indicators.

- **9.9.6.1** Alarms. Alarms associated with transformer overtemperature, high or low pressure, circuit-breaker trip, accidental ground on an ungrounded system, cooling waterflow or overtemperature, or other system conditions should be tested periodically to ensure proper operation.
- 9.9.6.2 Indicators. Circuit-breaker open/close indicators can be checked during their regular

maintenance.

9.9.6.2.1 Ground indicator lamps for ungrounded electric systems should be checked daily or weekly for proper operation. Other miscellaneous indicators, such as flow, overtemperature, and excess pressure, should be checked or operated periodically to ensure proper operation.

9.9.7 Protective Relays, Meters, and Instruments.

9.9.7.1 The current elements of protective relays, meters, and instruments are usually connected in the secondary circuit of current transformers.

CAUTION: Opening the secondary circuit of an energized current transformer will produce a very high voltage that can be fatal.

- **9.9.7.1.1** The secondary terminals of an energized current transformer are required to be short-circuited before the secondary circuit is opened. Some relays and instruments have special test terminals or test switches that make a closed circuit in the current transformer secondaries during test. Upon completion of tests, it is necessary to remove the short-circuit jumper to permit the current transformer to function.
- **9.9.7.2** Because protective relays and instruments play such an important role in the prevention of hazard to personnel and plant equipment, they should be given first-line maintenance attention. Furthermore, because the only time they operate is during an abnormal electric power system condition, the only way to ensure correct operation is by a comprehensive inspection, maintenance, and testing program.
- **9.9.7.3** Meters, instruments, and relays should be examined to ensure that all moving parts are free of friction or binding. Wiring should be checked for loose connections. Contacts should be inspected for pitting or erosion. Evidence of overheating should be looked for in solenoid coils or armatures. Cracked glass or damaged covers or cases should be replaced. (See 21.10.3 for testing recommendations.)
- **9.9.8 Interlocks and Safety Devices.** Interlocks and safety devices are employed for the protection of personnel and equipment and should, therefore, never be made inoperative or bypassed. Proper functioning of these devices should be ensured by the following procedures:
- (1) The adjustments and operation of the devices should be checked as follows:
 - (a) Mechanical interlocks on drawout mechanisms should prevent withdrawal or insertion of circuit breakers in the closed position.
 - (b) Safety shutters, where provided, should automatically cover the "stab-in" ports.
 - (c) Limit switches should prevent overtravel of motorized lifting devices.
- (2) Key interlock systems should be operated in proper sequence, and suitable operation ensured by the following:
 - (a) Adjustments should be made and the system lubricated as necessary.
 - (b) Instructions should be posted on complicated systems, especially where the

interlocks might be operated only annually or in emergencies.

- (3) Spare keys should be identified and stored in the custody of the supervisor.
- (4) Grounding switches used in medium-voltage switchgear should be maintained to the same degree as the circuit breaker itself.
 - (a) If stored indoors, they should be covered to prevent dust accumulation.
 - (b) If stored outdoors, they should be stored in a weatherproof covering.

9.9.9 Grounding.

- **9.9.9.1** Equipment-grounding circuits are not inherently self-monitoring as are circuits that normally carry current. To ensure that the equipment-grounding conductors continue to be effective when called on to carry ground-fault current, they should be checked periodically.
- **9.9.9.2** Checking a system to determine the adequacy of the equipment ground involves inspection of connections that can be supplemented by an impedance test to enable an evaluation of those parts of the system not accessible for inspection. (See Section 21.13.)
- **9.9.9.3** Terminal connections of all equipment-grounding conductors and bonding jumpers should be checked to see that they are tight and free of corrosion. Bonding jumpers should also be examined for physical abuse, and those with broken strands should be replaced. Where metal raceway is used as the equipment-grounding path, couplings, bushings, set-screws, and locknuts should be checked to see that they are tight and properly seated. Any metal raceway used as the equipment-grounding path should be examined carefully for rigid mounting and secure joints; screws and bolts should be retightened.

9.9.10 Ground-Fault Indicators.

- **9.9.10.1** Ground-fault indicators can be installed on all ungrounded or resistance-grounded low-voltage systems. The indicator can consist of a simple set of lamps wired phase-to-ground. A ground on one phase will cause the lamp on that phase to be dark, while the other two lamps will have increased brilliance.
- **9.9.10.2** A more elaborate system provides audible as well as visual indication so the ground is more readily detected.
- **9.9.10.3** Once a ground has been detected, prompt location and correction are important, since the system will be highly vulnerable in the event of a ground on another phase. Through the process of elimination, searching for the ground requires circuit or system interruptions and isolation of the circuit(s) until the ground fault is located and eliminated. The use of an instrument that permits location of such ground faults without power interruptions is recommended.
- **9.9.10.4** Maintenance of ground fault detectors should include a complete inspection of the signal elements such as lamps, horns, or buzzers. Audible devices should be operated to ensure that they are in operable condition. Wiring should be checked for loose connections or damaged wiring.
- **9.9.10.5** A complete, effective maintenance program for substations and assembled

switchgear will result if the four "keepers" are observed:

- (1) If it is insulation, KEEP IT CLEAN and KEEP IT DRY.
- (2) If it is mechanical, KEEP IT SNUG and KEEP IT FRICTION FREE.

9.9.11 Network Protectors.

- **9.9.11.1** A network protector is an air circuit breaker equipped with specialized relays that sense network circuit conditions and command the circuit breaker to either open or close. There is no separate power source for control. All control power is taken from the system.
- **9.9.11.1.1** A routine maintenance schedule for network protectors should be observed. Frequency of inspection will vary to a great extent depending on the location and the environment in which a protector is installed.
- **9.9.11.1.2** Maintenance should include the cleaning of any accumulated dust from the unit, a thorough visual inspection, and overall operational test. Should any part look suspicious, the manufacturers' instructions for operation, adjustment, and replacement of these parts should be consulted. If relays are out of calibration, they should be recalibrated by competent personnel.
- **9.9.11.2 Safety.** Network protectors are used where a large amount of power is distributed to high-load-density areas. As a result, any short circuit at any point in the system involves very high fault currents. Due to the nature of a secondary network, it might be necessary for some maintenance to be performed while the system is energized.
 - **CAUTION:** In this work, always use insulated tools and wear safety gloves. Rigid clearance procedures must be observed.
- **9.9.11.2.1** Extensive use of barriers is a salient feature in the design of network protectors. The barriers should be kept in place, and any that have been broken should be replaced immediately. Only skilled maintenance personnel who are thoroughly familiar with the construction and operation of network protectors should be permitted to perform maintenance on an energized unit. The first procedure in performing maintenance is to trip the protector to the open position.
- **9.9.11.3 Maintenance.** The circuit-breaker mechanism and relay panel assembly are usually constructed as an integral drawout unit that should be withdrawn from the housing for maintenance. Removal of the fuses at the top and the disconnecting links at the bottom (some modern protectors have bolt-actuated disconnecting fingers at the bottom) isolates the unit electrically from the system. Although this procedure provides comparative safety, work should be done cautiously, since it might be assumed that normally there is voltage on the transformer and the network leads. With the drawout unit outside the enclosure on the extension rails, the following inspection and maintenance operations should be performed on the drawout unit. (Paragraph 9.9.11.3.11 applies only to the containing structure, not the drawout unit.)
- **9.9.11.3.1** The complete unit should be cleaned. Use of a vacuum-type cleaner is preferred. Cloth rags free of oil or greases should be used to remove clinging dirt.

- **9.9.11.3.2** Arc chutes should be removed. Any broken splitter plates should be replaced.
- **9.9.11.3.3** Main contacts should be inspected.
- (A) Any heavily frosted area should be smoothed with a fine file, stone, crocus cloth, or other suitable abrasive that does not shed abrasive particles.
- (B) The hinge joint should be protected from falling particles during dressing.
- **9.9.11.3.4** During normal operation, arcing contacts become rough due to arcing. Any especially high projections of metal should be filed smooth.
- **9.9.11.3.5** All electrical connections should be checked to see that they are tight.
- **9.9.11.3.6** Any abrasion of wire insulation should be observed.
- **9.9.11.3.7** Control wire and current-carrying parts should be checked for overheating.
- **9.9.11.3.8** All springs should be checked to see that they are in place and not broken.
- **9.9.11.3.9** All nuts, pins, snap rings, and screws should be checked to see that they are in place and tight.
- **9.9.11.3.10** Any broken barriers should be replaced.
- **9.9.11.3.11** With the rollout unit removed, the following maintenance operations should be performed inside the enclosure.
 - **CAUTION:** Both network and transformer connections should be treated as though they are energized. When working in housing or on frame, use only insulated tools and wear safety protective equipment. Do not remove any barriers from the enclosure.
- (A) Loose hardware should be looked for on the floor or beneath the frame. If any is found, it should be traced to its source.
- **(B)** Stand-off bus insulators should be cleaned.
- (C) Any oxide film should be removed from terminal contacts if necessary.
- **9.9.11.3.12** The protector should be closed manually in accordance with the manufacturer's instructions.
- (A) It should close with a definite snap action. Sluggish closing indicates excessive friction.
- **(B)** The trip level should be moved to the "tripped" position.
- (C) The breaker should snap open.
- **9.9.11.3.13** An operational test is best performed using a network protector test kit.
- **9.9.11.3.14** An insulation resistance test, a dielectric test, and electrical operating tests should be performed strictly in accordance with the manufacturers' recommendations.

Chapter 10 Power and Distribution Transformers

10.1 Introduction.

- **10.1.1** In industrial installations, transformers are usually used to transform or step down a higher distribution level voltage to a lower utilization level. They are vital links in electrical power systems and are among the most reliable components in the system. If they are not overloaded or otherwise abused, they should provide long, trouble-free service. Established records of reliable performance, coupled with a lack of movement, noise, or other sign of action, often result in general disregard and neglect. Because a transformer failure is usually of a very serious nature, requiring extensive repair and long downtime, regular maintenance procedures are the best assurance of continued high reliability.
- **10.1.2** Power and distribution transformers require regular maintenance if they are to have a normal service life. The extent and frequency of maintenance should be based not only on size or voltage but also on the relative importance of the transformer in the system. The failure of a small distribution transformer serving a critical load can have more impact on an operation than the failure of a larger or higher-voltage unit. Also, on some smaller systems, the failure of a distribution transformer can result in an outage of the complete system. When the level of maintenance on a transformer is being planned, consideration should also be given to other factors, such as replacement lead time.
- 10.1.3 Transformers can be divided into two general categories, according to their insulating medium and construction: liquid filled and dry type. Each has several variations listed under the specific maintenance recommendations, and each requires different maintenance techniques. In general, insulation tests, such as power-factor testing and insulation-resistance testing, and diagnostic tests, such as turns-ratio testing and exciting-current testing, are the major maintenance tests for all transformers. In addition, liquid-filled transformers should be tested to determine the quality of the insulating liquid.

10.2 Liquid-Filled Transformers.

10.2.1 Introduction.

- **10.2.1.1** The core and coils of liquid-filled transformers are immersed in a liquid. The liquid serves two purposes. It is an important part of the insulating medium, and it serves to transfer heat away from the windings to be dissipated by the cooling fins, tank surface, or radiator.
- **10.2.1.2** Two types of insulating liquid in common use are mineral-insulating oil and askarel. Other types of liquids used are less-flammable liquids, such as silicone or stabilized hydrocarbon liquids. Each liquid has definite characteristics, and THEY SHOULD NOT BE MIXED. Manufacturers' instructions should be carefully followed with all insulating liquids.
- **10.2.1.3** Askarel is identified by various brand names and consists largely of polychlorinated biphenyls (PCBs). It is subject to strict government regulation as a toxic substance. A knowledge of government regulations is necessary because any liquid-filled transformer

might contain some level of PCBs. One reference is 40 CFR 761, "Protection of Environment — Polychlorinated Biphenyls (PCBs) Manufacturing, Processing, Distribution in Commerce, and Use Prohibitions."

- **10.2.1.4** There are several types of transformer construction regarding the preservation of the liquid. *Preservation* means minimizing exposure of the insulating liquid to the atmosphere. The types are as follows:
- (1) Free breathing (open to the atmosphere)
- (2) Restricted breathing (open to the atmosphere through dehydrating compounds)
- (3) Conservator or expansion tank (exposure to air limited to the liquid in the conservator tank)
- (4) Sealed tanks (a gas space above the liquid serves as a cushion for internal pressure)
- (5) Gas—oil seal (exposure to air limited to the oil in the auxiliary tank)
- (6) Inert gas (gas space above liquid maintained under positive pressure by gas supplied from a nitrogen cylinder)
- **10.2.1.5** Some common cooling methods are as follows:
- (1) Self-cooled (OA or OISC) heat is dissipated by the tank surface and cooling fins or tubes
- (2) Forced-air cooled (FA) fans are employed to force air over the cooling surfaces to augment the self-cooled rating
- (3) Forced-air cooled/forced-oil cooled (FA/FOA) an oil pump circulates oil through a fan-blown oil-to-air heat exchanger
- (4) Water cooled (FOW) heat exchange by means of water pumped through a pipe coil installed inside or outside the transformer tank

10.2.2 Regular Inspections.

- **10.2.2.1** Inspections of transformers should be made on a regular basis. The frequency of inspection should be based on the importance of the transformer, the operating environment, and the severity of the loading conditions. Typical regular inspection data can include load current, voltage, liquid level, liquid temperature, winding hot-spot temperature, ambient temperature, leaks, and general condition.
- **10.2.2.2** The current, voltage, and temperature readings should be taken at the time of peak load and the liquid level reading at the end of a low-load period. Permanent records should be kept of the readings. Keeping such records helps ensure that the readings will be made and provides a means of ready comparison with previous conditions. Further explanations are covered in 10.2.3 through 10.2.5.2.

10.2.3 Current and Voltage Readings.

10.2.3.1 Load currents are a very important part of the recommended regular inspections. If the observed current in any phase exceeds the rated full-load value, and the rated maximum

temperature is exceeded, steps should be taken to reduce the load.

10.2.3.2 Overvoltages and undervoltages can be detrimental to the transformer and the load it serves. The cause should be investigated immediately and corrective action taken to bring the voltage within acceptable limits.

10.2.4 Temperature Readings.

- **10.2.4.1** Transformers are rated to carry their nameplate load in kVA with a given heat rise when the ambient temperature is at a standard level. Exact values are stated on the nameplate. For instance, a liquid-filled transformer might be rated to deliver nameplate capacity with a 65°C (149°F) temperature rise above a 30°C (86°F) ambient temperature (24-hour average).
- **10.2.4.2** If transformers have temperature gauges, readings should be taken regularly and recorded. If the gauge is also equipped with a maximum-temperature indicator, readings from both indicators should be recorded, and the maximum-temperature indicator should be reset. Excessive temperature indicates an overload or perhaps some interference with the normal means of cooling. Prolonged operation at overtemperature accelerates deterioration of the liquid and results in reduced life expectancy of the solid insulation, greatly increasing the risk of failure. In some installations, constant monitoring against overtemperature is provided by special alarm contacts on the temperature gauge.

10.2.5 Liquid-Level Indicator and Pressure/Vacuum Gauges.

- **10.2.5.1** The liquid level should be checked regularly, especially after a long period of low load at low ambient temperature, when the level should be at its lowest point. It is important that liquid be added before the level falls below the sight glass or bottom reading of the indicator. If a transformer is not equipped with a liquid-level indicator, the liquid level can be checked by removing the inspection plate on the top of the transformer or by removing the top if no inspection plate is available. It is necessary to deenergize the transformer prior to either of those two procedures. (See 10.2.7 for precautions relative to deenergizing the transformer and for the recommended procedures for adding liquid.)
- **10.2.5.2** Pressure/vacuum gauges are commonly found on sealed-type transformers and are valuable indicators of the integrity of the sealed construction. Most sealed transformers have provisions for adding a pressure/vacuum gauge, and, if feasible, the gauge should be added. The readings should be compared to the recommendations of the manufacturer for normal operating ranges. High pressures indicate an overload or internal trouble and should be investigated immediately. A sustained zero pressure reading indicates a leak or a defective gauge.
- **10.2.6 Miscellaneous.** The features of special types of transformer construction that should be included in regular inspections include the following:
- (1) The water-in and water-out temperatures of water-cooled transformers.
- (2) The oil-in and oil-out temperatures of forced-oil-cooled transformers with oil-to-air or oil-to-water heat exchangers.
- (3) The pressure in the nitrogen cylinder for a transformer equipped with an automatic Copyright NFPA

- gas-pressure system if the pressure drops below the manufacturer's recommended value [usually about 1034 kPa (150 psi)], the cylinder should be replaced and leaks repaired.
- (4) Dehydrating breathers should be checked to ensure that they are free from restriction and have not absorbed excessive moisture.

10.2.7 Special Inspections and Repairs.

- **10.2.7.1** Because of the wide variety of liquid-filled transformer types, sizes, and uses, the special inspection and repair recommendations given in 10.2.7.2 through 10.2.7.8 are general in nature. For specific directions, the manufacturer's recommendations should be followed.
- **10.2.7.2** If a transformer is given an external visual examination, the case of the transformer should be regarded as energized until the tank ground connection is inspected and found to be adequate. If any procedure more extensive than an external visual examination is to be performed, the first precaution that should always be observed is to deenergize the transformer. Deenergization should always be accompanied by approved positive lockout or lockout/tagout procedures to ensure against an unexpected reenergization and resulting hazard to personnel or equipment. Deenergization should be immediately followed by a test to ensure that the equipment is deenergized. The equipment should be grounded prior to the start of any work. (See Chapter 29, Grounding.)
- **10.2.7.3** All connections should be inspected for signs of overheating and corrosion. Insulators and the insulating surfaces of bushings should be inspected for tracking, cracks, or chipped skirts, and the gasketed bases should be checked for leaks. The insulating surfaces should be cleaned of any surface contamination. Damaged insulators or bushings should be replaced. Leaks should be repaired. Pressure-relief devices should be inspected to ensure that there are no leaks or corrosion and that the diaphragm or other pressure-relief device is intact and ready to function. A cracked or leaking diaphragm should be replaced at once.
- **10.2.7.4** The tank, cooling fins, tubes, radiators, tap changer, and all gasketed or other openings should be inspected for leaks, deposits of dirt, or corrosion. Leak repair, cleaning, and painting should be done as required. Infrared inspection can be used to detect fluid levels as well as flow restrictions in cooling tubes.
- **10.2.7.5** The tank ground should be inspected for corrosion or loose connections. A grounding-electrode resistance test should be made, as covered in Section 21.15.
- **10.2.7.6** Cooling fans, circulating oil pumps, and protective relays (e.g., Bucholtz relays and sudden-gas relays) should be inspected regularly in accordance with manufacturers' recommended practices.
- **10.2.7.7** The conservator tank, inert gas atmosphere, and dehydrating breather equipment should be inspected and tested according to the manufacturer's instructions. Since most modern, large, liquid-filled power transformers have features to minimize exposure of the liquid to air, opening of this type of transformer for internal inspection is recommended only when the need is positively indicated, and then the manufacturer's instructions should be carefully followed or technical assistance employed.

- **10.2.7.7.1** Contamination or impairment of the insulating liquid should be carefully avoided. If the humidity is high, exposure should be avoided entirely unless the work is absolutely necessary and cannot be postponed, in which case special humidity-control steps should be taken.
- **10.2.7.8** If liquid is to be added, it should be given a dielectric-breakdown test. The liquid to be added should be at least as warm as the liquid in the transformers. If a large amount of liquid is added, the transformer should remain deenergized for 12 hours or more to permit the escape of entrapped air bubbles. A desirable method is to add the liquid with the transformer tank under a vacuum. (Check the manufacturer's instructions for further information.)

10.2.8 Liquid Maintenance and Analysis.

- **10.2.8.1 Liquid Analysis.** For insulating oils, the tests routinely performed are dielectric breakdown, acidity, color, power factor, interfacial tension, and visual examination. These tests are covered in Section 21.19. For other insulating liquids, the manufacturers' recommendations should be followed.
- **10.2.8.1.1** Tests can also be performed to determine levels of PCBs. Test results might require service or replacement of the transformer tested as specified by government regulations. (See 10.2.1.3.)
- **10.2.8.1.2** Samples should never be taken from energized transformers except by means of an external sampling valve. If the transformer has no external sampling valve, the unit should first be deenergized and a sample taken internally. (See ASTM D 923, Standard Test Method for Sampling Electrical Insulating Liquids.)
- **10.2.8.2 Maintenance.** If any test indicates that an insulating liquid is not in satisfactory condition, the liquid can be restored by reconditioning or reclaiming, or it can be completely replaced. Reconditioning is the removal of moisture and solid materials by mechanical means such as filter presses, centrifuges, or vacuum dehydrators. Reclaiming is the removal of acidic and colloidal contaminants and products of oxidation by chemical and absorbent means such as processes involving fuller's earth, either alone or in combination with other substances. Replacing the liquid involves draining, flushing, testing, and proper disposal of materials removed.

10.2.9 Other Tests.

- **10.2.9.1 Dielectric Tests of Solid Insulation.** In addition to the tests of the insulating liquid, tests should also be made of the dielectric properties of the solid insulation. Several commonly used tests are the insulation-resistance test and the dielectric-absorption test. A power-factor test can be used to record the trend of insulation condition. These are nondestructive tests, which means that they can be performed without risk of damage to the insulation. All these tests are discussed in Chapter 21.
- **10.2.9.2** Turns-Ratio and Polarity Tests. The turns-ratio test is used to determine the number of turns in one winding of a transformer in relation to the number of turns in the other windings of the same phase of the transformer. The polarity test determines the vectoral relationships of the various transformer windings. The turns-ratio test is used as Copyright NFPA

both an acceptance test and a maintenance test, while the polarity test is primarily an acceptance test.

10.2.9.2.1 The test equipment used is ordinarily a turns-ratio test set designed for the purpose. If not available, input and output voltages can be measured, with at least 0.25 percent full-scale accuracy voltmeters, for approximation.

10.2.9.2.2 When a turns-ratio test is performed, the ratio should be determined for all no-load taps. If the transformer is equipped with a load-tap changer (LTC), the ratio should be determined for each LTC position. If the transformer has both an LTC and a no-load-tap changer, then the ratio should be determined for each position of the LTC to one position of the no-load-tap changer and vice versa.

10.2.9.2.3 This test is useful in determining whether a transformer has any shorted turns or improper connections and, in acceptance testing, verifying nameplate information.

10.2.9.3 Fault-Gas Analysis. (See ASTM D 3284, Standard Test Methods for Combustible Gases in the Gas Space of Electrical Apparatus Using Portable Meters in the Field.) The determination of the percentage of combustible gases present in the nitrogen cap of sealed, pressurized oil–filled transformers can provide information as to the likelihood of incipient faults in the transformer. When arcing or excessive heating occurs below the top surface of the oil, insulation decomposition can occur. Some of the products of the decomposition are combustible gases that rise to the top of the oil and mix with the nitrogen above. A small sample of nitrogen is removed from the transformer and analyzed. The test set has a direct reading scale calibrated in percentages of combustible gas. Ordinarily, the nitrogen cap in a transformer has less than 0.5 percent combustible content. As a problem develops over a period of time, the combustible content can rise to 10 or 15 percent. A suggested evaluation of the test results is as shown in Table 10.2.9.3.

Table 10.2.9.3 Sample Test Results Evaluation

Percentage of Combustible Gas	Gas Evaluation
0.0 to 1.0	No reason for concern. Make tests at regularly scheduled intervals.
1.0 to 2.0	Indication of contamination or slight incipient fault. Make more frequent readings and watch trends.
2.0 to 5.0	Begin more frequent readings immediately. Prepare to investigate cause by internal inspection.
over 5.0	Remove transformers from service and make internal inspection.

10.2.9.4 Dissolved-Gas-in-Oil Analysis. A refinement of the fault-gas analysis is the dissolved-gas-in-oil test. (See ASTM D 3612, Standard Test Method for Analysis of Gases Dissolved in Electrical Insulating Oil by Gas Chromatography.) In this test, an oil sample is withdrawn from the transformer, and the dissolved gases are extracted from the oil. A portion of the gases is then subjected to chromatographic analysis, which determines the exact gases present and the amount of each. Different types of incipient faults have different

patterns of gas evolution. With this test, the nature of the problems can often be diagnosed. (See ANSI/IEEE C57.104, Guide for the Interpretation of Gases Generated in Oil-Immersed Transformers.)

10.3 Dry-Type Transformers.

10.3.1 Introduction.

- **10.3.1.1** Dry-type transformers operate in air or gas rather than being liquid filled. The two general types of construction are the open or ventilated dry-type transformer and the sealed or closed-tank type. Dry transformers are usually varnish impregnated or cast coil construction. Sealed transformers are cooled and insulated by a high-dielectric inert gas, such as nitrogen, sulfur hexafluoride, or perfluoropropane.
- **10.3.1.2** The air or gas serves as an insulating medium and also to dissipate heat from the windings. Standard insulation classes are 80°C (176°F) rise, 115°C (239°F) rise, and 150°C (302°F) rise.
- **10.3.2 Regular Inspections.** The recommendations in 10.2.2 regarding regular inspections of liquid-filled transformers also apply to dry-type transformers, with the exception of those that obviously pertain strictly to liquid-filled construction.
- **10.3.3** Current and Voltage Readings. The recommendations in 10.2.3 regarding current and voltage readings also apply to dry-type transformers.
- **10.3.4 Temperature Readings.** The recommendations in 10.2.4 regarding temperature readings also apply to dry-type transformers. However, dry-type transformers usually have high-temperature insulation and might operate at higher temperatures than liquid-filled units.

10.3.5 Pressure/Vacuum Gauge.

- **10.3.5.1** Sealed dry-type transformers are usually equipped with pressure/vacuum gauges. The gauge should be read periodically and the readings recorded. The readings should be compared to the manufacturer's recommended normal operating range. Lower-than-normal or zero readings are an indication of a leak in the tank. If the leak is not severe, it might be desirable to periodically replace the gas or recharge the transformer instead of locating and sealing the leak. The replacement gas should be either the same as the original or an approved substitute. (See 10.3.7 for recommendations covering severe leaks.)
- **10.3.5.2** High pressures are an indication of electrical overload or internal trouble; they should be investigated immediately, and corrective action should be taken. Excessive pressure can result in distortion or rupture of the tank.
- **10.3.6 Miscellaneous.** The louvers in the enclosures of ventilated dry-type transformers should be inspected to see that they are not clogged with dirt or otherwise obstructed. Also, the operation of integral ventilating fans should be checked. Dry-type transformers are usually installed indoors and sometimes in a vault. The temperature of the vault or room should be measured regularly and recorded. Proper ventilation is essential to the operation of a transformer. Any material or obstruction that might prevent the free circulation of air around a transformer should be removed. If the room or vault has power-driven ventilating fans, their correct operation [air velocity should not exceed 122 m/min (400 ft/min)] should Copyright NFPA

be determined and overtemperature alarms, if provided, should be tested. Corrosion of the transformer enclosure, the intrusion of dirt, and evidence of water leaks into the room or vault should also be carefully checked and corrective measures taken as required. A high noise level or change in level could indicate improper installation or loose windings or barriers.

10.3.7 Special Inspections and Repairs.

10.3.7.1 When a transformer is given an external visual examination, the transformer case should be regarded as energized until the case-ground connection is inspected and found to be adequate. If any procedure more extensive than an external visual examination is to be performed, the first precaution that should always be taken is to deenergize the transformer. Deenergization should be accompanied by approved positive lockout procedures to ensure against an unplanned reenergization and resulting hazard to personnel or equipment. Deenergization should be followed immediately by a test to ensure that the equipment is deenergized. The equipment should be grounded prior to the start of any work. (See Chapter 24.)

10.3.7.2 Enclosure covers of ventilated dry-type transformers should be removed carefully. An inspection should be made for the following problems:

- (1) Accumulations of dirt on windings, insulators, and where cooling airflow might be restricted
- (2) Discoloration caused by overheating
- (3) Tracking and carbonization
- (4) Cracked or chipped insulators
- (5) Loose insulators, clamps, or coil spacers
- (6) Deterioration of barriers
- (7) Corroded or loose electrical connections.

10.3.7.2.1 In addition, the equipment ground should be inspected for corrosion or loose connections. A grounding-electrode resistance test should be made, as covered in Section 21.15.

- **10.3.7.3** Dirt and dust should be cleaned from the windings with a vacuum cleaner. After vacuum cleaning, compressed air can be used only if it is clean, dry, and applied at a low pressure to avoid damage to windings. In particular, ventilating ducts and the top and bottom of the windings should be cleaned. Liquid cleaners should be used only when it is known that they will not have a deteriorating effect on the insulation.
- **10.3.7.4** Best service life results if the windings are maintained above the ambient-temperature level. For that reason, transformers operating in high humidity should be kept energized, if feasible. If a transformer is to be deenergized long enough for it to cool, special drying procedures might be necessary before the transformer is reenergized. Refer to the manufacturers' recommendations for the drying procedures to be followed.

10.3.7.5 Sealing severe leaks or opening and resealing the tanks of sealed dry-type Copyright NFPA

transformers requires special procedures and equipment. The manufacturer of the transformer, an experienced transformer repair facility, or a qualified electrical maintenance contractor should perform this work. In addition, special procedures for drying out the windings, plus purging and refilling the tank, might be necessary.

10.3.8 Insulation Tests. The insulation tests covered in 10.2.9.1 and 10.2.9.2 can also be applied to dry-type transformers.

Chapter 11 Power Cables

11.1 Introduction.

Preventive maintenance is the best way to ensure continued reliable service from electrical cable installations. Visual inspection and electrical testing of the insulation are the major maintenance procedures. However, it should be stressed that no amount of maintenance can correct improper application or physical damage done during installation.

11.2 Visual Inspection.

- **11.2.1** If, in addition to the visual inspection, cables are to be touched or moved, they should be deenergized.
- 11.2.2 Cables in manholes should be inspected for sharp bends, physical damage, excessive tension, oil leaks, pits, cable movement, insulation swelling, soft spots, cracked jackets in nonlead cables, damaged fireproofing, poor ground connections, deterioration of metallic sheath bonding, as well as corroded and weakened cable supports and the continuity of any main grounding system. Terminations and splices of nonlead cables should be squeezed in search of soft spots and inspected for tracking or signs of corona. The ground braid should be inspected for corrosion and tight connections. The bottom surface of the cable should be inspected for wear or scraping, due to movement, at the point of entrance into the manhole and also where it rests on the cable supports.
- 11.2.3 The manhole should be inspected for spalling concrete or deterioration of the aboveground portion. In some instances, the manhole can be equipped with drains, which might require cleaning. In some instances, it might be necessary to pump water from the manhole prior to entrance. A manhole should not be entered unless a test for dangerous gas has been made and adequate ventilation is provided. The inspection crew should always consist of two or more persons with at least one remaining outside the manhole. [See OSHA requirements in 29 CFR 1910.146, "Permit-Required Confined Spaces," for practices and procedures to protect employees from the hazards of entry into permit-required confined spaces, and 29 CFR 1910.269(e), "Electric Power Generation, Transmission, and Distribution," Enclosed Spaces, for enclosed space entry.]
- **11.2.4** Potheads should be inspected for oil or compound leaks and cracked or chipped porcelain. The porcelain surfaces should be cleaned and, if the connections are exposed, their tightness should be checked.
- **11.2.5** Cable identification tags or marking should be checked.

11.2.6 Because inspection intervals normally are one year or more, comprehensive records are an important part of any maintenance program. Comprehensive records should be arranged to facilitate comparison from year to year.

11.3 Aerial Installations.

Aerial cable installations should be inspected for mechanical damage due to vibration, deteriorating supports, or suspension systems. Special attention should be given to the dead-end supports to ensure that the cable insulation is not abraded, pinched, or bent too sharply. Terminations should be inspected as covered in 11.2.2.

11.4 Raceway Installations.

Because the raceway is the primary mechanical support for the cable, it should be inspected for signs of deterioration or mechanical damage or if the cable jacket is being abraded or mechanically damaged. In many installations, the raceway serves as a part of the ground-fault current circuit. Joints should be inspected for signs of looseness or corrosion that could result in a high resistance. The recommendations for splices and terminations covered in 11.2.2 also apply in this section.

11.5 Testing.

(See Chapter 21.) The two most commonly used tests for cable insulation are insulation-resistance testing and dc over-potential testing. Other tests are listed in ANSI/IEEE 400, Guide for Making High-Direct-Voltage Tests on Power Cable Systems in the Field.

Chapter 12 Motor Control Equipment

12.1 Introduction.

- **12.1.1** There are many varieties of motor controllers, motor control centers, switchboards, and power panels. Following are some of the more common motor starters:
- (1) Manual across-the-line starters
- (2) Magnetic across-the-line starters
- (3) Combination starters
 - (a) Breaker-protected starters
 - (b) Fuse-protected starters
 - (c) Fused breaker–protected starters
- (4) Reduced-voltage starters
 - (a) Autotransformer starters
 - (b) Resistance starters

- (c) Part-winding starters
- (d) Wye-delta starters
- (e) Solid-state starters
- (5) Two-speed starters
- (6) Starters and speed regulators for ac wound rotor and dc motors
- (7) Adjustable-speed/frequency starters
- (8) Miscellaneous types
 - (a) Reversing starter
 - (b) Motor control center

12.1.2 The maintenance recommendations in this chapter are general in nature and can be adapted to a wide variety of product types.

12.2 Components and Maintenance of Motor Controls.

Motor control equipment should be inspected and serviced at the same time as the motors. As a general rule, overhaul procedures for control equipment are less involved than motor overhauling. Most repairs can be made on-site. Motor starters represent one area in which manufacturers have emphasized simplicity of construction and wiring. Improvements have resulted in starters that are simple to install, maintain, and operate. Connections are readily accessible. Some parts are the plug-in type and can be replaced easily. Coils are often encapsulated in epoxy compounds and are less likely to burn out. Practically all newer starters have provisions for adding several auxiliary contacts with very little effort. Spare parts for starters are usually available from local suppliers. Spare starters, as well as spare parts, for the most used types and sizes should be stocked in the regular shop supply channels.

12.2.1 See Table 12.2.1 for guidance on motor control equipment troubleshooting.

Table 12.2.1 Motor Control Equipment Troubleshooting Chart

Problem	Possible Causes]
Contactor or relay not closing	No supply voltage	Check fuses and
	Low voltage	Check power sup small.
	Coil open or shorted	Replace.
	Wrong coil	Check coil numb
	Mechanical obstruction	With power off, c of contact and ari
	Pushbutton contacts not making contact	Clean or replace
	Interlock or relay contact not making contact	Adjust or replace
	Loose connection	Turn power off fi visually with a fla
	Overload relay contact open	Reset.

Table 12.2.1 Motor Control Equipment Troubleshooting Chart

Problem	Possible Causes	
Contactor or relay not opening	Pushbutton not connected correctly	Check connection
	Shim in magnetic circuit (dc only) worn, allowing residual magnetism to hold armature closed	Replace.
	Interlock or relay contact not opening circuit	Adjust contact tra
	"Sneak"circuit	Check control wi
	Gummy substance on pole faces	Clean with solver
	Worn or rusted parts causing burning	Replace parts.
	Contacts welded shut	See next item.
Contacts welding shut or freezing	Insufficient contact spring pressure causing contacts to burn and draw arc on closing	Adjust, increasin necessary.
	Very rough contact surface causing current to be carried by too small an area	Smooth surface of
	Abnormal inrush of current	Use larger contact shorts, or excessi
	Rapid jogging	Install larger dev
	Low voltage preventing magnet from sealing	Correct voltage comomentary volta
	Foreign matter preventing contacts from closing	Clean contacts w
	Short circuit	Remove short-cir
	2	fuse or breaker si
Contact chatter	Broken pole shader	Replace.
	Poor contact in control circuit	Improve contact interlock (3-wire
	Low voltage	Correct voltage condition. Check during starting.
Arc lingering across contacts	If blowout is series, possible short	Check wiring dia blowout.
	If blowout is shunt, possible open circuit	Check wiring dia
	Arc box left off or not in correct place	See that arc box be.
	No blowout, but increased travel of contacts, which increases rupturing capacity	
Excessive corrosion of contacts	Chattering of contacts as result of vibration outside the control cabinet	Check control sp spring if it does it that does not help vibrations are de
	High contact resistance because of insufficient contact spring pressure	Replace contact s
Abnormally short coil life	High voltage	Check supply vo
	Gap in magnetic circuit (ac only)	Check travel of a magnetic circuit
	Ambient temperature too high	Check rating of ambient rating francessary.
Copyright NFPA		1100000011 y.

Table 12.2.1 Motor Control Equipment Troubleshooting Chart

Problem	Possible Causes]
	Filing or dressing	Do not file silver- spots or discolora contacts.
	Interrupting excessively high currents	Install larger dev shorts, or excessi silver-faced conta
	Excessive jogging	Install larger dev caution operator.
	Weak contact pressure	Adjust or replace
	Dirt on contact surface	Clean contact sur
	Short-circuits	Remove short-cir proper fuse or bro
	Loose connections	Clean and tighter
	Sustained overload	Install larger devload current.
Panel and apparatus burned by heat from resistor	Motor being started frequently	Use resistor of hi
Coil overheating	Overheating or high ambient temperature	Check application
	Incorrect coil	Check rating; if i proper coil.
	Shorted turns caused by mechanical damage or corrosion	Replace coil.
	Undervoltage, failure of magnet to seal in	Correct pole face
	Dirt or rust on pole faces increasing air gap	Clean pole faces.
Overload relays tripping	Sustained overload	Check for ground motor currents.
	Loose connection on load wires	Clean and tighter
	Incorrect heater	Replace relay wit
Overload relay failing to trip	Mechanical binding, dirt, corrosion, etc.	Clean or replace.
	Wrong heater or heaters omitted and jumper wires used	Check ratings. A
	Motor and relay in different temperatures	Adjust relay ratin temperature the s
Noisy magnet (humming)	Broken shading coil	Replace shading
· · · · · · · · · · · · · · · · ·	Magnet faces not mating	Replace magnet a
	Dirt or rust on magnet faces	Clean and realign
	Low voltage	Check system vol during starting.

12.2.2 Table 12.2.2 is a guide for motor control preventive maintenance.

Table 12.2.2 Motor Control Preventive Maintenance Guide

Table 12.2.2 Motor Control Preventive Maintenance Guide

What to Inspect	What to Inspect For
Exterior and surroundings	Look for dust, grease, oil, high temperature, rust, corrosion, mechanical damage; check condition of gaskets, if any.
Interior of enclosure, nuts, and bolts	Check same items as for exterior and surroundings plus excess vibration, which might have loosened nuts, bolts, or other mechanical connections.
Contactors, relays, solenoids	
General	Check control circuit voltage; inspect for excess heating of parts evidenced by discoloration of metal, charred insulation or odor; freedom of moving parts; dust, grease, and corrosion; loose connections.
Contact tips	Check for excessive pitting, roughness, copper oxide; do not file silver contacts.
Springs	Check contact pressure; is pressure same on all tips?
Flexible leads	Look for frayed or broken strands; be sure lead is flexible — not brittle.
Arc chutes	Check for breaks or burning.
Bearings	Check for freedom of movement; do not oil.
Coils	Look for overheating, charred insulation, or mechanical
	injury.
Magnets	Clean faces; check shading coil; inspect for misalignment, bonding.
Fuses and fuse clips	Check for proper rating, snug fit; if copper, polish ferrules; check fuseclip pressure.
Overload relays	Check for proper heater size; trip by hand; check heater coil and connection; inspect for dirt, corrosion.
Pushbutton station and pilot devices	Check contacts; inspect for grease and corrosion.
Dashpot-type timers and overload relays	Check for freedom of movement; check oil level.
Resistors	Check for signs of overheating, loose connections; tighten sliders.
Connections	Tighten main line and control conductor connections; look for discoloration of current-carrying parts.
Control operation	Check sequence of operation of control relays; check relay contacts for sparking on operation; check contacts for flash when closing and, if necessary, adjust to eliminate contact bounce; check light switches, pressure switches, temperature switches, and other sensing devices.

12.3 Enclosures.

12.3.1 External Care.

12.3.1.1 An enclosure located in a clean, dry, and noncorrosive atmosphere and where it is not likely to incur physical damage does not require scheduled maintenance. However, internal components should be inspected and serviced as necessary.

12.3.1.2 Enclosures in a marginal atmosphere should be inspected periodically for excessive Copyright NFPA

dust and dirt accumulation as well as for corrosive conditions. The more contaminated the atmosphere, the more frequently the inspections should be conducted. Any accumulation should be removed with a vacuum cleaner or manually during equipment maintenance shutdown periods.

- **12.3.1.3** Badly corroded enclosures should be properly cleaned and refinished, or replaced.
- **12.3.2 Opening Enclosures.** Compliance with Section 8.3 is essential before opening the door or cover of a cabinet or enclosure. Foreign material, dirt, hardware, and debris should be removed from the outside top surfaces to avoid the risk of anything falling into the equipment.
- **12.3.3 Internal Inspection.** Upon opening of the cabinet or enclosure, equipment should be inspected for any dust, dirt, moisture or evidence of moisture, or other contamination. If any is found, the cause should be eliminated. Internal contamination could be an indication of an incorrectly selected, deteriorated, or damaged enclosure; unsealed enclosure openings; internal condensation; condensate from an unsealed conduit; or improper operating procedures (e.g., operating with enclosure door or cover open).
- **12.3.3.1** Ventilation passages should be checked for obstructions.
- **12.3.3.2** If equipment depends on auxiliary cooling or heating, the temperature control system should be checked and repaired if necessary to ensure proper functioning.
- **12.3.4 Internal Environment.** If a cooling, heating, or air-conditioning system is installed to maintain a safe environment inside an enclosure, it should be verified that the system functions as designed. As appropriate, air temperatures, air pressures, air quality, heat exchanges, fans, pumps, filters, and power supplies should be checked. For instance, a compressed-air cooling system might be installed on a cabinet to provide a positive-pressure enclosed environment, component cooling, and continual fresh air purging. A simple, periodic check of the filter, exhaust port opening, and the air supply helps determine that heat from normal operations is satisfactorily and reliably dissipated and that a clean, dry atmosphere is being maintained in the enclosure.
- **12.3.5** Cleaning. Cleaning should be done in accordance with the appropriate recommendations of Section 8.7, Equipment Cleaning.

12.4 Bus Bar, Wiring, and Terminal Connections.

- **12.4.1 Introduction.** Any loose bus bar or terminal connection will cause overheating that will lead to equipment malfunction or failure. Loose bonding or grounding can compromise safety and function. Overheating in a bus or terminal connection will cause a discoloration in the bus bar, which can easily be spotted where connections are visible, often too late to avoid replacement. An overheating bus bar condition will feed on itself and eventually lead to deterioration of the bus system as well as the equipment connected to the bus, such as protective devices, bus stabs, and insulated leads. Aluminum connections usually utilize plated parts that should not be cleaned with abrasives.
- **12.4.2** Loose Connections. Bus bar and terminal connections should be inspected periodically to ensure that all joints are properly tightened. Proper torque is a function of bolt

size, bolt type, terminal material, washer type, and type of bus bar. Proper bolt torque values for all types of joints involved normally are available in manufacturers' maintenance and instructional literature. It should not be assumed that bus bar and terminal hardware, once tightened to proper torque values, remains tight indefinitely. (See Section 21.17, which describes one method of detecting loose connections during the periods between shutdowns.)

- **12.4.3 Special Operating Environments.** Special attention should be given to bus bars and terminal connections in equipment rooms where excessive vibration or heating/cooling cycles can cause more than normal loosening of bolted bus and terminal connections.
- **12.4.4 Bus Bar Support Insulators.** Bus bar support insulators and barriers should be inspected to ensure that they are free of contamination. Insulators should be checked periodically for cracks and signs of arc tracking. Defective units should be replaced. Loose mounting hardware should be tightened.
- **12.4.5 Power and Control Wiring.** Insulation on conductors should be examined for overheating or chafing that could progress into an insulation failure. Damaged conductors should be replaced. Replacement conductors should be rerouted, braced, or shielded as needed to avoid similar damage in future operation. Temporary wiring should be removed or replaced by permanent wiring.

12.5 Disconnects.

- **12.5.1 Introduction.** Disconnects should be examined on both the line side and the load side for proper maintenance evaluation. Prior to initiating such an evaluation, an electrically safe work condition should be established. See Chapter 7.
- **12.5.1.1** Switches used in drawout units normally supplied in motor control centers can be opened, safely withdrawn, and examined on a workbench, thus avoiding a potential hazard.
- **12.5.2 Safety.** It should never be assumed that a disconnect is in the open position because the handle mechanism is in the open position. For safety, always double check. Compliance with Section 8.3 is essential.
- **12.5.3 Inspection and Cleaning.** Routine maintenance should include a procedure for inspecting and removing excessive dust accumulations. (See Section 8.7.)
- **12.5.4 Loose Connections.** Loose connections are the major source of excessive heat, which can lead to deterioration of the insulation and eventual failure of the device. Terminal and bus bar connections as well as cable connections should be examined and tightened as required using the manufacturer's torque recommendations. Any device that has evidence of overheated conductors and carbonized insulation should be repaired or replaced. Disconnects showing any evidence of damage and contacts showing evidence of welding or excessive pitting should be repaired or replaced.
- **12.5.5 Mechanical Operation.** Mechanisms should be operated manually to ensure proper working condition. Factory-lubricated mechanisms sometimes dry out after a period of time in the dry, heated atmosphere of a motor control center enclosure. Manufacturers' maintenance literature should be followed for proper lubrication instructions.

12.6 Molded Case Breakers.

A wide variety of circuit breakers are used with motor control equipment. Molded case breaker maintenance is covered in Chapter 14.

12.7 Fuses.

Fuses normally are used in conjunction with disconnect switches. A dummy fuse, copper slug, or length of wire should never be used as a fuse substitute. Fuse and fuseholder maintenance is covered in Chapter 16.

12.8 Contactors.

12.8.1 Introduction. Because contactors are the working portion of a motor controller, normal wear can be expected.

12.8.2 Contacts and Arc Chutes.

- **12.8.2.1 Inspection.** Contacts and arc chutes of electromechanical contactors should be checked for excessive burning, beads of molten material, and unusual erosion of the contact faces.
- **12.8.2.2 Servicing.** Excessively worn or pitted contacts should be replaced with manufacturer-recommended renewal parts, or the contactor should be replaced. All contacts of multipole devices should be replaced simultaneously to avoid misalignment and uneven contact pressure. Contacts should not be filed or dressed unless recommended by the manufacturer.
- **12.8.2.2.1** Arc chutes and arc hoods should be replaced if they are broken or deeply eroded.
- **12.8.2.2.2** Easily dislodged dust or granules should be removed by vacuuming, wiping, or light brushing. Insulating surfaces should not be scraped, sandpapered, or filed.
- **12.8.3 Alternating Current (ac) Magnet Solenoids.** A noisy solenoid in a relay or contactor indicates failure to seat properly or a broken or loose shading coil. The cause should be determined and corrected to avoid overheating and coil damage. If a coil exhibits evidence of overheating (cracked, melted, or burned insulation), it should be replaced, after the cause of overheating has been detected and corrected. This could include the preceding ac magnet symptoms, binding that keeps the magnet from seating properly, and overvoltage and undervoltage conditions. If melted coil insulation has flowed onto other parts, they should be cleaned or replaced.

12.9 Motor Overload Relays — Thermal Types.

12.9.1 Introduction. Motor overload relays perform the vital supervisory function of monitoring the overload current conditions of the associated motor. The most commonly used overload relays employ a thermal element designed to interpret the overheating condition in the motor windings by converting the current in the motor leads to heat in the overload relay element. As the heat in the thermal element reaches a predetermined amount, the control circuit to the magnetic contactor holding coil is interrupted and the motor branch

circuit is opened. The two most common types of thermal elements in overload relays employ either a bimetal or a melting alloy joint to initiate the opening action of the contactor.

- **12.9.1.1** Overload relays that trip during operation are usually resettable. The cause of the trip should be identified before resetting. Some overload relays are adjustable.
- **12.9.1.2** Failure of the thermal element can occur when the element is subjected to short-circuit conditions. The cause should be identified and corrected.
- **12.9.1.3** Replacement or adjustment of the heater element to a higher rating should not be done without full consideration of the ambient temperatures in which the motor and controller operate, as well as all the factors in 12.9.3.
- **12.9.2** Other Types. The manufacturers' literature should be consulted for maintenance of other types of overload devices.
- **12.9.3 Motor Data.** Overload thermal elements are applied on the basis of motor full load current and the motor service factor found on the motor rating nameplate. Complete records on all motors, including motor full-load amps together with proper manufacturer's heater selection and application charts, should be included as a part of any maintenance file on motor starters. General heater application charts usually are secured inside the starter enclosure.
- **12.9.4 Inspection and Replacement.** Routine maintenance should include a check for loose terminal or heater connections and signs of overheating. Overheating can cause carbonization of the molding material, creating potential dielectric breakdowns as well as possibly altering the calibration of the overload relay. Overload elements can be tested with primary injection current and compared to the manufacturer's curve for performance. Overload elements operating outside the manufacturer's curve or showing signs of excessive heating should be replaced.

12.10 Pilot and Miscellaneous Control Devices.

- **12.10.1 Introduction.** Pilot and other control devices consist of the control accessories normally employed with motor starters, such as push buttons, selector switches, indicating lights, timers, and auxiliary relays.
- **12.10.2 Inspection.** Routine maintenance checks on these types of devices generally should include the following:
- (1) Check for loose connections
- (2) Check for proper mechanical operation of operators and contact blocks
- (3) Inspection of exposed contacts
- (4) Check for signs of overheating
- (5) Replacement of pilot lamps, if necessary

12.11 Interlocks.

12.11.1 Electrical Interlocks.

- **12.11.1.1 Auxiliary Contacts.** A contactor or starter could be provided with auxiliary contacts that permit interlocking with other devices.
- **12.11.1.2 Inspection.** Proper maintenance of the electrical auxiliary contacts should include the following:
- (1) Check for loose connections.
- (2) Check for proper mechanical operation and alignment with the contactor.
- (3) Inspect exposed contacts.
- **12.11.2 Mechanical Interlocks.** Mechanical interlocks can be classified into two categories according to their application: safety and functional performance. Safety interlocks are designed to protect operating personnel by preventing accidental contact with energized conductors and the hazards of electrical shock. Functional interlocks, such as those found on reversing contactors, are designed to prevent the inadvertent closing of parallel contactors wired to provide alternate motor operating conditions. A mechanical interlock should be examined to ensure that the interlock is free to operate and that bearing surfaces are free to perform their intended function. Interlocks showing signs of excessive wear and deformation should be replaced. Several types of locking or interlocking features are used, including those described in 12.11.2(A) through 12.11.2(D).
- (A) Primary Disconnect Mechanism. This device usually is mounted directly on the disconnect device. It is mechanically interlocked with the door to ensure that the door is held closed with the disconnect in the on position. A maintenance check should be made to ensure that the adjustment is correct and that the interlock is providing proper engagement.
- **(B)** Padlock Mechanism. Disconnect operating mechanisms usually are provided with padlocking means whereby the mechanism can be padlocked in the off position. During maintenance checks of the equipment and the motor, these mechanisms should be padlocked in the off position for personnel safety.
- **(C) Defeat Mechanisms.** Most disconnects are equipped with defeater mechanisms that can be operated to release door interlock mechanisms with the disconnect device in the on position. The use of this release mechanism should be limited to qualified maintenance and operating personnel.
- **(D) Unit Lock.** Motor control centers can be provided with plug-in starters for ease of inspection and interchangeability. Plug-in motor-starter units normally are held locked in their connected positions by a unit latch assembly. Although maintenance on this assembly normally is not required, it should be understood by maintenance personnel.

Chapter 13 Electronic Equipment

13.1 Introduction.

This chapter describes the maintenance of electronic equipment in general terms. Specific maintenance procedures normally are available from the equipment manufacturer or are

contained in the instruction book supplied with the apparatus. In some cases, these procedures require the services of trained specialists.

13.2 Reasons for Maintenance.

- **13.2.1** Maintenance procedures are designed to do the following:
- (1) Protect the equipment from adverse effects of heat, dust, moisture, and other contaminants
- (2) Maintain top reliability and minimize costly downtime
- (3) Prolong the useful life of the equipment
- (4) Recognize incipient problems and take corrective action
- **13.2.2** The importance of maintenance cannot be overemphasized. Equipment should be kept operating efficiently to contribute to the success of the process or operation in which the equipment is used. Apparatus that is improperly maintained can become unreliable.
- **13.2.3** Persons charged with maintenance responsibility should have a keen appreciation as to why the work is required and the importance of even routine aspects of maintenance to the overall performance of the equipment.

13.3 Special Precautions.

- 13.3.1 Special safety precautions should be observed before and during the preventive maintenance operation. Extreme care should be taken to ensure that all power is removed from the apparatus before it is serviced. To prevent accidental shock from stored energy, capacitors should be discharged in accordance with the equipment manufacturer's instructions. Capacitors having high stored energy can be lethal or could be damaged by the application of a direct short circuit. Discharging the capacitor through a resistor followed by a direct short circuit might be required. Connecting charged capacitors to earth ground will not discharge capacitors that are used in circuits that normally are isolated from ground. After power has been removed, parts, such as tubes, resistors, and heat sinks, can remain extremely hot and cause painful burns.
- **13.3.2** Occasionally, some equipment requires troubleshooting while the circuits are energized. If so, it should be ensured that the insulation on test equipment leads is fully rated for the operating voltage under test and in good mechanical condition. Special care should be observed in the use or servicing of equipment that employs the chassis as one side of the circuit. Such equipment can be hazardous in the presence of grounded or some ungrounded 3-phase circuits.
- **13.3.3** In the absence of other instructions, it should be assumed that all electronic equipment is electrostatic discharge (ESD) sensitive. Industry standard ESD procedures should be followed.

13.4 Preventive Maintenance Operations.

Actual work performed during maintenance of electronic equipment should include the

following operations:

- (1) Inspection
- (2) Cleaning
- (3) Adjustments
- (4) Testing
- (5) Servicing
- **13.4.1 Inspection.** Inspection is most important in the maintenance program. Slight abnormalities might not immediately interfere with the equipment performances, but deviations from normal should be discovered early. Time and effort can be saved if defects are corrected before they lead to major breakdowns. Inspections consist of careful observation of all parts of equipment, noticing their color, placement, state of cleanliness, and so on. Inspection should be made for conditions such as the following:
- (1) Overheating as indicated by discoloration or other visual characteristics. Infrared inspection can reveal abnormal temperatures and possible problem areas and should be performed in accordance with Section 21.17.
- (2) Placement. Leads and cable clearances, rub points, and so on, should be observed.
- (3) Cleanliness. Recesses should be examined for accumulation of dust, especially between connecting terminals. Parts, connections, and joints should be free of dust, corrosion, and other foreign material.
- (4) Tightness. Soldered or screw terminal connections and mountings should be tested by slightly pulling on the wire or feeling the lug or terminal screw. Printed circuit boards should be inspected to determine that they are fully inserted into the edge board connectors. Board locking tabs also should be engaged. Unless connector malfunctions are suspected, routine unplugging and replugging of connectors to verify seating is not recommended; doing so can shorten the useful life of the connectors.
- (5) Moisture. Look for evidence of moisture or corrosion. Consider a space heater if the surrounding air is repeatedly or continuously high in humidity. Verify the operation of any space heaters.
- (6) Blockages. Keep air passages, fans, and ducting clear and clean to prevent overheating. Check fans for proper direction of rotation.
- **13.4.2 Cleaning.** Cleaning the apparatus, both inside and out, is essential for good operation. Dust and the like increase chances of current leakage or flashover with resultant malfunction or damage to critical parts. Any accumulation of dust should be removed with a vacuum cleaner, if possible, or manually cleaned during maintenance shutdown periods. Enclosure filters should be cleaned at regular intervals and replaced if they are damaged or clogged. Solvents should not be used on printed circuit boards.
- **13.4.3 Adjustments.** Adjustments should be made only when performance indicates that they are necessary to maintain normal operating conditions. Specific adjustments vary with Copyright NFPA

each type of equipment and are described in the instruction booklets supplied with the apparatus. Equipment calibrations should be scheduled on a routine basis, with the frequency depending on the operating conditions particular to the process or equipment.

13.4.4 Testing. Reference to manufacturers' instructions is recommended.

13.4.5 Servicing. Necessary replacements should be made only at the printed circuit board or plug-in component level unless otherwise recommended by the equipment manufacturer. Manufacturers' recommendations should be followed for removal, handling, packaging, shipping, and replacement of such components or modules. Unnecessary strains on wires, cables, and connections should be avoided.

Chapter 14 Molded-Case Circuit-Breaker Power Panels

14.1 Introduction.

14.1.1 A molded-case circuit breaker consists of two basic parts. One part consists of the current-carrying conductors, contacts, and appropriate operating mechanism necessary to perform the circuit-switching functions. The second part consists of the protective element, including the tripping mechanism associated therewith.

14.1.2 Molded-case circuit breakers undergo extensive production testing and calibration at the manufacturers' plants. These tests are based on ANSI/UL 489, *Molded-Case Circuit Breakers, Molded-Case Switches and Circuit Breaker Enclosures.* Circuit breakers carrying the UL label have factory-sealed, calibrated elements; an unbroken seal ensures that the mechanism has not been subjected to alteration or tampering and that the breaker can be expected to perform according to UL specifications. A broken seal voids the UL label and jeopardizes the manufacturer's warranty.

14.2 Application Considerations.

Molded-case circuit breakers trip from exposure to continuous currents beyond their ratings, and many trip from unduly high ambient temperatures, poor or improper connections, damaged plug-in members, and other conditions that transfer undue heat to the breaker mechanism. Some of these conditions violate application specifications. A molded-case circuit breaker applied in a panelboard should not be loaded in excess of 80 percent of its continuous current rating, where in normal operation the load will continue for 3 hours or more.

14.3 Phase-Fault Current Conditions.

A typical molded-case circuit breaker is equipped with both time-delay and instantaneous tripping devices. Time-delay tripping has inverse time characteristics that provide a shorter tripping time for higher overloads. Under moderate, short-duration overloads, the circuit breaker allows sufficient time for applications such as motor starting. Under severe overloads, the circuit breaker trips quickly, providing adequate protection for conductors and insulation. For high-fault currents, the magnetic tripping device responds to open the

circuit breaker immediately.

14.4 Ground-Fault Tripping.

It should be recognized that standard molded-case circuit breakers generally are not equipped with ground-fault sensing and protection devices and, therefore, will not normally trip and clear low-level ground faults, which can do immense damage. Special ground-fault sensing and protective devices should be specified to achieve this type of equipment protection where necessary. (See Section 15.2.)

14.5 Types of Molded-Case Circuit Breakers.

14.5.1 Molded-case circuit breakers can be divided into three major categories depending on the type of trip unit employed:

- (1) Factory-sealed, noninterchangeable trip units
- (2) Interchangeable trip units
- (3) Solid-state units

14.5.2 The most common type of trip unit under (1) and (2) in 14.5.1 is the standard time-limit or thermal-magnetic trip. This type of trip unit employs a thermal element to provide inverse characteristics giving overload protection and a magnetic circuit to provide short-circuit protection. Another common type of trip under type (1) is the hydraulic-magnetic trip, in which a dashpot is used to achieve the inverse time delay. These functions are accomplished in type (3) with the use of solid-state circuitry. Solid-state units also accomplish other functions, including ground-fault protection, not normally available as an integral part of breakers under types (1) and (2).

14.6 Special-Purpose Breakers.

A special design of an instantaneous-only circuit breaker having an adjustable instantaneous pickup is utilized in motor-circuit protection schemes.

14.7 Types of Maintenance.

Maintenance of molded-case circuit breakers generally can be divided into two categories: mechanical and electrical. Mechanical maintenance consists of inspection involving good housekeeping, maintenance of proper mechanical mounting and electrical connections, and manual operation as outlined in 14.8 through 14.10. Electrical testing under field test conditions is covered in 21.10.2.4.

14.8 Inspection and Cleaning.

Molded-case circuit breakers should be kept clean of external contamination so that internal heat can be dissipated normally. Further, a clean case reduces potential arcing conditions between live conductors and between live conductors and ground. The structural strength of the case is important in withstanding the stresses imposed during fault-current interruptions. Therefore, the case should be inspected for cracks and replaced if necessary.

14.9 Loose Connections.

Excessive heat in a circuit breaker can cause a malfunction in the form of nuisance tripping and possibly an eventual failure. Loose connections are the most common cause of excessive heat. Periodic maintenance checks should involve checking for loose connections or evidence of overheating. Loose connections should be tightened as required, using manufacturers' recommended torque values. Molded-case circuit breakers having noninterchangeable trip units are properly adjusted, tightened, and sealed at the factory. Those having interchangeable trip units installed away from the factory could overheat if not tightened properly during installation. All connections should be maintained in accordance with manufacturers' recommendations

14.10 Mechanical Mechanism Exercise.

Devices with moving parts require periodic checkups, and a molded-case circuit breaker is no exception. It is not unusual for a molded-case circuit breaker to be in service for extended periods and never be called on to perform its overload- or short-circuit-tripping functions. Manual operation of the circuit breaker will help keep the contacts clean but will not exercise the tripping mechanism. Although manual operations will exercise the breaker mechanism, none of the mechanical linkages in the tripping mechanisms will be moved with this exercise. Some circuit breakers have push-to-trip buttons that should be manually operated to exercise the tripping mechanism linkages.

Chapter 15 Ground-Fault Protection

15.1 Introduction.

Ground-fault protective devices intended to protect personnel or systems from ground faults are of two distinct types: ground-fault circuit interrupters and ground fault protection of equipment. IT IS EXTREMELY IMPORTANT TO UNDERSTAND THE DIFFERENCE BETWEEN THE TWO TYPES.

15.1.1 Ground-Fault Circuit Interrupter (GFCI). A GFCI is designed to protect a person from electrocution when contact between a live part of the protected circuit and ground causes current to flow through a person's body. A GFCI disconnects the circuit when a current equal to or higher than the calibration point (4 mA to 6 mA) flows through the protected circuit to ground. It does not eliminate the shock sensation, since normal perception level is approximately 0.5 mA. It does not protect from electrocution on line-to-line contact, because the nature of line-to-line loads cannot be distinguished.

15.1.2 Ground-Fault Protection of Equipment. There are two applications where ground-fault protection of equipment is intended to be used: where there might be excessive ground-fault leakage current from equipment and where equipment and conductors are to be protected from damage in the event of a higher-level ground fault (either solid or arcing). These types of protective equipment are for use only on ac, grounded circuits and cause the circuit to be disconnected when a current equal to or higher than its pickup setting or rating

flows to ground. They are not designed to protect personnel from electrocution.

- **15.1.2.1** Equipment ground-fault protective devices are intended to operate on a condition of excessive ground-fault leakage current from equipment. The ground current pickup level of these devices is from above 6 mA to 50 mA.
- **15.1.2.2** Circuit breakers with equipment ground-fault protection are combination circuit breaker and equipment ground-fault protective devices designed to serve the dual function of providing overcurrent protection and ground fault protection for equipment. The ground current pickup level of these breakers is typically 30 mA. They are intended to be used in accordance with Articles 426 and 427 of NFPA 70, *National Electrical Code*.
- **15.1.2.3** Ground-fault sensing and relaying equipment is intended to provide ground-fault protection of equipment at services and feeders. They are rated for ground current pickup levels from 4 amperes to 1200 amperes.
- **15.1.3 Definitions.** The following definitions are unique to this chapter.
- **15.1.3.1 Ground-Fault Circuit Interrupter (GFCI).** A device intended for the protection of personnel that functions to deenergize a circuit or portion thereof within an established period of time when a current to ground exceeds the values established for a Class A device. Note: Class A Ground-Fault Circuit Interrupters trip when the current to ground has a value in the range of 4 mA to 6 mA. For further information, see UL 943, *Standard for Ground-Fault Circuit Interrupters.* [70, 2005].
- **15.1.3.2** Ground-Fault Protection of Equipment (GFP). A system intended to provide protection of equipment from damaging line-to-ground fault currents by operating to cause a disconnecting means to open all ungrounded conductors of the faulted circuit. This protection is provided at current levels less than those required to protect conductors from damage through the operation of a supply circuit overcurrent device. [70, 2005]
- 15.2 Ground-Fault Protective Equipment for Excessive Leakage Currents.
- **15.2.1 Equipment Ground-Fault Protective Devices.** These are typically cord and plug-connected devices. Recommended maintenance is that specified in Section 19.2 and Section 20.4.
- **15.2.2 Circuit Breakers with Equipment Ground-Fault Protection.** Recommended maintenance is the same as that specified in Chapter 14 for molded-case circuit breakers.

15.2.3 Maintenance.

- **15.2.3.1** The devices are sealed at the factory, and maintenance should be limited to that described in 15.2.3.2 through 15.2.3.6 or as recommended by the manufacturer.
- **15.2.3.2** In addition to the maintenance specified for the individual types of GFCIs, tripping tests should be performed with the test button on the unit in accordance with the frequency recommended by the manufacturer. Results and dates of tests should be recorded on the test record label or card supplied with each permanently installed GFCI unit.
- **15.2.3.3** GFCIs are equipped with an integral test means for checking the tripping operation.

- **15.2.3.4** Separate test instruments are available that can be used for testing and troubleshooting GFCIs. Such testers should be listed by a nationally recognized testing laboratory to UL 1436, *Outlet Circuit Testers and Similar Indicating Devices*. Separate GFCI test instruments should not be used to test GFCIs protecting 2-wire circuits doing so can result in electric shock.
- **15.2.3.5** When a separate GFCI test instrument is used, if the tester indicates "No Trip" and the GFCI integral test button indicates "Trip," the following miswiring scenarios should be investigated:
- (1) Line and load wires transposed
- (2) Reverse polarity
- (3) Open ground
- **15.2.3.6** Only after it has been ascertained that the GFCI is properly wired should the test result be considered indicative of an improperly functioning GFCI.
- **15.2.4 GFCI Types.** The following are the four types of GFCIs:
- (1) Circuit-breaker type
- (2) Receptacle type
- (3) Portable type
- (4) Permanently mounted type

15.2.5 Circuit-Breaker-Type GFCI.

- **15.2.5.1** A circuit-breaker-type GFCI is designed in the form of a small circuit breaker and is completely self-contained within the unit housing. The circuit-breaker-type GFCI provides overload and short-circuit protection for the circuit conductors in addition to ground-fault protection for personnel. It is intended to be mounted in a panelboard or other enclosure.
- **15.2.5.2** Recommended maintenance is the same as that specified in Chapter 14 for molded-case circuit breakers.

15.2.6 Receptacle-Type GFCI.

- **15.2.6.1** A receptacle-type GFCI is designed in the form of a standard receptacle, is completely self-contained within the unit housing, and does not provide overload or short-circuit protection. It is intended for permanent installation in conventional-device outlet boxes or other suitable enclosures.
- **15.2.6.2** Maintenance required is the same as that specified in Section 19.3 for standard receptacle outlets.

15.2.7 Portable-Type GFCI.

15.2.7.1 A portable-type GFCI is a unit intended to be easily transported and plugged into a receptacle outlet. Cords, tools, or other devices to be provided with ground-fault protection for personnel are then plugged into receptacles mounted in the unit.

15.2.7.2 Recommended maintenance is that specified in Section 19.3 for receptacles and in Section 20.4 for connecting cords.

15.2.8 Permanently Mounted-Type GFCI.

- **15.2.8.1** A permanently mounted-type GFCI is a self-contained, enclosed unit designed to be wall- or pole-mounted and permanently wired into the circuit to be protected.
- **15.2.8.2** Maintenance beyond tightness of connections and cleanliness should not be attempted. Any repairs needed should be referred to the manufacturer.

15.3 Ground-Fault Protective Equipment to Prevent Damage.

- **15.3.1 Ground-Fault Sensing and Relaying Equipment.** Ground-fault sensing and relaying equipment is used to prevent damage to conductors and equipment. The protective equipment consists of three main components: (1) sensors, (2) relay or control unit, and (3) a tripping means for the disconnect device controlling the protected circuit. Refer to Section 230.95 of NFPA 70, *National Electrical Code*, for performance testing and record keeping when this equipment is first installed at a site.
- **15.3.2** Sensing Methods. Detection of ground-fault current is done by either of two basic methods. With one method, ground current flow is detected by sensing current in the grounding conductor. With the other method, all conductor currents are monitored by either a single large sensor or several smaller ones.
- **15.3.3** Sensors. Sensors are generally a type of current transformer and are installed on the circuit conductors. The relay or control unit can be mounted remote from the sensors or can be integral with the sensor assembly.
- **15.3.4 Combination Units.** Circuit breakers with electronic trip units might have a combination ground-fault sensing and relaying system integral with the circuit breaker. Any maintenance work performed on the electronic circuitry should adhere to manufacturers' instructions. Maintenance on the mechanical operating mechanism components should be done as indicated in Chapter 14.

15.3.5 Maintenance.

- **15.3.5.1** Maintenance recommendations for the sensors are as specified in 9.9.5.2 for indoor-type instrument transformers. Careful inspection for tight terminal connections and cleanliness should be made.
- **15.3.5.2** If interconnections between components are disconnected, they should be marked and replaced to maintain the proper phasing and circuitry.
- **15.3.5.3** A formal program of periodic testing should be established. The manufacturer or NETA *Maintenance Testing Specifications for Electrical Power Distribution Equipment and Systems*, should be consulted for sample specifications.

Chapter 16 Fuses

16.1 Fuses Rated 1000 Volts or Less.

- **16.1.1 Installing and Removing Fuses.** Fuseholders should be deenergized before installing or removing fuses. Where it is not feasible or would result in a greater hazard to deenergize fuseholders, installation or removal of fuses should be performed in accordance with appropriate safety-related work practices for the task.
- **16.1.2 Inspection.** Fuse terminals and fuseclips should be examined for discoloration caused by heat from poor contact or corrosion. Early detection of overheating is possible through the use of infrared examination. If evidence of overheating exists, the cause should be determined.
- **16.1.3 Cleaning and Servicing.** The power source to fuseholders should be disconnected before servicing. All fuseholder connections should be tightened. All connections to specifications should be torqued where available. Fuseclips should be checked to ascertain that they exert sufficient pressure to maintain good contact. Clips making poor contact should be replaced or clip clamps used. Contact surfaces of fuse terminals and clips that have become corroded or oxidized should be cleaned. Silver-plated surfaces should not be abraded. Contact surfaces should be wiped with a noncorrosive cleaning agent. Fuses showing signs of deterioration, such as discolored or damaged casings or loose terminals, should be replaced.
- **16.1.4 Replacement.** Many different types of fuses are used in power distribution systems and utilization equipment. Fuses differ by performance, characteristics, and physical size. It should be verified that fuses, whether new or replacement, are the proper type and rating. When fuses are replaced, fuseholders should never be altered or forced to accept fuses that do not readily fit. An adequate supply of spare fuses with proper ratings, especially those that are uncommon, minimizes replacement problems.
- **16.1.4.1 Type.** The most common fuse classes for 0 ampere through 600 ampere applications on power systems are Class H, K, R, J, T, G, and CC. Class H, K, and R are the same physical size and are interchangeable in standard nonrejection style fuseholders. Special rejection-style fuseholders accept only Class R fuses. Note that Class R fuses are manufactured in two types, Class RK1 and Class RK5. Class RK1 fuses are more current limiting than Class RK5 fuses and are generally recommended to upgrade older distribution systems. Class L fuses are available in the range of 601 amperes through 6000 amperes. Class J, T, G, CC, and L are size rejection fuses. One type of fuse should never arbitrarily be replaced with a different type simply because it fits into the fuseholder.
- **16.1.4.2 Ratings.** Five characteristics should be considered when fuses need to be replaced: interrupting rating, voltage rating, current rating, degree of time delay, and degree of current limitation.
- **16.1.4.2.1 Interrupting Rating.** Fuses should have an interrupting rating equal to or greater than the maximum fault current available at their point of application. Fuses have interrupting ratings from 10,000 amperes to 300,000 amperes. (See Section 26.2.)
- **16.1.4.2.2 Voltage.** The voltage rating of the fuse should be at least equal to or greater than the system voltage.

- **16.1.4.2.3** Current. Fuse ampere ratings should be adequate for the applications. Ratings are determined by the service, feeder, and branch-circuit conductors, and the loads served. Consult NFPA 70, *National Electrical Code*, and the electrical system single-line diagram for proper fuse sizing. Fuse manufacturers can be contacted for application information.
- **16.1.4.2.4 Time Delay.** Most fuse classes are manufactured in time-delay and non-time-delay versions. Time-delay fuses are especially useful on inductive circuits such as motor and transformer circuits with inrush currents. Time-delay fuses are the most commonly used fuses on power distribution and motor circuits.
- **16.1.4.2.5** Current Limitation. Fuses are designated as either current limiting or non-current limiting based on their speed of response during short-circuit conditions. Non-current-limiting fuses can be replaced with current-limiting fuses, but current-limiting fuses should not be replaced with non-current-limiting fuses unless a review of the specific application is undertaken.
- **16.1.4.3 Listing.** It is important that the fuses bear the listing mark of a nationally recognized testing laboratory. Testing laboratories test fuses for both ac and dc performance characteristics, and the ratings are marked on the fuse label. Be sure to select the proper fuse for the specific application.
- **16.1.4.4 Special Purpose.** Special-purpose fuses are used for supplementary protection of power systems and for utilization equipment such as power rectifiers, variable speed drives, and solid-state controllers. High-speed or semiconductor-type fuses are most commonly used in these applications. These fuses have unique performance characteristics and physical size. They should be matched to the utilization equipment.

16.2 Fuses Rated over 1000 Volts.

- **16.2.1 Introduction.** Fuses rated over 1000 volts consist of many parts, some current carrying and some non-current carrying, all subject to atmospheric conditions. These fuses can be current limiting or non-current limiting, sand or liquid filled, or vented expulsion type. The frequency of inspection is necessarily a function of the conditions at a given fuse location and should be determined by the user.
- **16.2.2 Installing and Removing Fuses.** Manufacturers' instructions regarding installing and removing fuses should be followed. If the fuse does not have a loadbreak rating, the system should be deenergized before the fuse is removed.

16.2.3 Inspection and Cleaning.

- **16.2.3.1** The fuse should be disconnected and the mounting deenergized from all power sources before servicing, and an electrically safe work condition should be established. *(See Chapter 7.)* Insulators should be inspected for breaks, cracks, and burns. The insulators should be cleaned, particularly where abnormal conditions such as salt deposits, cement dust, or acid fumes prevail, to avoid flashover as a result of the accumulation of foreign substances on their surfaces.
- **16.2.3.2** Contact surfaces should be inspected for pitting, burning, alignment, and pressure. Badly pitted or burned contacts should be replaced, and the following criteria should be met: Copyright NFPA

- (1) The fuse unit or fuse tube and renewable element should be examined for corrosion of the fuse element or connecting conductors, excessive erosion of the inside of the fuse tube, discharge (tracking) and dirt on the outside of the fuse tube, and improper assembly that might prevent proper operation.
- (2) Fuse tubes or units showing signs of deterioration should be replaced.
- **16.2.3.3** Bolts, nuts, washers, pins, and terminal connectors should be in place and in good condition, and the following criteria should be met:
- (1) The lock or latch should be checked.
- (2) Fuse tubes made of organic (Class A) material should be refinished as required and specified by the manufacturer.
- **16.2.3.4** Vented expulsion fuses might be equipped with condensers or mufflers to restrict expulsion of gases during operation. They might have a dropout feature that automatically disengages the fuse when it operates. The lower, or discharge end, of the expulsion fuse might have a sealing disc over the expulsion chamber to prevent entrance of moisture if the fuse is left in an inverted, disconnected position in service. These seals should be inspected to ensure that moisture has not entered the interrupting chamber. If the seals are damaged or show evidence of leakage, the fuses should be replaced.

Chapter 17 Rotating Equipment

17.1 Introduction.

- **17.1.1** The various classes of rotating equipment have many common features in routine maintenance, both electrical and mechanical. The recommendations in this chapter are of a general nature and are not intended to cover in detail large or special applications, such as gear pump motors, or those designed for hazardous (classified) locations.
- **17.1.2** A complete list of the machines in operation, the functions they perform, and the past history of operation form the basis for a schedule of routine maintenance. Frequency of inspection depends on the nature of the service, the hours of operation, and the environment under which the equipment operates. Periodic inspection and appropriate maintenance assist in making continuous operation of the equipment possible. In some instances, disassembly is necessary for a complete inspection and necessary repairs.

17.2 Safety Precautions.

The following safety precautions should be observed:

- (1) A machine should be locked out/tagged out before work begins and properly protected against unintentional reenergization.
- (2) Workers should wear personal protective equipment such as goggles, gloves, aprons, and respirators when working with solvents.
- (3) Great care should be exercised in the selection of cleaning agents for any particular Copyright NFPA

- task. Be sure to follow all applicable environmental regulations.
- (4) Where cleaning agents are used, adequate ventilation should be provided to avoid fire, explosion, and health hazards.
- (5) A metal nozzle used for spraying flammable cleaning agents should be bonded to the supply drum and to the equipment being sprayed.
- (6) Rubber insulating gloves should be used in connecting and operating high-voltage test instruments.
- (7) After tests have been made, stored energy should be discharged from windings before test leads are handled.

17.3 Stator and Rotor Windings.

The life of a winding depends on keeping it near to its original condition as long as possible. Insulation failure causes immediate outage time. The following points should be carefully examined and corrective action taken during scheduled inspections to prevent operational failures.

- **17.3.1** Dust and dirt are almost always present in windings that have been in operation under average conditions. Some forms of dust are highly conductive and contribute materially to insulation breakdown as well as restrict ventilation. (See 17.6.2 for recommended cleaning methods.)
- **17.3.2** Evidence of moisture, oil, or grease on the winding should be noted, and, if necessary, the winding should be cleaned thoroughly with a solvent solution. Generally, after a major cleaning, a drying process is necessary to restore the insulation to a safe level for operation. (See 17.6.3 for drying methods.)
- **17.3.3** Winding tightness in the slots or on the pole pieces should be checked. One condition that hastens winding failure is movement of the coils due to vibration during operation. The effects of varnishing and oven treatment serve to fill the air spaces caused by insulation drying and shrinking and will maintain a solid winding.
- **17.3.4** Insulation surfaces should be checked for cracks, crazing, flaking, powdering, or other evidence of the need to renew insulation. Usually, under these conditions, when the winding is still tight in the slots, a coat or two of air-drying varnish can restore the insulation to a safe value.
- **17.3.5** The winding mechanical supports should be checked for insulation quality and tightness. The ring binding on stator windings and the glass or wire-wound bands on rotating windings also should be checked.
- **17.3.6** Squirrel-cage rotors should be examined for excessive heating, for discolored or cracked rotor bars, or for cracked end rings, which can indicate open circuits or high-resistance points between the end rings and the rotor bars. The symptoms of such conditions are a slowing down under load and reduced starting torque. Brazing or welding broken bars or replacing bars should be done only by a qualified person or repair shop.

17.4 Brushes, Collector Rings, and Commutators.

In general, the machine should be observed while in operation, if possible, and any evidence of maloperation, such as sparking, chatter of brushes in the holder, cleanliness, should be noted as an aid to inspection repairs later.

- **17.4.1 Brushes.** Successful brush operation depends on the proper selection and maintenance of the brush most suitable for the service requirements.
- **17.4.1.1** Brushes in holders should be checked for fit and free play, and those that are worn down almost to the brush rivet should be replaced.
- **17.4.1.2** Brush studs that might have become loose from the drying and shrinking of insulating washers should be tightened.
- **17.4.1.3** Brush faces should be examined for chipped toes or heels and for heat cracks. Any that are damaged should be replaced.
- **17.4.1.4** A check of brush spring pressure should be made using the spring balance method. The spring pressure should be readjusted in accordance with the manufacturers' instructions.
- **17.4.1.5** The brush shunts should be checked to ensure that they are properly secured to the brushes and holders.
- **17.4.1.6** In some instances, if changes have occurred in the operation of equipment since installation, it might be necessary to check the following points that ordinarily would not be disturbed:
- (1) Brushes should be reset at the correct angle.
- (2) Brushes should be reset in the neutral plane.
- (3) Brushes should be properly spaced on the commutator.
- (4) The brush holders should be correctly staggered.
- (5) Brush holders should be properly spaced from the commutator.
- (6) A check should be made to ensure that the correct grade of brush as recommended by the manufacturer is being used.
- **17.4.2** Collector Rings. The surest means of securing satisfactory operation is maintaining the slip-ring surface in a smooth and concentric condition.
- **17.4.2.1** Insulation resistance should be checked between ring and shaft to detect cracked or defective bushings and collars.
- **17.4.2.2** A thorough cleaning is usually recommended, using a solvent cleaner and stiff brush.
- **17.4.2.3** Brush holder end play and staggering should be checked to prevent grooving of the rings during operation.
- 17.4.2.4 When the rings have worn eccentric with the shaft, the ring face should be

machined.

- **17.4.3** Commutators. In general, sources of unsatisfactory commutation are due to either improper assembly of current-collecting parts or faulty operating conditions.
- **17.4.3.1** Commutator concentricity should be checked with a dial gauge if sufficient evidence indicates that the commutator is out of round. A dial indicator reading of 0.001 in. on high-speed machines to several thousandths of an inch on low-speed machines can be considered normal.
- **17.4.3.2** The commutator surface should be examined for high bars, grooving, evidence of scratches, or roughness. In light cases, the commutator can be hand stoned, but for extreme roughness, turning of the commutator in the lathe is recommended.
- **17.4.3.3** A check should be made for high or pitted mica, and it should be undercut where deemed advisable
- **17.4.3.4** After conditioning a commutator, it should be completely clean, with every trace of copper, carbon, or other dust removed. (See ANSI/EASA AR100, Recommended Practice for the Repair of Rotating Electrical Apparatus.)

17.5 Bearings and Lubrication.

17.5.1 General. The bearings of all electrical equipment should be carefully inspected at scheduled periodic intervals to ensure maximum life. The frequency of inspection is best determined by a study of the particular operating conditions.

17.5.2 Sleeve Bearings.

- **17.5.2.1** In the older types, the oil should be drained, the bearing flushed, and new oil added at least every year.
- 17.5.2.2 The new type of sealed sleeve bearings requires very little attention, since oil level is frequently the only check needed for years of service.
- 17.5.2.3 Bearing currents on larger machines are usually eliminated by installing insulation under the pedestals or brackets or by insulating the shell of the bearing from its support housing. Elimination of this circulating current prevents pitting of the bearing and shaft. From a maintenance standpoint, a check should be made to ensure that the bearing insulation is not short-circuited by bearing temperature detectors or by lubricating-oil piping. This type of check might require uncoupling the machine or lifting the noninsulated end (after disassembling the bearing) of the shaft if both bearings are not insulated.

17.5.3 Ball Bearings and Roller Bearings.

- **17.5.3.1** External inspection at the time of greasing will determine whether the bearings are operating quietly and without undue heating.
- **17.5.3.2** The bearing housings can be opened to check the condition of the bearings and grease. The bearing and housing parts should be thoroughly cleaned and new grease added.
- **17.5.3.3** Where special instructions regarding the type or quantity of lubricant are Copyright NFPA

recommended by the manufacturer, they should be followed. In all cases, standard greasing practices should be strictly adhered to.

17.5.4 Hydrodynamic Thrust Bearings. Established lubrication practice for sleeve bearings applies in general for thrust bearings.

17.6 Cleaning and Drying Insulation Structures.

- 17.6.1 General. Refer to Section 8.7, Equipment Cleaning, for basic recommendations.
- **17.6.2** Cleaning. The recommended methods for cleaning electrical equipment are given in 17.6.2.1 and 17.6.2.2.
- 17.6.2.1 Apparatus that has been clogged with mud from dust storms, floods, or other unusual conditions require a thorough water washing, usually with a hose with pressure not exceeding 1.72 kPa (25 psi). Initial cleaning should be made with hot nonsaline water plus detergent, followed by a rinse with hot nonsaline water (no detergent). Chemical tests should be made to verify that the water is nonsaline. The machine should be completely dismantled, terminal boxes opened, and all corroded parts identified for repair or replacement. All components that are to be reused should be washed in a tank of hot, fresh, nonsaline water for at least four hours. The water tank should have a water inlet and outlet such that the water is constantly changing at a minimum rate of 10 gpm. All washed components should be dried at 85°C, or less, for 2 hours with continuous air circulation. Electrical insulation should be dried at 85°C for an additional 4 hours, followed by 105°C to 120°C for at least four more hours. The winding insulation resistance should be measured with a 500 volt insulation test instrument every 2 hours until the insulation resistance has stabilized. Allow the insulation to cool in a dry environment to avoid moisture absorption. Before being placed in service, the minimum recommended insulation resistance levels should be in accordance with ANSI/IEEE 43, Recommended Practice for Testing Insulation Resistance of Rotating Machinery. Sleeve bearings and housing should be cleaned, and antifriction bearings should be replaced with the same type as originally supplied.
- **17.6.2.2** Silicone-treated windings require special treatment, and the manufacturer should be contacted for advice.
- **17.6.3 Drying.** After being cleaned, stored, or shipped, apparatus should be dried before being placed in operation if tests indicate that the insulation resistance is below a safe minimum level. Two general methods are commonly used: external heat or internal heat. External heat is preferred because it is the safer application.
- **17.6.3.1** Where available, low-pressure steam can be used through radiators or steam pipes placed below the end windings with a temporary built-in enclosure to hold the heat.
- **17.6.3.2** Forced hot air can be heated electrically, by steam, or by open fire. This method is usually inefficient and costly unless built into the original installation.
- **17.6.3.3** Electric space heaters or infrared lamps can be used. They should be distributed so as not to overheat the insulation.
- **17.6.3.4** Coil insulation can be dried by circulating current through the winding. There is some hazard involved with this method because the heat generated in the inner parts is not Copyright NFPA

readily dissipated. This method should be followed only under competent supervision.

17.6.3.5 For synchronous motors, the short-circuit method is sometimes used by shorting the armature windings and driving the rotor, applying sufficient field excitation to give somewhat less than full-load armature current.

17.7 General Overhaul.

When indicated by visual inspection or tests, the equipment should be disassembled, and the winding should be cleaned, dried, and re-insulated or dipped and baked, and the bearings checked and relubricated. Rewinding or other repair decisions should be made at this time. Refer to Section 28.5 for information on methods of balance.

17.8 Records.

Sample record forms are shown in Annex F.

17.9 Testing.

See Chapter 21 for recommended tests.

Chapter 18 Lighting

18.1 Introduction.

A planned maintenance program is an essential part of any initial lighting design and recommendation. The maintenance of lighting systems is aimed at preserving the light-producing capability at the original design level. Dirt and lamp aging are the two major factors that reduce the light output.

18.2 Cleaning.

- **18.2.1** Lighting equipment lamps, reflectors, and lenses should be cleaned periodically. The cleaning interval depends on the amount and type of dirt in the air, although the design of the luminaire affects the rate at which dust collects. Periodic light meter readings can be taken and cleaning intervals established when the lighting level falls 15 percent to 20 percent, corrected for lamp lumen depreciation (aging).
- **18.2.1.1** Cleaning can economically be combined with group relamping, although in dirty environments cleaning should also be done between relampings. During spot relamping, the luminaires should be cleaned, and a separate planned cleaning program should be considered.
- **18.2.2** Washing is generally better than wiping. The cleaning procedure should be in accordance with the instructions of the luminaire manufacturer. Strong alkaline or abrasive cleaners should be avoided.

18.3 Relamping.

18.3.1 The longer a lamp remains in service, the less light it produces. The different types of lamps — filament, fluorescent, and high-intensity discharge — depreciate at different rates. Copyright NFPA

Since the life expectancies also differ, replacement intervals will vary.

- **18.3.2** The two general relamping procedures are spot relamping and group relamping. Spot relamping is the replacement of individual lamps as they fail. Group relamping is the replacement of all lamps at a time, typically at 70 to 80 percent of their rated average life or when the light output falls below the desired level. It is economical to clean the luminaires at the time of replacement. It is also advantageous to inspect the sockets, hangers, reflectors, and lenses at the time of lamp replacement. General replacement recommendations and study results are available from the major lamp manufacturers.
- **18.3.3** Normally, replacement lamps should be of the same type, color, wattage, and voltage as those being replaced. However, where energy conservation is being considered, replacements might warrant appropriate substitutes. Such substitute lamps should conform to the luminaire relamp label instructions, and the luminaire manufacturer should be consulted. Appropriate lumen levels should be maintained.
- **18.3.4** With group relamping, it is appropriate to consider conversion to more energy-efficient lighting. Operating costs can be reduced by a planned conversion to energy-saving lamps or more efficient ballasts. The Energy Policy Act of 1992 eliminated the availability of many full-wattage fluorescent and incandescent reflector lamps. The lamp manufacturer should be consulted for compliant energy-efficient replacements.

18.4 Voltage.

- **18.4.1** Lamps and ballasts are designed to provide rated-average life expectancy and light output at the rated operating voltage.
- **18.4.2** A filament lamp operating at 5 percent overvoltage will have its life expectancy reduced almost 50 percent, while the light output will be increased by about 18 percent. Five percent undervoltage operation will increase lamp life to about 195 percent, and light output will be reduced to about 84 percent.
- **18.4.3** Fluorescent lamp ballasts are designed for operation at nominal rated voltages of 120, 208, 240, 277, or 480 volts. The ranges of permissible variations are 110–126, 191–218, 220–252, 254–291, and 440–504 volts. Higher voltage shortens lamp and ballast life, while lower voltage can shorten lamp life and might cause uncertain starting.
- **18.4.4** High-intensity discharge lamp ballasts are designed for operation at 120, 208, 240, 277, and 480 volts. Line voltage higher than rated voltage shortens ballast and lamp life, while lower voltages reduce light output and might cause uncertain starting. If a multiple-voltage primary winding is used, the connected tap typically should match the line voltage. Some high-intensity discharge lamp ballasts are provided with taps to accommodate variations from rated voltage.

18.5 Lamps and Ballasts.

18.5.1 Fluorescent Lamps. Frequent starting might shorten lamp life and can damage a ballast. When blinking occurs, the lamps should be replaced. If that does not solve the problem, the ballast should be replaced.

- **18.5.1.1** Except as identified in Section 410.73 of NFPA 70, *National Electrical Code*, all fluorescent lamp ballasts for luminaires installed indoors are required to contain thermal protection and to be marked "Class P."
- **18.5.1.2** If inline fuseholders or fuses are used for individual luminaires, the luminaire fuseholder or fuse marking for replacement should be followed.
- **18.5.2 High-Intensity Discharge Lamps.** High-intensity discharge (HID) lamps include metal halide, mercury vapor, and high-pressure sodium lamps. These lamps typically are constructed of an outer bulb with an internal arc tube. Metal halide arc tubes operate at higher pressures and temperatures (approximately 1100°C). Metal halide arc tubes and outer bulbs can rupture, particularly if the lamp is misapplied. Metal halide lamp types are as follows:
- (1) O-type lamps are designed for open fixtures. They contain a shrouded arc tube strong enough to prevent lamp shattering.
- (2) E-type lamps are intended for use in enclosed fixtures. Such fixtures include integral containment barriers that enclose the lamp.
- (3) S-type lamps can be used in either open or enclosed fixtures. These lamps have no shroud. The design is limited to certain lamps between 350 watts and 1000 watts. The lamps must be operated vertically if they are used in open fixtures. S-type lamps in open fixtures offer the least protection in the event of a rupture.
- **18.5.2.1** Luminaires should be listed for the location and purpose. Lamp type and rating should be appropriate for the luminaire and should meet the manufacturer's specification.
- **18.5.2.2** Replacement lamps should conform to the luminaire relamp label instructions. Covers on enclosed luminaires should be replaced properly.
- **18.5.2.3** Metal halide systems should be turned off at least once a week for a minimum of 15 minutes. Failure to do this increases the risk of rupture.
- **18.5.2.4** To further reduce risk of rupture, metal halide fixtures should be group re-lamped at 70 percent of rated life.

18.6 Disposal.

Certain lamps and ballasts require special disposal considerations. Contact the lamp and ballast manufacturer for more information. (See Section 8.8.3.)

Chapter 19 Wiring Devices

19.1 Introduction.

This section covers the maintenance of attachment plugs, cord connectors, and receptacles rated not more than 200 amperes nor more than 600 volts.

19.1.1 The connection of equipment to supplies of different electrical ratings of current,

voltage, phase, or frequency can be hazardous or can cause damage to equipment. Therefore, attachment plugs, cord connectors, and equipment are provided with different ratings and configurations to prevent hazardous interconnection. See Annex G for configuration charts from NEMA WD 6, *Wiring Devices — Dimensional Specifications*.

- **19.1.2** The use of these devices for the connection of equipment provides for rapid removal and replacement and facilitates relocation.
- **19.1.3** Up to 60 amperes, all devices are tested for the capability of being connected or disconnected under full load. Devices rated above 60 amperes are marked as to whether they are listed for this mode of operation.
- **19.1.4** Use of these devices to disconnect some equipment under some load conditions, such as welders, and running or stalled motors can be hazardous. Other load-interrupting means intended for this purpose should be used.
- **19.1.5** If the plug or connector housing or interior is cracked or distorted, if pieces are missing or damaged, or if the pins or contacts are bent, missing, or discolored, the complete interior should be replaced. For particularly adverse environments, such as highly corrosive environments, high-temperature locations, or hazardous (classified) locations, devices specifically intended for the purpose should be used.
- **19.1.5.1** If the receptacle or plug insulation is cracked, broken, or discolored, the defective parts should be replaced.
- **19.1.5.2** Receptacle contacts should retain inserted plugs firmly. Corroded, deformed, or mechanically damaged contacts should be replaced. A check should be made for proper wire connections on receptacles and proper polarity of power connection, including the integrity of the equipment-grounding conductor.
- **19.1.5.3** If there is abnormal heating of the receptacle, plug, or connector insulation, a check should be made for loose terminations or insufficient pressure between contacts, and they should be corrected or replaced. If there is arc tracking or evidence of burning of the insulation or other damage, the insulation should be replaced.

19.2 Connector and Receptacle.

- 19.2.1 Plugs should fit firmly when inserted into the mating connector or receptacle. Insufficient mating force can result in contact erosion caused by arcing of the contacts or accidental disengagement. The connector or receptacle should be checked to ensure that adequate contact pressure is present. The complete interior should be replaced if there is discoloration of the housing or severe erosion of the contact.
- **19.2.1.1** When continuity of service is essential, consideration should be given to the installation of a mechanically held or interlocked assembly.
- **19.2.2** The equipment-grounding conductor (green insulation) of the cord must be attached to the grounding terminal of the device, thereby ensuring grounding continuity.
- **19.2.3** The face of the receptacle, plug, or connector should occasionally be thoroughly cleaned.

- **19.2.4** Cracked, bent, or broken spring doors or covers should be replaced.
- **19.2.5** All mounting and assembly screws should be present and checked to ensure that they are tight because they can provide grounding, prevent the entrance of adverse environmental products, and provide cable retention.
- **19.2.6** All gaskets, if used, should be inspected to determine if they are present and maintain the integrity of the enclosure.
- **19.2.7** To ensure proper selection of replacement parts, the nameplates should be kept clean and legible, and the instructions supplied with the product should be maintained on file, together with a list of the manufacturer's replacement parts.
- **19.2.8** Because the grounding circuit path for the equipment can include the external shell, pin, and sleeve devices, these surfaces should not be painted.
- **19.2.9** Control contacts are occasionally used in conjunction with power pins. These control contacts should be inspected to ensure that they make last and break first.
- 19.2.10 Devices used in hazardous (classified) locations require some additional inspections. All mechanically and electrically interlocked plugs and receptacles should be inspected for proper operation and for excessively worn or broken parts; they should be replaced as required. All parts and surfaces of these devices should be clean and free of foreign material or corrosion. Flame paths should be inspected to ensure that safe gaps are not exceeded and that no scratches are on the ground joints. All screws holding the receptacle to the body should be installed and tight. Covers and threaded openings should be properly tightened. These devices should be checked to make sure that the plug and receptacle marking agree with the present classification of the area in regard to the class, group, and division.

19.3 Receptacles.

- **19.3.1** If the receptacle is badly worn, cracked, or broken, or if contacts are exposed, the receptacle should be replaced.
- **19.3.2** Receptacle contacts should hold and retain inserted plugs firmly. If accidental disengagement of the plug from the receptacle is a recurring problem, the receptacle should be replaced. When continuity of service is essential, consideration should be given to the installation of a locking-type device.
- **19.3.3** A check should be made to ensure proper wire connections on receptacles and proper polarity of power connections, including the integrity of the equipment ground.
- **19.3.4** When replacing 15- and 20-ampere nongrounding-type receptacles, refer to Section 406.3(D) of NFPA 70, *National Electrical Code*.
- 19.3.5 If there is abnormal heating on the receptacle face, a check should be made for loose terminations, and if found, they should be corrected or replaced. If there is arc tracking or evidence of burning of the device or other damage, the receptacle should be replaced.

19.4 Adapters.

Adapters between locking and nonlocking configurations provide flexibility in obtaining power for maintenance functions. However, adapters should not be used to bypass the equipment ground, nor should adapters with pigtails be used.

19.5 General-Use Snap Switches.

- **19.5.1** Switches of the ac-dc (T-rated) type should not be used to control inductive loads such as fluorescent lighting or motors where the load exceeds 50 percent of the switch rating. Switches that are rated ac-only are permitted to control up to 100 percent of their rating for inductive loads or 80 percent of their rating for motor loads.
- 19.5.2 If the switch is broken or the mechanism does not function in a normal manner, the switch should be replaced. Where repeated abuse is incurred, consideration should be given to relocating the switch or replacing it with a switch having a guarded operating means or a switch with a low profile.
- **19.5.3** The switch should be firmly fastened to the box to ensure electrical and mechanical integrity.
- **19.5.4** If there is evidence of abnormal heating, the switch should be checked for loose terminals or switch malfunction and corrected or replaced.

19.6 Cover Plates.

- **19.6.1** All switches and receptacles should be installed with wall plates or covers suitable for the environment and location.
- **19.6.2** Cracked, bent, or broken wall plates or spring doors or covers should be replaced.

19.7 Boxes.

Boxes used for the containment of receptacles and switches should be rigidly secured in place. Locknuts and conduit fittings should be made up tight, and proper box-fill of conductors should be observed. Closures should be placed in unused knockout holes. Where boxes, particularly the surface-mounted type, sustain repeated abuse, consideration should be given to flush mounting or additional guarding means.

19.8 Pin and Sleeve Devices.

- 19.8.1 Heavy-Duty Industrial-Type Plugs, Cord Connectors, and Receptacles.
- **19.8.1.1 Introduction.** This section covers the maintenance of heavy-duty industrial-type plugs, cord connectors, and receptacles rated not more than 400 amperes nor more than 600 volts.
- **19.8.1.2** General. Plugs, cord connectors, and receptacles of this type are provided with different ratings and polarizations to prevent hazardous interconnection of different current ratings, voltages, or frequencies.
- **19.8.1.2.1** Devices connected to circuits having different voltages, frequencies, or types of current on the same premises should not be interchangeable.

- **19.8.1.2.2** Noninterchangeability is accomplished in these products by at least two methods. The first is the size and location of the contacts. The second is by keying arrangements of the plug sleeve and receptacle housing. By varying these parameters, sufficient variations can be obtained to accomplish noninterchangeability.
- **19.8.1.2.3** A detailed plan should be prepared specifying the devices, based first on performance requirements and then defining the specific configuration for each voltage, amperage, and frequency of use on the premises.
- **19.8.1.2.4** The use of these devices for the connection of equipment provides for rapid removal and replacement and facilitates relocation of electrical equipment.
- **19.8.1.2.5** Most of these assemblies are designed and listed to disconnect the equipment under full-load or locked-rotor currents. If they are not suitable, other load-interrupting means, such as interlocked receptacles, should be used.
- **19.8.1.3 Plugs.** Cord clamps and strain-relief fittings should be checked to ensure that they are tight and that the outer cord jacket is completely within the clamping area.
- **19.8.1.4** Abnormal heating on the plug surface might be caused by loose terminations, overloading, high ambients, or equipment malfunction. Insulators and contacts should be inspected visually for discoloration of the insulator or pitting of contacts. Inspection of other parts should be initiated if discoloration or pitting is observed. The assembly of individual conductors to terminals should be periodically checked. Individual conductor strands should be properly confined and terminations made tight. Conductor strands should not be soldered when used with binding head screws because that can cause overheating.
- **19.8.1.5** If the plug or connector housing or interior is cracked or distorted, if pieces are missing or damaged, or if the pins or contacts are bent, missing, or discolored, the complete interior should be replaced. For particularly adverse environments, such as highly corrosive environments, high-temperature locations, or hazardous (classified) locations, devices specifically intended for the purpose should be used.
- **19.8.1.5.1** If the receptacle or plug insulation is cracked, broken, or discolored, the defective parts should be replaced.
- **19.8.1.5.2** Receptacle contacts should retain inserted plugs firmly. Corroded, deformed, or mechanically damaged contacts should be replaced. A check should be made for proper wire connections on receptacles and proper polarity of power connections, including the integrity of the equipment-grounding conductor.
- **19.8.1.5.3** If there is abnormal heating of the receptacle, plug, or connector insulation, a check should be made for loose terminations or insufficient pressure between contacts, and they should be corrected or replaced. If there is arc tracking or evidence of burning of the insulation or other damage, the insulation should be replaced.

19.8.2 Connector and Receptacle.

19.8.2.1 Plugs should fit firmly when inserted into the mating connector or receptacle. Insufficient mating force can result in contact erosion caused by arcing of the contacts or accidental disengagement. The connector or receptacle should be checked to ensure that Copyright NFPA

adequate contact pressure is present. The complete interior should be replaced if there is discoloration of the housing or severe erosion of the contact. When continuity of service is essential, consideration should be given to the installation of a mechanically held or interlocked assembly.

- **19.8.2.2** The equipment-grounding conductor (green insulation) of the cord must be attached to the grounding terminal of the device, thereby ensuring grounding continuity.
- **19.8.2.3** Occasionally, the face of the receptacle, plug, or connector should be cleaned thoroughly.
- **19.8.2.4** Cracked, bent, or broken spring doors or covers should be replaced.
- **19.8.2.5** All mounting and assembly screws should be present and checked to ensure that they are tight, because they can provide grounding, prevent the entrance of adverse environmental products, and provide cable retention.
- **19.8.2.6** All gaskets, if used, should be inspected to determine if they are present and to maintain the integrity of the enclosure.
- **19.8.2.7** To ensure proper selection of replacement parts, the nameplates should be kept clean and legible, and the instructions supplied with the product should be maintained on file, together with a list of the manufacturer's replacement parts.
- **19.8.2.8** Because the grounding circuit path for the equipment can include the external shell, pin and sleeve devices, these surfaces should not be painted.
- **19.8.2.9** Control contacts are occasionally used in conjunction with power pins. These control contacts should be inspected to ensure that they make last and break first.
- 19.8.2.10 Devices used in hazardous (classified) locations require some additional inspections. All mechanically and electrically interlocked plugs and receptacles should be inspected for proper operation and for excessively worn or broken parts, which should be replaced as required. All parts and surfaces of these devices should be clean and free of foreign material or corrosion. Flame paths should be inspected to ensure that safe gaps are not exceeded and that no scratches are on the ground joints. All screws holding the receptacle to the body should be installed and tight. Covers and threaded openings should be properly tightened. These devices should be checked to make sure that the plug and receptacle marking agree with the present classification of the area in regard to the class, group, and division.

Chapter 20 Portable Electrical Tools and Equipment

20.1 Introduction.

20.1.1 Dependable performance and long service life of power tools is becoming more important as the need for mechanization and the use of power tools increase. A plant's entire inventory of portable tools can be kept in top operating condition for maximum production quality and cost efficiency with planned routine and periodic inspection.

- **20.1.2** There are many and varied types of portable power tools and many and varied causes of power tool failure. Therefore, the procedures for their maintenance can be general recommendations only. Variations exist and depend on the type of tool and the particular conditions of its use. It is strongly recommended that the information on proper use and maintenance given in the tool manufacturer's use and care manual, supplied with each tool, be carefully followed.
- **20.1.3** Periodic electrical testing will uncover many operating defects, and their immediate correction will ensure safe operation and prevent breakdown and more costly repairs. This testing and the related maintenance should be systematic. A visual inspection is recommended before and after each use: when the tool is issued and again when it is returned to the tool crib.

20.2 Employee Training.

- **20.2.1** Employee training in the proper care and use of portable power tools is an important part of preventive maintenance. Employees should be given instructions in selecting the proper tool for the job and the limitations of the tool. Using an underpowered tool for the work load can cause overloading.
- **20.2.2** Employees should be trained to recognize obvious defects such as cut, frayed, spliced, or broken cords; cracked or broken attachment plugs; and missing or deformed grounding prongs. Such defects should be reported immediately.
- **20.2.3** Employees should be instructed to report all shocks immediately, no matter how minor, and to cease using the tool. Tools that cause shocks should be examined and repaired before further use.

20.3 Maintenance.

The maintenance procedure in 20.3.1 through 20.3.3.2 are general recommendations. The best source for maintenance information is the original manufacturer.

- **20.3.1 Periodic Inspection of Crucial Wear Points.** Brushes and commutators should be inspected periodically. This is easily accomplished by removal of brush-holder plugs or inspection plates, depending on the construction of the tool. Brushes worn down to 50 percent of their original size should be replaced. When a brush is replaced, always be sure to use the manufacturer's original equipment.
- **20.3.2** Excessive Dirt Accumulation. All universal motors are fan ventilated to prevent excessive heat. Even though many tools have filters and deflectors to prevent destructive material from damaging the motor, a small amount of it will pass through. Excessive buildup affects the brush operation and reduces the air volume necessary to cool the motor. When necessary, a tool used in a normal environment should be blown out with low-pressure, dry-compressed air. More frequent specialized maintenance should be considered if the atmosphere is heavy in abrasives or conducting dusts.
- **20.3.3 Insufficient or Improper Lubrication.** Lubricant inspection is recommended at frequent intervals to ensure sufficient lubrication to prevent wear to mechanical parts. Dirty

lubricants should be removed and replaced. Because lubricant varies from tool to tool, it is recommended that proper lubricant be obtained from the manufacturer or the manufacturer's distribution outlet.

- **20.3.3.1** Manufacturers carefully match lubricants to be compatible with speeds, heat, seals, bearings, and pressure to ensure long gear and mechanism life. Substitutions can damage the tool and invalidate the warranty.
- **20.3.3.2** The wrong amount of lubricant can cause serious problems. Too little means that surfaces are not adequately covered, and excess wear will result. Too much lubricant can cause excess pressure in the gear case and eventually ruin seals.

20.4 Cord and Attachment Plug Care.

- **20.4.1** The cord of an electric power tool is its lifeline. It should be kept free of oil, grease, and other material that might ruin the rubber cover. Tangling knots or dragging across sharp surfaces should be avoided. The cord should not be used as a towline to carry or drag the tool.
- **20.4.2** All power tools, unless they are double insulated and so marked, are required to be grounded through an additional grounding conductor in the cord and the grounding prong of the attachment plug. The integrity of this grounding circuit is necessary for the protection of life and should be inspected visually before each use. Experience has shown that the grounding prongs of attachment caps are frequently cut off for use in ungrounded receptacles. This practice should not be permitted.
- **20.4.3** If a cord is cut, broken, spliced, or frayed, the attachment plug is damaged, or the grounding prong is removed, it should be immediately withdrawn from service until it can be repaired. Cords can be replaced in their entirety, or a damaged cord can be repaired by cutting out the damaged portion and applying a plug and connector to rejoin the two sections. Replacement cords should be of the same type and conductor size and suitable for use.
- **20.4.4** To avoid accidents, the green insulated conductor is to be used only for connecting the frame of the tool to the equipment-grounding terminal of the attachment plug meeting the conditions of NFPA 70, *National Electrical Code*, Section 400.24. It should not be used for any other purpose.

20.5 Extension Cords.

Before an extension cord is placed into service, the plug and connector should be checked for proper polarity, and the grounding conductor should be tested for continuity and integrity. Extension cords of the proper conductor size should be used to avoid excessive voltage drop, which can result in poor operation and possible damage to the tool. Table 20.5 lists the recommended sizes of extension cords

Table 20.5 Recommended Extension Cord Sizes for Portable 1

_		Nameplate Ampere Rating		
0-2.0	2.1-3.4	3.5-5.0	5.1-7.0	

voltage drop, which can result in poor operation and possible damage to the tool. Table 20.3 lists the recommended sizes of extension cords

Table 20.5 Recommended Extension Cord Sizes for Portable 1

					Nameplate Ampere Rating			
	0-2.0		2.1–3.4		3.5-5.0		5.1-7.0	
Extension Cord Length (ft)	115 V	230 V	115 V	230 V	115 V	230 V	115 V	230 V
25	18	18	18	18	18	18	18	18
50	18	18	18	18	18	18	16	18
75	18	18	18	18	16	18	14	16
100	18	18	16	18	14	16	12	14
200	16	18	14	16	12	14	10	12
300	14	16	12	14	10	14	8	12
400	12	16	10	14	8	12	6	10
500	12	14	10	12	8	12	6	10
600	10	14	8	12	6	10	4	8
800	10	12	8	10	6	8	4	6
1000	8	12	6	10	4	8	2	6

Notes:

20.6 Major Overhauls.

Major overhauls and repairs should be performed by the manufacturer. Large companies that use power tools and that prefer to do their own repairs and overhaul should obtain the necessary parts, schematics, connection diagrams, lubricant charts, and other technical information from the manufacturer.

20.7 Leakage Current Testing.

Portable and cord-connected equipment should be tested periodically for the amount of leakage current present to help ensure against shock hazards.

Chapter 21 Testing and Test Methods

21.1 Introduction.

This chapter covers the tests ordinarily used in the field to determine the condition of various elements of an electrical power distribution system. The data obtained in these tests provide information that is used as follows:

(1) To determine whether any corrective maintenance or replacement is necessary or desirable

⁽¹⁾ Size is based on current equivalent to 150 percent of full load of tool and a loss in voltage of not over 5 vol

⁽²⁾ If voltage is already low at the source (outlet), voltage should be increased to standard, or a larger cord that voltage drop.

- (2) To ascertain the ability of the element to continue to perform its design function adequately
- (3) To chart the gradual deterioration of the equipment over its service life

21.2 Acceptance Tests and Maintenance Tests.

- **21.2.1** Acceptance Tests. Acceptance tests are tests that are performed on new equipment, usually after installation, prior to energization. These tests determine whether a piece of equipment is in compliance with the purchase specification and design intent and also establish test benchmarks that can be used as references during future tests. Acceptance tests are also valuable in ensuring that the equipment has not been damaged during shipment or installation. In addition to the tests that are performed, an acceptance program should include a comprehensive visual inspection and an operational check of all circuitry and accessory devices.
- **21.2.2 Routine Maintenance Tests.** Routine maintenance tests are tests that are performed at regular intervals over the service life of equipment. These tests normally are performed concurrently with preventive maintenance on the equipment.
- **21.2.3 Special Maintenance Tests.** Special maintenance tests are tests performed on equipment that is thought or known to be defective or equipment that has been subjected to conditions that possibly could adversely affect its condition or operating characteristics. Examples of special maintenance tests are cable fault–locating tests or tests performed on a circuit breaker that has interrupted a high level of fault current.
- **21.2.4 Pretest Circuit Analysis.** An analysis of the circuit to be tested should be made prior to the testing to assess the potential meaning of the test results.

21.3 As-Found and As-Left Tests.

- **21.3.1 As-Found Tests.** As-found tests are tests performed on equipment on receipt or after it has been taken out of service for maintenance but before any maintenance work is performed.
- **21.3.2 As-Left Tests.** As-left tests are tests performed on equipment after preventive or corrective maintenance and immediately prior to placing the equipment back in service.
- **21.3.3** Correlation of As-Found and As-Left Tests. When equipment is taken out of service for maintenance, performance of both an as-found and an as-left test is recommended. The as-found tests will show any deterioration or defects in the equipment since the last maintenance period and, in addition, will indicate whether corrective maintenance or special procedures should be taken during the maintenance process. The as-left tests will indicate the degree of improvement in the equipment during the maintenance process and will also serve as a benchmark for comparison with the as-found tests during the next maintenance cycle.

21.4 Frequency of Tests.

Most routine testing can best be performed concurrently with routine preventive

maintenance, because a single outage will serve to allow both procedures. For that reason, the frequency of testing generally coincides with the frequency of maintenance. The optimum cycle depends on the use to which the equipment is put and the operating and environmental conditions of the equipment. In general, this cycle can range from 6 months to 3 years, depending on conditions and equipment use. The difficulty of obtaining an outage should never be a factor in determining the frequency of testing and maintenance. Equipment for which an outage is difficult to obtain is usually the equipment that is most vital in the operation of the electrical system. Consequently, a failure of this equipment would most likely create the most problems relative to the continued successful operation of the system. In addition to routine testing, tests should be performed any time equipment has been subjected to conditions that possibly could have caused it to be unable to continue to perform its design function properly.

21.5 Special Precautions and Safety.

- **21.5.1** Many tests on electrical equipment involve the use of high voltages and currents that are dangerous, both from the standpoint of being life hazards to personnel and because they are capable of damaging or destroying the equipment under test. Adequate safety rules should be instituted and practiced to prevent injury to personnel, both personnel who are performing the tests and personnel who might be exposed to the hazard. Also, the test procedures used should be designed to ensure that no intentional damage to equipment results from the testing process.
- 21.5.2 It should be recognized that, as the name implies, overpotential or high-potential testing is intended to stress the insulation structure above that of normal system voltage. The purpose of the test is to establish the integrity of the insulation to withstand voltage transients associated with switching and lightning surges and hence reduce the probability of in-service equipment failures. Direct voltage over-potential testing is generally considered a controlled, nondestructive test in that an experienced operator, utilizing a suitable test set, can often detect marginal insulation from the behavior of measured current. It is therefore possible, in many cases, to detect questionable insulation and plan for replacement without actually breaking it down under test. Unfortunately, some insulations might break down with no warning. Plans for coping with this possibility should be included in the test schedule.
- **21.5.3** Low-voltage insulation testing generally can be done at the beginning of the planned maintenance shutdown. In the event of an insulation failure under test, maximum time would be available for repair prior to the scheduled plant start-up. Equipment found in wet or dirty condition should be cleaned and dried before high-potential testing is done, since a breakdown could damage the equipment.
- **21.5.4** Low-voltage circuit breakers, which require very high interrupting ratings, are available with integral current-limiting fuses. Although the fuse size is selected to override without damage to the time–current operating characteristic of the series trip device, it is desirable to bypass or remove the fuse prior to applying simulated overload and fault current.

21.6 Qualifications of Test Operators.

If a testing program is to provide meaningful information relative to the condition of the

equipment under test, the person evaluating the test data should be assured that the test was conducted in a proper manner and that all the conditions that could affect the evaluation of the tests were considered and any pertinent factors reported. The test operator, therefore, should be thoroughly familiar with the test equipment used in the type of test to be performed and also should be sufficiently experienced to be able to detect any equipment abnormalities or questionable data during the performance of the tests.

21.7 Test Equipment.

It is important in any test program to use the proper equipment to perform the required tests. In general, any test equipment used for the calibration of other equipment should have an accuracy at least twice the accuracy of the equipment under test. The test equipment should be maintained in good condition and should be used only by qualified test operators. All test equipment should be calibrated at regular intervals to ensure the validity of the data obtained. In order to get valid test results, it might be necessary to regulate the power input to the test equipment for proper waveform and frequency and to eliminate voltage surges.

21.8 Forms.

If a testing and maintenance program is to provide optimum benefits, all testing data and maintenance actions should be recorded on test circuit diagrams and forms that are complete and comprehensive. It is often useful to record both test data and maintenance information on the same form. A storage and filing system should be set up for these forms that will provide efficient and rapid retrieval of information regarding previous testing and maintenance on a piece of equipment. A well-designed form also serves as a guide or a checklist of inspection requirements. Samples of typical forms are included in Annex F and are summarized as follows:

- (1) Figure F.1, Typical Work Order Request Form
- (2) Figure F.2, Typical Air Circuit Breaker Inspection Record
- (3) Figure F.3, Typical Air Circuit Breaker Test and Inspection Report
- (4) Figure F.4, Typical Medium-Voltage Vacuum Breaker Form
- (5) Figure F.5, Typical Oil Circuit Breaker Test Report
- (6) Figure F.6, Typical Disconnect Switch Test Report
- (7) Figure F.7, Typical Low-Voltage Circuit Breaker 5-Year Tests Form
- (8) Figure F.8, Typical Electrical Switchgear–Associated Equipment Inspection Record
- (9) Figure F.9, Typical Current or Potential Transformer Ratio Test Report
- (10) Figure F.10, Typical Overload Relay Test Report
- (11) Figure F.11, Typical Ground-Fault System Test Report
- (12) Figure F.12, Typical Instrument/Meter Calibration and Test Report
- (13) Figure F.13, Typical Watt-Hour Meter Test Sheet

- (14) Figure F.14, Typical Panelboard/Circuit Breaker Test Report
- (15) Figure F.15, Typical Transformer Test and Inspection Report
- (16) Figure F.16, Typical Transformer (Dry Type) Inspection Record
- (17) Figure F.17, Typical Transformer (Liquid Filled) Inspection Record
- (18) Figure F.18, Typical Transformer Oil Sample Report
- (19) Figure F.19, Typical Transformer Oil Trending Report
- (20) Figure F.20, Typical Transformer Insulation Resistance Record
- (21) Figure F.21, Typical Battery Record
- (22) Figure F.22, Typical Engine Generator Set Inspection Checklist
- (23) Figure F.23, Typical Automatic Transfer Switch Report
- (24) Figure F.24, Typical Uninterruptible Power Supply Inspection Checklist
- (25) Figure F.25, Typical Back-Up Power System Inspection Checklist
- (26) Figure F.26, Typical Insulation Resistance–Dielectric Absorption Test Sheet for Power Cable
- (27) Figure F.27, Typical Cable Test Sheet
- (28) Figure F.28, Typical Insulation Resistance Test Record
- (29) Figure F.29, Typical Insulation Resistance Test Record for Rotating Machinery
- (30) Figure F.30, Typical Motor Test Information Form
- (31) Figure F.31, Typical Ground System Resistance Test Report
- (32) Figure F.32, Typical Ground Test Inspection Health Care Facilities
- (33) Figure F.33, Typical Line Isolation Monitor Test Data Health Care Facilities
- (34) Figure F.34, Typical Torque Value Record
- (35) Figure F.35, Typical Main Power Energization Checklist

21.9 Insulation Testing.

21.9.1 Introduction.

21.9.1.1 General. Insulation is the material between points of different potential in an electrical system that prevents the flow of electricity between those points. Insulation materials can be in the gaseous, liquid, or solid form. A vacuum is also a commonly used insulation medium. The failure of the insulation system is the most common cause of problems in electrical equipment. This is true on both high-voltage and low-voltage systems. Insulation tests are tests used to determine the quality or condition of the insulation systems of electrical equipment. Both alternating current and direct current are used in insulation testing.

21.9.1.2 Reasons for Insulation Failure. Liquid and solid insulating materials with organic content are subject to natural deterioration due to aging. This natural deterioration is accelerated by excessive heat and moisture. Heat, moisture, and dirt are the principal causes of all insulation failures. Insulation can also fail due to chemical attack, mechanical damage, sunlight, and excessive voltage stresses.

21.9.2 Direct-Current (dc) Testing — Components of Test Current.

- **21.9.2.1** When a dc potential is applied across an insulation, the resultant current flow is composed of several components as follows:
- (1) Capacitance-charging current
- (2) Dielectric-absorption current
- (3) Surface leakage current
- (4) Partial discharge (corona current)
- (5) Volumetric leakage current
- 21.9.2.2 The capacitance-charging current and the dielectric-absorption current decrease as the time of application of the voltage increases. The test readings of resistance or current should not be taken until these two currents have decreased to a low value and will not significantly affect the reading. The time lapse between the application of voltage and the taking of the reading should be reported as part of the test data. The surface leakage current is caused by conduction on the surface of the insulation between the points where the conductor emerges from the insulation and points of ground potential. This current is not desired in the test results (except for as-found tests) and can be eliminated by carefully cleaning the leakage paths described. Corona current occurs only at high values of test voltage. This current is caused by the overstressing of air at sharp corners or points on the conductor. This current is not desired in the test results and can be eliminated by installing stress-control shielding at such points during the test. Volumetric leakage current is the current that flows through the volume insulation itself. It is the current that is of primary interest in the evaluation of the condition of the insulation.
- **21.9.2.3 Insulation-Resistance Testing.** In an insulation-resistance test, an applied voltage, from 100 volts to 5000 volts, supplied from a source of constant potential, is applied across the insulation. The usual potential source is a megohmmeter, either hand or power operated, which indicates the insulation resistance directly on a scale calibrated in megohms. The quality of the insulation is evaluated based on the level of the insulation resistance.
- **21.9.2.3.1** The insulation resistance of many types of insulation varies with temperature, so the data obtained should be corrected to the standard temperature for the class of equipment under test. Published charts are available for this purpose.
- **21.9.2.3.2** The megohm value of insulation resistance obtained is inversely proportional to the volume of insulation being tested. For example, a cable 304.8 m (1000 ft) long would be expected to have one-tenth the insulation resistance of a cable 30.48 m (100 ft) long if all other conditions were identical.

21.9.2.3.3 The insulation-resistance test is relatively easy to perform and is a useful test used on all types and classes of electrical equipment. Its main value lies in the charting of data from periodic tests, corrected for temperature, over the life of the equipment so that deteriorative trends might be detected.

21.9.2.4 Dielectric Absorption.

- **21.9.2.4.1** In a dielectric-absorption test, a voltage supplied from a source of constant potential is applied across the insulation. The range of voltages used is much higher than the insulation-resistance test and can exceed 100,000 volts. The potential source can be either a megohmmeter, as described in 21.9.2.3, or a high-voltage power supply with an ammeter indicating the current being drawn by the specimen under test. The voltage is applied for an extended period of time, from 5 minutes to 15 minutes, and periodic readings are taken of the insulation resistance or leakage current.
- **21.9.2.4.2** The test data are evaluated on the basis that if an insulation is in good condition, its apparent insulation resistance will increase as the test progresses. Unlike the insulation-resistance test, the dielectric-absorption test results are independent of the volume and the temperature of the insulation under test.
- **21.9.2.5 Polarization Index.** The polarization index is a specialized application of the dielectric-absorption test. The index is the ratio of insulation resistance at two different times after voltage application, usually the ratio of the insulation resistance at 10 minutes to the insulation resistance at 1 minute. The use of polarization-index testing is usually confined to rotating machines, cables, and transformers. A polarization index less than 1.0 indicates that the equipment needs maintenance before being placed in service. References are available for polarization indexes for various types of equipment.

21.9.2.6 dc High-Potential Testing.

21.9.2.6.1 General. A dc high-potential test consists of applying voltage across an insulation at or above the dc equivalent of the 60 Hz operating crest voltage. This test can be applied either as a dielectric-absorption test or a step-voltage test. A dc high-potential test is an appropriate method for an acceptance test for most equipment.

CAUTION: It is strongly recommended that dc high-potential testing should not be performed as a maintenance test on extruded insulated power cables because of the possibility of damage to the cable.

- **21.9.2.6.1.1 Dielectric-Absorption Test.** When applied as a dielectric-absorption test, the maximum voltage is applied gradually over a period from 60 seconds to 90 seconds. The maximum voltage is then held for 5 minutes with leakage-current readings being taken each minute.
- **21.9.2.6.1.2 Step-Voltage Test.** When applied as a step-voltage test, the maximum voltage is applied in a number of equal increments, usually not fewer than eight, with each voltage step being held for an equal interval of time. The time interval between steps should be long enough to allow the leakage current to reach stability, approximately 1 or 2 minutes. A leakage-current reading is taken at the end of each interval before the voltage is raised to the next level. A linear increase in leakage current is expected, and it should stabilize or decrease Copyright NFPA

from the initial value at each step. A plot of test voltage versus leakage current or insulation resistance is drawn as the test progresses. A nonlinear increase in leakage current can indicate imminent failure, and the test should be discontinued. After the maximum test voltage is reached, a dielectric-absorption test can be performed at that voltage, usually for a 5-minute period.

- **21.9.2.6.1.3 Proper Discharge.** At the end of each test, the test equipment control should be turned to zero voltage and the voltage should be monitored. When the voltage is reduced to 20 percent or lower of the maximum test voltage, the metallic components should be grounded in accordance with test procedures or for at least 30 minutes.
- **21.9.2.6.2 Arrangement Before Testing.** Before equipment insulation is tested, it should be cleaned, inspected, and repaired as necessary to minimize leakage currents. The same action should be taken for cable terminations. Surge arresters should be disconnected.
- **21.9.2.6.2.1** When cables are being tested, all transformers, switches, fuse cutouts, switchgear, and so on, should be disconnected wherever practicable. Thus, if significant leakage currents are encountered, it will be known that those currents are in the cable insulation and not in equipment connected thereto. If such disconnection is impractical, it might be necessary to limit the maximum test voltage to the level that such equipment can withstand without damage.
- **21.9.2.6.2.2** High leakage currents in cables might be due to improper preparation of their ends before the cable terminations were installed, thereby allowing high surface leakage across them.
- **21.9.2.6.3 Acceptance Test Voltages.** The maximum permissible test voltages for acceptance tests performed on cables are listed in the Insulated Power Cable Engineers Association's (IPCEA) standards for rubber, thermoplastic, and varnished cloth insulations, and in the Association of Edison Illuminating Companies' (AEIC) standards for solid-type impregnated-paper insulation. (See ANSI/IEEE 400, Guide for Making High-Direct-Voltage Tests on Power Cable Systems in the Field.)

21.9.2.6.4 Maintenance Test Voltages.

- **21.9.2.6.4.1** Care should be taken in choosing the appropriate test voltage for routine maintenance tests on cables that have been in service for long periods. If the level selected is too low, marginal weak spots might not be revealed; if the level is too high, damage to the insulation might result. Ordinarily, routine maintenance tests on nonextruded power cables are conducted with a maximum test voltage at or below 75 percent of the maximum test voltage permitted for acceptance testing. (See ANSI/IEEE 400, Guide for Making High-Direct-Voltage Tests on Power Cable Systems in the Field.) Refer to the Caution statement in 21.9.2.6.1.
- **21.9.2.6.4.2** The test voltage should be applied from phase-to-ground on each conductor with the other conductors, shields, and metallic jackets also connected to ground. The dc to

Voltage permitted for acceptance testing. (See AIVSI/IEEE 400, Guiae for Making High-Direct-Voltage Tests on Power Cable Systems in the Field.) Refer to the Caution statement in 21.9.2.6.1.

21.9.2.6.4.2 The test voltage should be applied from phase-to-ground on each conductor with the other conductors, shields, and metallic jackets also connected to ground. The dc to ac (rms) test voltage ratios ordinarily used are listed in Table 21.9.2.6.4.2.

Table 21.9.2.6.4.2 dc to ac (rms) Test Voltage Ratios

Cable Insulation	Ratio	
Rubber or rubberlike, ozone resisting	3.0 to 1	
Rubber or rubberlike, other than ozone	2.2 to 1	
resisting		
Impregnated paper, solid type	2.4 to 1	
Varnished cloth	2.0 to 1	
Polyethylene	3.0 to 1	

21.9.2.6.5 Step-Voltage Testing. When the step-voltage type of test is used, the condition of the cable should be evaluated on the basis of the following:

- (1) The absolute values of insulation resistance
- (2) The slope of the curve of voltage versus insulation resistance
- (3) Whether a significant downward "knee" appears in the curve at the higher levels of test voltage

21.9.3 Alternating-Current (ac) Testing.

- **21.9.3.1 High-Potential Testing.** An ac high-potential test is made at voltages above the normal system voltage for a short time, such as 1 minute. The test voltages to be used vary depending on whether the device or circuit is low or high voltage, whether it is a primary or control circuit, and whether it was tested at the factory or in the field. Manufacturers' instructions and the applicable standards should be consulted for the proper values.
- **21.9.3.2 Insulation Power-Factor Testing.** When power-factor testing is performed, the criteria in 21.9.3.2.1 through 21.9.3.2.7 should be utilized.
- **21.9.3.2.1 General.** The power factor of an insulation is the cosine of the angle between the charging current vector and the impressed voltage vector when the insulation system is energized with an ac voltage. In other words, it is a measure of the energy component of the charging current. The term *power-factor testing* means any testing performed to determine the power factor of an insulation system. For low values of power factor, the dissipation factor can be assumed to be the same as the power factor. Power-factor testing is a useful tool in evaluating the quality of insulation in power, distribution, and instrument transformers; circuit breakers; rotating machines; cables; regulators; and insulating liquids. The equipment to be tested should be isolated from the rest of the system, if practical, and all bushings or terminations should be cleaned and dried. The test should be conducted when the relative humidity is below 70 percent and when the insulation system is at a temperature above 0°C (32°F). Data obtained at relative humidity above 70 percent can be interpreted to recognize the higher humidity.
- **21.9.3.2.2 Test Equipment.** The test equipment used should be such that the power factor or dissipation factor can be read directly or such that the charging volt-amperes and the dielectric losses can be read separately so that a ratio can be computed.
- (1) The test equipment should also have sufficient electromagnetic interference cancellation devices or shielding to give meaningful test results even when used in an area of strong interference, such as an energized substation.
- (2) The test equipment should be able to produce and maintain a sinusoidal wave shape while performing the test at 60 Hz and should be of sufficient capacity and voltage range to perform the test at a minimum voltage of 2500 volts or the operating voltage of the equipment under test, whichever is lower, but in no case less than 500 volts.

21.9.3.2.3 Transformer Tests.

- **21.9.3.2.3.1** On transformer tests, the power factor of the following should be obtained:
- (1) Each winding with respect to ground
- (2) Each winding with respect to every other winding
- **21.9.3.2.3.2** In addition to the provisions of 21.9.3.2.3.1, tests should be made of each bushing with a rated voltage above 600 volts, using either the power factor or capacitance tap if the bushing is so equipped or a "hot-collar" test using a test electrode around the outside shell of the bushing.

21.9.3.2.4 Circuit Breaker Tests.

- **21.9.3.2.4.1** On circuit breakers, the power factor of the following should be obtained:
- (1) Each line-side and load-side bushing assembly complete with stationary contacts and interrupters, with the circuit breaker open
- (2) Each pole of the circuit breaker with the breaker closed
- **21.9.3.2.4.2** In addition to the provisions of 21.9.3.2.4.1, tests should be made of each bushing as described in 21.9.3.2.3.2. Air magnetic circuit breakers should be tested both with and without arc chutes.
- **21.9.3.2.5 Rotating Machine Tests.** On ac rotating machines, the neutral connection on the stator should be removed, and a test of each winding with respect to the other two windings and ground should be obtained.

21.9.3.2.6 Cable Tests.

- **21.9.3.2.6.1** For cables, the power factor of each conductor with respect to ground should be obtained, and a hot-collar test should be made of each pothead or termination.
- **21.9.3.2.6.2** Power-factor testing of insulating oil should be performed in accordance with ASTM D 924, *Standard Test Method for Dissipation Factor (or Power Factor) and Relative Permittivity (Dielectric Constant) of Electrical Insulating Liquids.*
- **21.9.3.2.7 Data Evaluation.** Evaluation of the data obtained should be based on the following:
- (1) Industry standards for the particular type of equipment tested
- (2) Correlation of data obtained with test data from other similar units tested
- (3) Comparison of data with previous test data on the same equipment (if available)
- **21.9.4 Partial Discharge (PD) Testing.** The insulation system of a medium-voltage distribution system has partial discharges into air, across surfaces, and through the insulating material. These discharges emit energy in various parts of the electromagnetic spectrum. The severity of these discharges is an indication of the "health" of the insulation system. PD testing measures these discharges off-line or on-line and compares them to a database of discharge signatures to determine the severity.

- **21.9.4.1 Different Methods of Measuring.** Some of the different methods of measuring PD are as follows:
- (1) Radio frequency interference (RFI) detection uses an RF sensor to measure PD pulses occurring in an insulation system.
- (2) Electromagnetic detection can be made with oscilloscopes combined with other detectors.
- (3) Acoustical detection uses an ultrasonic sensor to detect PD. This method is usually employed on transformers, switchgear, motors, bushings, or stand-off insulators.
- (4) Ultraviolet detection uses a camera that "sees" discharges into air or across surfaces.
- **21.9.4.2 Off-Line Versus On-Line Method for Cable Testing.** Off-line testing can more accurately locate PD sites in an insulation system. Off-line testing involves shutdown and disconnection of cable segments. The advantage of on-line testing is that the system does not have to be shut down.

21.10 Protective Device Testing.

21.10.1 Fuses.

- **21.10.1.1** Fuses can be tested with a continuity tester to verify that the fuse is not open. Resistance readings can be taken using a sensitive 4-wire instrument such as a Kelvin bridge or micro-ohmmeter. Fuse resistance values should be compared against values recommended by the manufacturer.
- **21.10.1.2** Where manufacturers' data are not readily available, resistance deviations of more than 50 percent for identical fuses should be investigated.
- **21.10.2** Low-Voltage Circuit Breakers General. Low-voltage circuit breakers generally can be divided into two categories depending on the applicable industry design standards:
- (1) Molded-case circuit breakers are designed, tested, and evaluated in accordance with ANSI/UL 489, *Molded-Case Circuit Breakers, Molded-Case Switches and Circuit Breaker Enclosures*.
- (2) Low-voltage power circuit breakers are designed, tested, and evaluated in accordance with NEMA SG 6, *Power Switching Equipment*, and ANSI/IEEE C37.13, *Standard for Low-Voltage AC Power Circuit Breakers Used in Enclosures*.

21.10.2.1 Field Testing in General.

21.10.2.1.1 The procedures outlined in Sections 2 and 3 of the NEMA publication listed in 21.10.2(2) are intended for checking the condition and basic electrical operation of circuit breakers, but they should not be considered as calibration tests or comparisons to laboratory tests. Section 3 outlines factors to be considered if laboratory accuracy is to be approached. If checking indicates maloperation, the circuit breaker should be removed and sent to the manufacturer for investigation and test. Checking the condition and basic electrical operation of circuit breakers can be accomplished by performing field testing, but these tests should not be considered as calibration tests or comparisons to laboratory tests. The applicable industry

field evaluation standards include the following:

- (1) For molded-case circuit breakers, inspection and preventative maintenance performed in accordance with NEMA AB 4, Guidelines for Inspection and Preventive Maintenance of Molded-Case Circuit Breakers Used in Commercial and Industrial Applications; NETA Acceptance Testing Specifications for Electrical Power Distribution Equipment and Systems; and NETA Maintenance Testing Specifications for Electrical Power Distribution Equipment and Systems.
- (2) For low-voltage power circuit breakers, evaluation in accordance with ANSI/IEEE C37.13, Standard for Low-Voltage AC Power Circuit Breakers Used in Enclosures; NETA Acceptance Testing Specifications for Electrical Power Distribution Equipment and Systems; and NETA Maintenance Testing Specifications for Electrical Power Distribution Equipment and Systems.
- **21.10.2.1.2** Where field testing is required, it is recommended that a qualified field service team be employed and that instructions be followed as recommended by the appropriate standard and manufacturer's instructions. If the evaluation of the circuit breaker indicates results that differ significantly from the recommended values, the circuit breaker should be removed and sent to the manufacturer for investigation and test. It is not advisable that repairs be attempted in the field.
- **21.10.2.2 Assistance.** Where needed, manufacturers, electrical contractors, and other competent service organizations generally provide field-test services; some are equipped to perform field tests on any make of unit. Such service is more practicable where accurate tests are required and for all tests on circuit breakers of 600-ampere capacity and above. This is, in part, due to the need for special heavy loading equipment and the difficulty of making suitable testing connections.
- **21.10.2.3** Field Testing of Circuit Breakers Employing Solid-State Trips. Breakers employing solid-state trip units offer testing opportunities not readily available in other molded-case or low-voltage power breakers. Because solid-state trip units are designed to operate on low-level currents obtained via the secondaries of current transformers mounted on the phase conductors, small, compact test kits can be utilized in performing field tests with a high degree of accuracy. Because these breakers have unique design characteristics, the manufacturers should be consulted for available test kits and testing instructions. Attempted field repair of the solid-state trip units should be avoided. Any suspected malfunction should be referred to a competent service group.
- **21.10.2.4 Molded-Case Circuit-Breaker Testing.** When performing molded-case circuit-breaker testing, the criteria in 21.10.2.4.1 through 21.10.2.4.6 should be utilized.
- 21.10.2.4.1 Molded-Case Circuit Breakers General.
- **21.10.2.4.1.1** Molded-case circuit breakers are available in a wide variety of sizes, shapes, and ratings. Voltage ratings, by standard definitions, are limited to 600 volts, although special applications have been made to 1000 volts. Current ratings are available from 10 amperes through 4000 amperes. Molded-case circuit breakers can be categorized generally by the types of trip units employed as described in Section 14.5.

21.10.2.4.1.2 Electrical testing should be performed in a manner and with the type of equipment required by the type of trip unit employed.

21.10.2.4.2 Testing Thermal-Magnetic Circuit Breakers.

21.10.2.4.2.1 The electrical testing of thermal-magnetic circuit breakers can be divided into three steps:

- (1) Overload of individual poles at 300 percent of trip rating
- (2) Verification of test procedures
- (3) Verification of manufacturer's published data

21.10.2.4.2.2 Complete and detailed instructions for testing molded-case circuit breakers in accordance with the steps in 21.10.2.4.2.1 are outlined in detail in NEMA AB 4, *Guidelines for Inspection and Preventive Maintenance of Molded-Case Circuit Breakers Used in Commercial and Industrial Applications.* Individual manufacturers also publish recommended testing procedures as well as time–current characteristic tripping curves.

21.10.2.4.3 Overload Testing Considerations.

21.10.2.4.3.1 When circuit-breaker tripping characteristics are tested, *it is recommended that the overcurrent tests be performed on individual poles at 300 percent of rated current.*

21.10.2.4.3.2 The reaction of the circuit breaker to this overload is indicative of its reaction throughout its entire overcurrent tripping range. This load is chosen as the test point because it is relatively easy to generate the required current in the field, and the wattage per pole from line to load is large enough that the dissipation of heat in the nonactive pole spaces is minor and does not affect the test results appreciably.

21.10.2.4.4 Overcurrent Trip Data. Table 21.10.2.4.4 outlines the current and trip-time values as recommended by NEMA. The minimum/maximum range of values in Table 21.10.2.4.4 was developed to encompass most brands. For more specific values, refer to the manufacturer's data for the circuit breaker being tested.

Table 21.10.2.4.4 Values for Molded-Case Circuit-Breaker Overcurrent Trip Test (at 300 Percent of Rated Continuous Current of Breaker)

Voltage (volts)		Tripping Time (seconds)				
	Range of Rated Continuous Current (amperes)	Mini	imum	_		
		Thermal Breakers	Magnetic Breakers	Maximum	Maximum for Cable Protection*	
(1)	(2)	(3)	(4)	(5)	(6)	
240	15–45	3	_	50	100	
240	50-100	5	_	70	200	
600	15–45	5	5	80	100	
600	50-100	5	5	150	200	
240	110–225	10	5	200	300	
600	110–225	10		200	300	

Table 21.10.2.4.4 Values for Molded-Case Circuit-Breaker Overcurrent Trip Test (at 300 Percent of Rated Continuous Current of Breaker)

	_		Tripping Time (seconds)				
		Mini	imum	_			
Voltage (volts)	Range of Rated Continuous Current (amperes)	Thermal Breakers	Magnetic Breakers	Maximum	Maximum for Cable Protection*		
(1)	(2)	(3)	(4)	(5)	(6)		
600	250-450	25	_	250	300		
600	500-600	25	10	250	350		
600	700-1200	25	10	450	600		
600	1400-2500	25	10	600	750		

^{*}These values are based on heat tests conducted by circuit breaker manufacturers on conductors in conduit.

21.10.2.4.5 Evaluation of Results in Table 20.10.2.4.4.

21.10.2.4.5.1 Minimum Trip Times (columns 3 and 4). The values shown in Table 21.10.2.4.4 should not be considered significant in field testing unless nuisance tripping has been experienced.

- (1) The values shown are provided as a guideline only.
- (2) If minimum tripping times are lower than those shown in Table 21.10.2.4.4, the breaker should be retested after being deenergized and cooled for the required time.

21.10.2.4.5.2 Maximum Trip Times (column 5). Under normal test conditions, the circuit breaker will trip in less than the maximum values shown in Table 21.10.2.4.4, column 5. Under improper test conditions, the maximum values can exceed those given in Table 21.10.2.4.4.

21.10.2.4.5.3 Maximum Tripping Times for Cable Protection (column 6).

- (A) If the test value exceeds the maximum tripping time shown in column 5 but falls below the maximum tripping times for cable damage, the circuit breaker is providing an acceptable level of protection.
- **(B)** Coordination with other protective devices should be considered before replacing a circuit breaker that trips beyond the time–current curve.

21.10.2.4.6 Testing Instantaneous-Only Circuit Breakers. The testing of instantaneous-only circuit breakers requires the use of elaborate constant rate-of-rise test equipment coupled with accurate current-monitoring instrumentation, preferably digital readout, for accurate confirmation of manufacturers' test results. Unless this type of equipment is available, it is recommended that these breakers be referred to the manufacturer, electrical contractor, or other competent service organization when calibration is required.

- **21.10.2.5** Low-Voltage Power Circuit-Breaker Testing. When low-voltage circuit-breaker testing is performed, the criteria in 21.10.2.5.1 and 21.10.2.5.2 should be utilized.
- **21.10.2.5.1 Overcurrent Trip Device.** Most low-voltage power circuit breakers are equipped with overcurrent trip devices that sense overload of fault currents and trip the breaker. These devices can be either electromechanical or solid state and usually have two or more of the following types of elements.
- (A) Long Time-Delay Element. This element is designed to operate on overloads between its pickup setting and the pickup of a short time delay or an instantaneous element. The electromechanical long time-delay pickup adjustment is generally within the range of 80 percent to 160 percent of the trip-device rating. Settings higher than an electromechanical trip-device ampere rating do not increase the continuous-current rating of the trip device, and in no event is the rating increased beyond the breaker frame size. The operating time of this element ranges from seconds to minutes.
- **(B) Short Time-Delay Element.** This element has a time delay measured in cycles and is used to protect against moderate fault currents and short circuits. This element usually can be adjusted to pick up within the range of 250 percent to 1000 percent of the trip-device rating.
- **(C) Instantaneous Element.** This element has no intentional time delay and is used to protect against heavy fault currents and short circuits. The pickup settings for this type of element usually range from 500 percent to 1500 percent of the trip-device rating.
- **(D) Ground-Fault Element.** This element is available only on solid-state devices and is used to protect against ground-fault currents at levels below those that would be sensed otherwise.
- 21.10.2.5.2 Testing. The testing of electromechanical trip devices or solid-state devices by the primary injection method requires the use of a high-current test set capable of producing sufficient current at low voltage to operate each of the elements of the trip device. This test should have means of adjusting the amount of current applied to the trip device and a cycle and second timer to measure the amount of time to trip the breaker at each current setting. At least one test should be made in the range of each element of the trip device. The long time-delay element ordinarily should be tested at approximately 300 percent of its setting. The short time-delay element should be tested at 150 percent to 200 percent of its setting. The instantaneous element should be tested at 90 percent and 110 percent of its setting to ensure that it does not operate at too low a current level yet will operate at the proper level. For the test of the instantaneous element, the applied current should be symmetrical without an asymmetrical offset, or random errors will be introduced. As-found and as-left tests should be performed if any need of adjustments is found.

21.10.3 Protective Relays.

- **21.10.3.1 Introduction.** When performing protective relays testing, the criteria in 21.10.3.1(A) through 21.10.3.1(C) should be utilized.
- (A) (See Caution in 9.9.7.1.) Protective relays are used in conjunction with medium-voltage circuit breakers (above 600 volts) to sense abnormalities and cause the trouble to be isolated Copyright NFPA

with minimum disturbance to the electrical system and with the least damage to the equipment at fault. They have the accuracy and sophistication demanded by the protective requirements of the primary feeder circuits and larger electrical equipment. Protective relays designed to be responsive to an abnormal excursion in current, voltage, frequency, phase-angle, direction of current or power flow, and so on, and with varying operation characteristics, are commercially available. Each relay application requires custom engineering to satisfy the parameters of its particular intended function in the system.

- (B) The more common protective relay is of the electromechanical type. That is, some mechanical element such as an induction disk, an induction cylinder, or a magnetic plunger is caused to move in response to an abnormal change in a parameter of the electrical system. The movement can cause a contact in the control circuit to operate, tripping the related circuit breaker. Protective relays should be acceptance tested prior to being placed in service and should be tested periodically thereafter to ensure reliable performance. In a normal industrial application, periodic testing should be done at least every 2 years.
- (C) The various facets involved in testing protective relays include the following:
- (1) The technician should understand the construction, operation, and testing of the particular relay.
- (2) The manufacturer's instruction bulletin, as identified on the nameplate of the relay, should be available.
- (3) The technician should be given the settings to be applied to each particular relay and the test points. This information is often furnished on a time–current curve of the coordination study displaying the characteristics of the relay.
- (4) A test instrument, suitable to accurately accommodate the various acceptance and periodic maintenance tests described in the manufacturer's instruction manual, should be available.
- (5) Most protective relays can be isolated for testing while the electrical system is in normal operation. However, an operation of the breaker is recommended to ascertain that the operation of the relay contacts will trigger the intended reaction, such as to trip the associated circuit breaker.
- **21.10.3.2 Testing Procedure.** When protective relays testing is performed, the procedures listed in 21.10.3.2(A) through 21.10.3.2(J) should be followed:
- (A) Inspection. If recommended or desirable, each relay should be removed from its case for a thorough inspection and cleaning. If the circuit is in service, one relay at a time should be removed so as not to totally disable the protection. The areas of inspection are detailed in the manufacturer's instruction manual. These areas generally consist of inspection for loose screws, friction in moving parts, iron filings between the induction disk and the permanent magnet, and any evidence of distress with the relay. The fine silver contacts should be cleaned only with a burnishing tool.
- **(B)** Settings. Prescribed settings should be applied, or it should be ascertained that they have been applied to the relay.

- **(C) Pickup Test.** In the case of a time-overcurrent relay, its contacts should eventually creep to a closed position with a magnitude of current introduced in its induction coil equal to the tap setting. The pickup is adjusted by means of the restraining spiral-spring adjusting ring. A pickup test on a voltage relay is made in much the same manner.
- **(D) Timing Test.** In the case of a time-overcurrent relay, one or more timing tests are made at anywhere from 2 to 10 times the tap setting to verify the time-current characteristic of the relay. One timing point should be specified in the prescribed settings. Tests should be made with the relay in its panel and case, and the time test run at the calibration setting.
- **(E) Time Delay Settings.** For example, in the case of one particular overcurrent relay having a 5-ampere tap setting, the timing test could be specified as "25 amperes at 0.4 second." It could be seen from the family of curves in the manufacturer's instruction manual for that relay that the test should result in a time-dial setting of approximately 1.6.
- (F) Relays to Be Tested. A timing test should be made on most types of relays.
- **(G) Instantaneous Test.** Some protective relays are instantaneous in operation or might have a separate instantaneous element. In this context, the term *instantaneous* means "having no intentional time delay." If used, the specified pickup on the instantaneous element should be set by test. Again referring to the relay used in the example given in 21.10.3.2(E), at two times pickup, its instantaneous element should have an operating time of between 0.016 second and 0.030 second.
- **(H)** Test of Target and Seal-In Unit. Most types of protective relays have a combination target and seal-in unit. The target indicates that the relay has operated. The seal-in unit is adjustable to pick up at either 0.2 ampere or 2.0 amperes. The setting for the seal-in unit should be specified with the relay settings.
- (I) Contact Verification. It should be verified by test that the contacts will seal in (hold in closed position) with the minimum specified direct current applied in the seal-in unit.
- (J) Test of Tripping Circuit. A test should be made, preferably at the time of testing the relays, to verify that operation of the relay contacts causes the breaker to trip.

21.11 Transformer Turns-Ratio and Polarity Tests.

- **21.11.1** The turns-ratio test is used to determine the number of turns in one winding of a transformer in relation to the number of turns in the other windings of the same phase of the transformer. The polarity test determines the vectoral relationships of the various transformer windings. The turns-ratio test is used as both an acceptance and a maintenance test, while the polarity test is primarily an acceptance test.
- **21.11.2** The tests are applicable to all power, distribution, and instrument transformers. The test equipment used ordinarily is a turns-ratio test set designed for the purpose, although, if not available, two voltmeters or two ammeters (for current transformers only) can be used. If the two-meter method is used, the instruments should be at least of the 0.25 percent full-scale accuracy type.
- 21.11.3 When a turns-ratio test is performed, the ratio should be determined for all no-load

taps. If the transformer is equipped with a load-tap changer (LTC), the ratio should be determined for each LTC position. If the transformer has both an LTC and a no-load-tap changer, the ratio should be determined for each position of the LTC to one position of the no-load tap changer and vice versa. This test is useful in determining whether a transformer has any shorted turns or improper connections and, on acceptance testing, verifying nameplate information.

21.12 Contact-Resistance Testing.

This test is used to test the quality of the contacts on switches and circuit breakers. A test set designed for this purpose is available with direct-scale calibration in microhms, capable of reading contact resistances of 10 microhms or less. An alternative method is to pass a known level of direct current through the contact structure and to measure the dc millivolt drop across the contacts. The data obtained can then be converted to resistance by applying Ohm's law. Millivolt drop data used directly to describe contact resistance normally are stated in terms of the continuous current rating of the device. Millivolt drop data obtained at currents lower than the rated continuous current rating can be converted to the continuous current rating basis by multiplying the actual millivolt readings by the ratio of the continuous rated current to the actual test current. The alternative method requires a source of at least 100 amperes with a millivolt meter of approximately 0 mV to 20 mV range. The contact resistance should be kept as low as possible to reduce power losses at the contacts with the resultant localized heating, which will shorten the life of both the contacts and nearby insulation.

21.13 Impedance Testing of Equipment Grounding Conductor.

- **21.13.1** This test is used to determine the integrity of the grounding path from the point of test back to the source panel or supply transformer. A low-impedance grounding path is necessary to facilitate operation of the overcurrent device under ground-fault conditions as well as to provide a zero voltage reference for reliable operation of computers and other microprocessor-based electronic equipment.
- **21.13.2** Instruments are available to measure the impedance of the grounding path. When using these instruments, the user should remember that, although a high-impedance value is an indication of a problem, for example, a loose connection or excessive conductor length, a low-impedance readout does not necessarily indicate the adequacy of the grounding path.
- **21.13.2.1** A grounding path that is found to have a low impedance by the use of relatively low test currents might not have sufficient capacity to handle large ground faults. Visual examinations and actual checking for tightness of connections are still necessary to determine the adequacy of the grounding path.
- **21.13.3** Impedance tests can be performed reliably on circuits where an equipment-grounding conductor is not connected to other parallel paths. These equipment-grounding conductors can be in nonmetallic sheathed cable, circuits installed in nonmetallic conduits and fittings, flexible cords, and systems using an isolated ground.
- **21.13.4** Ground loop or grounding conductor impedance cannot be measured reliably in situations where metallic conduits are used or where metallic boxes or equipment are Copyright NFPA

attached to metal building frames or interconnected structures. Such situations create parallel paths for test currents that make it impossible to measure the impedance of the grounding conductor or even to detect an open or missing grounding conductor. Also, the impedance of a steel raceway varies somewhat unpredictably with the amount of current flowing through it. The relatively low test currents used during testing usually produce a higher impedance than that actually encountered by fault currents. However, this higher impedance tends to render the tests conservative, and the impedance values might still be acceptable.

21.14 Grounded Conductor Impedance Testing.

21.14.1 On solidly grounded low-voltage systems (600 volts or less) supplying microprocessor-based electronic equipment with switching power supplies, this test is used to determine the quality of the grounded conductor (neutral) from the point of test back to the source panel or supply transformer. These electronic loads can create harmonic currents in the neutral that can exceed the current in the phase conductors. A low-impedance neutral is necessary to minimize neutral-to-ground potentials and common-mode noise produced by these harmonic currents.

21.14.2 Some instruments used to perform the equipment ground-impedance tests in Section 21.13 can be used to perform grounded conductor (neutral) impedance tests.

21.15 Grounding-Electrode Resistance Testing.

Grounding-electrode resistance testing is used to determine the effectiveness and integrity of the grounding system. An adequate grounding system is necessary to (1) provide a discharge path for lightning, (2) prevent induced voltages caused by surges on power lines from damaging equipment connected to the power line, and (3) maintain a reference point of potential for instrumentation safety. Periodic testing is necessary because variations in soil resistivity are caused by changes in soil temperature, soil moisture, conductive salts in the soil, and corrosion of the ground connectors. The test set used ordinarily is a ground-resistance test set, designed for the purpose, using the principle of the fall of potential of ac-circulated current from a test spot to the ground connection under test. This instrument is direct reading and calibrated in ohms of ground resistance.

21.16 Circuit Breaker Time-Travel Analysis.

21.16.1 This test, used on medium- and high-voltage circuit breakers, provides information as to whether the operating mechanism of the circuit breaker is operating properly. All test instruments should be used in strict compliance with the manufacturer's instructions and recommendations. Failure to follow the manufacturer's instructions can result in injury to personnel and can produce meaningless data. The test presents in graphical form the position of the breaker contacts versus time. This test can be used to determine the opening and closing speeds of the breaker, the interval time for closing and tripping, and the contact bounce. The test provides information that can be used to detect problems such as weak accelerating springs, defective shock absorbers, dashpots, buffers, and closing mechanisms.

21.16.2 The test is performed by a mechanical device that is attached to the breaker. There are several types of devices available to perform this function. One device, a rotating drum

with a chart attached, is temporarily connected to the chassis or tank of the breaker. A movable rod with a marking device attached is installed on the lift rod portion of the breaker. As the breaker is opened or closed, the marking device indicates the amount of contact travel on the chart as the drum rotates at a known speed. With another available device, a transducer is attached to the movable rod, and the breaker operation is recorded on an oscillograph.

21.17 Infrared Inspection.

- **21.17.1 Introduction.** Infrared inspections of electrical systems are beneficial to reduce the number of costly and catastrophic equipment failures and unscheduled plant shutdowns.
- **21.17.1.1** Infrared inspections should be performed by qualified and trained personnel who have an understanding of infrared technology, electrical equipment maintenance, and the safety issues involved. Infrared inspections have uncovered a multitude of potentially dangerous situations. Proper diagnosis and remedial action of these situations have also helped to prevent numerous major losses.
- **21.17.1.2** The instruments most suitable for infrared inspections are of the type that use a scanning technique to produce an image of the equipment being inspected. These devices display a picture in which "hot spots" appear as bright or brighter spots.
- **21.17.1.3** Infrared surveys can be accomplished either by in-house teams or by a qualified outside contractor. The economics and effectiveness of the two alternatives should be carefully weighed. Many organizations find it preferable to obtain these surveys from qualified outside contractors. Because of outside contractors' more extensive experience, their findings and recommendations are likely to be more accurate, practical, and economical than those of a part-time in-house team.
- **21.17.1.4** Infrared surveys of electrical systems should not be viewed as replacement for visual inspections. Visual inspections or checks are still required on lightly loaded circuits or on circuits not energized or not carrying current at the time of the infrared survey (e.g., neutral connections).
- **21.17.2 Advantages of Infrared Inspections.** Infrared inspections are advantageous to use in situations where electrical equipment cannot be deenergized and taken out of service or where plant production is affected. They can reduce typical visual examinations and tedious manual inspections and are especially effective in long-range detection situations.
- **21.17.2.1** Infrared detection can be accurate, reliable, and expedient to use in a variety of electrical installations. More important, it can be relatively inexpensive to use considering the savings often realized by preventing equipment damage and business interruptions.
- **21.17.2.2** Infrared inspections are considered a useful tool to evaluate previous repair work and proof test new electrical installations and new equipment still under warranty.
- **21.17.2.3** Regularly scheduled infrared inspections often require the readjustment of electrical maintenance priorities as well as detect trends in equipment performance that require periodic observation.
- **21.17.3 Disadvantages.** There are some disadvantages to individual ownership of certain Copyright NFPA

types of equipment. Scanning-type thermal imaging devices can be costly to purchase outright. Training is recommended for persons who operate scanning-type thermal imaging instruments.

- 21.17.3.1 Infrared inspections require special measures and analysis. Equipment enclosed for safety or reliability can be difficult to scan or to detect radiation from within. Special precautions, including the removal of access panels, might be necessary for satisfactory measurements. Weather can be a factor in the conduct of a survey of electrical systems located outdoors, for example, overhead electric open lines and substations. Rain and wind can produce abnormal cooling of defective conductors and components. Because the reflection of sun rays from bright surfaces can be misread as hot spots, infrared work on outdoor equipment might have to be performed at night. That, in turn, presents a problem, because electrical loads usually are lower at night, and the faulty connections and equipment might not overheat enough to enable detection. Shiny surfaces do not emit radiation energy efficiently and can be hot while appearing cool in the infrared image.
- **21.17.3.2** The handling of liquid nitrogen, argon, and other liquefied gases with their inherent hazards is a disadvantage of some infrared testing equipment.
- **21.17.4 Desirable Operational Features.** The equipment display should be large and provide good resolution of hot spots. The equipment should provide color or black and white photographs to identify the exact location of the hot spot. The unit should be portable, easy to adjust, and approved for use in the atmosphere in which it is to be used. It should also have a cone of vision that gives enough detail to accurately identify the hot spot.
- **21.17.4.1** The unit should be designed so that the operator knows the degree of accuracy in the display. There should be easily operated checks to verify the accuracy of the display.
- **21.17.5 Inspection Frequency and Procedures.** Routine infrared inspections of energized electrical systems should be performed annually prior to shutdown. More frequent infrared inspections, for example, quarterly or semiannually, should be performed where warranted by loss experience, installation of new electrical equipment, or changes in environmental, operational, or load conditions.
- **21.17.5.1** All critical electrical equipment as determined by Section 6.3 should be included in the infrared inspection.
- **21.17.5.2** Infrared surveys should be performed during periods of maximum possible loading but not less than 40 percent of rated load of the electrical equipment being inspected. The circuit-loading characteristics should be included as part of the documentation provided in 21.17.5.4.
- **21.17.5.3** Equipment enclosures should be opened for a direct view of components whenever possible. When opening the enclosure is impossible, such as in some busway systems, internal temperatures can be higher than the surface temperatures. Plastic and glass covers in electrical enclosures are not transparent to infrared radiation.
- **21.17.5.4** Infrared surveys should be documented as outlined in 6.5.2 and Section 21.8.
- **21.17.5.5** The electrical supervisor should be immediately notified of critical, impending

faults so that corrective action can be taken before a failure occurs. Priorities should be established to correct other deficiencies.

21.17.5.6 Section 9 and Table 10.18 of the NETA *Maintenance Testing Specifications for Electrical Power Distribution Equipment and Systems* suggest temperature benchmarks similar to those in the following list. The temperature differences in this list denote differences from the normal referenced temperature. The normal referenced temperature is determined by a qualified technician.

- (1) Temperature differences of 1°C to 3°C indicate possible deficiency and warrant investigation.
- (2) Temperature differences of 4°C to 15°C indicate deficiency; repairs should be made as time permits.
- (3) Temperature differences of 16°C and above indicate major deficiency; repairs should be made immediately.

21.18 Fault-Gas Analysis.

The analysis of the percentage of combustible gases present in the nitrogen cap of sealed, pressurized oil-filled transformers can provide information as to the likelihood of incipient faults in the transformer. When arcing or excessive heating occurs below the top surface of the oil, some oil decomposes. Some of the products of the decomposition are combustible gases that rise to the top of the oil and mix with the nitrogen above the oil.

21.18.1 The test set for this test is designed for the purpose. A small sample of nitrogen is removed from the transformer and analyzed. The set has a direct reading scale calibrated in percentages of combustible gas. Ordinarily, the nitrogen cap in a transformer has less than 0.5 percent combustible content. As a problem develops over a period of time, the combustible content can rise to 10 percent or 15 percent.

21.18.2 A suggested evaluation of the test results is shown in Table 21.18.2.

Table 21.18.2 Fault-Gas Analysis

Percentage of Combustible Gas	Evaluation
0.0 to 1.0	No reason for concern. Make tests at regularly scheduled intervals.
1.0 to 2.0	Indication of contamination or slight incipient fault. Make more frequent readings and watch trend.
2.0 to 5.0	Begin more frequent readings immediately. Prepare to investigate cause by internal inspection.
Over 5.0	Remove transformer from service and make internal inspection.

21.19 Insulating-Liquid Analysis.

Regular semiannual tests should be made on insulating oils and askarels. Samples should be taken from the equipment in accordance with ASTM D 923, *Standard Test Method for Sampling Electrical Insulating Liquids*. The maintenance tests most commonly performed on used insulating liquids, together with the appropriate ASTM test methods, are shown in Table 21.19. Also included in the table are suggested limits to be used to determine whether the liquid is in need of reconditioning or reclamation. For comparison, typical test values for new oil are also included in the table.

Table 21.19 Summary of Maintenance Tests for Insulating Liquids

Test Purpose	ASTM Method of Test	Test Limits for Maintenance	Typical
Acidity (approximate)	D 1534	Same as neutralization number	Below
Color	D 1500 (petroleum oils) (also for maintenance testing of askarel)	4.0 max. (oil), 2.0 max. (askarel)	1.0 max
Dielectric breakdown voltage	D 877 (disk electrodes) or D 1816 (VDE electrodes)	22 kV min. (oil), 25 kV min. (askarel)	26 kV (c
Examination (visual, field)	D 1524 (petroleum oils)	Cloudy, dirty, or visible water	Clear
Interfacial tension (oil only)	D 971 (ring method) or D 2285 (drop weight)	18 dynes/cm min.	35 dynes
Neutralization number	D 974 or D 664	0.40 max. (oil) (askarel)*	0.04 max (askarel)
Power factor	D 924	1.8% max. (oil), 0.5–2.0% (askarel)	0.1% ma max. (25

^{*}Replace for any value greater than 0.014.

21.20 Rotating Machine Testing.

21.20.1 Insulation-Resistance Testing.

21.20.1.1 This testing procedure applies to armature and rotating or stationary field windings. A hand crank, rectifier, or battery-operated instrument is suitable for testing equipment rated to 600 volts. For equipment rated over 600 volts, a 1000-volt or 2500-volt motor-driven or rectifier-operated instrument is recommended for optimum test results. Operating machines should be tested immediately following shutdown when the windings are hot and dry. On large machines, the temperature should be recorded and converted to a base temperature in accordance with ANSI/IEEE 43 Recommended Practice for Testing Insulation Resistance of Rotating Machinery, paragraph 6.3, to provide continuity for comparative purposes. Voltage sources, lightning arresters, and capacitors or other potential low-insulation sources should always be disconnected before insulation measurements are made. Lead-in cables or buses and line side of circuit breakers or starters can be tested as a part of the circuit provided a satisfactory reading is obtained. If the insulation resistance is below the established minimum, the circuit components should be tested separately until the low insulation reading is located. Insulation-resistance history based on tests conducted on new motors, after rewind and cleaning or from recorded data made under uniform conditions forms a useful basis for interpretation of a machine winding condition. When records of Copyright NFPA

periodic tests are compared, any persistent downward trend is an indication of insulation trouble even though the values might be higher than the recommended minimum safe values listed in 21.20.1.2.

21.20.1.2 Insulation-resistance readings taken for purposes of correlation should be made at the end of a definite interval following the application of a definite test voltage. For purposes of standardization, 60-second applications are recommended where short-time single readings are to be made on windings and where comparisons with earlier and later data are to be made. Recommended minimum acceptable insulation values without further investigation are as shown in Table 21.20.1.2.

Table 21.20.1.2 Rotating Machine Insulation Testing

Rotating Machinery Voltage	Insulation Resistance (at 40°C)
1000 volts and below	2 megohms
Above 1000 volts	1 megohm per 1000 volts
	plus 1 megohm

21.20.2 Dielectric-Absorption Testing. A more complete and preferred test applies the voltage for 10 minutes or more to develop the dielectric-absorption characteristic. The curve obtained by plotting insulation resistance against time gives a good indication of moist or dirty windings. A steady rising curve is indicative of a clean, dry winding. A quickly flattening curve is the result of leakage current through or over the surface of the winding and is indicative of a moist or dirty winding. If facilities are not available for a 10-minute test, readings can be taken at 30 seconds and 60 seconds. The 60:30–second ratio or the 10:1–minute ratio serves as an indication of the winding condition. Table 21.20.2 should serve as a guide in interpreting these ratios.

Table 21.20.2 Dielectric-Absorption Testing

Condition	60:30-Second Ratio	10:1-Minute Ratio
Dangerous	_	Less than 1
Poor	Less than 1.1	Less than 1.5
Questionable	1.1 to 1.25	1.5 to 2
Fair	1.25 to 1.4	2 to 3
Good	1.4 to 1.6	3 to 4
Excellent	Above 1.6	Above 4

21.20.3 Over-Potential Testing.

21.20.3.1 Overvoltage tests are performed during normal maintenance operations or after the servicing or repair of important machines. Such tests, made on all or parts of the circuit to ground, ensure that the insulation level is sufficiently high for continued safe operation. Both ac and dc test equipment are available. There is no conclusive evidence that one

Copyright NFPA

method is preferred over the other. However, where equipment using several insulating materials is tested, ac stresses the insulation more nearly to actual operating conditions than dc. Also, more comparable data have been accumulated, because ac testing has had a head start. However, the use of dc has several advantages and is rapidly gaining favor with increased usage. The test equipment is much smaller, lighter in weight, and lower in price. There is far less possibility of damage to equipment under test, and dc tests give more information than is obtainable with ac testing.

21.20.3.2 The test overvoltages that should be applied depend on the type of machine involved and the level of reliability required from the machines. However, the overvoltage should be of sufficient magnitude to search out weaknesses in the insulation that might cause failure. Standard over-potential test voltage when new is twice rated voltage plus 1000 volts ac. On older or repaired apparatus, tests are reduced to approximately 50 to 60 percent of the factory (new) test voltage. For dc tests, the ac test voltage is multiplied by a factor (1.7) to represent the ratio between the direct test voltage and alternating rms voltage. (See ANSI/IEEE 95, Recommended Practice for Insulation Testing of AC Electric Machinery (2300 V and Above) with High Direct Voltage.)

21.20.3.3 A high-potential test made to determine the condition of the insulation up to a predetermined voltage level is difficult to interpret. It is common practice to compare known good results against test specimens to determine what is acceptable and what fails the test. For a dc high-potential test, another used criterion is the shape of the leakage current plotted against voltage rise.

21.20.3.3.1 As long as the knee of the curve, which indicates impending breakdown (point c in Figure 21.20.3.3.1), does not occur below the maximum required test voltage, and as long as the shape of the curve is not too steep compared with that of similar equipment or prior test of the same equipment, the results can be considered satisfactory. It should be recognized that if the windings are clean and dry, overvoltage tests will not detect any defects in the end turns or in lead-in wire located away from the stator iron.

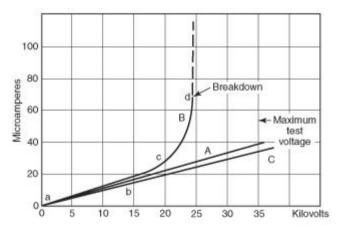


FIGURE 21.20.3.3.1 High-Potential Test.

21.20.4 Surge-Comparison Testing.

21.20.4.1 Surge-comparison testing can detect turn-to-turn, coil-to-coil, group-to-group,

and phase-to-phase winding flaws that cannot be detected by insulation-resistance, dielectric-absorption, or over-potential testing. Surge testing should not be undertaken until after the integrity of insulation to ground has been verified.

21.20.4.2 The surge testing principle is based on the premise that the impedances of all 3-phase windings of a 3-phase machine should be identical if there are no winding flaws. Each phase (A/B, B/C, C/A) is tested against the others to determine if there is a discrepancy in winding impedances.

21.20.4.3 The test instrument imposes identical, high-voltage, high-frequency pulses across two phases of the machine. The reflected decay voltages of the two windings are displayed and captured on an oscilloscope screen. If the winding impedances are identical, the reflected decay voltage signatures coincide and appear on the screen as a single trace. Two dissimilar traces indicate dissimilar impedances and a possible winding flaw. (See Figure 21.20.4.3.)

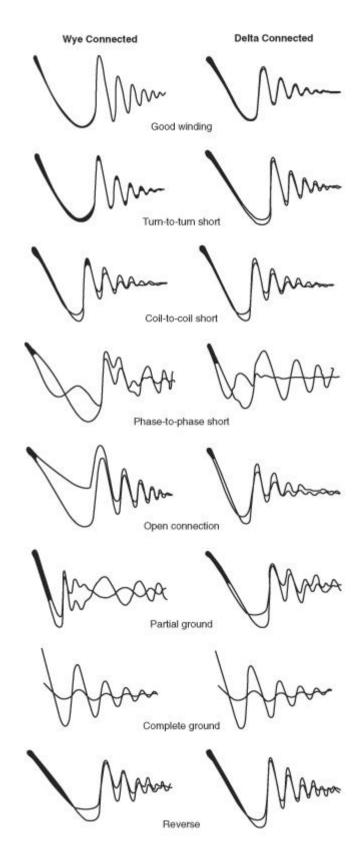


FIGURE 21.20.4.3 Wave Shapes for Winding Faults.

- **21.20.4.4** The testing and interpretation of results should be conducted by a trained individual
- **21.20.5 Other Electrical Tests.** More complex tests are not employed unless apparatus performance indicates the tests should be made and experienced testers are available with the test equipment. The other types of tests, depending on the need and desired results, include the following:
- (1) Turn-to-turn insulation
- (2) Slot discharge and corona
- (3) Winding impedance test
- (4) Power-factor value
- (5) Core loss test
- **21.20.6 Vibration Testing.** Chapter 28 contains information on common methods of measuring vibration.

21.21 3-Phase 4-Wire Neutral-Current Testing.

- **21.21.1** Situations exist where it is possible for the neutral current of 3-phase systems to exceed the ampacity of the neutral conductor in normal operation. This is usually due to unbalanced phase loading, nonsinusoidal load currents (harmonics), or a combination of the two.
- **21.21.1.1** There are certain conditions where even perfectly balanced loads result in significant neutral currents. Nonlinear loads, such as rectifiers, computers, variable-speed drives, electrical discharge lighting fixtures, and switching mode power supplies, cause phase currents that are not sinusoidal.
- **21.21.2** Symptoms of a nonsinusoidal condition might be overheating of the neutral conductor, deterioration of conductor insulation, carbonized insulation, and measurable voltage between the neutral and ground conductors (common-mode noise). This condition can cause a fire or malfunction of microprocessor-based equipment.
- 21.21.3 The neutral current problem can be detected using a true rms ammeter to measure the current flowing in the neutral conductor. The use of an average responding ammeter calibrated to read the rms value of a sine wave should not be used, because it will not yield valid results when used on nonsinusoidal waveforms. If the neutral current is found to be excessive, the current in each phase should be measured to determine if an abnormal condition exists. If excessive neutral current exists and the phase currents are not excessive, harmonic content is the most likely cause. A means of analyzing neutral current containing harmonic components is through the use of a wave or spectrum analyzer. Most analyzers on the market today have the ability to provide a direct readout of the harmonic's magnitude.
- **21.21.4** Verification should be made that the neutral is bonded to the grounding electrode conductor only at the service and at each separately derived source, where used.

21.22 Adjustable-Speed Drive Testing.

Detailed test procedures should be obtained from the manufacturer. Adjustable-speed drives (ASDs) are frequently referred to by other names and acronyms, such as variable-frequency drives (VFDs) and adjustable-frequency drives (AFDs). The following are, at a minimum, routine tests that can be performed on an ASD:

- (1) Measuring currents and voltages and checking for balance and proper levels
- (2) Using an oscilloscope, checking firing signals for proper waveform
- (3) Testing for proper output of printed circuit board power supplies
- (4) Testing manual and automatic reference signals

CAUTION: If an adjustable-speed drive has been deenergized for more than a year, the output voltage and frequency should be brought up very slowly (typically 10 percent of rated output voltage per 15 minutes), to avoid capacitor failure.

Chapter 22 Maintenance of Electrical Equipment Subject to Long Intervals Between Shutdowns

22.1 Introduction.

- **22.1.1** Due to the more extensive and costly damage possible from electrical failures in continuous-process operations, plus the longer intervals between shutdowns, more thorough and comprehensive maintenance procedures are recommended. The need for and frequency of inspection and maintenance are determined by the effect on safety, plant operation, and severity of service.
- **22.1.1.1** The primary effects of electrical failure or malfunction are those directly associated with the failure and usually involve damage to electrical equipment. The secondary effects are those associated with the process or product. Damages resulting from secondary effects can be much more extensive and, in some cases, catastrophic.
- **22.1.2** In addition to more intensive maintenance procedures, this chapter covers system design considerations insofar as they relate to safety and maintainability as well as first and future costs.

22.2 General Aspects of Maintaining Medium- and Low-Voltage Distribution Systems.

- **22.2.1** Unless an electrical distribution system is adequately engineered, designed, and constructed, it will not provide reliable service, no matter how good the maintenance program. Therefore, the recommendations of 22.2.1.1 through 22.2.1.5 are much more essential for electrical distribution systems that supply production equipment that can operate for long periods between shutdowns.
- 22.2.1.1 Careful planning in the engineering and design stages permits maintenance work

Copyright NFPA

without load interruptions. Alternative electrical equipment and circuits should be provided to permit routine or emergency maintenance on one while the other supplies the load that cannot be shut down. For instance, automatic or manual transfer equipment permits the load to be switched, with minimal interruption, from a source of a circuit that fails to one that is operating.

- **22.2.1.2** High-quality equipment has sufficient capacity and features that permit reasonable inspection of the energized parts while in operation without hazard to an inspector using proper precautions. Viewing windows or expanded metal guards inside hinged doors provide a safe means for inspecting energized components inside enclosures. Complete barriers between adjacent switch and breaker sections, and so on, allows personnel to work safely inside a deenergized compartment while adjacent ones are energized. Close inspection of the equipment before shipment is the best way to certify compliance with specifications.
- **22.2.1.3** Construction specifications should be strictly adhered to, complete with detailed drawings and installation procedures.
- **22.2.1.4** Close scrutiny during all phases of construction is essential to ensure adequate quality workmanship and that cables, insulating materials, and other components are not damaged by poor practices.
- **22.2.1.5** Acceptance testing (in accordance with applicable recognized standards), including functional testing and inspection, is invaluable in detecting equipment that is defective, badly damaged, or installed in an inferior manner. In addition, reinspection and retesting within 1 or 2 years after energization might reveal conditions that can lead to in-service failures.
- **22.2.2** After the prerequisites in 22.2.1 are satisfied, an adequate electrical preventive maintenance (EPM) program helps keep the system in good condition and provides the necessary reliability over a long period.
- **22.2.3** Maintenance, inspection, and test methods for equipment that can operate for long periods are essentially the same as for equipment that might be shut down frequently. However, the recommended work should be performed with more care and diligence to obtain the desired reliability for service to loads that can operate continuously for months or years.
- **22.2.4** The following should effect an adequate EPM program for reliable long-term operation of an electrical power system:
- (1) Good knowledge of the entire power system by all associated personnel, with posted or readily available diagrams, procedures, and precautions as highly beneficial aids in keeping personnel up to date
- (2) General understanding of the loads served and their electrical quality and continuity of service requirements
- (3) Length of time between scheduled maintenance shutdowns for utilization equipment, process changes, and so on, that will influence the length of intervals between electrical power system maintenance shutdowns
- (4) A complete list of all the electrical system equipment associated with a given process Copyright NFPA

- or manufacturing system to ensure that all of it is maintained during one shutdown instead of being done piecemeal, which would require additional shutdowns
- (5) The amount of time during the utilization equipment shutdown when the electrical power system can be deenergized for EPM
- (6) Knowledge of electrical power system components, including operating and maintenance data, which are often included in the manufacturers' maintenance instructions
- (7) Knowledge of ambient conditions, such as heat, moisture, and vibration, that can affect the equipment
- (8) Ability to recognize abnormal conditions and early evidence of potential problems, such as overheating and surface tracking on insulating materials, that can cause failure if not corrected in sufficient time
- (9) Standardized maintenance procedures shown in other portions of the text, modified by the information in 22.2.4(1) through 22.2.4(8) and knowledge gained through experience
- (10) Knowledge of services available from local, area, and national electrical maintenance contractors that have specialized test equipment and highly qualified personnel who routinely perform this work, such as relay calibration and testing, circuit-breaker overcurrent trip-device calibration and testing, high-potential testing, power-factor testing, insulating-liquid testing and reconditioning, switchgear maintenance and testing, maintenance and testing of solid-state devices, and infrared inspection
- **22.2.4.1** Unless the amount of specialized work is sufficient to keep plant electrical maintenance personnel adept in the performance of such work, the use of specialized electrical maintenance contractors should be considered
- **22.2.4.2** Plant maintenance supervision should have sufficient electrical knowledge to decide with the contractor on the recommended work to be done and to closely follow the contractor's performance to ensure full compliance. Merely telling a contractor to maintain or test the equipment usually creates a false sense of security that can be shattered by a serious failure caused by inadequate or incorrect maintenance procedures. The result is often the same when plant supervision does not sufficiently instruct plant maintenance personnel.
- **22.2.5** When a piece of equipment or a component fails, merely making repairs or replacement is not sufficient. A complete analysis should be made to determine the cause and to formulate corrective action to prevent recurrence in the same and similar equipment.
- **22.2.5.1** Following is a list of equipment for which maintenance, inspection, and testing guide tables are located in Annex H. The material contained in those tables is of a general nature and might have to be revised to conform more closely to the equipment being maintained to ensure the coverage necessary for the required reliability. Experience has indicated that the frequencies of maintenance, and so on, shown in the tables are sufficient for most installations. They might have to be tailored to suit installations where the ambient conditions are more or less severe.

- (1) Medium-voltage equipment (over 1000 volts)
 - (a) Cables, terminations, and connections
 - (b) Liquid-filled transformers
 - (c) Dry-type transformers
 - (d) Metal-clad switchgear
 - (e) Circuit breakers
 - (f) Metal-enclosed switches
 - (g) Buses and bus ducts
 - (h) Protective relays
 - (i) Automatic transfer control equipment
 - (i) Fuses
 - (k) Lightning arresters
- (2) Medium- and low-voltage equipment: outside overhead electric lines
- (3) Low-voltage equipment (below 1000 volts)
 - (a) Low-voltage cables and connections
 - (b) Dry-type transformers
 - (c) Switchgear
 - (d) Drawout-type circuit breakers
 - (e) Buses and bus ducts
 - (f) Panelboards
 - (g) Protective relays
 - (h) Automatic transfer control equipment
 - (i) Circuit-breaker overcurrent trip devices
 - (i) Fuses
 - (k) Lightning arresters

22.3 Utilization.

22.3.1 General.

22.3.1.1 The utilization of electrical energy in industry is the conversion of electrical energy into useful work such as mechanical operations, lighting, and heating. Of primary concern is the maintenance of the many kinds of utilization equipment used with processes that operate for long intervals between shutdowns. Utilization equipment as covered here is considered to

operate at 480 volts and less.

- **22.3.1.2** Chapters 6 and 8 make reference to the need for planning and developing an EPM program and describe some of the fundamentals. Utilization equipment that serves equipment that operates for long intervals between shutdowns should receive special consideration. The serviceability and safety of the equipment should be thoroughly studied. During the initial design stages, thought should be given to EPM, with ease of maintenance and accessibility being of extreme importance in the design considerations and emphasis on access for adequate visual and infrared inspection of all bus bars and joints.
- **22.3.1.3** Maintenance personnel who are going to service the equipment should be consulted during the design phases.

22.3.2 Records and Inspection Tours.

- **22.3.2.1** Keeping records on utilization equipment that operates over long intervals is more important than for short-interval equipment. Wiring changes, parts replacement, and other modifications should all be accurately recorded.
- **22.3.2.2** Schedules should be laid out for periodic inspection tours of utilization equipment. Records of findings on these inspection tours help indicate trends. Another important reason for good record keeping is that personnel often change, and it is necessary for current personnel to know what has been done prior to their involvement.
- **22.3.2.3** Power and lighting panel directories should be kept up to date and accurate.

22.3.3 Power-Distribution Panels.

- **22.3.3.1** Power-distribution panels are either fuse or circuit-breaker type. Where critical circuits are involved, power-distribution panels should be appropriately identified by tags, labels, or color coding.
- **22.3.3.2** Seldom are power panels deenergized, and then only for circuit changes; it is for those times that EPM can be scheduled. Although procedures can be developed for working on them live, it is not recommended because of the safety hazards involved. There is always the possibility of an error or accidental tripping of a main breaker causing an unscheduled shutdown. During operating periods, the panels can be checked only for hot spots or excessive heat. This EPM should be done at reasonable intervals in accordance with the importance of the circuit. A record should be made of areas that have given trouble; memory should not be relied on.
- **22.3.3.3** During a shutdown and while the panel is dead, all bolted connections should be checked for tightness and visually inspected for discoloration. Should there be discoloration, further investigation should be made and possibly the parts affected replaced. (For further information, refer to Chapters 14 and 16.)
- **22.3.4 Lighting Panels.** Lighting panels generally have the same problems as power panels. However, experience indicates an increased probability of circuit overloading and thus protective-device overheating. Since such panels applied in long-term maintenance areas usually feed important circuits, overheating problems should be corrected immediately.

- **22.3.5** Plug-in-Type Bus Duct. Since plug-in bus duct is seldom used in long-term areas, maintenance of this equipment is not covered here. (*Refer to Chapters 12, 14, and 16 for related information.*)
- **22.3.6 Wiring to Utilization Equipment.** Maintenance procedures outlined in Chapter 11 are recommended. Visual inspection intervals should be based on the importance of the circuits and on previous experience. In addition, more extensive insulation testing might be warranted during shutdown periods, to ensure higher reliability.

22.3.7 Rotating Equipment.

22.3.7.1 Maintenance. Proper maintenance of electric motors and rotating equipment is essential to prevent unscheduled downtime. Their most trouble-prone parts are bearings. The quantity of lubricant, the frequency of lubrication, the method of application, and the type of lubricant are of prime concern. Although lubrication of rotating equipment is discussed in Chapter 17, it is important enough with equipment that operates for long periods between shutdowns, especially motors, that further mention is made here. Suggestions for both oil and grease lubrication systems are listed in 22.3.7.2 through 22.3.7.8.

22.3.7.2 Grease Lubrication Systems. Grease is the most common lubricant used for electric motor bearings. It provides a good seal against the entrance of dirt into the bearing, has good stability, is easy to apply, and is easy to contain without elaborate seals. For extended service intervals, an extremely stable grease is required. Grease should be selected on the basis of the expected temperature range of service. The motor manufacturer can provide advice on exactly which grease to use. A grease that is compatible with the grease already in the bearing should be used.

22.3.7.3 Regreasing.

22.3.7.3.1 The correct quantity of lubricant in a rolling contact bearing is vital to its proper operation. Both insufficient and excessive lubrication will result in failure. Excessive lubrication can cause motor failure due to migration of grease into the motor winding. Table 22.3.7.3.1 is a guide to determining regreasing intervals by the type, size, and service of the motor, to obtain the most efficient operation and the longest bearing life. Where a variety of motor sizes, speeds, and types of service are involved in a single plant, a uniform relubrication period is sometimes selected. A yearly basis is common, for instance, and such a yearly regreasing might conveniently be carried out on a plantwide basis during a vacation shutdown.

Table 22.3.7.3.1 Guide for Maximum Regreasing Intervals

		Motor Regre	easing Intervals		
Type of Service	Up to 7½ hp	10–40 hp	50-150 hp	Over	
Easy: infrequent operation (1 hr per day), valves, door openers, portable floor sanders	10 years	7 years	4 years	1 :	
Standard: 1- or 2-shift operation, machine tools, air-conditioning apparatus, conveyors, garage compressors, refrigeration apparatus, laundry machinery, textile machinery, wood-working machines, water pumping Copyright NFPA	7 years	4 years	1½ years	6 m	

Table 22.3.7.3.1 Guide for Maximum Regreasing Intervals

	Motor Regreasing Intervals				
Type of Service	Up to 7½ hp	10–40 hp	50–150 hp	Over	
Severe: motors, fans, pumps, motor generator sets running 24 hr per day, 365 days per year; coal and mining machinery; motors subject to severe vibration; steel-mill service	4 years	1½ years	9 months	3 m	
Very severe: dirty, vibrating applications, where end of shaft is hot (pumps and fans), high ambient	9 months	4 months	3 months	2 m	

- **22.3.7.3.2** Motors equipped with grease fittings and relief plugs should be relubricated by a low-pressure grease gun using the following procedure:
- (1) The pressure-gun fitting and the regions around the motor grease fittings should be wiped clean.
- (2) The relief plug should be removed and the relief hole freed of any hardened grease.
- (3) Grease should be added with the motor at standstill until new grease is expelled through the relief hole. In a great majority of cases, it is not necessary to stop the motor during relubrication, but regreasing at standstill will minimize the possibility for grease leakage along the shaft seals.
- (4) The motor should be run for about 10 minutes with the relief plug removed to expel excess grease.
- (5) The relief plug should be cleaned and replaced.
- **22.3.7.4 Regreasing of Totally Enclosed, Fan-Cooled (TEFC) Motors.** For TEFC motors, the instructions in 22.3.7.3.2 apply for greasing the drive-end bearing. The fan-end housing frequently is equipped with a removable grease relief pipe that extends to the outside of the fan casing. First, the pipe should be removed, cleaned, and replaced. Next, during the addition of new grease from a grease gun, the relief pipe should be removed several times until grease is observed in the pipe. After grease is observed to have been pushed out into this pipe, no more should be added. The pipe, after again being cleaned and replaced, will then act as a sump to catch excess grease when expansion takes place during subsequent operation of the motor.
- **22.3.7.4.1** In many vertical motors, the ball-bearing housing itself is relatively inaccessible. In such cases, a grease relief pipe is frequently used in a manner similar to that in the TEFC motors. The same regreasing procedures should be used as described in 22.3.7.4 for TEFC motors.
- **22.3.7.4.2** Motors with sealed bearings cannot be relubricated.
- **22.3.7.5 Regreasing of Small Motors.** In many small motors, no grease fittings are used. Such motors should be relubricated by removing the end shields, cleaning the grease cavity, and refilling three-quarters of the circumference of the cavity with the proper grade of

grease. In the end shields of some small motors, threaded plugs are provided that are replaceable with grease fittings for regreasing without disassembly.

- **22.3.7.5.1** Because regreasing of motor bearings tends to purge the old grease, a more extensive removal of all the used grease is seldom necessary. Whenever a motor is disassembled for general cleaning, however, the bearings and housing should be cleaned by washing with a grease-dissolving solvent. To minimize the chance of damaging the bearings, they normally should not be removed from their shaft for such a washing. After thorough drying, each bearing and its housing cavity should be filled approximately one-half to three-fourths full with new grease before reassembly. Spinning the bearing with an air hose during cleaning should be avoided. Any bearing that has been removed from the shaft by pulling on the outer ring should not be reused.
- **22.3.7.6 Oil Lubrication Systems.** Oil lubrication is recommended when a motor is equipped with sleeve bearings. It is sometimes used for roller contact bearings under certain conditions.
- **22.3.7.6.1** Oils for lubricating electrical motors should be high-quality circulating oils with rust and oxidation inhibitors.
- **22.3.7.6.2** The oil viscosity required for optimum operation of motor bearings is determined by the motor speed and the operating temperature.
- **22.3.7.6.3** In general, it is recommended that 150 S.U.S. oil be used for motor speeds above 1500 rpm, and 300 S.U.S. oil be used for motor speeds below 1500 rpm. These recommendations might vary with specific application and, in particular, with the ambient temperature to which the motor or generator is exposed. The motor manufacturer's recommendations relative to oil viscosity should be followed.

22.3.7.7 Methods and Quantity.

- (A) Wick Oiling. Fractional horsepower motors that can be relubricated generally use felt, waste, or yarn packing to feed sleeve bearings. The packing should be saturated at each lubrication interval.
- **(B)** Ring Oiling. Integral horsepower motors can have ring-lubricated sleeve bearings. The rings are located in a slot in the upper half of the bearing and ride loosely on the shaft. Normally there are no more than two rings for each bearing. Free turning of the rings should be checked on starting a new motor, at each inspection period, and after maintenance work. The oil level should be such that a 60-degree segment of the oil ring on the inside diameter is immersed while the motor shaft is at rest, as shown in Figure 22.3.7.7(B). A sight glass, constant level oiler, or some other unit should be provided to mark and observe the oil level. Levels should be marked for the at-rest condition and the operating condition.

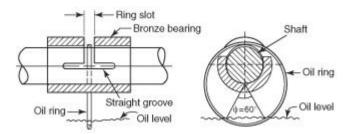


FIGURE 22.3.7.7(B) Ring Oiling.

- **(C) Bath Oiling.** Large, vertical motors frequently have a surrounding oil bath for lubrication of either rolling-element bearings or plate-thrust bearings. Horizontal units equipped with ball and roller bearings might also have an oil bath. The proper oil level is determined by the manufacturer and depends on the bearing system. A sight glass or some other unit should be provided to mark and observe the oil level. This level can change depending on whether the motor is operating or at rest. It should be marked for both situations.
- (D) Oil-Mist Lubrication. Pressurized oil-mist systems are being increasingly used in refinery applications. These applications normally involve interlocked controls such that the source of mist pressure should be in operation to permit energization of the lubricated motor. Often a single centralized mist source supplies a number of motors. Maintenance should include checking of drain/discharge openings at each bearing to see that pressure can be discharged freely to the atmosphere and that the mist pressure–regulation equipment is functioning properly.
- **22.3.7.8 Frequency.** In oil-lubricating systems, it is required that the oil level be maintained. The oil level is observed by means of a sight glass, constant level oiler, and so on, and oil added as needed. Normally, these systems should be drained and refilled on an annual basis. Wick-oil systems require addition of oil quarterly, and the wick should be saturated.
- **22.3.7.9 Motor Inspections.** Visual inspections should be performed on a periodic basis. These inspections are necessary to detect mechanical or lubrication deficiencies before they become serious. The inspection should include a check for increase in temperature, excessive bearing noise, excessive vibration, and lubricant leakage. If any of these conditions exists, the cause should be located and corrected.

22.3.8 Vibration Tests and Analysis.

22.3.8.1 The life of a ball bearing or roller bearing is defined as the number of revolutions or hours of operation at constant speed that the bearing is capable of running before fatigue develops. If a bearing is properly lubricated, mounted, and handled, all causes of failure are eliminated except one, which is fatigue of the material. These failures initiate with the removal of metal from the races or rolling elements. Vibration-analyzing equipment can be used to predict these failures when it monitors vibration velocity or is able to distinguish vibration displacement as a function of frequency. Such equipment is useful in isolating the source of vibration that might appear to be the result of other malfunctions within a motor. It is also useful for ensuring proper installation of critical production equipment. Antifriction bearings fail due to a loss of oil film resulting from wear, leakage, and so on. These failures Copyright NFPA

are sudden, and without constant vibration-monitoring equipment, they cannot be predicted.

22.3.8.2 Vibration analyzers are handy tools for detecting trouble and preventing downtime. A formal vibration analysis program can reduce costly machine failures. The program can range from the use of simple hand-held analyzers to sophisticated multichannel recorders with permanently mounted sensors to provide data for comparison. Such a program makes it possible to keep track of the condition of rotating equipment, particularly high-speed types. Trend charts assist in establishing maintenance needs. The degree of sophistication depends on the application, but even a hand-held vibrograph is a useful tool in EPM. (See Chapter 28.)

22.3.9 Dirt. Where rotating equipment is exposed to dirt, regular inspection is recommended to detect when cleaning is needed. A major cause of burned-out motors is clogged air passages. On motors in dirty atmospheres, filters (where used) frequently become clogged; therefore, filter cleaning or changing should be scheduled. The external surface of motors should be kept cleaned because a pileup of dirt restricts heat dissipation. This is particularly important with T-frame motors. (*Refer to Chapter 17 for cleaning methods.*) In dirty locations and critical applications, more extensive insulation testing might be warranted, as described in Chapter 21. Excessive leakage current might well indicate that a motor failure is imminent.

22.3.10 Control for Rotating Equipment.

- **22.3.10.1** This involves the motor starters, contactors, and other devices that are directly involved with the control of equipment operating over long periods between shutdowns. The maintenance recommendations in Chapter 12 are pertinent to equipment operating for long periods between shutdowns.
- **22.3.10.2** While the equipment is in operation, EPM procedures should be modified. Where control panels can be opened while energized, any terminals with a voltage greater than 150 volts to ground should be covered with a transparent protective covering to permit visual inspection. Essentially, EPM is limited to visual inspection. Maintenance of adequate ventilation should be ensured within enclosures. Gaskets should be kept in good repair where used and where the atmosphere is dirty. Contact wear should be observed where possible.
- **22.3.11 Redundancy.** Although it is expensive, redundant circuits and equipment often are necessary to ensure continuity of operation. During initial design stages and even at later times, consideration should be given to what is needed to prevent unscheduled shutdowns and high maintenance costs. Frequently, redundancy of critical circuits provides the solution.

22.3.12 Heating Equipment.

- **22.3.12.1** In general, this equipment cannot be maintained while it is in operation. Perhaps rotating parts are not involved, but certainly there is heat, and the potential for serious burns therefore exists.
- **22.3.12.2** In most process-heating systems, continuous cycling or on-off operation is carried out. Cycling causes a certain amount of temperature change. As a result, particular attention should be paid to all connections and joints. The use of Belleville washers has been successful in maintaining tight connections. During the time the equipment is in operation, all

joints and terminations should be visually inspected and looked at for signs of heating or arcing, which would indicate loose joints. The cycling frequently causes some movement of the wiring; therefore, check the insulation on the wiring where it passes through nipples, access holes, and other openings.

22.3.13 Electrostatic Discharge (ESD) Grounding.

- **22.3.13.1 General.** The purpose of ESD grounding is to remove the accumulation of static electricity that can build up during machine operation on equipment, on materials being handled or processed, or on operating personnel. On equipment that is in continuous operation, regular inspection and repair procedures should be developed and maintained to retain the integrity of the grounding path.
- **22.3.13.1.1** Because the static charge can build up to several thousand volts, consideration should be given during the initial construction of equipment to reduce the buildup. Equipment is made up of conductors (metal machine frame) and insulators (conveyor belts, plastic parts, and so on). Usually some part of a machine is grounded either electrically or by virtue of construction. Machine parts can be grounded directly or by bonding them to other machine parts that are grounded. Clean, unpainted metal nuts and bolts holding together clean, unpainted metal parts provide adequate continuity. Bonding and grounding can be accomplished by permanently attached jumper wires. Where such wires are attached by lugs or placed under bolt heads or nuts, all parts should be clean and unpainted before installation. Any painting of parts used for ESD grounding should be done only after such parts have been properly installed and the adequacy of the ground verified. Slowly rotating parts normally are adequately bonded or grounded through the bearings. However, parts rotating at high RPMs, such as baskets or centrifuges, should be bonded or grounded by wipers, carbon brushes, or other devices. Portable equipment can be temporarily grounded by clamping an ESD ground to the equipment.
- **22.3.13.2 Adequate ESD Grounding.** It might be necessary to obtain the recommendations of experts in a particular ESD grounding problem. However, some guidelines that will provide adequate ESD grounding are provided in 22.3.13.2.1 through 22.3.13.2.5.
- **22.3.13.2.1** Static electrical charging currents rarely exceed 1 microampere and often are smaller. Thus, leakage currents of the order of microamperes provide protection against the accumulation of static electricity to dangerously high potentials.
- **22.3.13.2.2** A leakage resistance between a conductor and ground as high as 10,000 megohms provides adequate ESD grounding in many cases. However, when charges are generated rapidly, a leakage resistance as low as 1 megohm might be necessary.
- **22.3.13.2.3** The leakage resistance necessary for adequate ESD grounding varies among different operations and should be established by a qualified authority. In the absence of any specifications, the leakage resistance from any conductor to ground should not exceed 1 megohm.
- **22.3.13.2.4** There is no electrical restriction in conductor size for ESD ground wires and jumpers, but larger size conductors might be necessary to limit physical damage. However, where the equipment-grounding conductor for a power circuit is also used for ESD

- grounding, the conductor should be sized in accordance with Table 250.122 of NFPA 70, *National Electrical Code*. Any equipment-grounding conductor that is adequate for power circuits is more than adequate for static grounding.
- 22.3.13.2.5 An ESD ground wire need not be insulated.
- **22.3.13.3 Inspection and Maintenance.** An inspection and maintenance program is essential in ensuring that the integrity of ESD grounding systems is retained. Inspections should consist of both resistance measurements and a visual check.
- **22.3.13.3.1** The resistance from all conductive parts to ground should be measured with a suitable megohmmeter (*see 22.3.13.5*). Corrective measures should be made to bring all resistance values within specifications.
- **22.3.13.3.2** A visual inspection should be made for frayed wires, wires with broken strands, and other physical damage. Such damage should be repaired regardless of measured resistance values.
- **22.3.13.4 Installations and Alterations.** Inspections should be made of all new installations and wherever alterations are made to or parts replaced in an installation. Inspections should be made at regular intervals. The frequency of regular periodic inspections can be determined from experience. Inspections should be most frequent in areas where corrosion is a problem and in areas classified as hazardous.
- **22.3.13.5 Megohmmeters.** A suitably calibrated resistance-measuring device having a nominal open-circuit output voltage of 500 volts dc and a short-circuit current not exceeding 5 mA should be used to check static grounding systems.
- **22.3.13.6 Hazardous Locations.** If the inspections are made in hazardous (classified) locations, the area should be verified nonhazardous if the megohmmeter is not of an intrinsically safe type. The area should be verified as nonhazardous during the testing period when a megohmmeter is used.
- **22.3.13.7 Record Keeping.** Precise records should be made and retained of the results of all inspections and of the corrective actions taken. Precise records will aid in determining the necessary inspection frequency and point out weak spots in the static grounding system that might need modification.
- **22.3.13.8 Precautions During Inspections.** If inspections and corrective measures have to be made when flammable vapors are apt to be present, certain precautions should be taken by the inspector and maintenance personnel, as follows:
- (1) Care should be taken that personnel are adequately grounded to prevent a dangerous accumulation of static electricity on their bodies.
- (2) Care should be taken that no spark discharge occurs between improperly grounded conductors and personnel, instrumentation, or tools.
- (3) Only nonferrous, nonsparking tools should be used in the area.
- **22.3.13.9 Typical Checkpoints for Inspection.** All conductors in a hazardous area should be inspected for adequate static grounding.

- **22.3.13.9.1** Since machines and operations differ considerably, a checklist should be prepared of all points to be checked.
- **22.3.13.9.2** The following are typical for many machines and operations:
- (1) Permanently installed jumper wires
- (2) Static ground wires and clamps used for the temporary grounding of portable and mobile equipment
- (3) Metal hose couplings
- (4) Metal hose clamps
- (5) Metal bolts and nuts used to connect sections of either conductive or nonconductive pipes and ducts
- (6) All sections of metal pipes and ducts
- (7) Rotating parts and shafts
- (8) Rotating baskets of centrifuges
- (9) Handles and stems of ball valves and plug valves
- **22.3.13.9.3** All rotating parts should be checked for the accumulation of electrical charge while in motion.

22.4 Process Instrumentation and Control.

22.4.1 Introduction. The following systems and equipment are covered in this section: power supplies; interlock and logic systems; safety and shutdown systems; sensing, control, and indicating systems; and alarm systems.

22.4.2 Design to Accommodate Maintenance.

- **22.4.2.1** Section 8.1 of this recommended practice stated that, except for limited visual inspection such as observing operating temperatures, examination for contamination, recording load readings, and so on, the apparatus should be taken out of service for efficient and effective maintenance. Further, unless flexibility is built into the system in the way of duplication or alternative transfer schemes, maintenance of vital electrical apparatus should be scheduled with planned production outage.
- **22.4.2.2** The importance of identifying and designing for the vital elements of the process control system cannot be overstressed. The elements of the process instrumentation and control system that should be inspected, tested, or maintained while the plant or process remains in operation should be identified in the design stage. The necessary duplication of facilities and provision for test and inspection should be provided.
- **22.4.2.3** Examples of such provisions are alternative power sources to permit shutdown and inspection of normal power sources, bypass switches for inverters, provisions for on-stream function testing of shutdown circuits, provision of dual sensing components for critical controls, test circuits to permit simulation of alarm conditions, and monitoring devices for

important interlock and logic systems. Selection of quality equipment was also mentioned in Section 8.1 as a means of reducing maintenance requirements. Again, the importance of long-run facilities cannot be overemphasized.

- **22.4.2.4** Whenever possible, control modules should be the plug-in type, replaceable with normal precautions and procedures. Test and adjustment of major components should be possible without disconnection or removal from enclosures and with use of standard instruments such as volt-ohm-milliammeter and oscilloscope.
- **22.4.2.5** Cabinets should be fully compartmented to allow maintenance access to sections not in service without risk to personnel or continuity of service. For instance, the inverter, standby transformer/voltage regulator, and transfer-switch power supply should be in physically separate compartments. Removal or replacement of components in one cabinet section should not require access to other sections.

22.4.3 Power Supplies.

- **22.4.3.1** Power supplies can be divided into two categories: power supplies normally in service and standby or emergency power supplies.
- **22.4.3.2** Power supplies that are normally in service should be inspected on a regular basis. This inspection should include the following typical checks and inspections:
- (1) Reading of meters to detect changes in or abnormal load or voltage conditions
- (2) Check of ground detection equipment for presence of grounds
- (3) Integrity of trip and transfer circuits where monitoring lights are provided
- (4) State of charge on batteries
- (5) Battery charger supply and output load and voltages
- (6) Visual inspection of accessible current-carrying parts for signs of overheating
- (7) Check on equipment environment for heat, moisture, or dust that exceeds the conditions for which the equipment is designed
- **22.4.3.3** The inspection interval can be daily, weekly, or monthly, depending on equipment environment and operating conditions. Tasks such as reading of meters and checks on monitoring lights can be incorporated as part of a daily walk-through inspection.
- **22.4.3.4** Where redundancy in facilities is provided, equipment components should be taken out of service for a thorough inspection and testing and for any recommended maintenance at intervals dictated by service and operating conditions. The initial interval should be in line with manufacturers' recommendations and later shutdowns scheduled in line with the as-found condition of the equipment.
- **22.4.3.5** Where power supply components are in standby or emergency service, periodic testing should be carried out to ensure that the standby equipment is ready to function and can assume the supply function. This requires periodic start-up of emergency generators, operation of autotransfer switches, and so on. Testing should simulate actual operating conditions as closely as possible. For critical facilities, testing intervals such as once a week

are suggested.

22.4.3.6 Where it is possible to put critical standby facilities in operation to supply the normal load without disturbing plant operations, the standby facilities should be switched in at regular intervals and operated for a sufficient period to ensure that they are functioning properly. An interval of once a month is suggested for operating standby facilities. Where standby facilities are fully rated, they are permitted to share operating time on an equal basis with the normal supply.

22.4.4 Interlock and Logic Systems.

- **22.4.4.1** Maintenance procedures on interlock and logic systems are limited to visual inspections of components and wiring and checks on monitoring devices unless design features permit onstream functional testing. Also, in some plants, the process operation or equipment arrangement permits periodic function testing.
- **22.4.4.2** Where functional testing can be done and where the system does not function during normal operations, once-a-week function testing is suggested for systems whose failure can result in hazard to personnel, fire, damage to equipment, or serious degradation or loss of product. Systems of lesser importance should be tested initially on a once-per-month basis with subsequent testing intervals determined by experience and assessment of operating environment.

22.4.5 Sensing, Indicating, and Control Systems.

- **22.4.5.1** The need for and frequency of inspection and maintenance are determined by the effect on safety, plant operations, and the severity of service. Also, some components can be readily isolated, while others can be inspected only during plant or process shutdowns.
- **22.4.5.2** Visual inspection either by plant operators during normal operations or as part of a scheduled inspection can assist in detection of deficiencies such as loose connections, overheating, and excessive vibration.
- **22.4.5.3** Sensing, indicating, and control devices can be divided into two categories: primary elements and secondary elements.
- (1) Primary elements are elements in contact with the process medium directly or indirectly and that might or might not be isolated from the process medium.
- (2) Secondary elements are transmitting, recording, or controlling devices. Some are normally in use and thus receive an automatic day-to-day check. Some are remotely located or infrequently used and require a check at regular intervals.

22.4.6 Level Devices.

- **22.4.6.1** Primary devices installed within process vessels can be checked only with the vessel out of service. Visual inspection should indicate need for maintenance.
- **22.4.6.2** Where the device can be isolated from the process, visual inspection should be made at least once a year and more frequently if extreme accuracy is needed or if the service is severe or critical.

22.4.7 Temperature Devices.

- **22.4.7.1** Primary devices are generally installed in wells and can be checked at any time the device appears to be malfunctioning. The well should be visually inspected at each plant shutdown and necessary maintenance carried out.
- **22.4.7.2** The secondary device or instrument usually can be checked at any time without seriously affecting normal operations.

22.4.8 Pressure Devices.

- **22.4.8.1** Primary devices usually have block valves to permit isolation from the process and checking any time malfunction is indicated.
- **22.4.8.2** Secondary devices usually can be isolated from the primary device and checked at any time.
- **22.4.8.3** Process impulse connections should be checked during equipment shutdown.
- **22.4.9 Indicating, Recording, and Controlling Signal Receivers.** Checks are limited to day-to-day observation of performance by plant operators. Receiver construction usually permits substitution of spare units for faulty units.

22.4.10 Safety and Shutdown Systems.

- **22.4.10.1** On-line testing facilities for safety and shutdown systems should be provided in all designs. Where practical, the facilities should include multiple sensors and safe bypass systems around the final control element. This permits testing of the entire shutdown circuit.
- **22.4.10.2** Safety and shutdown circuits should be tested in the range of once-per-shift to once-per-week unless the circuit functions regularly in normal operation. This might be the case for some shutdown circuits.
- **22.4.10.3** Because of the frequency of testing, these functional tests might be part of the plant operators' normal duties with maintenance personnel involved only if problems are indicated.

22.4.11 Alarm Systems.

- **22.4.11.1** Alarm systems are usually equipped with lamp test switches that permit checking lamp and alarm circuit integrity at any time during normal operation. These tests should be made on a once-per-shift to once-per-day basis to detect lamp burnout or circuit defects in alarms that operate infrequently. This can be done as part of the plant operators' normal duties with maintenance personnel involved only if further attention is needed.
- **22.4.11.2** Alarms for critical conditions that can result in hazard to personnel, fire, equipment damage, or serious degradation or loss of product should be function tested at regular intervals. A once-per-week to once-per-month interval is suggested depending on the importance and vulnerability of the alarm devices to hostile environments. Function testing requires that either provision be made in the system design for the testing facilities or that it be possible to test by manipulating the process variable or otherwise simulating the alarm conditions.

22.4.12 Wiring Systems. These systems can be visually checked for loose connections, proper grounding and shielding, and signs of deterioration or corrosion. Usually maintenance during plant operation is limited to circuits that malfunction or show evidence of possible malfunction.

Chapter 23 Hazardous (Classified) Location Electrical Equipment

23.1 Types of Equipment.

Hazardous location electrical equipment is used in areas that commonly or infrequently contain ignitable vapors or dusts. Designs of hazardous location electrical equipment include explosionproof, dust-ignition-proof, dusttight, purged pressurized, intrinsically safe, nonincendive, oil immersion, hermetically sealed, and other types. Maintenance of each type of equipment requires attention to specific items.

23.2 Maintenance of Electrical Equipment for Use in Hazardous (Classified) Locations.

- **23.2.1** Electrical equipment designed for use in hazardous (classified) locations should be maintained through periodic inspections, tests, and servicing as recommended by the manufacturer. Electrical preventive maintenance (EPM) documentation should define the classified area (the class, group, and division specification and the extent of the classified area) and the equipment maintenance required. EPM documentation should identify who is authorized to work on this equipment, where the maintenance is to be performed, and what precautions are necessary. Although repairs to certain equipment should be done by the manufacturer or authorized representatives, inspection and servicing that can be performed in-house should be clearly identified.
- 23.2.2 Maintenance should be performed only by qualified personnel who are trained in safe maintenance practices and the special considerations necessary to maintain electrical equipment for use in hazardous (classified) locations. These individuals should be familiar with requirements for obtaining safe electrical installations. They should be trained to evaluate and eliminate ignition sources, including high surface temperatures, stored electrical energy, and the buildup of static charges, and to identify the need for special tools, equipment, tests, and protective clothing.
- **23.2.3** Where possible, repairs and maintenance should be performed outside the hazardous (classified) area. For maintenance involving permanent electrical installations, an acceptable method of compliance can include deenergizing the electrical equipment and removing the hazardous atmosphere for the duration of the maintenance period. All sources of hazardous vapors, gases, and dusts should be removed, and enclosed, trapped atmospheres should be cleared.
- **23.2.4** Electrical power should be disconnected and all other ignition sources abated before any electrical equipment is disassembled in a hazardous (classified) location. Time should be

allowed for parts to cool and electrical charges to dissipate, and other electrical maintenance precautions followed.

- **23.2.5** Electrical equipment designed for use in hazardous (classified) locations should be fully reassembled with original components or approved replacement before the hazardous atmosphere is reintroduced and before power is restored. Special attention should be given to joints and other openings in the enclosure. Cover(s) should not be interchanged unless identified for the purpose. Foreign objects, including burrs, pinched gaskets, pieces of insulation, and wiring, prevent the proper closure of mating joints designed to prevent the propagation of flame upon explosion.
- **23.2.6** An approved system of conduit and equipment seals conforming to the requirements of NFPA 70, *National Electrical Code*, and manufacturer's specifications should be maintained. Corrective action should be taken on maintenance actions that damage or discover damage to a seal. Damage to factory-installed seals within equipment can necessitate replacing the equipment.
- **23.2.7** Wherever electrical equipment cover bolts or screws require torquing to meet operating specifications, the bolts or screws should be maintained with the proper torque as specified by the manufacturer. Electrical equipment should not be energized when any such bolts or screws are missing. All bolts and screws should be replaced with original components or approved replacements.
- **23.2.8** Special care should be used in handling electrical devices and components approved for use in hazardous (classified) locations. Rough handling and the use of tools that pry, impact, or abrade components can dent, scratch, nick, or otherwise mar close-tolerance, precision-machined joints and make them unsafe.
- **23.2.8.1** Grease, paint, and dirt should be cleaned from machined joints with a bristle (not wire) brush, an acceptable noncorrosive solvent, or other methods recommended by the manufacturer.
- **23.2.8.2** Prior to replacing a cover on an enclosure designed to prevent flame propagation upon an explosion, mating surfaces should be cleaned and lubricated in accordance with the manufacturer's instructions.
- **23.2.9** Field modifications of equipment and parts replacement should be limited to those changes acceptable to the manufacturer and approved by the authority having jurisdiction. Normally, modifications to equipment void any listing by nationally recognized testing laboratories.
- **23.2.10** The requirements of NFPA 70, *National Electrical Code*, should be followed.
- **23.2.10.1** Explosionproof enclosures, dust-ignition-proof enclosures, dusttight enclosures, raceway seals, vents, barriers, and other protective features are required for electrical equipment in certain occupancies. Equipment and facilities should be maintained in a way that does not compromise equipment performance or safety.
- **23.2.10.2** Intrinsically safe equipment and wiring is permitted in locations for which specific systems are approved. Such wiring should be separate from the wiring of other circuits.

NFPA 70, *National Electrical Code*, Article 504, Intrinsically Safe Systems, describes control drawings, grounding, and other features involved in maintenance programs.

23.2.10.3 Purged and pressurized enclosures can be used in hazardous (classified) areas. NFPA 496, *Standard for Purged and Pressurized Enclosures for Electrical Equipment*, provides guidance useful to maintenance personnel.

•

Chapter 24 Cable Tray and Busway

24.1 Introduction.

- **24.1.1** A cable tray system is a unit or assembly of units or sections and associated fittings made of metal or other noncombustible materials forming a rigid structural system used to support cables. Cable tray systems include ladders, troughs, channels, solid-bottom trays, and other similar structures.
- **24.1.2** The frequency of maintenance depends on the environment in which the cable tray is installed. In areas of heavy industrial contamination or coastal areas, frequent inspections might be necessary.

24.2 Cable.

- **24.2.1** Cable insulation should be visually inspected for damage. Among the factors that might cause insulation damage are sharp corners, protuberances in cable tray, vibration, and thermal expansion and contraction.
- **24.2.2** Cable insulation should be tested in accordance with Chapter 11.
- **24.2.3** The number, size, and voltage of cables in the cable tray should not exceed that permitted by NFPA 70, *National Electrical Code*, Article 392. Communication or data-processing circuits are susceptible to interference problems when mixed with power circuits.

24.3 Cable Tray.

- **24.3.1** The cable tray should be inspected for intrusion of such items as pipe, hangers, or other equipment that could damage cables.
- **24.3.2** Deposits of dust, industrial process materials, and trash of any description should be checked and evaluated in terms of reduced ventilation and potential fire hazard.
- **24.3.3** Bolted connections between sections should be visually checked for corrosion and a sample retorquing done in suspect areas.
- **24.3.4** Certain atmospheric conditions might create fastener failure; therefore, a visual inspection should check for missing or damaged bolts, bolt heads, or nuts. Where necessary, they should be replaced with suitable hardware.
- 24.3.5 A visual and mechanical check should be made for adequacy of cable tray grounding,

Copyright NFPA

and all takeoff raceways should be bonded to the cable tray.

24.3.6 Covers should be inspected to ensure that physical damage does not reduce spacings or damage cables.

24.4 Low-Voltage (600-Volt) Busway.

- **24.4.1 General.** For the purpose of this section, a busway is considered to be a grounded metal enclosure containing factory-mounted, bare, or insulated conductors that are usually copper or aluminum bars, rods, or tubes.
- **24.4.1.1** A feeder busway is a busway that has no plug-in openings and that is intended primarily for conducting electric power from sources of supply to centers of distribution. It can have provisions for bolt-on devices.
- **24.4.1.2** A plug-in busway is a busway that has plug-in openings on one or both sides at spaced intervals, offering means for electrical connection of plug-in or bolt-on devices to the bus bars.
- **24.4.1.3 Metal-Enclosed Busway (5 kV to 15 kV).** Busway over 600 volts is referred to as metal-enclosed busway. Rated 5 kV and 15 kV, it consists of three types: isolated phase, segregated phase, and nonsegregated phase. Isolated phase and segregated phase are utility-type busways used in power-generation stations; industrial plants use nonsegregated phase for connection of transformers and switchgear and interconnection of switchgear lineups.

24.4.2 Electrical Joints.

- **24.4.2.1** Infrared inspection of busway joints can reveal loose connections and should be performed in accordance with Section 21.17.
- **24.4.2.2** Belleville spring washers are designed to help maintain proper tightness at the joints of bus bars and cable connections as the bus material expands and contracts under load. A flat or discolored Belleville spring washer could be a sign that the bolt has been overtorqued or that it has been overheated and lost its temper. If either of these situations exists, the washer should be replaced according to the manufacturers' specifications with regard to components and installation procedures.

24.4.3 Housing.

- **24.4.3.1** A visual check should be made to ensure that all joint covers and plug-in covers are in place and tight, to prevent accidental contact with energized conductors.
- **24.4.3.2** A visual check should be made for bonding of a bus and the equipment to which it is connected.
- **24.4.3.3** Trash, combustible material, and other debris should be removed from a busway. Ventilation openings should be clear.
- **24.4.3.4** On an indoor busway, a visual check should be made for evidence of exposure to liquids and the source eliminated or necessary protection provided.
- **24.4.3.5** On an outdoor busway, a visual check should be made to ascertain if weep hole Copyright NFPA

screws have been removed in accordance with the manufacturer's instructions.

24.4.4 Plugs.

- **24.4.4.1** Circuit breaker and fusible plugs should be checked for proper operation.
- **24.4.4.2** Plug hangers should be checked for tightness to ensure proper grounding.
- **24.4.4.3** If plug installation requires hook sticks for operation, hook sticks should be checked for ready accessibility.
- **24.4.5 Conduit and Raceways.** Cable and raceways should be visibly checked for proper bonding to fittings (plugs, tap boxes).
- **24.4.6 Insulators.** Bus supports should be visually inspected for dirt or tracking. Dirty insulators should be cleaned, and insulators that are cracked or show evidence of tracking should be replaced.
- **24.4.7 Heaters for Metal-Enclosed Busway.** A check should be made for proper operation of space heaters. Ammeters in heater supply circuits provide means for quick and frequent observation for proper heater loads to determine if one or more heater units is defective.

24.4.8 Testing.

- **24.4.8.1** Insulation-resistance testing should be performed in accordance with 21.9.2.3.
- **24.4.8.2** If there is uncertainty concerning the adequacy of the insulation after insulation-resistance testing, a high-potential test should be conducted. (See 21.9.3.1.) Normal high-potential voltages are twice rated voltage plus 1000 volts for 1 minute.
- **24.4.8.3 High-Potential Testing for Metal-Enclosed Busway.** High-potential tests in accordance with IEEE C37.20, *Standard for Metal-Enclosed Low-Voltage Power Circuit Breaker Switchgear*, and IEEE C37.23, *Standard for Metal-Enclosed Bus and Calculating Losses in Isolated-Phase Bus*, should be conducted at 75 percent of the rated insulation withstand levels shown in Table 24.4.8.3. Because this might be above the corona starting voltage of some busways, frequent testing is undesirable.

Table 24.4.8.3 Metal-Enclosed Bus Dielectric Withstand Test Voltages

Metal-Enclosed Bus Nominal Voltage (kV, rms)	Insulation Withstand Level (kV, rms) ^a	High-Potential Field Test (kV, rms) ^b
4.16	19.0	14
13.8	36.0	27
23.0	60.0	45
34.5	80.0	60

^a 1 minute

^b 75 percent of insulation withstand level

Chapter 25 Uninterruptible Power Supply (UPS) Systems

25.1 Introduction.

The basic function of uninterruptible power supply (UPS) systems is to preserve power to electrical or electronic equipment. Most UPS systems are intended to provide regulated power to prevent power supply fluctuations or aberrations that can damage or cause malfunction of sensitive electrical/electronic equipment, such as computers and process controllers. A UPS system represents a sizable investment in equipment specifically installed to provide reliable regulated power to equipment. Therefore, it is essential that the UPS system be maintained in a manner that the UPS itself will not fail.

- **25.1.1** The general recommendations in this chapter can be applied to all UPS systems; however, it should be noted that UPS systems are equipment-specific. As a result, manufacturers' instructions should be followed carefully in the performance of any maintenance on UPS equipment.
- **25.1.2** The maintenance program should be planned at the time the UPS system is put into service, to provide early attention to ensuring the continuing reliability of the system. The development of an EPM program should not be deferred until the end of the warranty period.
- **25.1.3** Maintenance should be scheduled at times that will least affect operations. Actual maintenance procedures should not be started until the users have been notified.
- **25.1.4** Only fully trained and qualified persons with proper test equipment should perform UPS maintenance.

25.2 Types of UPS Systems.

- **25.2.1** There are two basic types of UPS systems: static and rotary. Some systems are hybrid versions that incorporate some features of both. A basic rotary system is essentially a motor-generator set that provides isolation between the incoming power supply and the load and buffers out power supply aberrations by flywheel mechanical inertia effect.
- **25.2.2** A static unit rectifies incoming ac power to dc and then inverts the dc into ac of the proper voltage and frequency as input power to the load. A battery bank connected between the rectifier and inverter sections ensures an uninterrupted supply of dc power to the inverter section.
- **25.2.3** In the UPS industry, the term *module* refers to a single self-contained enclosure containing the power and control elements needed to achieve uninterrupted operation. These components include transformers, rectifier, inverter, and protective devices.
- **25.2.4** UPS systems can consist of one or more UPS modules connected in parallel either to increase the capacity of the system power rating or to provide redundancy in the event of a module malfunction or failure. Figure 25.2.4 illustrates a typical single-module static 3-phase UPS configuration. Note that in this configuration the solid-state switch (SSS) is internal to

the UPS module.

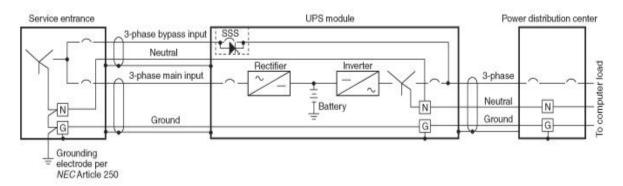


FIGURE 25.2.4 Typical Single-Module Static 3-Phase UPS Configuration.

25.2.4.1 Figure 25.2.4.1 illustrates a typical multimodule static 3-phase UPS configuration. Note that in this configuration the SSS is located in the stand-alone static transfer switch (STC) control cabinet.

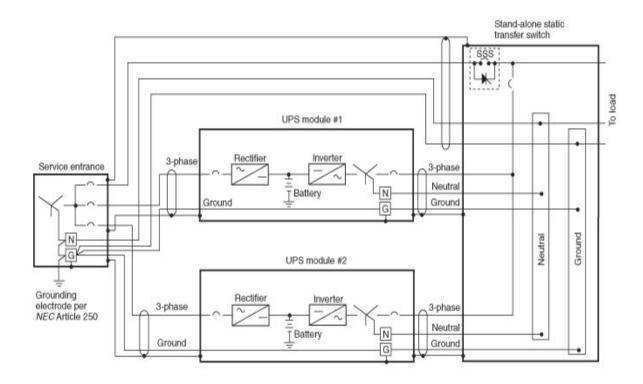


FIGURE 25.2.4.1 Typical Multimodule Static 3-Phase UPS Configuration.

25.2.5 Almost all UPS systems comprise these common elements: disconnecting means, bypass and transfer switches, protective devices and power switchgear, molded-case circuit breakers, and fuses. Depending on the type of UPS (static, rotary, or hybrid), the system might also include transformers, batteries, a battery charger, a rectifier/inverter unit (static system), and a motor-generator set (rotary system). The system might also be supported by a standby generating unit to permit operations to continue during sustained power outages.

25.3 UPS System Maintenance Procedures — General.

The routine maintenance procedures for components of UPS systems are covered in the particular equipment sections of this publication (i.e., switches, transfer switches, motor controllers, protective devices, batteries and battery chargers, transformers, rotating equipment). However, to aid in an organized preventive maintenance program, the following procedures are recommended.

CAUTION: It is important to avoid interruption of the power output of the UPS system. Extreme caution should be used in the servicing of the system to prevent unscheduled outages.

- **25.3.1** Disconnecting Means and Bypass Switches. These elements of the system should be maintained in accordance with the general maintenance procedures prescribed for the particular device in this document or the manufacturer's instructions as applicable.
- **25.3.2 Transfer Switches.** Transfer switches in UPS systems can be of either the manually operated or automatic type. Switching devices should be maintained in accordance with the appropriate sections of this document. If of the static type, they should be maintained in accordance with the general procedures for maintaining electronic equipment in Chapter 13 and the specific procedures provided by the manufacturer.
- **25.3.2.1** Transfer switches also should be maintained in accordance with the manufacturer's guidelines.
- **25.3.3** Circuit Protective Devices. Molded-case circuit breakers should be maintained in accordance with Chapter 14, fuses in accordance with Section 16.1, and other protective devices in accordance with Chapter 9. It is especially important to keep an ample supply of the proper types of spare fuses on hand. UPS systems are generally protected with special fuses. Installing an improper fuse on a UPS can result in severe damage to the UPS and the load equipment.
- **25.3.4 Batteries and Chargers.** Batteries and chargers should be maintained in accordance with manufacturers' instructions. See Chapter 9 for lead–acid batteries and chargers.
- **25.3.5 UPS Support Standby Generator.** If the UPS is supported by a standby generating unit, the generator should be maintained in accordance with the general procedures for maintaining rotating equipment in Chapter 16. It is important that a program be in effect to ensure that the generating unit is test-run on a regular basis and also subjected to a full-load test at least monthly for a minimum of 2 hours. In addition, generator start-up, transfer, restoration of power, retransfer, and auxiliary generator shutdown operation should be checked at least twice a year.
- **25.3.6 UPS Ventilation.** Ventilation air filters should be inspected on a regular basis. The frequency of cleaning or replacement depends on the amount of dust or dirt in the air at the installation and could range from as little as a week to as much as 6 months.
- **25.3.7 UPS Record Keeping.** It is strongly recommended that a complete and thorough logbook be maintained for the UPS in a suitable location. The logbook should be used to record all items concerning the UPS, including the following:

- (1) System operation normal settings and adjustments
- (2) Meter readings such as voltmeter, ammeter, and frequency meter at input and output, taken on a weekly basis (more frequently as necessary)
- (3) Record of abnormal operations, failures, and corrective action taken
- (4) Maintenance history
- **25.3.7.1** This log should be used for comparison to detect changes and degradation of the UPS circuitry, need for adjustment of controls, or other maintenance and testing.
- **25.3.7.2** Schematics, diagrams, operating procedures, record drawings, spare parts lists, troubleshooting techniques, maintenance procedures, and so on, should be kept in the same suitable location as the logbook.
- **25.3.8 Routine Maintenance.** On a semiannual basis, the insides of cabinets should be vacuumed and the tightness of all electrical connections verified. On an annual basis, tightness of electrical connections should be checked using infrared scanning techniques or testing with a digital low-resistance ohmmeter (see Section 21.12). Possible loose or corroded connections should be identified and cleaned and retightened as necessary.
- **25.3.8.1** All system alarms and indicating lights should be checked periodically for proper operation. On a quarterly basis, a visual inspection should be made for signs of overheating and corrosion. Wherever additional loads are connected to the UPS, the protective-device coordination, calibration, and proper operation of the modified system should be checked.
- **25.3.8.2** All heating, ventilating, air-conditioning, and humidity-control systems should be checked for proper operation and to ensure that the flow of cooling air is not blocked by obstructions in front of the vents. A check should be made for unusual sounds and odors because these signs might be the first indication of a potential malfunction.
- **25.3.8.3** The integrity of the grounding system should be maintained as required by Article 250 of NFPA 70, *National Electrical Code*. For separately derived systems, it should be ascertained that the neutral is properly grounded.
- **25.3.8.4** The neutral output current should be measured during peak loads every 3 months or when new equipment is added to the system. Measurements should be taken using a true rms-type ammeter to verify that the neutral conductor ampacity is not exceeded. Excessive current readings could indicate the presence of harmonics.
- **25.3.9 Rectifier and Inverter (Static Systems).** This equipment should be maintained in the manner prescribed for electronic equipment in Chapter 13. In many cases, a common enclosure houses the rectifier, inverter, and support battery charger sections of the UPS system.
- **25.3.9.1** On a semiannual basis, the inverter should be inspected visually for signs of leaking fluid from wave-forming capacitors, and the capacitors should be checked for swelling or discoloration. (See 9.9.3.)
- **25.3.9.2** The transformers and the heat sinks should be inspected visually for signs of

overheating.

- **25.3.9.3** Replacement of electrolytic capacitors should be considered at regular intervals not to exceed 5 years.
- **25.3.10 Motor and Generator (Rotary Systems).** The motor and generator should be maintained in accordance with the general procedures for maintaining rotating electrical equipment in Chapter 17.
- **25.3.11 UPS Modifications.** It is extremely important that all modifications be reflected in the record drawings and other pertinent documentation (see 25.3.7). Modifications to procedures should be recorded. Component failures and corrective action that affect the documentation, such as a change in components, should be indicated.
- **25.3.11.1** The manufacturer should be contacted periodically (2-year interval, maximum) for information on equipment upgrades and recommended revisions.

25.4 UPS Testing.

25.4.1 Introduction.

- **25.4.1.1** UPS systems require periodic testing to determine if the system is functioning as designed. Each manufacturer provides, with the equipment, specifications delineating the stated equipment performance (i.e., voltage variation, balance, regulation, and harmonic distortion). Batteries can weaken, which will shorten the backup time of the particular manufacturer's specifications. Transfer operations might be generating transients or momentary outages that can create havoc in a computer system. The recommendations in 25.4.2 through 25.5.2 are intended to identify problems and apprise maintenance personnel of the actual capabilities of the UPS system.
- **25.4.1.2** Testing should not be attempted unless those performing this work are completely familiar with the manufacturer's recommendations, specifications, tolerances, and safety precautions.

25.4.2 Preliminary Testing.

- **25.4.2.1** Prior to testing, all operating parameters, such as frequency, voltage, and current, at the bypass switch, UPS input, UPS output, batteries, and modules should be recorded where applicable.
- **25.4.2.2** Tests should be performed with the unit under load to ascertain the condition and reserve capability of the batteries. Refer to 9.9.4 for preparation of batteries prior to load testing of the system.
- **25.4.2.3** An infrared scan of the batteries and UPS equipment should be performed. The scan should look specifically at the battery connections with ac input power disconnected and the battery supplying power to the load. The unit should not be operated under load for long periods of time with covers removed, because cooling might be inhibited, and damage to the unit might result.
- **25.4.2.4** Any abnormalities that have been detected should be corrected prior to proceeding

with further testing.

25.5 System Tests.

25.5.1 Introduction.

- **25.5.1.1** Certain system tests might be necessary to fully determine the operating condition of a UPS system. These tests should be performed when warranted by special circumstances, such as repeated failure of a system to pass routine maintenance checks. The tests also should be conducted on a 2-year cycle or other periodic basis when the desired degree of reliability justifies the procedure. It might be necessary for an independent testing company or the equipment manufacturer to conduct these tests, because of the complexity and the sophisticated test instruments recommended. The units should be placed under load by the use of external load banks during such tests.
- **25.5.1.2** All UPS tests should require that the batteries be fully charged. (Some systems do not utilize battery backup.) Critical loads should be placed on isolation bypass, if available, or connected to another source.
- **25.5.1.3** It should be verified that all alarm and emergency shutdown functions are operating. It should be ascertained that the load transfers manually and automatically from UPS to bypass. It should be verified that all modules, when applicable, are functioning by load-testing each module individually prior to parallel load testing.
- **25.5.2** Special Tests. Simultaneous input and output readings of voltage, current, and frequency should be recorded. The external power source should be removed and reapplied to verify output stability.
- **25.5.2.1** Voltage and frequency recordings of UPS operation during transient response voltage tests should be provided; a high-speed recording device such as an oscillograph should be used to document the load tests described in 25.5.2.2 through 25.5.2.5.
- **25.5.2.2** The load should be stepped from 0 percent to 50 percent to 0 percent; 25 percent to 75 percent to 25 percent; 50 percent to 100 percent to 50 percent; 0 percent to 100 percent to 0 percent of UPS system rating.
- **25.5.2.3** It should be verified that the voltage regulation and frequency stability are within the manufacturer's specifications. In accordance with the manufacturer's specifications, the load bank should be increased to greater than 100 percent system load to ascertain that the system is within the manufacturer's ratings for input and output current overload rating.
- **25.5.2.4** Where applicable, UPS ac input power should be removed while the system is supplying 100 percent power to a load bank. The elapsed time until low battery voltage shutdown occurs should be recorded and compared with specifications. Voltage, current, and frequency should be read and recorded during tests. On restoration of UPS input power, it should be verified that the battery is recharging properly.
- **25.5.2.5** Any abnormalities should be corrected, and a check should be made to ensure that the battery is fully recharged prior to returning the system to service.

Chapter 26 System Studies

26.1 Introduction.

Electrical studies are an integral part of system design, operations, and maintenance. These engineering studies generally cover the following four areas:

- (1) Short-circuit studies
- (2) Coordination studies
- (3) Load-flow studies
- (4) Reliability studies
- **26.1.1** Copies of single-line diagrams and system study data should be given to the facility maintenance department. It is critical to efficient, safe system operation that the maintenance department keep the single-line diagrams current and discuss significant changes with the facility engineering department or consulting electrical engineer. It should be noted, however, that the information required for system studies is highly specialized, and outside help might be necessary.

26.2 Short-Circuit Studies.

- 26.2.1 Short circuits or fault currents represent a significant amount of destructive energy that can be released into electrical systems under abnormal conditions. During normal system operation, electrical energy is controlled and does useful work. However, under fault conditions, short-circuit currents can cause serious damage to electrical systems and equipment and create the potential for serious injury to personnel. Short-circuit currents can approach values as large as several hundred thousands of amperes.
- **26.2.1.1** During short-circuit conditions, thermal energy and magnetic forces are released into the electrical system. The thermal energy can cause insulation and conductor melting as well as explosions contributing to major equipment burndowns. Magnetic forces can bend bus bars and cause violent conductor whipping and distortion. These conditions have grim consequences on electrical systems, equipment, and personnel.
- **26.2.1.2** Protecting electrical systems against damage during short-circuit faults is required in NFPA 70, *National Electrical Code*, Sections 110.9 and 110.10. Additional information on short-circuit currents can be found in ANSI/IEEE 242, *Recommended Practice for Protection and Coordination of Industrial and Commercial Power Systems* (Buff Book), ANSI/IEEE 141, *Recommended Practice for Electric Power Distribution for Industrial Plants* (Red Book), ANSI/IEEE 241, *Recommended Practice for Electric Power Systems in Commercial Buildings* (Gray Book), and ANSI/IEEE 399, *Recommended Practice for Industrial and Commercial Power Systems Analysis* (Brown Book).
- **26.2.2** Baseline short-circuit studies should be performed when the facility electrical system is designed. They should be updated when a major modification or renovation takes place, but no more frequently than every 5 years. A copy of the most recent study should be kept Copyright NFPA

with other important maintenance documents.

26.2.2.1 The following are some of the conditions that might require an update of the baseline short-circuit study:

- (1) A change by the utility
- (2) A change in the primary or secondary system configuration within the facility
- (3) A change in the transformer size (kVA) or impedance (percent Z)
- (4) A change in conductor lengths or sizes
- (5) A change in the motors connected to the system

26.2.2.2 A periodic review of the electrical system configuration and equipment ratings should be checked against the permanent records. Specific attention should be paid to the physical changes in equipment, including changes in type and quantity. Significant changes should be communicated to the maintenance supervisor, the facility engineering department, or the electrical engineer.

26.2.2.3 A comprehensive treatment of short-circuit currents is beyond the scope of this document. However, there is a simple method to determine the maximum available short-circuit current at the transformer secondary terminals. This value can be calculated by multiplying the transformer full load amperes by 100, and dividing the product by the percent impedance of the transformer.

26.2.2.3.1 Figure 26.2.2.3.1 shows an example: 500 kVA transformer, 3-phase, 480 V primary, 208 Y/120 V secondary, 2 percent Z.

FIGURE 26.2.2.3.1 Example Calculation of Maximum Available Short-Circuit Current at the Transformer Secondary Terminals.

26.2.2.3.2 There are several computer programs commercially available to conduct thorough short-circuit calculation studies.

26.2.2.4 When modifications to the electrical system increase the value of available short-circuit amperes, a review of overcurrent protection device interrupting ratings and equipment withstand ratings should take place. This might require replacing overcurrent protective devices with devices having higher interrupting ratings or installing current-limiting devices such as current-limiting fuses, current-limiting circuit breakers, or current-limiting reactors. For silicon control rectifier (SCR) or diode input devices, change of the source impedance can affect equipment performance. Proper operation of this equipment depends on maintaining the source impedance within the rated range of the Copyright NFPA

device. The solutions to these engineering problems are the responsibility of the maintenance supervisor, the facility engineering department, or the electrical engineer.

26.3 Coordination Studies.

- **26.3.1** A coordination study, sometimes called a selectivity study, is done to improve power system reliability. [See 3.3.8 for definition of Coordination (Selective).]
- **26.3.1.1** Improper coordination can cause unnecessary power outages. For example, branch-circuit faults can open multiple upstream overcurrent devices. This process can escalate and cause major blackouts, resulting in the loss of production. Blackouts also affect personnel safety.
- **26.3.1.2** NFPA 70, *National Electrical Code*, and various IEEE standards contain the requirements and suggested practices to coordinate electrical systems. The IEEE standards include ANSI/IEEE 242, *Recommended Practice for Protection and Coordination of Industrial and Commercial Power Systems* (Buff Book), ANSI/IEEE 141, *Recommended Practice for Electric Power Distribution for Industrial Plants* (Red Book), ANSI/IEEE 241, *Recommended Practice for Electric Power Systems in Commercial Buildings* (Gray Book), and ANSI/IEEE 399, *Recommended Practice for Industrial and Commercial Power Systems Analysis* (Brown Book).
- **26.3.2** A baseline coordination study is generally made when the electrical system is designed. A copy of the study should be kept with other important facility maintenance documents.
- **26.3.3** Changes affecting the coordination of overcurrent devices in the electrical system include the following:
- (1) A change in the available short-circuit current
- (2) Replacing overcurrent devices with devices having different ratings or operating characteristics
- (3) Adjusting the settings on circuit breakers or relays
- (4) Changes in the electrical system configuration
- (5) Inadequate maintenance, testing, and calibration
- **26.3.4** The facility electrical system should be periodically reviewed for configuration changes, available short-circuit current changes, changes in fuse class or rating, changes in circuit-breaker type or ratings, and changes in adjustable trip settings on circuit breakers and relays.
- **26.3.4.1** Any changes noted in the coordinated performance of overcurrent protective devices should be reported to the maintenance supervisor, the facility engineering department, or the consulting electrical engineer.
- **26.3.4.2** Time—current curves should be kept up to date. Usually this is the responsibility of the facility engineering department or the consulting electrical engineer. However, it is vitally important for facility maintenance to observe and communicate coordination information to

the maintenance supervisor, facility engineering department, or consulting electrical engineer.

26.4 Load-Flow Studies.

- **26.4.1** Load-flow studies show the direction and amount of power flowing from available sources to every load. By means of such a study, the voltage, current, power, reactive power, and power factor at each point in the system can be determined.
- **26.4.1.1** This information is necessary before changes to the system can be planned and will assist in determining the operating configuration. This study also helps determine losses in the system. ANSI/IEEE 399, *Recommended Practice for Industrial and Commercial Power Systems Analysis* (Brown Book), provides more detailed information.
- **26.4.1.2** Load-flow studies should be done during the design phase of an electrical distribution system. This is called the baseline load-flow study. The study should be kept current and revised whenever significant increases or changes to the electrical system are completed.
- **26.4.1.3** Some of the events that result in load-flow changes include changing motors, motor horsepower, transformer size, or impedance; operating configurations not planned for in the existing study; adding or removing power-factor correction capacitors; and adding or removing loads.
- **26.4.2** It is important that the system single-line diagrams and operating configurations (both normal and emergency) be kept current along with the load-flow study.
- **26.4.3** Some signs that indicate a need to review a load-flow study include unbalanced voltages, voltage levels outside the equipment rating, inability of motors to accelerate to full load, motor starters dropping off line when other loads are energized, or other signs of voltage drop. Additional signs also include poor system power factor, transformer or circuit overloading during normal system operation, and unacceptable overloading when the system is operated in the emergency configuration.
- **26.4.4** When changes to the electrical system are made, the maintenance department should note the changes on their copy of the single-line diagram. Significant changes, as mentioned in 24.4.1.3, should be reviewed with the maintenance supervisor, facility engineering department, or the consulting electrical engineer to determine if changes are necessary to the single-line diagram.

26.5 Reliability Studies.

- **26.5.1** A reliability study is conducted on facility electrical systems to identify equipment and circuit configurations that can lead to unplanned outages.
- **26.5.1.1** The study methods are based on probability theory. The computed reliability of alternative system designs as well as the selection and maintenance of components can be made to determine the most economical system improvements. A complete study considering all the alternatives to improve system performance add technical credibility to budgetary requests for capital improvements.
- **26.5.1.2** An immediate benefit from this investigation is the listing of all system components Copyright NFPA

with their failure modes, frequencies, and consequences. This allows weakness in component selection to be identified prior to calculation of risk indices.

- 26.5.1.3 ANSI/IEEE 399, Recommended Practice for Industrial and Commercial Power Systems Analysis (Brown Book), Chapter 12, provides more detailed information. In addition, there are publications that deal with reliability calculations, including TM 5-698-1, Reliability/Availability of Electrical and Mechanical Systems for Command, Control, Communications, Computer, Intelligence, Surveillance, and Reconnaissance (C4ISR) Facilities; TM 5-698-2, Reliability-Centered Maintenance (RCM) for Command, Control, Communications, Computer, Intelligence, Surveillance, and Reconnaissance (C4ISR) Facilities; and TM 5-698-3, Reliability Primer for Command, Control, Communications, Computer, Intelligence, Surveillance, and Reconnaissance (C4ISR) Facilities.
- **26.5.2** A reliability study can be conducted when alternative systems, components, or technologies are being considered to improve reliability. Changes affecting the reliability of an electrical system or component can include one or more of the following:
- (1) System design
- (2) Reliability of the power source
- (3) Equipment selection
- (4) Quality of maintenance
- (5) Age of equipment
- (6) Equipment operating environment
- (7) Availability of spare parts
- **26.5.2.1** Generally, the existing system design cannot be significantly altered; however, it is possible to meet with the utility and discuss methods for increasing the reliability of service. The selection of reliable equipment and the need for additional maintenance can be evaluated from an economic standpoint. The age of equipment and the environment in which it is operated affects the probability of equipment failure. Spare parts should be monitored and inspected periodically to ensure that they will be available when needed. The study should be kept current and revised whenever a significant change to the electrical system has been made.
- **26.5.3** A reliability study begins with the system configuration documented by a single-line diagram. Reliability numerics are applied to a system model identifying system outages based on component downtime and system interactions. A failure modes and effect analysis (FMEA) is used to generate a list of events that can lead to system interruption and includes the probability of each event and its consequences. An example of an FMEA table for a facility's electrical equipment is shown in Table 26.5.3. The frequency of failures per year can be obtained from ANSI/IEEE 493, *Recommended Practice for the Design of Reliable Industrial and Commercial Power Systems* (Gold Book).

DE ODIAINE ITOM ANSI/IEEE 493, Recommenaea Practice for the Design of Rettable Industrial and Commercial Power Systems (Gold Book).

Table 26.5.3 Sample FMEA Table

System/		Frequency	Consequence
Component	Failure Mode	per Year	(\$1000)
Breaker B1	Internal fault	0.0036	150
Transformer T1	Winding failure	0.0062	260
Motor M1	Stator damage	0.0762	225

26.5.4 The information in Table 26.5.3 can be analyzed using event-tree analysis or by computing a system reliability index. The event tree is used to further break down each system or component failure into a series of possible scenarios, each with an assigned probability. The outcome is a range of consequences for each event tree.

26.5.4.1 A system reliability index assigns a number (usually expressed in hours down per year) for each system configuration. The calculations for alternative system configurations can be redone until an acceptable downtime per year is obtained.

Chapter 27 Power Quality

27.1 Introduction.

27.1.1 Special Terms. The following special terms are used in this chapter.

27.1.1.1 Bonding (Bonded). The permanent joining of metallic parts to form an electrically conductive path that will ensure electrical continuity and the capacity to conduct safely any current likely to be imposed. The "permanent joining" can be accomplished by the normal devices used to fasten clean, noncorroded parts together. Machine screws, bolts, brackets, or retainers necessary to allow equipment to function properly are items typically employed for this purpose. While welding and brazing can also be utilized, these preclude easy disassembly, and welding can increase rather than decrease resistance across joints. Metallic parts that are permanently joined to form an electrically conductive path that will ensure electrical continuity and the capacity to conduct safely any current likely to be imposed are bonded.

27.1.1.2 Bonding Jumper. A reliable conductor to ensure the required electrical conductivity between metal parts required to be electrically connected. This conductor can be solid or stranded or braided, and connected by compatible fittings to separate parts to provide this electrically conductive path. The bonding jumper can also be a screw or a bolt. This bonding jumper can be used alone or in conjunction with other electrically conductive paths. It generally is associated with the equipment-grounding path, but might or might not be electrically linked for a lowest impedance path.

27.1.1.3 Central Grounding Point. The location where the interconnected parts of the grounding system are connected in a common enclosure. The central grounding point

- provides a common connection point for termination of the feeder or branch-circuit equipment-grounding conductors.
- **27.1.1.4** Common Mode Noise. Undesirable electrical signals that exist between a circuit conductor and the grounding conductor.
- **27.1.1.5** Equipment-Grounding Conductor. The conductor used to connect the noncurrent-carrying metal parts of equipment, raceways, and other enclosures to the system grounded conductor, the grounding electrode conductor, or both, at the service equipment or at the source of a separately derived system.
- **27.1.1.6 Grounded Conductor.** A system or circuit conductor that is intentionally grounded. This intentional grounding to earth or some conducting body that serves in place of earth takes place at the premises service location or at a separately derived source. Control circuit transformers are permitted to have a secondary conductor bonded to a metallic surface that is in turn bonded to the supply equipment-grounding conductor. Examples of grounded system conductors would be a grounded system neutral conductor (3 phase or split phase) or a grounded phase conductor of a 3-phase, 3-wire, delta system.
- **27.1.1.7 Grounding Electrode Conductor.** The conductor used to connect the grounding electrode to the equipment-grounding conductor, to the grounded conductor, or to both, of the circuit at the service equipment or at the source of a separately derived system. This conductor must be connected to provide the lowest impedance to earth for surge current due to lightning, switching activities from either or both of the supply and load side, and to reduce touch potentials when equipment insulation failures occur.
- **27.1.1.8 Harmonics.** Those voltages or currents whose frequencies are integer multiples of the fundamental frequency.
- **27.1.1.9 Interharmonics.** Not all frequencies that occur on an electrical power system are integer multiples of the fundamental frequency (usually 60 Hz), as are harmonics. Some loads draw currents that result in voltages that are between harmonic frequencies or less than the fundamental frequency. These frequencies are referred to as interharmonics and can be made of discrete frequencies or as a wide-band spectrum. A special category of these interharmonics is called subharmonics, in which the frequencies involved are less than the fundamental power line frequency.
- **27.1.1.10 Long-Duration Undervoltage.** A decrease of the supply voltage to less than 90 percent of the nominal voltage for a time duration greater than 1 minute. [See IEEE 1159, Recommended Practice on Monitoring Electric Power Quality, Table 4-2.]
- **27.1.1.11 Multipoint Grounding.** Multipoint grounding consists of interconnecting primary and secondary neutrals of the transformer. The secondary and primary neutral are common, and they both utilize the same grounding electrode that connects the system to earth.
- **27.1.1.11.1** These provide corresponding neutral circuit conductors in both the primary and secondary single-phase and wye-connected windings. This provides a low impedance path between each system and allows ground current disturbances to flow freely between them with little or no attenuation. Although there are advantages to these "wye-wye" systems, they can contribute to a common mode noise problem.

- **27.1.1.11.2** Multipoint grounding can also be found with systems where one or both windings are delta connected.
- **27.1.1.11.3** The primary and secondary windings are only casually interconnected, and this provides significant impedance to any current flow between them, since there are no corresponding circuit conductors that can be directly connected together. Grounding a circuit conductor at any point up to the service entrance disconnect location of the premises is permitted. Multipoint grounding of separately derived systems is not permitted, and single-phase 2-wire, single-phase 3-wire (split-phase), or delta-wye multiphase systems are recommended.
- **27.1.1.12 Sag.** A decrease to between 10 percent and 90 percent of the normal voltage at the power frequency for durations of 0.5 cycle to 1 minute. (If the voltage drops below 10 percent of the normal voltage, then this is classified as an interruption.) It is further classified into three categories: (1) Instantaneous 0.5 cycle to 30 cycles; (2) Momentary 30 cycles to 3 seconds; and (3) Temporary 3 seconds to 1 minute.
- **27.1.1.13 Separately Derived System.** A premises wiring system whose power is derived from a battery, a solar photovoltaic system, or from a generator, transformer, or converter windings, and that has no direct electrical connection, including a solidly connected grounded circuit conductor, to supply conductors originating in another system. Equipment-grounding conductors are not supply conductors and are to be interconnected.
- **27.1.1.14 Sustained Voltage Interruption.** The loss of the supply voltage to less than 10 percent on one or more phases for a period greater than 1 minute.
- **27.1.1.15** Swell. An increase to between 110 percent and 180 percent in normal voltage at the power frequency durations from 0.5 cycle to 1 minute. It is further classified into three categories: (1) instantaneous 0.5 cycle to 30 cycles; (2) momentary 30 cycles to 3 seconds; and (3) temporary 3 seconds to 1 minute.
- **27.1.1.16 Transients.** Transients (formerly referred to as surges, spikes, or impulses) are very short duration, high amplitude excursions outside of the limits of the normal voltage and current waveform. Waveshapes of the excursions are usually unidirectional pulses or decaying amplitude, high frequency oscillations. Durations range from fractions of a microsecond to milliseconds, and the maximum duration is on the order of one half-cycle of the power frequency. Instantaneous amplitudes of voltage transients can reach thousands of volts.
- **27.1.1.17 Transverse Mode Noise.** Undesirable electrical signals that exist between a pair of circuit conductors. These signals are sometimes referred to as normal or differential mode noise.
- **27.1.1.18 Unbalanced Voltages.** Unequal voltage values on three-phase circuits that can exist anywhere on the power distribution system.

27.1.2 General.

27.1.2.1 Power quality addresses deviations and interruptions from the pure, ideal power supply. Alternating-current (ac) power used to run equipment often consists of distorted,

nonsinusoidal waveforms (nonlinear); waveforms in the three phases of a 3-phase circuit commonly differs slightly in size and shape; and circuit voltage can change as the load on the circuit changes.

- **27.1.2.2** Historically, most equipment has been moderately tolerant of typical power quality problems. Some equipment with electronic components is more susceptible to power quality problems. Some equipment conducts current during only part of the power frequency cycle. These are typically called nonlinear loads and are sources of harmonic currents. Rectified input switch—mode power supplies; arcing devices, including fluorescent lamps; and other nonlinear devices affect waveforms and cause a decrease in power quality.
- **27.1.2.3** Power quality problems are frequently caused by equipment or conditions on the customer's premises. Power quality problems are less frequently caused by utility generating, transmission, or distribution equipment. However, off-site equipment belonging to neighbors and line exposures such as from capacitor switching, lightning, vehicles, contaminants, and wildlife can create problems that are carried by the utility to its customers.
- **27.1.2.4** Poor power quality can cause electrical faults, jeopardize personal safety, damage or reduce the life of electrical and electronic equipment, cause an increased fire hazard, and reduce equipment performance and productivity. Poor power quality can also affect data and communications. Maintaining the quality of the entire process might require monitoring of the process transducers and associated communication systems, as well as the electrical supply.
- **27.1.2.5** While power quality problems are often identified by maintenance personnel, diagnosing problems and finding solutions can be difficult. Some solutions require knowledge of electrical engineering, testing, and specialized equipment. A solution might require a custom-engineered approach, not merely equipment repair, upgrade, or replacement.
- **27.1.2.6** Power quality disturbances include the following:
- (1) Harmonics imposed on the fundamental sine wave
- (2) Voltage transients
- (3) Voltage sags and swells
- (4) Long-duration undervoltage and sustained voltage interruptions
- (5) Unbalanced voltages and single phasing (partial interruption)
- (6) Inadvertent and inadequate grounding
- (7) Electrical noise
- (8) Interharmonics
- **27.1.2.6.1** For common power system disturbances, a waveform of a sag cleared by the supply line circuit breaker, and a waveform with transient from power factor capacitor switching, see Figure 27.1.2.6.1(a), Figure 27.1.2.6.1(b), and Figure 27.1.2.6.1(c).




FIGURE 27.1.2.6.1(a) Common Power System Disturbances.

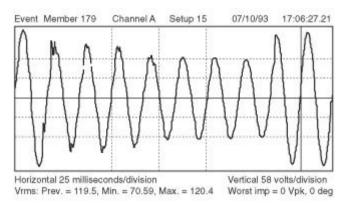


FIGURE 27.1.2.6.1(b) Waveform of Sag Cleared by Supply Line Breaker Operation.

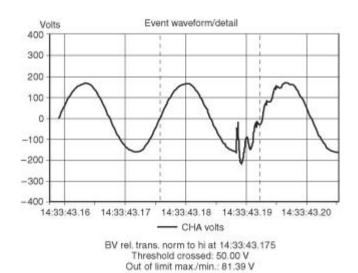


FIGURE 27.1.2.6.1(c) Waveform with Transient from Power Factor Capacitor Switching.

27.2 Harmonics.

27.2.1 Introduction.

27.2.1.1 The fundamental frequency (usually 60 Hz) is the predominant, intended frequency of a power system. Harmonics are identified by their harmonic number. For example, with a 60 Hz fundamental frequency, 120 Hz is the second harmonic, 180 Hz the third harmonic, and 300 Hz the fifth harmonic.

27.2.1.2 Harmonics distort and change the magnitude of the fundamental. (See Figure Copyright NFPA

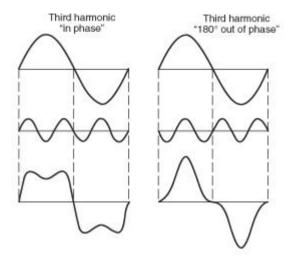


FIGURE 27.2.1.2 Harmonics and the Fundamental Waveform.

27.2.1.3 Harmonics imposed on the power system are usually expressed as a percentage of the fundamental voltage or current. For example, the total harmonic distortion (THD) of a voltage waveform is stated as a percentage and can be defined as 100 times the square root of the ratio, or root mean square (rms), of the sum of the squares of the rms amplitudes of the individual harmonics, divided by the square of the voltage at the fundamental frequency. This value should be considered related to the maximum load capacity and is represented by the following formula:

$$THD = \left(\frac{100 \times \sqrt{\sum V_b^2}}{V_f}\right) \%$$

where:

THD = total harmonic distortion (percent)

 $V_h = \text{rms voltage of the individual harmonic}$

 $V_t = \text{rms voltage of the fundamental frequency}$

27.2.1.4 Line voltage notching is a form of harmonic distortion, as shown in Figure 27.2.1.4. In many cases, line voltage notching caused by phase-controlled rectifiers can be more of a problem than current harmonics. Commutation notches can affect the performance of electronic equipment.

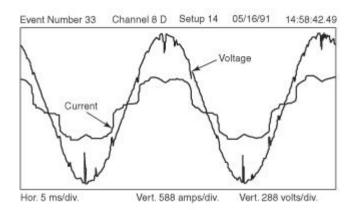


FIGURE 27.2.1.4 Line Voltage Notching Harmonic Distortion.

27.2.2 Harmonic Symptoms and Effects.

27.2.2.1 Harmonics are caused by nonlinear loads in which the current waveform does not conform to the waveform of the impressed voltage. Some of the symptoms and effects of nonlinear loads are comparable to other, more readily recognized symptoms such as overloading and can be difficult to diagnose.

27.2.2.1.1 Problems created by harmonics might include the following:

- (1) Excessive neutral current
- (2) Overheating of transformers, motors, generators, solenoid coils, and lighting ballasts
- (3) Nuisance operation of protective devices
- (4) Unexplained blowing of fuses on power-factor correction capacitors
- (5) Unusual audible noise in electrical switchgear
- (6) Voltage and current waveform distortion that results in misoperation or failure of solid-state electronic equipment
- (7) Audible noise interference on telephone circuits
- (8) Loss of data on computer systems
- (9) False operation of facility distribution power line carrier control systems such as lights, clocks, and load shedding
- (10) Failure of uninterruptible power supply (UPS) systems to properly transfer
- (11) Shaft voltages and currents on electric motors causing bearing failure if the bearings are not insulated

27.2.2.1.2 The neutrals of 3-phase, 4-wire systems are especially susceptible to harmonic problems. On such circuits, each phase is displaced by 120 electrical degrees from adjacent phases. If the load is balanced and no harmonics are present, the phase currents cancel vectorially, and the neutral current is zero. However, odd triplen harmonics, such as the third, ninth, and fifteenth, are additive rather than subtractive in the neutral and do not

cancel.

27.2.2.1.3 For example, in a 3-phase, 4-wire system, if there are 30 amperes of triplen harmonic current present in a 100-ampere phase current, 90 amperes of triplen harmonic current will flow in the neutral. Neutral current will be higher if the phase currents are unbalanced.

27.2.2.2 Capacitors do not create harmonics, but capacitor failures and blown fuses on power-factor improvement capacitors are often attributable to harmonics. This situation occurs because capacitance can combine with circuit inductance to establish a resonant condition when harmonics are present. Resonance can cause high voltages to appear across elements of the power system and can cause high currents to flow.

27.2.2.2.1 Proper analysis of harmonics involves determining the amount of harmonic current that can be injected by nonlinear loads and then determining the system response to these harmonic currents. The system response usually will be dominated by the interaction of shunt capacitor banks (power-factor correction capacitors) with the system source inductance (step-down transformer). An example of frequency response characteristic is shown in Figure 27.2.2.2.1.

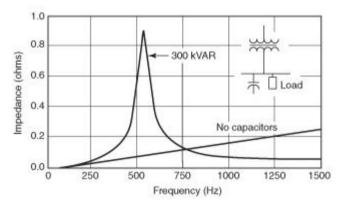


FIGURE 27.2.2.1 Example of Frequency Response Characteristic for a 1500 kVA, 13.8/0.48 kV, 6.0 Percent Transformer and a 300 kVAR, 480 V Capacitor Bank.

27.2.2.2.2 The parallel resonance occurs at the frequency where the shunt capacitive reactance is equal to the inductive source reactance and can be expressed in terms of the 60 Hz values as follows:

$$h = \sqrt{\frac{X_{c}}{X_{sc}}} = \sqrt{\frac{kVA_{sc}}{kVARcap}}$$

where:

h = resonant frequency as a multiple of the fundamental frequency

 X_c = shunt capacitive reactance of capacitor

 X_{sc} = short-circuit reactance of source

 kVA_{sc} = short-circuit kVA of source

kVARcap = total capacitor kVAR

- **27.2.2.2.3** This simple relationship provides an excellent first check of whether harmonics are likely to be a problem. Almost all harmonic distortion problems occur when this parallel resonance moves close to the fifth or seventh harmonic, since these are the largest harmonic current components in most nonlinear loads. However, the eleventh and thirteenth harmonics can also be a problem when nonlinear loads are a large percentage of the total load. If a parallel resonance exists at one of the characteristic harmonics, the harmonic currents injected by the nonlinear loads are magnified, and high magnitudes of voltage distortion occur.
- **27.2.2.3** Harmonics can cause overheating, overvoltage, and excessive noise in transformers. Overheating is a compound effect of increased winding *I*²*R* losses due to both excessive current and skin effect and increased eddy current and hysteresis losses in the transformer core.
- **27.2.2.3.1** On a 3-phase delta-wye-connected transformer, third harmonics generated by the transformer secondary loads are reflected into the primary in the form of circulating currents in the delta-connected primary. It is therefore especially important to use a true rms-reading ammeter when checking a transformer's secondary line, neutral, and, where practical and safe, primary winding current, for possible overload.
- **27.2.2.3.2** Transformers with relatively high impedance are susceptible to overvoltage and core saturation in the presence of harmonics, causing increased current flow and resultant additional heating. Higher voltages can cause excessive 60 Hz hum, and harmonics can contribute higher-pitched audible noise.
- **27.2.2.3.3** Motors are also subject to overheating in the presence of harmonics, because of skin effect and increased iron losses. Where fifth harmonics are present, negative-sequence currents will also flow in opposition to the current necessary to develop the torque required for rotation. This counter torque contributes to overheating, and in some extreme cases can result in pulsating torque and excessive vibration.
- **27.2.2.4** Generators are susceptible to overheating in the presence of harmonics for essentially the same reasons as are motors. Generators equipped with solid-state controls can also operate erratically in the presence of harmonics, especially if the controls incorporate zero-crossing sensing circuits. Generators can cause harmonics due to internal construction. The type of generating winding pitch can determine the magnitude and types of harmonics generated.
- **27.2.2.4.1** Generators operating in parallel should have the same winding pitch to minimize problems. Where generators operate in parallel with a common neutral, third harmonic currents can circulate between the machines and cause overheating. High resistance grounding of these generators can adequately limit the harmonic current.
- **27.2.2.5** As is the case with all equipment operating on the principle of electromagnetic induction, ferromagnetic ballasts will also develop excessive heating where harmonics are present. The presence of harmonics can contribute to inaccurate readings (high or low) of induction disc meters.
- **27.2.2.6** Electrical panels and cables can also exhibit overheating because of excessive

neutral current; excessive heating might be detected as discoloration. Harmonics can also cause conductor-insulation failure because of voltage stress and corona discharge.

- **27.2.2.7** Instrumentation transformers such as current and potential transformers can transfer harmonics from a primary to a secondary, resulting in misoperation of instrumentation, protective relaying, and control circuits.
- **27.2.2.8** Computers and other computer-type equipment such as programmable logic controllers (PLCs) are susceptible to harmonic-distorted waveforms, and the possibility of harmonics should be investigated on circuits serving such equipment where neutral-to-ground voltages in excess of 2 volts are measured at the equipment. Harmonic effects on such equipment can range from data errors, process controls operating out of sequence, and erratic operation of production robots or machine tools, through total failure of the electronic equipment.
- **27.2.2.8.1** In addition to polluting data and control signal transmissions, harmonics can be a source of audible noise on telephone communication circuits. Audible noise can be induced in communication conductors run in proximity to harmonic-bearing conductors. For this reason, voice communication lines should be shielded or rerouted. ANSI/IEEE 519, *Recommended Practices and Requirements for Harmonic Control in Electrical Power Systems*, contains additional information on the telephone interference factor (TIF).
- **27.2.3** Causes of Harmonic Distortion. Harmonics from neighboring utility customers can be introduced to the premises by the incoming utility supply. Harmonics originate on the premises in most cases.
- **27.2.3.1** All equipment operating on the principle of ferromagnetics produces harmonics when operating in the saturation region of the magnetic core. This equipment includes transformers, motors, generators, induction heaters, solenoid coils, lifting magnets, and iron-core arc-discharge lighting ballasts. The extent to which harmonics are generated varies with the type of equipment.
- **27.2.3.2** Arc-producing equipment, such as welding machines and arc furnaces, also develops harmonics. Arc-discharge lamps produce harmonics over and above those introduced by the lamp ballast.
- **27.2.3.3** The most significant contributor to harmonics is often electronic equipment, especially equipment that utilizes a rectified-input switching-mode power supply. The wave-chopping characteristic operation of thyristors, silicon-controlled rectifiers, transistors, and diodes develops current waveforms that do not conform to the applied voltage waveform and therefore develops harmonics. Included among electronic equipment that is rich in harmonic generation are welders, battery chargers, rectifiers, ac and dc adjustable-speed motor drives, electronic lighting ballasts, computers, printers, reproducing machines, and programmable logic controllers.

27.2.4 Harmonic Surveying and Testing.

27.2.4.1 Where harmonics are suspected as the cause of problems, it is necessary to determine the magnitude of the harmonic frequencies and their contribution to THD. This information will define the extent of the harmonic problem, provide clues as to causes of the

harmonics, and provide the data needed to engineer solutions. It will also permit calculation of transformer derating factors in accordance with ANSI/IEEE C57.110, *Recommended Practice for Establishing Transformer Capability When Supplying Nonsinusoidal Load Currents*.

- **27.2.4.2** The extent of harmonic surveying and testing will vary widely depending on the severity of the problem, available resources, and the facility's particular needs. A simple test can be performed to confirm or refute the existence of harmonics.
- **27.2.4.2.1** This test is conducted by taking current readings with an average responding ammeter and a true rms responding ammeter. If harmonics are present, the average responding instrument generally yields a lower reading than the rms responding meter.
- **27.2.4.3** The presence of odd triplen harmonics (third, ninth, fifteenth, and so on) can be readily determined on 4-wire "wye" circuits by measuring neutral current with a true rms responding ammeter and comparing it with current to be expected on the basis of rms phase currents. Neutral-to-ground voltages in excess of 2 volts measured at the equipment can also indicate the presence of triplen harmonics. Where such readings determine that triplen harmonics are present, analysis should be undertaken to determine their specific frequencies and magnitudes. Instruments available for harmonic analysis include oscilloscopes, harmonic analyzers, and spectrum analyzers.
- **27.2.4.4** Oscilloscopes readily permit visual observation of the waveform to determine if it deviates from a sine wave or if line voltage notching exists.
 - **CAUTION:** Because one side of the oscilloscope probe might be common to the case, a line isolation device should be used between the probe and the line voltage being measured.
- **27.2.4.4.1** Harmonic analyzers measure the contribution of harmonic voltage and current at each frequency and calculate THD. Harmonic analyzers are available in a broad range of sophistication, with some also measuring circuit parameters such as kW, kVA, and power factor and some determining transformer derating factors and telephone interference factors. Spectrum analyzers provide detailed waveform analysis indicating the harmonic frequencies imposed on the fundamental.
- **27.2.4.5** Total harmonic distortion can vary significantly with load. Therefore, readings should be taken under different load conditions. Measurements should be taken to determine the location and extent of harmonics. Readings should be taken on all phases and neutrals of 3-phase, 4-wire systems and especially on 3-phase circuits that serve single-phase loads.
- **27.2.4.6** Voltage measurements on low-voltage circuits can be taken easily by connecting instrumentation directly to the measured point. High voltages, however, require the use of instrument potential transformers (PTs). The PTs should be dedicated to the test; existing bus PTs serving relaying and bus instrumentation should not be used. The measurement instrument should have an input impedance of at least 100 kilohms, and the instrument manufacturer's connection and operating instructions should always be followed.
- **27.2.4.7** Each facility differs in its tolerance to harmonic distortion. There are guidelines that can be followed to determine if harmonics are within acceptable limits. ANSI/IEEE 519,

Recommended Practices and Requirements for Harmonic Control in Electrical Power Systems, is one such standard. Other information sources include the following:

- (1) ANSI/IEEE C57.110, Recommended Practice for Establishing Transformer Capability When Supplying Nonsinusoidal Load Currents
- (2) ANSI/IEEE 1100, Recommended Practice for Powering and Grounding Sensitive Electronic Equipment (Emerald Book)
- **27.2.5 Recommended Solutions to Harmonic Problems.** Solutions to harmonic problems are unique in nature and depend on the results of the harmonic survey and testing and subsequent analysis. Recommended solutions include any or all of the following:
- (1) Derating of existing equipment
- (2) Replacement of existing equipment with higher rated equipment
- (3) Use of delta-wye- or delta-delta-connected transformers as appropriate
- (4) Use of equipment specifically rated for harmonic circuits
- (5) Better selection and application of protective and metering devices
- (6) Use of rms-sensing protective devices
- (7) Balancing of single-phase loads on 3-phase systems
- (8) Use of 3-phase rectifiers instead of single-phase rectifiers
- (9) Relocating power-factor improvement capacitors
- (10) Shielding of conductors and electronic equipment
- (11) Isolation of harmonic-sensitive loads
- (12) Use of filters to block or shunt off harmonics
- (13) Specification of new equipment for low harmonic content
- (14) Periodic surveys and power-system adjustments/modifications as might be indicated by survey results
- (15) Increased neutral conductor size
- (16) Replacement or repair of harmonic producing equipment
- (17) Utilization of a motor or generator with an insulated bearing
- **27.2.5.1** In some cases, solutions can be engineered and implemented with in-house personnel; in other cases, it might be necessary to engage personnel with specialized expertise and equipment.

27.3 Transients (Surges).

27.3.1 Introduction. Transient current is proportional to the transient voltage and the system impedance. System impedance includes source impedance and transient impedance.

For rating transient protective devices, transient energy is usually expressed in joules (watt-seconds).

27.3.2 Transient Symptoms and Effects.

- **27.3.2.1** The effect and the severity of the transient depend on magnitude, duration, and frequency. Low-energy transients can cause equipment to malfunction. High-energy transients can damage equipment. When transient-sensitive equipment or transient-producing equipment is installed, problems previously not encountered with existing equipment can occur. In addition, if transient-sensitive equipment and transient-producing equipment are moved electrically closer to each other, problems can result.
- **27.3.2.2** Within electrical systems without transient voltage protection, transient voltages are limited by flashover of clearances. When the transient reaches breakdown voltage, an arc is established through the air or across the surface of insulation, limiting the maximum transient voltage on the system. Typically, in low-voltage (1000 volts or less) distribution, the maximum transient is limited to about 6 kV for indoor systems and to about 10 kV to 20 kV for outdoor systems. The transient voltage can be limited to lesser values by surge protective devices.
- **27.3.2.3** Problems associated with transients include the following:
- (1) Unusual equipment damage due to insulation failures or arc-over, even with proven maintenance practices
- (2) Damage to electronic equipment components due to their inability to withstand transient voltages
- (3) Total failure, lock-up, or misoperation of computer or other microprocessor-based equipment

27.3.3 Causes of Transients.

- **27.3.3.1** Transient voltages in low-voltage ac power circuits usually originate from lightning effects (direct or indirect) on the power system or from switching operation.
- **27.3.3.2** Lightning strikes can cause severe transients because of the very high voltages and currents. Lightning can enter the electrical circuit directly or can be induced by nearby strikes. This might also produce a transient on the grounded and grounding systems.
- **27.3.3.3** Transients can be caused by the switching of inductive or capacitive loads, such as motors, ballasts, transformers, or capacitor banks. Arcing contacts can also cause transients.
- **27.3.3.4** Transients can result from abnormal conditions on the power system, such as phase-to-phase or phase-to-ground short circuits.

27.3.4 Transient Monitoring.

27.3.4.1 Monitoring can be used to determine the presence of transients. Storage-type, high-bandwidth oscilloscopes with high-voltage capability can be used, but more information can be obtained from the use of power disturbance analyzers specifically designed for transient and other types of power-quality problems. Monitoring might be required over an

extended period of time, due to the characteristics of transients, which vary as loads and system configurations change.

- **27.3.4.2** Monitoring is often performed at specific locations where a sensitive load is connected or is to be connected. Other devices on the monitored circuit, such as the power quality monitor itself, can contain surge-protection devices that limit transients and distort the results. If possible, use an alternative power source for powering monitoring equipment.
- **27.3.4.3** Monitoring can be required phase-to-phase, phase-to-ground, phase-to-neutral, and neutral-to-ground to develop a complete profile of the system.

27.3.5 Recommended Solutions to Transient Problems.

- **27.3.5.1** The following are devices intended for the suppression of transients: surge arresters, surge capacitors, surge protectors, inductive reactors, and surge suppressors. Proper grounding of all circuits intended to be grounded is required for correct operation of these devices. The manufacturer's instructions should be followed when any of these devices is installed. Engineering evaluation might be required to select the proper type and rating of these devices.
- **27.3.5.2** Surge arresters are intended to be installed ahead of the service entrance equipment for limiting transient voltage by discharging or bypassing transient currents to ground. They typically provide protection for the effects of lightning.
- **27.3.5.3** Surge capacitors are placed in a circuit to slow the transient voltage rise time. By spreading out the voltage increase over a longer time span, less electrical stress occurs to equipment subjected to the transient.
- **27.3.5.4** Surge protectors are gas-tube devices or assemblies composed of one or more gas-tube devices. They are used for low-voltage applications (up to 1000 volts rms or 1200 volts dc.)
- **27.3.5.5** A transient voltage surge suppressor (TVSS) is a device intended for installation on the load side of the main overcurrent protection in circuits not exceeding 600 volts rms. These devices comprise any combination of linear or nonlinear circuit elements (i.e., varistors, avalanche diodes, and gas tubes) and are intended for limiting transient voltages by diverting or limiting surge current. Filters for electromagnetic interference (EMI) reduction can also be incorporated within TVSS devices.
- **27.3.5.6** The following are typical locations where transient protection is installed: power circuits at the service entrance, communication circuits entering the building, computer room power, and at susceptible loads.
- **27.3.5.7** Inductive reactors placed in series with the supply circuit can attenuate off-site transients. Inductive reactors placed in series with noisy equipment can localize transients to the equipment.

27.4 Voltage Sags and Swells.

27.4.1 Sags and swells are the most common types of power quality disturbances. Millions of dollars are lost in productivity each year in the United States due to these disturbances. A

simple understanding of their causes will help obtain effective solutions to minimize these disturbances.

27.4.1.1 Different equipment might require a different susceptibility curve. (See Figure 27.4.1.1 for an example of a curve.)

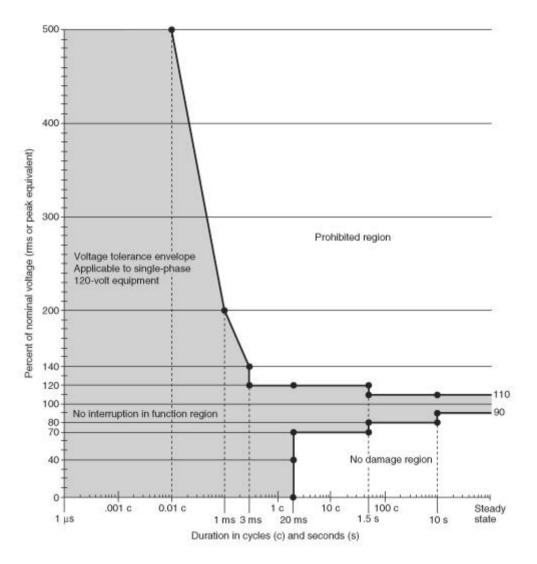


FIGURE 27.4.1.1 ITI Curve. [Courtesy of Information Technology Industry Council (ITI).] For proper use of this figure, refer to complete text of ITI (CBEMA) Curve Application note.

27.4.1.2 Sags are the most common type of voltage disturbances. Typically, sags occur twice as often as swells.

27.4.2 Symptoms of Sags and Swells.

27.4.2.1 Introduction. The effects of a sag are more noticeable than those of a swell. A sag duration longer than three cycles is visible because lighting output is reduced. Sags often are not distinguishable from momentary interruptions, and the effects to the equipment can be the same. Sensitive equipment, such as computers, can experience intermittent lockups or

- garbled data. Even relays and contactors in motor starters can be sensitive to voltage sags, resulting in shutdown of a process when they drop out.
- **27.4.2.2 Sophisticated Equipment.** Equipment used in industrial plants (e.g., process controllers, programmable logic controllers, adjustable-speed drives, and robotics) is increasingly sensitive to voltage sags as the equipment becomes more complex. For example, computers are faster, operate at lower logic voltages, and have less power supply ride-through, making them much more vulnerable to voltage sags.
- **27.4.2.3** Loss of Memory. Voltage sags can cause the loss of stored data in programmable electronic systems.
- **27.4.2.4 Equipment Shutdowns.** Motor contactors and electromechanical relays can drop out with a sag to 70 percent of rated voltage lasting 1 cycle or longer. High-intensity discharge (HID) lamps generally require restriking for sags below 80 percent. The ride-through of some adjustable-speed drives varies from 0.05 second to 0.5 second. Remote I/O units of some programmable logic controllers trip on a reduction to 90 percent of rated voltage for just a few cycles.
- **27.4.2.5** Component Breakdown. The effects of a swell can be more physically destructive to the equipment than those of a sag. The overvoltage can cause breakdown of components in the power supplies of the equipment. This can be a gradual, cumulative effect.
- **27.4.3** Causes of Voltage Sags and Swells. Sags and swells occur in utility transmission and distribution systems and facility power distribution systems. A common, underlying cause in all three areas is a sudden change of current flow.
- 27.4.3.1 Sag Causes Transmission Systems.
- **27.4.3.1.1 Outside Sources.** Severe weather, construction accidents, transportation accidents, or animals can cause faults that result in sags. Lightning is a common cause of faults on overhead transmission and distribution lines. A fault can occur by lightning directly striking a phase conductor or striking a nearby grounded object, such as a transmission shield wire or tower.
- **27.4.3.1.2 Sag Duration.** Transmission system voltage sags normally are shorter in duration than utility distribution sags. The fault-clearing mechanisms (the relay/breaker schemes) are designed to react faster for transmission faults. Sags to 75 percent in a facility have been caused from transmission faults 300 miles away.
- 27.4.3.2 Sag Causes Utility Distribution Systems.
- **27.4.3.2.1 Outside Causes.** In addition to transmission system causes, contact with tree limbs and motor vehicle accidents can result in voltage sags. Such faults can be 3-phase, line-to-line or line-to-ground. The 3-phase faults are the most severe but are relatively uncommon. Single line-to-ground faults on the utility system are a common cause of voltage sags in an industrial plant. A fault on a single feeder can result in an interruption to loads on that feeder, as well as a sag on the other feeders.
- **27.4.3.2.2 Sag Duration.** Typically, distribution system sags are 6 cycles to 20 cycles. Repeated sags can occur with reclosing on the same fault. Depending on the number of Copyright NFPA

reclosures, feeders can experience several voltage sags in succession.

27.4.3.3 Sag Causes — Facility Power Systems.

27.4.3.3.1 Sudden increases in the current demand within a facility can cause sags until the large current demand decreases. The sudden increases can be the result of fault conditions in the building or the startup of large inductive loads, such as motors. In one large-scale study (see Section 27.16), 50 percent or more of the sags and swells recorded were caused by load equipment in the same building.

27.4.3.3.2 A voltage sag from energization of large high-current-demand motors, can last for 30 cycles.

27.4.3.3.3 A utility fault usually creates a more severe sag than a motor start sag. The sag will last until the fault is cleared or removed.

27.4.3.4 Swell Causes.

- **27.4.3.4.1** Swells are less common than voltage sags and are usually associated with system fault conditions. A swell can occur due to a single line-to-ground fault on the system, which can result in a temporary voltage rise on the unfaulted phases.
- **27.4.3.4.2** Swells can also be generated by sudden load decreases. The abrupt interruption of current can generate a large voltage, proportional to the inductance and the rate of change of the current. Switching on a large capacitor bank can also cause a swell, although it more often causes a high-frequency transient.

27.4.4 Monitoring and Testing for Sags and Swells.

- **27.4.4.1 Equipment.** Different types of monitoring equipment are available to monitor sags and swells. These range from event indicators that visually indicate that a sag or swell has occurred to monitors that provide a cycle-by-cycle graph of the disturbance and record the minimum/maximum values, duration, and time of occurrence.
- **27.4.4.2 Finding the Source.** Data on the timing and magnitude of the sag or swell can often identify the source of the initiating condition. If the phase current levels of the load did not change prior to the voltage sag, the source is more likely to be upstream. When the magnitude of the sag is severe, it is likely that the source was close by. A power-factor correction capacitor being switched on can result in an oscillatory transient followed by a swell
- **27.4.4.3 Initial Placement.** Unless there is significant information pointing to the source of the disturbance, it is common practice to begin monitoring at the point where the utility service connects to the facility equipment.
- **27.4.4.4 Other Locations.** If the source of the disturbance is determined to be internal to the facility, then placing multiple monitors on the various circuits within the facility most likely would identify the source of the problem quickly.
- **27.4.4.5 Monitoring Instrument Sensitivity.** Power monitoring instruments are quite sensitive, and outside factors can influence their accuracy. Long measurement leads are susceptible to RFI/EMI pickup, which can distort the results.

27.4.5 Solutions for Sags and Swells.

- **27.4.5.1** A transformer tap change can be used to raise or lower the nominal voltage level and make the system less susceptible to sags or swells. Automatic solid-state tap-changing transformers that are controlled by electronic sensing circuits can react relatively quickly (one cycle to three cycles).
- **27.4.5.2** Different transformer configurations can be used to minimize the effects of events that cause sags and swells. For example, a delta-delta configuration tends to hold voltage levels higher than a delta-wye or wye-delta configuration.
- **27.4.5.3** Fault current limiters, zero voltage independent pole closing capacitor switches, and high-energy surge arresters can be added to the electric system.
- **27.4.5.4** Ferroresonant transformers, also called constant-voltage transformers, can handle most short-duration voltage sags. They provide excellent regulation but have limited overload capacity and poor efficiency at low loads.
- **27.4.5.5** Magnetic controlled voltage regulators use transformers, inductors, and capacitors to synthesize 3-phase voltage outputs. Enough energy is stored in the capacitors to ride through 1 cycle. The overall response time is relatively slow (3 cycles to 10 cycles).
- **27.4.5.6** A UPS can provide isolation from power line disturbances, in addition to providing ride-through during a sag. (See Chapter 25.)
- **27.4.5.7** A static transfer switch is capable of transferring the supply voltage from one voltage source to another within a quarter-cycle.

27.5 Long-Duration Undervoltages and Sustained Voltage Interruptions.

- **27.5.1 Normal Supply Voltage Variations.** Variations in the normal supply voltage are to be expected because loads on the supply system and plant distribution system are not constant. Electric utilities, equipment manufacturers, and end users have established standards for steady-state operating voltage limits that accommodate these variations. Facility utilization equipment can be designed and rated to operate within the range of supply system voltage while allowing for voltage drop in the plant system. [See ANSI /NEMA C84.1, Electric Power Systems and Equipment, Voltage Ratings (60 Hertz).]
- **27.5.1.1 Electric Utilities.** Electric utilities can be required by regulatory commissions to maintain service voltages within prescribed limits for the various types of service. Plant electrical people should be aware of any required service voltage limits for their type of service. The utility generally works with the customer to ensure that the service voltage remains within the required limitations or within standard design limits where there are no required limitations.
- **27.5.1.2** As the system load varies, the utility automatic voltage-regulating equipment maintains the service voltage within the required range. When the serving utility's electrical system is severely stressed, the utility can implement a load-reduction strategy by reducing the voltage on its distribution lines, typically up to 5 percent. During these periods, the service voltage can be near the lower limit of the required range. As a result, a long-term

undervoltage condition can exist at plant utilization equipment. It is strongly recommended that plant distribution system voltage drops be kept to a reasonable level.

- **27.5.2** Symptoms of Long-Duration Undervoltage. Undervoltage might not be readily apparent. Depending on the length and magnitude of the undervoltage, there can be a detrimental effect on electric and electronic equipment. Equipment such as induction motors might run hotter. Electronic equipment such as computers or microprocessor-based devices might function erratically.
- **27.5.3** Causes of Long-Duration Undervoltage. A long-duration undervoltage can originate on the electric utility system or on the plant electrical system. The utility system can be stressed due to line or equipment failure or system load conditions exceeding the supply capability. The plant electrical system or connected loads can result in unacceptable voltage drops even though the voltage is normal at the service point.
- **27.5.4 Monitoring and Testing of Long-Duration Undervoltages.** Because the occurrence of a long-duration undervoltage might not be obvious, and damage to equipment and systems can result, an appropriate monitoring system is recommended where reliability is vital.
- **27.5.4.1** The monitoring system can consist of a sophisticated warning scheme with visual and audible alarms at appropriate locations. Alternatively, it can simply be a voltage-sensing relay located at the facility service entrance or at sensitive equipment with alarms placed in appropriate locations.
- **27.5.5** Solutions for Long-Duration Undervoltages. When a long-duration undervoltage occurs, costly or sensitive equipment should be disconnected to prevent possible damage. If it is necessary to keep the equipment or system in operation, an alternative power supply should be provided.
- **27.5.6** Symptoms of a Sustained Voltage Interruption. A sustained voltage interruption is obvious because electric power is unavailable for an extended period of time except for equipment served by an alternative power source.
- **27.5.7** Causes of Sustained Voltage Interruption. Sustained voltage interruptions are caused by power system disruptions such as power lines going down in a storm, the utility's distribution transformer failing, a fault condition causing a circuit protective device to open, or plant wiring problems.
- **27.5.8 Solutions for Sustained Voltage Interruptions.** Solutions include generator sets, multiple power sources, and battery banks.
- 27.6 Unbalanced Voltages and Single Phasing.
- (See 3.3.74 for the definition of unbalanced voltages.)
- **27.6.1 Percentage Limitations.** On 3-phase circuits, unbalanced voltages can cause serious problems, particularly to motors, transformers, and other inductive devices.
- **27.6.1.1** Single phasing, which is the complete loss of a phase, is the worst-case voltage unbalance condition for a 3-phase circuit.

- **27.6.1.2** The National Electrical Manufacturers Association (NEMA) in MG1, *Motors and Generators*, part 14.36, defines voltage unbalance as follows: percent unbalance = $100 \times (\text{maximum voltage deviation from the average voltage/average voltage})$.
- **27.6.1.3** NEMA states that polyphase motors shall operate successfully under running conditions at rated load when the voltage unbalance at the motor terminals does not exceed 1 percent. Also, operation of a motor with more than 5 percent unbalance condition is not recommended and will probably result in damage to the motor.
- **27.6.1.4** For example, with line-to-line voltages of 460, 467, and 450, the average is 459, the maximum deviation from average is 9, and the percent unbalance equals $100 \times (9/459) = 1.96$ percent, which exceeds the 1 percent limit.

27.6.2 Causes of Unbalanced Voltages.

- **27.6.2.1** Unbalanced voltages usually occur because of variations in the load. When phases are unequally loaded, unbalanced voltages will result because of different impedances.
- **27.6.2.2** Symptoms and causes of unbalanced voltages include the following:
- (1) Unequal impedance in conductors of power supply wiring
- (2) Unbalanced distribution of single-phase loads such as lighting
- (3) Heavy reactive single-phase loads such as welders
- (4) Unbalanced incoming utility supply
- (5) Unequal transformer tap settings
- (6) Large single-phase load on the system
- (7) Open phase on the primary of a 3-phase transformer
- (8) Open delta-connected transformer banks
- (9) A blown fuse on a 3-phase bank of power factor correction capacitors

27.6.3 Symptoms of Unbalanced Voltages.

- **27.6.3.1 General.** The most common symptoms of unbalanced voltages are improper operation of or damage to electric motors, power supply wiring, transformers, and generators.
- **27.6.3.2 Phase Current Unbalance at Motor Terminals.** Unbalanced voltages at motor terminals can cause phase current unbalance to range from 6 to 10 times the voltage unbalance for a fully loaded motor. As an example, if a voltage unbalance is 2 percent, then current unbalance could be anywhere from 12 percent to 20 percent. This causes motor overcurrent, resulting in excessive heat, which shortens motor life.
- **27.6.3.2.1 Speed and Torque at Motor Terminals.** The unbalanced voltages at the motor terminals will also cause speed and torque to be reduced. If the voltage unbalance is great enough, the reduced torque capability might not be adequate for the application. Noise and vibration levels can also increase as a result of voltage unbalance.

27.6.3.3 Motor Heating and Losses. Insulation life is approximately halved for every 18°F (10°C) increase in winding temperature. Table 27.6.3.3 illustrates the typical percentage increases in motor losses and heating for various levels of voltage unbalance.

Table 27.6.3.3 Voltage Unbalance Versus Temperature Rise at Average Voltage of 230

Percent Unbalanced Voltage	Percent Unbalanced Current	Increased Temperature Rise (°C)
0.3	0.4	0
2.3	17.7	30
5.4	40	40

27.6.3.3.1 The motor often continues to operate with unbalanced voltages; however, its efficiency is reduced. This reduction of efficiency is caused by both increased current (I) and increased resistance (R) due to heating. Essentially, this means that as the resulting losses increase, the heating intensifies rapidly. This can lead to a condition of uncontrollable heat rise, called thermal runaway, which results in a rapid deterioration of the winding insulation, ending in winding failure.

27.6.3.4 Motor Operation Under Single-Phase Condition. Single-phase operation of a 3-phase motor will cause overheating due to excessive current and decreased output capability. If the motor is at or near full load when single phasing occurs, it will not develop enough torque and therefore will stall. This results in high currents, causing an extremely rapid temperature rise. If motor protection is not adequate, the stator winding will fail, and the rotor might be damaged or destroyed.

27.6.3.4.1 Standard (thermal, bimetallic, eutectic alloy) overload relays normally are relied on to provide protection against single phasing where properly selected and applied. Protective relays or other devices can provide supplemental single-phasing protection.

27.6.4 Monitoring and Testing.

27.6.4.1 Measuring. The first step in testing for unbalanced voltages should be to measure line-to-line voltages at the machine terminals. If the motor starter is close by, the tests can be made at load or "T" terminals in the starter. The current in each supply phase should be measured to check for current unbalance.

27.6.4.2 Detecting Single Phasing.

27.6.4.2.1 Single phasing should be suspected when a motor fails to start. The voltage should be checked for balanced line-to-line voltages.

27.6.4.2.2 If the motor is running, the voltage and the current in each phase of the circuit should be measured. One phase will carry zero current when a single-phasing condition exists.

27.6.5 Solutions for Unbalanced Voltages.

- **27.6.5.1** Unbalanced voltages should be corrected; unbalance caused by excessively unequal load distribution among phases can be corrected by balancing the loads. Also, checking for a blown fuse on a 3-phase bank of power-factor correction capacitors is recommended.
- **27.6.5.2** When voltage unbalance exceeds 1 percent, the motor should be derated as indicated by the curve in Figure 14-1 of NEMA MG 1, *Motors and Generators*.
- **27.6.5.3 Automatic Voltage Regulator (AVR).** AVRs can be used on a per phase basis to correct under- and overvoltage, as well as voltage unbalance. The AVR can compensate for voltage unbalance, provided that the input voltage to the AVR is within its range of magnitude.
- **27.6.5.4 Relays.** Negative sequence voltage relays can detect single phasing, phase-voltage unbalance, and reversal of supply phase rotation. Reverse phase or phase sequence relays provide limited single-phasing protection by preventing the starting of a motor with one phase of the system open.
- **27.6.5.5** Transformer tap settings should be checked; unequal power transformer tap settings can be a cause of voltage unbalance. This condition should be checked prior to taking other steps.
- **27.6.5.6** An unsymmetrical transformer bank should be replaced. For example, an open delta bank can be replaced with a three-transformer bank.

27.7 Symptoms — Grounding.

- **27.7.1 General.** If the equipment ground conductor and the service neutral are not electrically connected to the central grounding point, noise voltages can develop between them and appear as common mode noise.
- **27.7.1.1** Wiring without an equipment ground conductor and without electrically continuous conduit can produce common mode noise.
- **27.7.1.2** Ground loops are undesirable because they create a path for noise currents to flow.
- **27.7.2 Monitoring and Testing Grounding.** The electrical connection to earth can be measured using the three-point system referred to in ANSI/IEEE 142, *Recommended Practice for Grounding of Industrial and Commercial Power Systems* (Green Book). Minimizing the impedance between the equipment grounded conductor and the grounding conductor is recommended, as follows:
- (1) A visual inspection should be made to verify the integrity of the grounding and bonding conductors and associated connections.
- (2) An impedance test should be performed on the equipment-grounding conductor.
- (3) Voltage should be measured between the equipment-grounding conductor and the grounded conductor.
- (4) A check should be made for abnormal currents on the equipment-grounding conductor.

27.7.3 Solutions — Grounding.

- **27.7.3.1** The grounded conductor should be connected to the equipment-grounding conductor only as permitted by Article 250 of NFPA 70, *National Electrical Code*.
- **27.7.3.2 Isolated Equipment Ground.** One solution is to install an "isolated ground" receptacle (identified by orange color or an orange triangle) in which the equipment-grounding terminal is insulated from the mounting strap. An insulated equipment-grounding conductor is then connected from the grounding terminal of the receptacle in accordance with Article 250 of NFPA 70, *National Electrical Code*. The insulated equipment-grounding conductor is connected to the applicable derived system or service grounding terminal only at the power source.
- **27.7.3.3 Isolation Transformer.** An isolation transformer has separate primary and secondary windings with an interwinding shield that has its own grounding connection. The bonding jumper between the equipment-grounding conductor and the secondary grounded conductor provides protection from common mode electrical noise.
- **27.7.3.4 Signal Circuit Isolation.** Breaking the ground loop current path minimizes ground currents on signal circuits. This can be accomplished by one or more of the following:
- (1) Grounding at a single point per system [See ANSI/IEEE 142, Recommended Practice for Grounding of Industrial and Commercial Power Systems (Green Book) and ANSI/IEEE 1100, Recommended Practice for Powering and Grounding Sensitive Electronic Equipment (Emerald Book).]
- (2) Fiber optic transmission over completely nonconducting path
- (3) Optical isolators
- (4) Signal circuit isolation transformers in signal circuit or power circuits

27.8 Noise in Electrical and Electronic Systems.

- **27.8.1 Introduction.** Noise is undesirable electrical signals in an electrical or electronic circuit. It can be random or continuous in nature. Noise can occur at any frequency and amplitude. Noise can be introduced into a circuit from a multitude of sources and can manifest itself in equipment malfunction or data corruption.
- **27.8.1.1** Common Mode Noise. In a 3-phase system, common mode noise is seen equally and in phase between any phase conductor or neutral and the grounding conductor. Neutral-to-ground voltage or ground current can be a result of common mode noise. (See 3.3.50.1 for a definition of common mode noise.)
- **27.8.1.2 Transverse Mode Noise.** In a 3-phase system, transverse mode noise occurs in phase on all 3-phase conductors and neutral. (See 3.3.74 for a definition of transverse mode noise.)
- **27.8.1.3 Interference.** Interference that is electromagnetically coupled into a wiring system is called electromagnetic interference (EMI). Interference that is capacitively coupled into a wiring system is called radio frequency interference (RFI). Interference can appear as

transverse or common mode noise.

27.8.2 Symptoms.

- **27.8.2.1** Electrical noise is present in all circuits to a certain degree. It might or might not present a problem. Unlike sags or swells, electrical noise does not normally destroy equipment. It does not cause circuit breakers to trip, unless the noise affects shunt trip or undervoltage release controls.
- **27.8.2.2** Electrical noise usually manifests itself in the form of data corruption or unexplained equipment malfunction. For example, electrical noise can create "hum" in a telephone system or "snow" on a video image or can cause a computer to lock up.
- **27.8.3** Causes. Electrical noise is a by-product of the normal operation of electric equipment. The type and sources of noise are as diverse and numerous as the number of facilities that contain power systems and include the following:
- (1) Transformers generate magnetic fields that can influence adjacent pieces of equipment.
- (2) Long cable runs between interconnected pieces of computer equipment can act as an antenna to a local radio station.
- (3) Any piece of electronic equipment that contains a switch mode power supply will introduce electrical noise to some degree into both the building wiring system and the air.
- (4) Poor electrical wiring connections can create electrical noise. A loose connection can vibrate, creating an arc at the connection, resulting in noise.
- **27.8.4 Monitoring and Testing.** Locating the sources, frequency, and amplitude of noise can be a difficult and time-consuming task. Troubleshooting becomes increasingly difficult because multiple sources of noise might be present. Determining the amplitude and frequency of the noise signal is essential in identifying the source. Typically, several different types of test equipment can be required to isolate the nature of the noise, including the following:
- (1) Spectrum analyzer capable of measuring a wide range of frequencies
- (2) Conducted RFI/EMI recorder capable of measuring noise levels superimposed on the voltage waveform
- (3) Radiated RFI/EMI recorder capable of measuring electrical noise levels present in the air
- (4) Digital storage oscilloscope with line decoupler
- (5) Power-quality monitor

27.8.5 Solutions.

27.8.5.1 Elimination. Once the nature of noise disturbance is determined, the best solution is to isolate and eliminate the source. Unfortunately, the source of the noise cannot always be located or the offending piece of equipment removed. In these cases, the noise should be attenuated or filtered out of the system. Some methods of attenuating or filtering out noise Copyright NFPA

are listed below.

- **27.8.5.2 Signal Reference Grid.** This is a special type of grounding system designed for data processing installations. When properly installed, it provides the lowest possible ground impedance across the widest spectrum of frequencies. The grid places the entire data processing ground system at a common potential.
- **27.8.5.3 Isolation Transformers.** Transformers equipped with multiple electrostatic shields can significantly attenuate transverse and common mode noise.
- **27.8.5.4 Filters.** Filtering can be low-pass, high-pass, band-pass, or notch type. Once the frequency and amplitude of the noise signal is determined, a filter can be tuned to "trap" the unwanted noise signal.
- **27.8.5.5 Signal Cable.** The use of twisted pair and shields in low-power signal cables can effectively reduce noise.
- **27.8.5.6 Shielding.** Plane shielding mounted on walls, floors, or ceilings can reduce radiated noise if properly grounded.
- 27.9 Interharmonics.
- **27.9.1 Symptoms.**
- **27.9.1.1** The flickering of lights is often a result of subharmonics that occur below 24 Hz, which is observable. Around 9 Hz, as little as a 0.25 percent variation in the rms voltage can be detected in some types of lighting.
- **27.9.1.2** The misoperation of equipment that occurs because of harmonics, such as the overheating of transformers and the misoperation of control devices, can also occur with interharmonics. In addition, CRT flicker, overload of conventional series tuned filters, overload of outlet strip filters, communications interference, and CT saturation can result from interharmonics. (See 27.2.2 for additional information.)
- **27.9.2 Causes.** Operation of loads that draw current or have mechanical processes that are not synchronized to the power line frequency can result in interharmonic voltages and currents. Examples are cycloconverters, static frequency converters, subsynchronous converter cascades, induction motors, arc furnaces, and arc welders. Arc furnaces, which draw very large arcing currents during the melting stage, can generate interharmonics over a wide range of frequencies.
- **27.9.3 Monitoring and Testing.** Harmonic analyzers that use conventional Fast Fourier Transform (FFT)—based harmonic analysis might not be fully effective in determining the presence of interharmonics. The energy of the interharmonic often will be split between two adjacent harmonic values. Spectrum analyzers or harmonic analyzers with interharmonic capabilities are recommended.
- **27.9.3.1** A flickermeter is a special type of meter for measuring the presence of voltage fluctuations that can result in light flicker.
- **27.9.4 Solutions.** The solutions for minimizing the effects of interharmonics often are similar to those used with harmonics (*see 27.2.5*). These solutions include filtering, impedance Copyright NFPA

reduction, derating of transformers and motors, and isolation of sensitive equipment.

27.10 Voltage Fluctuations and Flicker.

27.10.1 Explanation of Voltage Fluctuations and Flicker.

27.10.1.1 Voltage fluctuations are variations in the rms voltage that are less than those that would be considered a sag. They generally do not cause equipment to malfunction but often result in light flicker.

27.10.1.2 Flicker is the change in light output from a lamp, caused by the fluctuation of the supply voltage in the frequency range of 0.5 Hz to 30 Hz, where as little as a quarter of a percent voltage fluctuation at nine times per second can be perceived. Figure 27.10.1.2 is an example of voltage fluctuation on a sine wave.

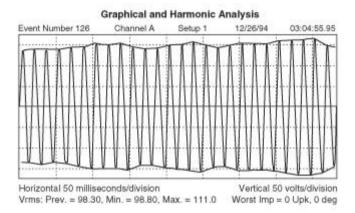


FIGURE 27.10.1.2 Example of a Flicker Sine Wave. (Courtesy of Dranetz Technologies, Inc.)

27.10.2 Symptoms.

27.10.2.1 The effects of the voltage fluctuations normally are perceived as an annoyance and distraction when the lights flicker. They can induce discomfort in the form of nausea or headaches. They usually are not severe enough to disrupt most manufacturing processes, though they can cause variations in the processes.

27.10.2.2 Factors affecting severity include the following:

- (1) Frequency of voltage fluctuations (how often it occurs)
- (2) Magnitude of voltage fluctuations (how much of a change)
- (3) Type of lighting (incandescent, fluorescent, HID)
- (4) Ambient light level
- (5) Amount of the surface illuminated
- (6) Type of activity and the eye-brain characteristics of the individual person

27.10.3 Causes.

- **27.10.3.1** The voltage fluctuations or modulations of the rms envelope follow the same basic rules as the rms variations that result in sags (dips) or swells. They usually are the result of a change in load current, which causes a change in the voltage drop across the source impedance, which then results in a change in the voltage supply.
- **27.10.3.2** The frequency of the voltage fluctuation can be the direct result of the frequency of the current draw by the load as the result of folding back of higher frequencies modulating with 50/60 Hz fundamental or their harmonics, which produces sidebands around the fundamental or harmonic frequency.
- **27.10.3.3** Common sources of voltage fluctuations include the following:
- (1) Lamp dimmers
- (2) Resistance welding machines
- (3) Rolling mills
- (4) Large electric motors with variable loads
- (5) Arc furnaces and arc welders
- (6) Switching on and off of PF correction capacitors
- (7) Medical imaging machines (X-ray, MRI, CAT scan)
- (8) Large-capacity copy machines
- (9) Electric motor starts
- (10) Household appliances

27.10.4 Monitoring and Testing.

- **27.10.4.1** The perception of the light flickering is measured using a flickermeter, which measures two parameters: *Pst*, the short-term perception index, and *Plt*, the long-term perception index.
- **27.10.4.1.1** A value of 1 should be assigned to the lower bound of the observable flicker perception curve for 60 W incandescent light bulbs.
- **27.10.4.1.2** The larger the number, the more perceptible the flicker is.
- **27.10.4.2** Monitoring for voltage fluctuations generally begins at the point of common coupling. The change in current versus the change in voltage helps to determine whether the monitoring point is upstream or downstream from the source. Some flickermeters and some power quality analyzers have the capability to capture the waveforms and other calculations that help determine the source.
- **27.10.5 Solutions.** Three solutions to minimize the effects of voltage fluctuation on lighting are reducing the magnitude and/or changing the frequency of the load current; reducing the source impedance; and changing the type of lighting, such as changing from an incandescent lamp to a fluorescent lamp.

27.11 Power Quality References.

See Annex L for these references.

Chapter 28 Vibration

28.1 Introduction.

Many rotating machinery failures occur for mechanical reasons, such as poor alignment, bearing failure, dynamic unbalance, or improper mounting.

28.2 Machine Vibration.

All equipment vibrates when it is running. Excessive vibration indicates a problem. The cause might be in the mechanical integrity of the machine, for example, dynamic unbalance, misalignment, loose parts, or faulty bearings. It might be in the electrical integrity of the machine, for example, an open rotor bar or cracked end ring in a squirrel cage motor, or a faulty power supply to a dc motor. Frequently, it is a combination of factors that causes vibration.

- **28.2.1** The most common methods of measuring vibration are in units of velocity. When measured as displacement, the units are microns peak-to-peak or mils peak-to-peak. Velocity measurements are in millimeters per second or inches per second. Acceleration measurements are expressed in grams peak. Vibration is usually measured at the bearing housing.
- **28.2.2** Displacement is generally used as an indicator of vibration severity for both low-speed equipment operating at less than 1200 rpm and low-frequency vibration. Examples include dynamic unbalance, belt vibration, and shaft seal rub. The acceptable value of displacement for machine vibration decreases with increasing speed. For example, a machine rotating at 900 rpm might have an acceptable vibration displacement limit of 2.5 mils (1 mil = 0.001 in.). Running at 3600 rpm, the acceptable vibration displacement limit might be 1 mil.
- **28.2.3** For higher-frequency problems, either vibrational velocity or acceleration measurements are generally used for bearing housing or support vibration. Velocity is independent of machine speed and therefore a better general indicator of overall vibration severity. (*See Table 28.2.3.*) Acceleration is used to evaluate high-frequency problems such as those related to bearings and gears.

Table 28.2.3 Vibration Severity Chart

y rms				
in./sec	Class 1	Class 2	Class 3	Class 4
0.028	A	A	A	A
0.044	В	A	A	A
0.071	В	В	A	A
0.110	C	В	В	A
	in./sec 0.028 0.044 0.071	in./sec Class 1 0.028 A 0.044 B 0.071 B	in./sec Class 1 Class 2 0.028 A A 0.044 B A 0.071 B B	in./sec Class 1 Class 2 Class 3 0.028 A A A 0.044 B A A 0.071 B B A

Table 28.2.3 Vibration Severity Chart

Veloci	Velocity rms				
mm/sec	in./sec	Class 1	Class 2	Class 3	Class 4
4.5	0.177	С	С	В	В
7.1	0.279	D	C	C	В
11.2	0.440	D	D	C	C
18.0	0.708	D	D	D	C
28.0	1.10	D	D	D	D

Notes:

- (1) Class 1: up to 20 hp on fabricated steel foundation; Class 2: 25 hp–100 hp on fabricated steel foundation, 100 hp–400 hp on heavy solid foundation; Class 3: above 400 hp on heavy solid foundation; Class 4: above 100 hp on fabricated steel foundation.
- (2) Grade A: good; Grade B: usable; Grade C: just acceptable; Grade D: not acceptable.

28.2.4 Unfiltered Vibration Limits. Suggested vibration limits for larger machines are specified in Table 28.2.4.

Table 28.2.4 Unfiltered Vibration Limits

		Peak Velocity			
Speed (rpm)	Rotation Frequency (Hz)	mm/sec	in./sec		
3600	60	3.8	0.15		
1800	30	3.8	0.15		
1200	20	3.8	0.15		
900	15	3.0	0.12		
720	12	2.3	0.09		
600	10	2.0	0.08		

Note: These levels pertain to bearing housing monitoring in the vertical, horizontal, and axial directions. Test conditions are uncoupled and without load.

28.2.5 Large machines can also use noncontacting shaft vibration probes and instrumentation to measure the rotor shaft vibration relative to the bearing housing.

28.3 Types of Instruments.

Analog and digital instruments are available to measure displacement, velocity, and acceleration. In addition, there are computerized data collecting analyzers that store vibration spectrums, using Fast Fourier Transform (FFT) methodology. In addition to detecting unbalanced vibration, FFT analysis of the instruments can identify faults in state or windings, rotate bars and end rings, and bearings.

28.4 Resonance.

All machines have certain natural frequencies of vibration. When vibration occurs at a frequency equal to one of the machine's natural frequencies (critical frequencies), the machine or component will exhibit a large amplitude of vibration. When this happens, the machine is said to have a resonant vibration. It is suggested that machine speed be at least 15 percent removed from any critical frequency. Where a machine should pass through one or more critical frequencies in coming up to running speed, it should pass through these quickly.

28.5 Methods of Balance.

Static unbalance is an unbalance on one side (plane) of a rotating device, and dynamic unbalance is an unbalance in two planes of a rotating device. The solution is either to remove the excess weight or to add an equal amount at the opposite side. Narrow (length less than ½ diameter) slow speed (less than 1000 rpm) rotors can be statically balanced in a test stand with loose bearings or a knife edge. Dynamic balance, also known as two-plane balancing, is typical of cylindrical rotating devices, such as a roller or an electric motor rotor. Dynamic balance requires specialized equipment, such as a balancing machine. Modern dynamic balance machines are equipped with computers to calculate and display the amount and location of balance correction weights. Balancing might be possible with machinery in place, using portable balancing instruments. Modern portable balancing equipment is equipped with computers that calculate the exact location and amount of weight to add or remove to correct the unbalance.

28.6 Assembly and Installation Guidelines.

28.6.1 Installation of Accessories. Where possible, bearings, gears, and couplings should be uniformly preheated before installation to minimize damage. All rotating bodies should be dynamically balanced to within standard tolerance, as established by the manufacturer. Equipment with accessories should be balanced without these extra items. Accessories should then be installed individually and the equipment rebalanced if necessary.

28.6.2 Alignment. All rotating equipment should be properly aligned when installed. The human eye, straight edges, feeler gauges, and bubble gauges do not provide the precision required. Rim and face or reverse indicator methodology should be used. Dial indicators on all laser alignment equipment should be used for alignment. Laser alignment provides the advantages of accuracy, speed, and minimum chance for operator error. If the operating temperature of equipment changes significantly, thermal expansion should be considered.

28.7 Baseline Data.

Together with other tests, it is important to keep data on vibration levels. With time, vibration tends to increase. Scheduled maintenance can reduce such problems, usually at a fraction of the cost of a breakdown caused by insufficient maintenance. Readings should be made at 3- to 6-month intervals or more often as required. Computerized data collectors, using TFF technology vibration analysis, can be used to measure vibration and trend results. Causes of a substantial change in vibration should be investigated promptly.

28.8 Noise.

All machines produce some sound when running. Changes in the sound level might indicate problems and should be investigated. Manufacturers often can supply equipment with low noise levels when necessary. Excess noise can be caused by many factors, such as using rigid conduit connections instead of flexible connections, locating a machine in the corner of a room with hard, sound-reflecting side walls, and designing an installation with inadequate vibration isolators. Totally enclosed fan-cooled motors can be expected to produce more noise than open drip-proof or weather-protected motors of equivalent rating.

28.8.1 Adjustable-speed drives (ASDs), which operate ac motors at varying speeds, sometimes have switching frequencies that will cause noise in the load motor. Methods to correct this problem include a higher drive switching frequency, isolation transformer, line reactor, or a motor with a skewed rotor design.

Chapter 29 Grounding

29.1 Introduction.

- **29.1.1** *Grounding* is a term that has many different facets, depending on the application. For example, certain current-carrying electrical system conductors (or common of a 3-phase wye electrical system) are intentionally grounded. This intentional connection stabilizes the voltage under normal operating conditions and maintains the voltage at one level relative to earth or something that serves in place of the earth.
- **29.1.2** Electrically conductive surfaces are also normally grounded for safety purposes. Grounding is necessary to keep the metal enclosures, metal housings, or non-current-carrying parts of the electrical equipment at earth potential and to avoid hazardous voltages between the equipment and earth.
- **29.1.3** During maintenance or construction, deenergized, ungrounded conductors are also temporarily grounded for personnel protection against the energizing of circuit conductors. Therefore, grounding is also a temporary protective measure involving connecting the deenergized lines and equipment to earth through conductors.
- **29.1.4** Common reasons for grounding both electrical systems and equipment are to limit the voltage imposed by lightning, line surges (transients) or unintentional contact with higher voltages; to stabilize the voltage to earth under normal operation; and to establish an effective path for fault current. This fault current path should be capable of safely carrying the maximum fault likely to be imposed on it, and should have sufficiently low impedance to facilitate the operation of overcurrent devices under fault conditions. This path should also be designed and installed to limit touch and step potentials to safe values.
- **29.1.5** Grounding is one of the most important and essential aspects of an electrical system. However, it is often misunderstood because of its many different interpretations and misuse of definitions.
- **29.1.6 Special Terms.** The following special terms are used in this chapter.

- **29.1.6.1 Bonding (Bonded).** The permanent joining of metallic parts to form an electrically conductive path that will ensure electrical continuity and the capacity to conduct safely any current likely to be imposed. The "permanent joining" can be accomplished by the normal devices used to fasten clean, noncorroded parts together. Machine screws, bolts, brackets, or retainers necessary to allow equipment to function properly are items typically employed for this purpose. While welding and brazing can also be utilized, these preclude easy disassembly, and welding can increase rather than decrease resistance across joints. Metallic parts that are permanently joined to form an electrically conductive path that will ensure electrical continuity and the capacity to conduct safely any current likely to be imposed are bonded.
- **29.1.6.2 Bonding Jumper.** A reliable conductor to ensure the required electrical conductivity between metal parts required to be electrically connected. This conductor can be solid or stranded or braided, and connected by compatible fittings to separate parts to provide this electrically conductive path. The bonding jumper can also be a screw or a bolt. This bonding jumper can be used alone or in conjunction with other electrically conductive paths. It generally is associated with the equipment-grounding path, but might or might not be electrically linked for a lowest impedance path.
- 29.1.6.3 Case (Enclosure) Ground. See 29.1.6.29, Grounding Terminal.
- **29.1.6.4** Central Grounding Point. The location where the interconnected parts of the grounding system are connected in a common enclosure. The central grounding point provides a common connection point for termination of the feeder or branch-circuit equipment-grounding conductors.
- **29.1.6.5** Counterpoise. A conductor or system of conductors arranged beneath the transmission/distribution supply line; located on, above, or most frequently below the surface of the earth; and connected to the grounding system of the towers or poles supporting the line. (This conductor(s) might or might not be the continuous length of the supply path. It is often used to provide a lower surge impedance path to earth for lightning protection when there is a transition from overhead supply conductors to underground insulated cable.) Counterpoise is also used in communication systems, where it is a system of conductors, physically elevated above and insulated from the ground, forming a lower system of conductors of an antenna. Note that the purpose of a counterpoise is to provide a relatively high capacitance and thus a relatively low impedance path to earth. The counterpoise is sometimes used in medium- and low-frequency applications where it would be more difficult to provide an effective ground connection. Sometimes counterpoise is confused with equipotential plane. See also 29.1.6.17, Equipotential Plane.
- **29.1.6.6 Down Conductor.** A conductor from a lightning protection system to earth ground designed to provide a low impedance path for the current from a lightning strike and/or dissipate the charge buildup that precedes a lightning strike. This conductor typically goes from the air terminals to earth. Due to the very high currents at very high frequencies, the impedance of the entire system is very critical. Normal wiring conductors are not suitable for the down conductor. Typically, they are braided conductors. There might be certain instances where additional investigation about the interconnection between the lightning and

the grounding electrode system is warranted.

- **29.1.6.7 Earth Grounding.** The intentional connection to earth through a grounding electrode of sufficiently low impedance to minimize damage to electrical components and prevent an electric shock that can occur from a superimposed voltage from lightning and voltage transients. In addition, earth grounding helps prevent the buildup of static charges on equipment and material. It also establishes a common voltage reference point to enable the proper performance of sensitive electronic and communications equipment.
- **29.1.6.8 Earthing.** An IEC term for *ground*. See 29.1.6.18, Ground.
- **29.1.6.9 Effective Grounding Path.** The path to ground from circuits, equipment, and metal enclosures for conductors shall (1) be permanent and electrically continuous, (2) have capacity to conduct safely any fault current likely to be imposed on it, and (3) have sufficiently low impedance to limit the voltage to ground and to facilitate the operation of the circuit protection devices. The earth should not be used as the sole equipment-grounding conductor
- **29.1.6.10** Effectively Grounded (as applied to equipment or structures). Intentionally connected to earth (or some conducting body in place of earth) through a ground connection or connections of sufficiently low impedance and having sufficient current-carrying capacity to prevent the buildup of voltages that might result in undue hazards to connected equipment or to persons.
- **29.1.6.11 Effectively Grounded (as applied to systems).** This is defined by ratios of impedance values that must be within prescribed limits.
- **29.1.6.12 Electrostatic Discharge (ESD) Grounding.** The conductive path created to reduce or dissipate the electrostatic charge where it builds up as a result of equipment operation or induced from an electrostatically charged person or material coming in contact with the equipment. Also referred to as *static grounding*.
- **29.1.6.13 Equipment Bonding Jumper.** The connection between two or more portions of the equipment-grounding conductor.
- **29.1.6.14 Equipment Ground.** An ambiguous term that can mean either case ground, equipment-grounding conductor or equipment bonding jumper; hence, use of this term should be avoided.
- **29.1.6.15** Equipment-Grounding Conductor. The conductor used to connect the non-current-carrying metal parts of equipment, raceways, and other enclosures to the system grounded conductor, the grounding electrode conductor, or both, at the service equipment or at the source of a separately derived system.
- **29.1.6.16 Equipotential Bonding.** Electrical connection putting various exposed conductive parts and extraneous conductive parts at a substantially equal potential.
- **29.1.6.17 Equipotential Plane.** (1) (as applied to livestock) An area accessible to livestock where a wire mesh or other conductive elements are embedded in concrete, are bonded to all metal structures and fixed nonelectrical metal equipment that might become energized, and are connected to the electrical grounding system to prevent a difference in voltage from

- developing within the plane. (2) (as applied to equipment) A mass or masses of conducting material that, when bonded together, provide a uniformly low impedance to current flow over a large range of frequencies. Sometimes the *equipotential plane* is confused with *counterpoise*.
- **29.1.6.18 Ground.** A conducting connection, whether intentional or accidental, between an electrical circuit or equipment and the earth, or to some conducting body that serves in place of the earth. [70, 2005]
- **29.1.6.19 Ground Fault.** Unintentional contact between an ungrounded conductor and earth or conductive body that serves in place of earth. Within a facility, this is typically a fault between a current-carrying conductor and the equipment-grounding path that results in the operation of the overcurrent protection.
- **29.1.6.20 Ground Leakage Current.** Current that is introduced into the grounding conductor by normal equipment operation, such as capacitive coupling. Many RFI/EMI filters in electronic equipment have capacitors from current-carrying conductors to the equipment-grounding conductor to shunt noise emitted from or injected into their power supplies. While there are relatively low current level limits imposed by regulatory agencies (e.g., UL specifies maximum 3.5 mA, hospital equipment 0.5 mA), not all equipment is listed. Even with listed equipment, the sum of the current from a large quantity of such equipment in a facility can result in significant ground currents.
- **29.1.6.21 Ground Loop.** Multiple intentional or unintentional connections from a conductive path to ground or the conductive body that serves in place of earth. Current will flow in the ground loop if there is voltage difference between the connection nodes. Re-grounding of the grounded circuit conductor (neutral) beyond the service point will result in ground loops. This might or might not be harmful depending on the application.
- **29.1.6.22** Ground Resistance/Impedance Measurement. The use of special test equipment to measure the grounding electrode resistance or impedance to earth at a single frequency at or near power line frequency.
- **29.1.6.23** Ground Well. See 29.1.6.28, Grounding Electrode System.
- **29.1.6.24 Grounded.** Connected to earth or to some conducting body that serves in place of the earth. [70, 2005]
- **29.1.6.25 Grounded Conductor.** A system or circuit conductor that is intentionally grounded. This intentional grounding to earth or some conducting body that serves in place of earth takes place at the premises service location or at a separately derived source. Control circuit transformers are permitted to have a secondary conductor bonded to a metallic surface that is in turn bonded to the supply equipment-grounding conductor. Examples of grounded system conductors would be a grounded system neutral conductor (3 phase or split phase) or a grounded phase conductor of a 3-phase, 3-wire, delta system.
- **29.1.6.26 Grounding Conductor.** A conductor used to connect equipment or the grounded circuit conductor of a wiring system to a grounding electrode or electrodes. This ensures the electrical continuity of equipment bonding and grounding into the system, and provides for an equipotential bonding to minimize voltage differences between individual units and

between these units and the grounding electrode conductor.

- **29.1.6.27 Grounding Electrode.** A conductive body deliberately inserted into earth to make electrical connection to earth. Typical grounding electrodes include the following:
- (1) The nearest effectively grounded metal member of the building structure
- (2) The nearest effectively grounded metal water pipe, but only if the connection to the grounding electrode conductor is within 5 ft of the point of entrance of the water pipe to the building
- (3) Any metal underground structure that is effectively grounded
- (4) Concrete encased electrode in the foundation or footing (e.g., Ufer ground)
- (5) Ground ring completely encircling the building or structure
- (6) Made electrodes (e.g., ground rods or ground wells)
- (7) Conductive grid or mat used in substations
- **29.1.6.28 Grounding Electrode System.** The interconnection of grounding electrodes.
- **29.1.6.29 Grounding Terminal.** A terminal, lug, or other provision provided on some equipment cases (enclosures) to connect the conductive portion of the enclosure to the equipment-grounding conductor.
- **29.1.6.30 Grounding-Type Receptacle.** A receptacle with a dedicated terminal that is to be connected to the equipment grounding conductor.
- **29.1.6.31 High-Impedance Grounded.** High-impedance grounded means that the grounded conductor is grounded by inserting a resistance or reactance device that limits the ground-fault current to a low value.
- **29.1.6.32 Insulated Ground.** See 29.1.6.33, Isolated Equipment-Grounding Conductor.
- **29.1.6.33 Isolated Equipment-Grounding Conductor.** An insulated equipment-grounding conductor that has one intentional connection to the equipment-grounding system. The isolated equipment-grounding conductor is typically connected to an equipment-grounding terminal either in the facility's service enclosure or in the first applicable enclosure of a separately derived system. The isolated equipment-grounding conductor should be connected to the equipment-grounding system within the circuits' derived system.
- **29.1.6.34 Lightning Ground.** See 29.1.6.28, Grounding Electrode System.
- **29.1.6.35 Multipoint Grounding.** Multipoint grounding consists of interconnecting primary and secondary neutrals of the transformer. The secondary and primary neutral are common, and they both utilize the same grounding electrode that connects the system to earth.
- **29.1.6.36** Noise(less) Ground. The supplemental equipment-grounding electrode installed at machines, or the isolated equipment-grounding conductor, intended to reduce electrical noise.
- **29.1.6.37 Personnel Protective Ground.** Bonding jumper that is intentionally installed to ground deenergized, normally ungrounded circuit conductors when personnel are working Copyright NFPA

- on them, to minimize voltage differences between different parts of the equipment and personnel, so as to protect against shock hazard and/or equipment damage.
- **29.1.6.38 Protective Bonding Circuit.** See 29.1.6.16, Equipotential Bonding.
- **29.1.6.39 Protective Conductor.** See 29.1.6.15, Equipment-Grounding Conductor.
- **29.1.6.40 Protective Ground.** See 29.1.6.16, Equipotential Bonding.
- **29.1.6.41 RFI/EMI Grounding.** See 29.1.6.20, Ground Leakage Current.
- **29.1.6.42 Safety Ground.** See 29.1.6.37, Personnel Protective Ground.
- **29.1.6.43 Separately Derived System.** A premises wiring system whose power is derived from a battery, a solar photovoltaic system, or from a generator, transformer, or converter windings, and that has no direct electrical connection, including a solidly connected grounded circuit conductor, to supply conductors originating in another system. Equipment-grounding conductors are not supply conductors and are to be interconnected.
- **29.1.6.44 Shield Ground.** Intentional grounding of one or both ends of the shield of a cable.
- **29.1.6.44.1 Data Communications Cables.** The shield of data communication cables can be connected to the equipment-grounding conductor at either one end of the cable (single end) or at both ends (double ended). When both ends of a shield are grounded, another shield should be provided inside the outer shield and that one single end grounded.
- **29.1.6.44.1.1** There are advantages and disadvantages to both types, single- or double-ended. Single-ended grounding minimizes the ground loop potential but can result in the shield voltage at the ungrounded end rising above safe levels for equipment or personnel. Single-end grounded shields can have the ungrounded end grounded through a high-frequency drain, such as a surge device, to help control this.
- **29.1.6.44.1.2** Double-ended grounding can minimize the potential voltage rise but can result in a ground loop that exceeds the current-carrying capacity of the outer shield.
- **29.1.6.44.2 Shield Ground, Power Cables.** The shield of power cables can be connected to the equipment-grounding conductor at either one end of the cable (single end) or at both ends (double ended). Shielding will ensure uniform dielectric stress along the length of the cable. When grounded at both ends, cable derating might be necessary because of heat due to ground loop current.
- **29.1.6.45 Single-Point Grounding.** The single-point grounding of a transformer means connecting the secondary side of the transformer to earth ground through one or more grounding electrodes. This connection should be made at any point on the separately derived system from the source to the first system-disconnecting means or overcurrent device.
- **29.1.6.46 Solid Grounded.** Solidly grounded means that the grounded conductor is grounded without inserting any resistor or impedance device.
- **29.1.6.47 Substation Ground.** Grounding electrode system (grid) in a substation. See 29.1.6.28, Grounding Electrode System.
- **29.1.6.48 System Grounding.** The intentional connection of an electrical supply system to Copyright NFPA

its associated grounding electrode(s).

29.2 Symptoms and Causes of Inadequate Grounding.

- **29.2.1** Common mode noise voltages can develop when the equipment-grounding conductor and the grounded conductor are not effectively bonded.
- **29.2.2** Common mode noise can be produced in wiring without an equipment-grounding conductor and without electrically continuous raceway.
- **29.2.3** Ground loops can be undesirable because they create a path for noise currents to flow.
- **29.2.4** Undesirable touch potentials can result from contacting metallic surfaces that are improperly grounded.
- **29.2.5** Equipment misoperation due to unequal ground potentials results in improper data communication or improper readings of transducers.
- **29.2.6** Shutdown or damage of electronic equipment can be due to electrostatic discharge (ESD).
- **29.2.7** Non-operation or malfunction of protective circuit devices or voltage sag can be due to high-impedance ground fault paths.
- **29.2.8** Damage, non-operation, or misoperation of electronic components can be caused by poor connections in the grounding path.
- **29.2.9** Damage or destruction of the neutral conductor or cable shields can result from improper sizing of a high-impedance neutral grounding device.
- **29.2.10** Voltage can be present on deenergized circuits during testing of these conductors.
- **29.2.11** Destruction of equipment and surge protection devices can follow a voltage transient, such as a lightning strike.

29.3 Grounding System Inspection, Testing, and Monitoring.

- **29.3.1** A visual and physical inspection should be made to verify the integrity of the grounding and bonding conductors and associated connections.
- **29.3.2** The integrity of the grounding electrode system and substation grids should be checked on a periodic basis. The electrical connection to earth can be measured using one of several available methods and technologies. (See Section 21.15.) Also refer to ANSI/IEEE 142, Recommended Practice for Grounding of Industrial and Commercial Power Systems (Green Book).
- **29.3.3** A ground loop impedance test should be performed on the equipment-grounding path with a four-lead, low-resistance ohmmeter such as a wheatstone bridge, a kelvin bridge, or a digital low-resistance ohmmeter. Impedances should be appropriate for the type, length, and size of the path.
- 29.3.4 Measure the voltage between the equipment-grounding conductor and the grounded

conductor at multiple locations throughout the system, as applicable.

- (A) At the bonding jumper, the voltage normally should be less than 0.1 volt ac.
- **(B)** It is normal to find voltage downstream from the main bonding jumper in energized circuits, due to current flow in the grounded conductor. Readings in excess of 3 volts ac or less than 0.5 volt ac at locations remote from the bonding jumper should be investigated to determine if this represents a problem for the system.
- **29.3.5** The current on the equipment-grounding conductor should be measured for objectionable levels, which will depend on the location and type of the facility. The source of currents on equipment-grounding conductors should be determined and corrected. Use of a true rms ammeter is recommended.
- **29.3.6** The voltage from the chassis of equipment and an external ground point should be measured. Differences should be less than 2 volts
- **29.3.7** Continuous monitoring of ground and neutral currents in information technology areas is recommended.
- **29.3.8** In the absence of any specifications, when ESD systems are being examined, the leakage resistance should not exceed 1 megohm from any conductor to ground. (See 22.3.13.2.)
- **29.3.9** Testing of the ground integrity of data communication cable shields might require special instrumentation and expertise.
- **29.3.10** If a result of testing indicates that changes to a substation grounding system are necessary or required, reference should be made to ANSI/IEEE 80, *Guide for Safety in AC Substation Grounding*, for appropriate design requirements.

29.4 Solutions to Inadequate Grounding.

- **29.4.1** To minimize the resistance between the grounding electrode system and the earth, the following should be done:
- (1) Clean and tighten and test connections as needed, using appropriate safety precautions.
- (2) Replace or repair damaged or corroded components.
- (3) Size the grounding electrode conductor in accordance with Article 250 of NFPA 70, *National Electrical Code*.
- (4) Use soil enhancement material as necessary.
- **29.4.2** The grounded conductor should be connected to the equipment-grounding conductor only as permitted by Article 250 of NFPA 70, *National Electrical Code*. The grounded conductor and the equipment-grounding conductor should be sized in accordance with NFPA 70.
- **29.4.3** Many of the grounding electrode corrosion problems are caused by galvanic action. This problem can be minimized by using a system of cathodic protection (active or passive).

The use of dissimilar metals should be avoided.

29.4.4 Isolation Transformer.

- **29.4.4.1** An isolation transformer has separate primary and secondary windings. The bonding jumper between the equipment-grounding conductor and the secondary grounded conductor provides protection from common mode electrical noise.
- **29.4.4.2** It is recommended that a shielded isolation transformer be used. It contains an electrostatic shield between the primary and secondary windings that is connected to the equipment-grounding terminal.
- **29.4.5 Signal Circuit Isolation.** See 27.7.3.4.[See ANSI/IEEE 1100, Recommended Practice for Powering and Grounding Sensitive Electronic Equipment (Emerald Book).]
- **29.4.6 Isolated Ground Receptacles.** One solution is to install an isolated ground receptacle (identified by orange color and/or orange triangle) in which the equipment-grounding terminal is insulated from the mounting strap. An insulated equipment-grounding conductor is then connected from NFPA 70, *National Electrical Code*. The insulated equipment-grounding conductor is connected to the applicable derived system or service grounding terminal.

Chapter 30 Supervisory Control and Data Acquisition (SCADA)

30.1 Introduction.

- **30.1.1 General.** A comprehensive maintenance program is critical to attaining long-term reliable performance of supervisory control and data acquisition (SCADA) systems. Periodic device calibration, preventive maintenance, and testing allow potential problems to be identified before they can cause a failure of intended mission or function. Prompt corrective maintenance ensures reliability by minimizing downtime of redundant components.
- **30.1.2** Special Term. The following special term is used in this chapter.
- **30.1.2.1 Concurrent Maintenance.** The testing, troubleshooting, repair, and/or replacement of a component or subsystem while redundant component(s) or subsystem(s) are serving the load, where the ability to perform concurrent maintenance is critical to attaining the specified reliability/availability criteria for the system or facility.

30.2 Preventive Maintenance.

The SCADA system should be part of the overall preventive maintenance program for the facility. The recommended maintenance activities and frequencies can be found in Annex I for the various components of SCADA. Preventive maintenance schedules for SCADA components and subsystems should be coordinated with those for the mechanical/electrical systems that they serve, to minimize overall schedule downtime.

30.3 Testing.

Many components of SCADA systems, such as dead-bus relays, are not required to function Copyright NFPA

under normal system operating modes. For this reason, the system should be tested periodically under actual or simulated contingency conditions. Periodic system testing procedures can duplicate or be derived from the recommended functional performance testing procedures of individual components, as provided by the manufacturers.

30.4 Concurrent Maintenance.

Maintenance should be scheduled to occur during maintenance of associated equipment.

30.5 Reliability-Centered Maintenance (RCM).

Operational data should be retained through the trending and data storage features of the SCADA system for use in automated performance monitoring electro-mechanical systems that are supporting a reliability-centered maintenance (RCM) program.

30.5.1 General. RCM is the process of developing preventive maintenance (PM) programs for electrical and mechanical systems used in facilities based on the reliability characteristics of those systems and economic considerations, while ensuring that safety is not compromised.

30.5.2 Reliability-Centered Maintenance Concept.

30.5.2.1 The RCM approach provides a logical way of determining if PM makes sense for a given item. This might require contracting the work to firms that specialize in providing such services. The approach is based on the following precepts (see Table 30.5.2.1):

- (1) The objective of maintenance is to preserve an item's function(s). The RCM program should preserve system or equipment functionality. Redundancy improves functional reliability but increases cost in terms of procurement and life cycle cost.
- (2) RCM examines the entire system and should be focused on maintaining system function rather than individual component function.
- (3) Reliability is the basis for decisions. The failure characteristics of the item in question must be understood to determine the efficacy of preventive maintenance. The conditional probability of failure at specific ages (i.e., the probability that failure will occur in each given operating age bracket) should be determined.
- (4) RCM acknowledges design limitations. Maintenance cannot improve the inherent reliability as it is dictated by design. Maintenance should sustain the design level of reliability over the life of an item.
- (5) RCM is an ongoing process. Throughout the life of the equipment, the difference between the expected life and the actual design life and failure characteristics should be addressed.

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

						Failure	
						Rate	
CATEGORY/		Inherent	Operational	Unit		(Failures/	
CLASS	Reliability	Availability	Availability	Years	Failures	Year)	

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

						Failure	
CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Rate (Failures/ Year)	
Accumulator	0.993467721	0.999993849	0.999884828	1373.3	9	0.00655	
Pressurized	0.993913727	0.999992102	0.999841861	982.8	6	0.00610	
Item: 1 Accumulator, Pressurized.	0.993913727	0.999992102	0.999841861	982.8	6	0.00610	
Unpressurized	0.992345933	0.999998246	0.999992983	390.4	3	0.00768	
Item: 2 Accumulator, Unpressurized.	0.992345933	0.999998246	0.999992983	390.4	3	0.00768	
Air Compressor	0.964395571	0.999966392	0.999377084	799.9	29	0.03625	2
Electric	0.926805720	0.999919556	0.999207149	315.7	24	0.07601	
Item: 3 Air Compressor, Electric.	0.926805720	0.999919556	0.999207149	315.7	24	0.07601	
Fuel	0.989726301	0.999996935	0.999487902	484.2	5	0.01033	{
Item: 4 Air Compressor, Fuel.	0.989726301	0.999996935	0.999487902	484.2	5	0.01033	{
Air Dryer	0.997716217	0.999998695	0.999926162	437.4	1	0.00229	•
All Types	0.997716217	0.999998695	0.999926162	437.4	1	0.00229	
Item: 5 Air Dryer, All Types.	0.997716217	0.999998695	0.999926162	437.4	1	0.00229	•
Air Handling Unit	0.989056337	0.999997032	0.999875595	1817.5	20	0.01100	7
Non-humid wo/Drive	0.989056337	0.999997032	0.999875595	1817.5	20	0.01100	7
Item: 6 Air Handling Unit, Non-humid wo/Drive.	0.989056337	0.999997032	0.999875595	1817.5	20	0.01100	7
Arrester	0.998679474	0.999999397	0.999999397	1513.5	2	0.00132	(
Lightning	0.998679474	0.999999397	0.999999397	1513.5	2	0.00132	(
Item: 134 Arrester, Lightning.	0.998679474	0.999999397	0.999999397	1513.5	2	0.00132	(
Battery	0.993006248	0.999990299	0.999969547	10543.8	74	0.00702	1
Gel Cell-Sealed	0.980061731	0.999995402	0.999967422	2333.7	47	0.02014	۷
Item: 10 Battery, Gel Cell-Sealed, Strings.	0.980061731	0.999995402	0.999967422	2333.7	47	0.02014	۷
Lead Acid	0.992563514	0.999972627	0.999968207	3215.3	24	0.00746]
Item: 11 Battery, Lead Acid, System.	0.992563514	0.999972627	0.999968207	3215.3	24	0.00746	1
Nickel-Cadmium	0.999399558	0.999999292	0.999971403	4994.8	3	0.00060	1
Item: 246 Battery, Nickel-Cadmium.	0.999399558	0.999999292	0.999971403	4994.8	3	0.00060	1
Blower	0.999825378	1.000000000	0.999960812	2920.3	0	0.00017	5
wo/Drive	0.999825378	1.000000000	0.999960812	2920.3	0	0.00017	5
Item: 12 Blower, wo/Drive.	0.999825378*	1.000000000	0.999960812	2920.3	0	0.00017*	51

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Boiler	0.878642210	0.999360697	0.995132436	1113.0	144	0.12938	(
Hot Water	0.959008598	0.999985268	0.999501984	358.4	15	0.04186	2
Item: 13 Boiler, Hot	0.959008598	0.999985268	0.999501984	358.4	15	0.04186	2
Water, Gravity and Circulated.							
Steam	0.842870823	0.999064090	0.993057393	754.6	129	0.17094	4
Item: 14 Boiler, Steam, High Pressure.	0.928026957	0.999619462	0.991492148	468.6	35	0.07469]
Item: 15 Boiler, Steam, Low Pressure.	0.719936234	0.998154400	0.995621239	286.1	94	0.32859	
Bus Duct	0.999696290	1.000000000	1.000000000	1679.0	0	0.00030	2
All types	0.999696290	1.000000000	1.000000000	1679.0	0	0.00030	2
Item: 16 Bus Duct, All types, (100').	0.999696290*	1.000000000	1.000000000	1679.0	0	0.00030*	2
Cabinet Heaters	0.999897930	0.999999994	0.999978224	9796.7	1	0.00010	8
Forced Air Flow	0.999897930	0.999999994	0.999978224	9796.7	1	0.00010	8
Item: 17 Cabinet Heaters, Forced Air Flow, Steam	0.999897930	0.999999994	0.999978224	9796.7	1	0.00010	8
or Hot Water.							
Cable	0.998149212	0.999998818	0.999987869	736301. 3	1364	0.00185	۷
Above Ground	0.999509398	0.999999527	0.999998357	588927. 8	289	0.00049	1
Item: 18 Cable, Above	0.999932074	0.999999938	0.999990264	29442.9	2	0.00007	1
Ground, In Conduit, ≤ 600V, Per 1000ft.							
Item: 19 Cable, Above Ground, In Conduit, >600V ≤5kV, Per 1000ft.	0.999463225	0.999999476	0.999998707	523356. 6	281	0.00054	1
Item: 20 Cable, Above	0.99987838	0.999999966	0.999999904	33286.3	4	0.00012	7
Ground, No Conduit, ≤ 600V, Per 1000ft.	0.99967636	0.77777700	0.777777704	33200.3	7	0.00012	/
Item: 21 Cable, Above Ground, No Conduit, >600V ≤5kV, Per	0.999244433	0.999999655	0.999999655	2646.0	2	0.00076	1
1000ft. Item: 22 Cable, Above	0.968468243*	1.000000000	1.000000000	15.9	0	0.03204*	2
Ground, Trays, ≤600V, Per 1000ft.	0.700+002+3	1.00000000	1.000000000	13.9	Ū	0.03204	<i>_</i>
Item: 23 Cable, Above Ground, Trays, >600V ≤ 5kV, Per 1000ft.	0.997171966*	1.000000000	1.000000000	180.1	0	0.00283*	3
G : 1 : NED :							

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Aerial	0.988381339	0.999997295	0.999997259	37478.5	438	0.01169	7
Item: 32 Cable, Aerial, ≤ 15kV, Per Mile.	0.953928762	0.999990218	0.999990218	6593.7	311	0.04717	1
Item: 33 Cable, Aerial, >15kV, Per Mile.	0.995896395	0.999998806	0.999998762	30884.9	127	0.00411	2
Below Ground	0.994225869	0.999995527	0.999928197	109482. 8	634	0.00579	1
Item: 35 Cable, Below	0.999875009	0.999999766	0.999999697	40000.4	5	0.00012	7
Ground, Duct, \leq 600V, Per 1000ft.							
Item: 36 Cable, Below	0.987125021*	1.000000000	1.000000000	39.4	0	0.01296*	(
Ground, Duct, $>600V \le 5kV$, Per 1000ft.							
Item: 47 Cable, Below	0.997994901	0.999997428	0.999991686	24413.2	49	0.00201	۷
Ground, In Conduit, ≤ 600V, Per 1000ft.							
Item: 48 Cable, Below Ground, In Conduit	0.997646877	0.999995779	0.999987126	19525.5	46	0.00236	
$>600V \le 5kV$, per 1000ft.							
Item: 46 Cable, Below Ground, Insulated, >5kV, Per 1000ft.	0.980031515	0.999988193	0.999674546	22508.1	454	0.02017	۷
Item: 38 Cable, Below	0.973653295	0.999976836	0.999976836	2996.3	80	0.02670	3
Ground, Insulated, ≤ 600V, Per 1000ft.							
Insulated	0.992748496	0.999998338	0.999998338	412.2	3	0.00728	
Item: 49 Cable, Insulated, DC, Per 100ft.	0.992748496	0.999998338	0.999998338	412.2	3	0.00728	
Cable Connection	0.999629261	0.999999968	0.999999968	21574.5	8	0.00037	2
Item: 29 Cable Connection	0.999629261	0.999999968	0.999999968	21574.5	8	0.00037	2
Capacitor Bank	0.839937440	0.999954142	0.999942075	567.6	99	0.17443	4
Power Factor Corrector	0.839937440	0.999954142	0.999942075	567.6	99	0.17443	4
Item: 54 Capacitor Bank, Power Factor Corrector, (in kVAR).	0.839937440	0.999954142	0.999942075	567.6	99	0.17443	
Charger	0.992621004	0.999999577	0.999986472	270.0	2	0.00741	
Battery	0.992621004	0.999999577	0.999986472	270.0	2	0.00741	
Item: 9 Charger, Battery.	0.992621004	0.999999577	0.999986472	270.0	2	0.00741	
Chiller	0.888515818	0.999829779	0.997620632	2021.9	239	0.11820	7
Absorption	0.841986658	0.999769437	0.995132437	430.3	74	0.17199	4
_	0.071700030	0.777107431	0.773132437	т.,∪	, 4	0.1/199	•
Copyright NFPA							

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Item: 244 Chiller,	0.841986658	0.999769437	0.995132437	430.3	74	0.17199	
Absorption.							
Centrifugal	0.955142622	0.999923928	0.997604888	544.7	25	0.04589]
Item: 55 Chiller, Centrifugal, 600 - 1000 Tons.	0.955142622	0.999923928	0.997604888	544.7	25	0.04589	1
Reciprocating	0.864557699	0.999799791	0.998898189	948.2	138	0.14554	•
Item: 56 Chiller, Reciprocating, Closed, w/Drive, 50 - 200 Tons.	0.879941865	0.999809524	0.998734968	680.2	87	0.1270	
Item: 57 Chiller, Reciprocating, Open, wo/Drive, 50 - 200 Tons.	0.826705884	0.999775088	0.999312485	268	51	0.19031	
Rotary	0.986993503	0.999964132	0.996197991	76.4	1	0.01309	
Item: 58 Chiller, Rotary, 600 - 1000 Tons.	0.986993503	0.999964132	0.996197991	76.4	1	0.01309	
Screw	0.956286690	0.999510164	0.996566046	22.4	1	0.04470	
Item: 59 Chiller, Screw, >300 Tons.	0.956286690	0.999510164	0.996566046	22.4	1	0.04470	
Circuit Breaker, 600v	0.999996752	0.999999582	0.999983888	157040. 9	52	0.00000	2
3 Phase, Fixed	0.999996551	0.999999899	0.999992732	147880. 0	5	0.00000	2
Item: 61 Circuit Breaker, 600V, 3 Phase, Fixed, Including molded case, ≤600 amp, Normally	0.999984307*	1.00000000	0.999997443	32498.7	0	0.00002*	5:
Closed, Trp. Ckt. Incl. Item: 60 Circuit Breaker, 600V, 3 Phase, Fixed, Including molded case, ≤600 amp, Normally	0.999887215	0.999999760	0.999990187	26597.8	3	0.00011	7
Open, Trp. Ckt. Incl. Item: 63 Circuit Breaker, 600V, 3 Phase, Fixed, Including molded case, >600 amp, Normally	0.999994218*	1.000000000	0.999992509	88200.2	0	0.00001*	1:
Closed, Trp. Ckt. Incl, Item: 62 Circuit Breaker, 600V, 3 Phase, Fixed, Including molded case, >600V ≤5kV	0.996576534	0.999985320	0.999880051	583.2	2	0.00343	:
Drawout (Metal Clad)	0.998892235	0.999999605	0.999837990	7217.8	8	0.00111	7

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

			3 7 1				
CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Item: 67 Circuit Breaker, 600V, Drawout (Metal Clad), <600 amp, Normally Closed, Trp. Ckt. Incl.	0.999792091	0.99999858	0.999798004	4809.3	1	0.00021	4
Item: 66 Circuit Breaker, 600V, Drawout (Metal Clad), <600 amp, Normaly Open, Trp. Ckt. Incl.	0.997456731	0.999998256	0.999860901	785.4	2	0.00255	:
Item: 69 Circuit Breaker, 600V, Drawout (Metal Clad), >600 amp, Normally Closed, Trp. Ckt. Incl.	0.998150509	0.999999894	0.999954301	1080.4	2	0.00185	•
Item: 68 Circuit Breaker, 600V, Drawout (Metal Clad), >600 amp, Normally Open, Trp. Ckt. Incl.	0.994487152	0.999998738	0.999927638	542.7	3	0.00553	1
Vacuum	0.980129686	0.999975385	0.9998527800	1943.2	39	0.02007	
Item: 78 Circuit Breaker, 5kV, Vacuum, <600 amp, Normally Closed, Trp. Ckt. Incl.	0.997191564	0.999997432	0.999960511	355.6	1	0.00281	:
Item: 79 Circuit Breaker, 5kV, Vacuum, <600 amp, Normally Open, Trp. Ckt. Incl.	0.998887668*	1.000000000	0.999983060	458.2	0	0.00111*	7
Item: 80 Circuit Breaker, 5kV, Vacuum, >600 amp, Normally Closed, Trp. Ckt. Incl.	0.976752059	0.999960259	0.99961974	425.1	10	0.02352	3
Item: 81 Circuit Breaker, 5kV, Vacuum, >600 amp, Normally Open, Trp. Ckt. Incl.	0.961020019	0.999957368	0.999854272	704.2	28	0.03976	2
Compressor	0.986548811	0.999986587	0.999865676	1255.3	17	0.01354	•
Refrigerant	0.995193627	0.999998075	0.999907183	1037.8	5	0.00482]
Item: 84 Compressor, Refrigerant, >1 Ton.	0.995193627	0.999998075	0.999907183	1037.8	5	0.00482	
Screw Type	0.9463282222	0.999931777	0.999667651	217.5	12	0.05517	
Item: 85 Compressor, Screw Type.	0.9463282222	0.999931777	0.999667651	217.5	12	0.05517	
Condensers	0.900083857	0.999913810	0.999583534	110.2	116	0.10527	{
Copyright NFPA							

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Double Tube	0.973573588	0.999992357	0.999758971	298.7	8	0.02678	
Item: 86 Condensers, Double Tube.	0.973573588	0.999992357	0.99978971	298.7	8	0.02678	
Propeller Type Fans/Coils	0.733621551	0.999734138	0.999393134	348.7	108	0.30976	2
Item: 87 Condensers, Propeller Type Fans/Coils, DX.	0.733621551	0.999734138	0.999393134	348.7	108	0.30976	
Shell and Tube	0.998878743	1.000000000	0.999614286	454.6	0	0.00112	7
Item: 88 Condensers, Shell and Tube.	0.998878743*	1.000000000	0.999614286	454.6	0.00	0.00112*	7
Control Panel	0.994698171	0.999998908	0.999800824	5643.4	30	0.00532	1
Generator	0.988952766	0.999997330	0.999980962	1710.4	19	0.01111	7
Item: 128 Control Panel, Generator, wo/ Switchgear	0.988952766	0.999997330	0.999980962	1710.4	19	0.01111	Ţ.
HVAC/Chillers/AHUs	0.999848787	1.000000000	0.999982209	3372.5	0	0.00015	5
Item: 129 Control Panel, HVAC/Chillers/AHUs, wo/ Switchgear.	0.999848787*	1.000000000	0.999982209	3372.5	0	0.00015*	5'
Switchgear controls	0.980568763	0.999997149	0.998160003	560.6	11	0.01962	۷
Item: 130 Control Panel, Switchgear controls.	0.980568763	0.999997149	0.998160003	560.6	11	0.01962	۷
Convectors	0.999913016	1.000000000	0.999998481	5862.9	0	0.00009	1
Fin Tube Baseboard	0.999913016	1.000000000	0.999998481	5862.9	0	0.00009	1
Item: 89 Convectors, Fin Tube Baseboard, Electric.	0.999582861*	1.000000000	0.999999626	1222.4	0	0.00042*	21
Item: 90 Convectors, Fin Tube Baseboard, Steam or Hot Water.	0.999890105*	1.000000000	0.999998180	4640.6	0	0.00011*	7!
Cooling Tower	0.968333522	0.999702865	0.997170520	839.1	27	0.03218	2
Atmospheric Type	0.928543791	0.999247479	0.994184363	323.7	24	0.07414	1
Item: 94 Cooling Tower, Atmospheric Type, wo/ fans, motors, pumps, valves, etc.	0.928543791	0.999247479	0.994184363	323.7	24	0.07414	1
Evaporative Type	0.994195540	0.999988924	0.999046330	515.3	3	0.00582	
Item: 95 Cooling Tower, Evaporative Type, wo/ fans, motors, pumps, valves, etc.	0.994195540	0.999988924	0.999046330	515.3	3	0.00582	
Damper Assembly	0.999971953	0.999999975	0.999990131	18183.5	2	0.00003	3
Motor	0.999966919	1.000000000	0.999989337	15416.3	0	0.00003	2

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Item: 96 Damper	0.999966919*	1.000000000	0.999989337	15416.3	0	0.00003*	20
Assembly, Motor.							
Pneumatic	0.999277503	0.999999835	0.999994555	2767.2	2	0.00072	1
Item: 97 Damper	0.999277503	0.999999835	0.999994555	2767.2	2	0.00072	1
Assembly, Pneumatic.							
Diesel Engine Generator	0.589772164	0.998540049	0.993985981	1354.1	715	0.52802	1
Packaged	0.775917369	0.999329810	0.997272882	938.1	238	0.25371	3
Item: 99 Diesel Engine Generator, Packaged, 250kW-1.5MW, Continuous.	0.558396351	0.998287624	0.996927250	266.0	155	0.58269	
Item: 98 Diesel Engine Generator, Packaged, 250kW-1.5MW, Standby.	0.883822868	0.999742312	0.997409685	672.1	83	0.12350	
Unpackaged	0.317735957	0.996759289	0.986574653	416.0	477	1.14653	7
Item: 101 Diesel Engine Generator, Unpackaged, 750kW-7MW, Continuous.	0.162719469	0.994801067	0.980739869	180.6	328	1.81573	
Item: 100 Diesel Engine Generator, Unpackaged, 750kW-7MW, Standby.	0.531004159	0.998262059	0.991052357	235.4	149	0.63299	
Drive	0.978172315	0.999958316	0.999925947	2990.6	66	0.02207	3
Adjustable Speed	0.978172315	0.999958316	0.999925947	2990.6	66	0.02207	3
Item: 138 Drive, Adjustable Speed.	0.978172315	0.999958316	0.999925947	2990.6	66	0.02207	3
Evaporator	0.995968933	0.999993228	0.999908962	7922.3	32	0.00404	
Coil	0.995812835	0.999992633	0.999899263	6911.4	29	0.00420	2
Item: 82 Evaporator, Coil, Direct Expansion.	0.995812835	0.999992633	0.999899263	6911.4	29	0.00420	2
Shell Tube	0.997036799	0.999997290	0.999975270	1010.9	3	0.00297	
Item: 174 Evaporator, Shell Tube, Direct Expansion.	0.997036799	0.999997290	0.999975270	1010.9	3	0.00297	•
Fan	0.987559807	0.999971610	0.999351118	2396.5	30	0.01252	
Centrifugal	0.981021428	0.999946483	0.999770440	782.8	15	0.01916	۷
Item: 106 Fan, Centrifugal.	0.981021428	0.999946483	0.999770440	782.8	15	0.01916	۷
Propeller/Disc	0.989640193	0.999957798	0.999093547	384.1	4	0.01041	
Item: 107 Fan, Propeller/Disc.	0.989640193	0.999957798	0.999093547	384.1	4	0.01041	
Tubeaxial	0.989938879	0.999990870	0.999055744	1087.8	11	0.01011	{
Item: 108 Fan, Tubeaxial.	0.989938879	0.999990870	0.999055744	1087.8	11	0.01011	{
Vaneaxial Copyright NFPA	0.996408668	1.000000000	1.000000000	141.8	0	0.00360	2

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

			<i></i>		37 1				
						Failure			
						Rate			
CATEGORY/	D - 12 - 1-2124	Inherent	Operational	Unit	F-:1	(Failures/			
CLASS	Reliability	Availability	Availability 1.000000000	Years	Failures	Year)	2		
Item: 109 Fan, Vaneaxial.		1.000000000		141.8	0	0.00360*	2		
Filter	0.999898973	1.00000000	0.999903911	5047.9	0	0.00010	8		
Electrical Tempest	0.998510134	1.000000000	1.000000000	342.1	0	0.00149	4		
Item: 113 Filter, Electrical Tempest.	0.998510134*	1.000000000	1.000000000	342.1	0	0.00149*	5		
Mechanical	0.999891630	1.000000000	0.999896927	4705.8	0	0.00011	8		
Item: 110 Filter, Mechanical, Air Regulator Set.	0.999840000*	1.000000000	0.999981949	3187.2	0	0.00016*	54		
Item: 112 Filter, Mechanical, Fuel Oil.	0.999271146*	1.000000000	0.999910729	699.5	0	0.00073*	1.		
Item: 111 Filter, Mechanical, Lube Oil.	0.999377566*	1.00000000	0.999554311	819.1	0	0.00062*	1.		
Fuse	0.997969725	1.000000000	1.000000000	1145.4	0	0.00087	1		
$\leq 5kV \leq 15kV$	0.999341365	1.000000000	1.000000000	774.1	0	0.00066	1		
Item: 116 Fuse, >5kV ≤ 15kV.	0.999341365*	1.000000000	1.000000000	774.1	0	0.00066*	1.		
0-5kV	0.998627456	1.000000000	1.000000000	371.3	0	0.00137	(
Item: 115 Fuse, 0-5kV.	0.998627456*	1.000000000	1.000000000	371.3	0	0.00137*	6		
Gas Turbine Generator	0.647849145	0.998890863	0.990692798	921.5	400	0.43410	2		
Packaged	0.587787144	0.998689955	0.989043771	750.9	399	0.53139]		
Item: 119 Gas Turbine Generator, Packaged, 750kW-7MW, Continuous.	0.177710554	0.994598022	0.983584136	167.9	290	1.72760			
Item: 118 Gas Turbine Generator, Packaged, 750kW-7MW, Standby.	0.829472916	0.999868149	0.990615770	583.0	109	0.18696			
Unpackaged	0.994155201	0.999775158	0.997950995	170.6	1	0.00586			
Item: 121 Gas Turbine Generator, Unpackaged, 750kW-7MW, Continuous.,	0.994155201	0.999775158	0.997950995	170.6	1	0.00586			
Gauge	0.999042094	1.000000000	0.999999785	532.2	0	0.00096	1		
Fluid level	0.999042094	1.000000000	0.999999785	532.2	0	0.00096	· (
Item: 122 Gauge, Fluid level.	0.999042094*	1.00000000	0.999999785	532.2	0	0.00096*	9		
Heat Exchanger	0.989034610	0.999997303	0.998935596	634.9	7	0.01103	7		
Boiler System	0.971835048	0.999998369	0.997231137	210.0	6	0.02857			
Item: 123 Heat Exchanger, Boiler System, Steam.	0.971835048	0.999998369	0.997231137	21.0	6	0.02857			
Lube Oil Copyright NEDA	0.996596565	0.999995330	0.999740960	293.3	1	0.00341			

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Item: 125 Heat	0.996596565	0.999995330	0.999740960	293.3	1	0.00341	,
Exchanger, Lube Oil.							
Water to Water	0.996130029	1.000000000	0.999861134	131.5	0	0.00388	:
Item: 124 Heat	0.996130029*	1.000000000	0.999861134	131.5	0	0.00388*	2
Exchanger, Water to Water.							
Heater	0.947826981	0.999984168	0.994164558	317.3	17	0.05358	1
Electric	0.947826981	0.999984168	0.994164558	317.3	17	0.05358	1
Item: 126 Heater, Electric, Lube/Fuel Oil or Jacket.	0.947826981	0.999984168	0.994164558	317.3	17	0.05358	1
Humistat	0.984575905	0.999998226	0.999998226	643.3	10	0.01554	4
Assembly	0.984575905	0.999998226	0.999998226	643.3	10	0.01554	4
Item: 127 Humistat, Assembly.	0.984575905	0.999998226	0.999998226	643.3	10	0.01554	4
Inverters	0.995190512	0.999985691	0.999598793	414.8	2	0.00482	
All Types	0.995190512	0.999985691	0.999598793	414.8	2	0.00482	
Item: 131 Inverters, All Types.	0.995190512	0.999985691	0.999598793	414.8	2	0.00482	
Meter	0.998913484	0.999993988	0.999993961	16557.7	18	0.00109	1
Electric	0.999635167	0.999999958	0.999999958	13702.4	5	0.00036	2
Item: 135 Meter, Electric.	0.999635167	0.999999958	0.999999958	13702.4	5	0.00036	2
Fuel	0.946014073	0.999543853	0.999543853	216.2	12	0.05550	
Item: 136 Meter, Fuel.	0.946014073	0.999543853	0.999543853	216.2	12	0.05550	
Water	0.999621152	0.999999870	0.999999697	2639.1	1	0.00038	2
Item: 137 Meter, Water.	0.999621152	0.999999870	0.99999697	2639.1	1	0.00038	2
Motor Generator Set	0.975052652	0.999978501	0.993070544	435.4	11	0.02526	3
3 Phase, 400HZ	0.995075131	0.999995491	0.999628.32	202.6	1	0.00494	
Item: 144 Motor Generator Set, 3 Phase, 400HZ.	0.995075131	0.999995491	0.999628.32	202.6	1	0.00494	
400ПZ. 3 Phase, 60HZ	0.957963867	0.999963722	0.987366458	232.9	10	0.04295	2
Item: 147 Motor	0.957963867	0.999963722	0.987366458	232.9	10	0.04295	2
Generator Set, 3 Phase, 60HZ.	0.937903607	0.999903722	0.987300438	232.9	10	0.04293	2
Motor Starter	0.999147052	0.999995416	0.999944527	597.7	1	0.00085	1
≤600V	0.998167781	1.000000000	0.999984223	278.1	0	0.00183	۷
Item: 150 Motor Starter,	0.9981678*	1.00000000	0.999984223	9842	278.1	0.00183*	۷
≤600V.							
>600V	0.996875738	0.999991427	0.999909983	319.6	1	0.00313	
Item: 151 Motor Starter, >600V.	0.996875738	0.999991427	0.999909983	319.6	1	0.00313	
Motor, Electric Copyright NFPA	0.999032041	0.999973300	0.999930849	27880.2	27	0.00097	1

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
DC	0.985531708	0.999031729	0.998182336	754.8	11	0.01457	· (
Item: 141 Motor, Electric, DC.	0.985531708	0.999031729	0.998182336	754.8	11	0.01457	(
Induction	0.9819188989	0.999992950	0.999724259	712.5	13	0.01825	۷
Item: 148 Motor, Electric,	0.988992708	0.999998736	0.999957372	361.4	4	0.01107	
Induction, ≤600V.							
Item: 149 Motor, Electric, Induction, >600V.	0.9746899985	0.999986993	0.999484292	351.1	9	0.02564	3
Single Phase	0.999980411	0.999999987	0.9999882673	26034.5	1	0.00002	4
Item: 139 Motor, Electric,	0.999779878*	1.000000000	0.999996192	25345.3	0	0.00002*	4.
Single Phase, ≤ 5 amp.							
Item: 140 Motor, Electric, Single Phase, >5 amp.	0.998550210	0.999999503	0.999696847	689.3	1	0.00145	C
Synchronous	0.998653401	0.999978284	0.999857033	378.5	2	0.00135	•
Item: 152 Motor, Electric,	0.996555656*	1.000000000	0.999777580	147.8	0	0.00345*	2
Synchronous, ≤ 600 V.							
Item: 153 Motor, Electric, Synchronous, >600V.	0.991366824	0.999964367	0.999907948	230.7	2	0.00867	
Motor, Mechanical	0.195448823	0.999809717	0.998810724	1154.7	1885	1.63246	4
Diesel	0.904562026	0.999953538	0.991433654	129.6	13	0.10030	{
Item: 142 Motor,	0.904562026	0.999953538	0.991433654	129.6	13	0.10030	
Mechanical, Diesel.							
Gas	0.161029030	0.999791533	0.999743425	1025.1	1872	1.82617	۷
Item: 143 Motor, Mechanical, Gas.	0.161029030	0.999791533	0.999743425	1025.1	1872	1.82617	
Pipe	0.981888041	0.999994337	0.999991952	383.0	7	0.01828	
Flex	0.981888041	0.999994337	0.999991952	383.0	7	0.01828	
Item: 51 Pipe, Flex, Non-Reinforced, >4".	0.985560776	0.999994466	0.999990038	206.3	3	0.01454	•
Item: 53 Pipe, Flex, Reinforced, >4".	0.977618384	0.999994186	0.999994186	176.7	4	0.02264	3
Piping	0.999960899	0.999998770	0.999676366	13042.9	12	0.00004	2
Refrigerant	0.999954550	0.999999430	0.999990919	11221.0	6	0.00005	1
Item: 91 Piping,	0.999925556*	1.000000000	0.999993884	6850.6	0	0.00007*	1
Refrigerant, <1 inch.	0.55552000	1.00000000	0.55555500	0000.0	v	0.00007	•
Item: 158 Piping, Refrigerant, <2 inch.	0.997181886	0.999996564	0.999986684	1063.0	3	0.00282	•
Item: 159 Piping, Refrigerant, >2 inch.	0.999822269*	1.000000000	1.000000000	2869.2	0	0.00018*	4:
Item: 92 Piping, Refrigerant, 1-3 inch.	0.993176045	0.999993747	0.999895362	438.1	3	0.00685	
Water	0.999720116	0.999994706	0.997739077	1821.9	6	0.00028	3

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Item: 154 Piping, Water,	0.998834378*	1.000000000	1.000000000	437.3	0	0.00117*	7:
≤2 inch.	0.776634376	1.00000000	1.00000000	737.3	U	0.00117	7.
Item: 93 Piping, Water, >12".	0.939385452*	1.000000000	1.000000000	8.2	0	0.06253*	1
Item: 155 Piping, Water, >2≤4 inch.	0.979679275	0.999966994	0.999966994	292.3	6	0.02053	
>2≤4 mcn. Item: 156 Piping, Water, >4≤8 inch.	0.998103531*	1.000000000	1.000000000	268.7	0	0.00190*	41
Item: 157 Piping, Water, >8≤12 inch.	0.999374866*	1.000000000	0.994961083	815.6	0	0.00063*	1.
Pressure Control	0.993091820	0.999995568	0.999938101	721.3	5	0.00693	
Assembly	0.993091820	0.999995568	0.999938101	721.3	5	0.00693	1
Item: 160 Pressure Control, Assembly.	0.993091820	0.99999568	0.999938101	721.3	5	0.00693	,
Pressure Regulator	0.999163441	1.000000000	0.999993069	609.4	0	0.00084	1
Hot Gas	0.999163441	1.000000000	0.999993069	609.4	0	0.00084	1
Item: 161 Pressure Regulator, Hot Gas.	0.999163441*	1.000000000	0.999993069	609.4	0	0.00084*	10
Pump	0.993705867	0.999994889	0.999826613	1742.2	11	0.00631	1
Centrifugal	0.994206434	0.999995523	0.999903450	1376.8	8	0.00581	
Item: 163 Pump, Centrifugal, Integral	0.992515450	0.999993654	0.999897429	665.5	5	0.00751	1
Drive. Item: 164 Pump, Centrifugal, wo/Drive.	0.995791244	0.999997272	0.999909083	711.3	3	0.00422	<u>.</u>
Positive Displacement	0.991821538	0.999992500	0.999537023	365.3	3	0.00821	
Item: 165 Pump, Positive Displacement.	0.991821538	0.999992500	0.999537023	365.3	3	0.00821	
Radiators	0.987545587	0.999977760	0.999934189	877.7	11	0.01253	
Small Tube	0.987545587	0.999977760	0.999934189	877.7	11	0.01253	
Item: 166 Radiators, Small Tube.	0.987545587	0.999977760	0.999934189	877.7	11	0.01253	
Rectifiers	0.9955406583 7	0.99999129768	0.998973	447.5	2	0.00447	
All Types	0.995540658	0.999991837	0.998972976	447.5	2	0.00447	
Item: 168 Rectifiers, All Types.	0.995540658	0.999991837	0.9989732976	447.5	2	0.00447	
Sending Unit	0.999566658	0.999999536	0.999999258	36914.4	16	0.00043	2
Air Velocity	0.998867884	0.999998707	0.999997599	6179.6	7	0.00113	,
Item: 173 Sending Unit, Air Velocity.	0.998867884	0.999998707	0.9999975996	6179.6	7	0.00113	7
Pressure	0.997916028	0.9999978839	0.99999089	4314.2	9	0.00209	۷

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Item: 171 Sending Unit,	0.997916028	0.9999979883	0.999997089	4314.2	9	0.00209	4
Pressure.							
Temperature	0.999980697	1.000000000	1.000000000	26420.6	0	0.00002	4
Item: 172 Sending Unit, Temperature.	0.999980697*	1.000000000	1.000000000	26420.6	0	0.00002*	4:
Software Con. ADAS Sys.	0.642221250	0.999854564	0.999658784	551.0	244	0.44282	1
≤1000 Acquisition Points	0.777690112	0.999954199	0.999888246	373.9	94	0.25143	
Item: 169 Software Con. ADAS Sys., ≤1000 Acquisition Points.	0.777690112	0.999954199	0.999888246	373.9	94	0.25143	
>1000 Acquisition Points	0.428800729	0.999644282	0.999174503	177.1	150	0.84676	1
Item: 170 Software Con.	0.428800729	0.999644282	0.999174503	177.1	150	0.84676	
ADAS Sys., >1000 Acquisition Points.	0.12000012	0.999011202	0.93917 1505	1,,,1	150	0.01070	
Strainer	0.999943310	1.000000000	0.9999167	8996.1	0	0.00006	1
Coolant	0.998861684	1.000000000	0.999333463	447.8	0	0.00114	,
Item: 177 Strainer, Coolant.	0.998861684*	1.0000000000	0.999333463	447.8	0	0.00114*	7
Duplex Fuel/Lube Oil	0.995679886	1.000000000	0.999861421	117.8	0	0.00433	2
Item: 180 Strainer, Duplex Fuel/Lube Oil.	0.995679886*	1.000000000	0.999861421	117.8	0	0.00433*	2
Fuel Oil	0.998766615	1.000000000	0.999924447	413.2	0	0.00123	7
Item: 179 Strainer, Fuel Oil.	0.998766615*	1.000000000	0.999924447	413.2	0	0.00123*	71
Lube Oil	0.999529759	1.000000000	0.999881981	1084.3	0	0.00047	1
Item: 178 Strainer, Lube Oil.	0.999529759*	1.000000000	0.999881981	1084.3	0	0.00047*	1:
Water	0.999926442	1.000000000	0.9999603634	6933.0	0	0.00007	1
Item: 175 Strainer, Water, ≤4 inch.	0.999920044*	1.000000000	0.999999893	6378.3	0	0.00008*	11
Item: 176 Strainer, Water, >4 inch.	0.999081068*	1.000000000	0.999505864	554.7	0	0.00092*	9
Switch	0.993744427	0.999996988	0.999960651	9720.8	61	0.00628	1
Automatic Transfer	0.950118163	0.999976051	0.999857315	1074.9	55	0.05117	1
Item: 183 Switch, Automatic Transfer, >600 amp., ≤600V.	0.968631015	0.999994046	0.99980981	690.3	22	0.03187	2
Item: 182 Switch, Automatic Transfer,	0.917774618	0.999943753	0.999942269	384.6	33	0.08580	1
0-600 amp., ≤600V. Disconnect	0.999846881	0.999999966	0.999961037	3330.5	1	0.00015	5

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Item: 185 Switch,	0.999394569*	1.000000000	0.999938186	842.1	0	0.00061*	1.
Disconnect, Enclosed, ≤ 600V.							
Item: 187 Switch, Disconnect, Enclosed, >5kV.	0.998257804	0.999999801	0.999939288	573.5	1	0.00174	i
Item: 186 Switch, Disconnect, Enclosed, >600V ≤5kV.	0.997942528*	1.000000000	0.999867230	247.6	0	0.00206*	4.
Item: 65 Switch, Disconnect, Fused, DC, >600 amp., ≤600V.	0.999408178*	1.000000000	1.000000000	861.5	0	0.00059*	1.
Item: 64 Switch, Disconnect, Fused, DC, 0-600 amp., ≤600V.	0.999367257*	1.000000000	0.999987568	805.8	0	0.00063*	1:
Electric	0.999358198	0.999999927	0.999999780	3115.2	2	0.00064	1
Item: 184 Switch, Electric, On/Off Breaker	0.999358198	0.999999927	0.999999780	3115.2	2	0.00064	1
Type, Non-knife., ≤ 600V.							
Float	0.997716932	0.999999478	0.999985388	437.5	1	0.00229	•
Item: 104 Switch, Float, Electric.	0.997716932	0.999999478	0.999985388	437.5	1	0.00229	, •
Manual Transfer	0.999129111	1.000000000	0.999966262	585.4	0	0.00087	1
Item: 188 Switch, Manual Transfer, ≤600 amp., ≤ 600V.	0.997919138*	1.000000000	0.999952908	244.8	0	0.00208*	4.
Item: 189 Switch, Manual Transfer, >600 amp., ≤ 600V.	0.998503402*	1.000000000	0.999975863	340.5	0	0.00150*	5
Oil Filled	0.998241979	1.000000000	0.999996849	289.8	0	0.00176	4
Item: 190 Switch, Oil Filled, ≥5kV.	0.998241979*	1.000000000	0.999996849	289.8	0	0.00176*	4!
Static	0.997748999	0.999996656	0.999919287	887.5	2	0.00225	
Item: 212 Switch, Static, >1000 amp., ≤600V.	0.996326697	0.999989918	0.999739539	271.7	1	0.00368	<u>:</u>
Item: 211 Switch, Static, >600 ≤1000 amp., ≤ 600V.	0.992336720	0.999998244	0.999994731	130.0	1	0.00769	
Item: 210 Switch, Static, 0-600 amp. ≤600V.	0.998950665*	1.000000000	0.999999648	485.8	0	0.00105*	8
Switchgear	0.991916417	0.999974462	0.999585725	4558.7	37	0.00812	
Copyright NFPA							

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Bare Bus	0.989863408	0.999968286	0.999579123	3239.0	33	0.01019	{
Item: 191 Switchgear,	0.990554799	0.999992098	0.999455269	1791.3	17	0.00949	ç
Bare Bus, ≤600V, All Cabinets, Ckt. Bkrs. Not Included.							
Item: 193 Switchgear, Bare Bus, >5kV, All Cabinets, Ckt. Bkrs. Not Included.	0.982216877	0.999995342	0.999839597	780.2	14	0.01794	۷
Item: 192 Switchgear, Bare Bus, >600V ≤5kV, All Cabinets,Ckt. Bkrs. Not Included.	0.997007868	0.999872746	0.999607036	667.4	2	0.00300	
Insulated Bus	0.999613608	0.999989619	0.999601929	1319.6	4	0.00039	2
Not Included.	0.998420947*	1.000000000	0.999468794	322.7	0	0.00158*	5
Item: 196 Switchgear, Insulated Bus, >5kV, All Cabinets, Ckt. Bkrs. Not Included.	0.995913049	0.999982547	0.999626621	732.5	3	0.00410	•
Item: 195 Switchgear, Insulated Bus, >600V ≤ 5kV, All Cabinets, Ckt.Bkrs. Not Included.	0.996224761	0.999996546	0.999696028	264.4	1	0.00378	
Tank	0.995965564	0.999991636	0.999971186	1978.9	8	0.00404	
Day	0.994810377	0.999997030	0.999974756	384.4	2	0.00520	
Item: 198 Tank, Day, Genset Fuel.	0.994810377	0.999997030	0.999974756	384.4	2	0.00520	
Fuel	0.993549151	0.999955673	0.999872929	309.0	2	0.00647	
Item: 197 Tank, Fuel.	0.993549151	0.999955673	0.999872929	309.0	2	0.00647	
Receiver	0.997280535	0.999997824	0.999996891	734.4	2	0.00272	
Item: 167 Tank, Receiver, Air.	0.997280535	0.999997824	0.999996891	734.4	2	0.00272	
Water	0.996377265	0.999999793	0.999989539	551.1	2	0.00363	,
Item: 199 Tank, Water.	0.996377265	0.999999793	0.999989539	551.1	2	0.00363	
Thermostat	0.998319168	0.999999398	0.999997565	6538.9	11	0.00168	:
Radiator	0.998319168	0.999999398	0.999997565	6538.9	11	0.00168	4
Item: 201 Thermostat, Radiator.	0.998319168	0.999999398	0.999997565	6538.9	11	0.00168	4
Transducer	0.999978470	0.999999933	0.999998552	23687.4	42	0.00002	4
Flow	0.996713345	1.000000000	0.999986736	154.9	0	0.00329	2
Item: 114 Transducer, Flow.	0.996713345*	1.000000000	0.999986736	154.9	0	0.00329*	2
Pressure	0.997477750	0.999999423	0.999987243	791.9	2	0.00253	•

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Item: 162 Transducer,	0.997477750	0.999999423	0.999987243	791.9	2	0.00253	
Pressure.					_	*****	·
Temperature	0.998242572	0.999999950	0.999999026	22740.5	40	0.00176	4
Item: 200 Transducer,	0.998242572	0.999999950	0.999999026	22740.5	40	0.00176	4
Temperature.							
Transformer, Dry	0.999953743	0.999995817	0.999971899	11025.1	19	0.00005	1
Air Cooled	0.999882198	1.000000000	0.999944571	4329.0	0	0.00012	7
Item: 202 Transformer,	0.999775100*	1.000000000	0.999995570	2267.4	0	0.00022*	3
Dry, Air Cooled, ≤ 500kVA.							
Item: 204 Transformer, Dry, Air Cooled,	0.999393210*	1.0000000000	0.999745124	840.2	0	0.00061*	1.
$>1500 \text{kVA} \le 3000 \text{kVA}.$							
Item: 203 Transformer,	0.999582527*	1.0000000000	0.999987102	1221.4	0	0.00042*	21
Dry, Air Cooled,							
>500kVA ≤1500kVA.							
Isolation	0.997166548	0.999993113	0.999989567	6696.1	19	0.00284	3
Item: 132 Transformer, Dry, Isolation, Delta Wye, <600V.	0.997166548	0.999993113	0.999989567	6696.1	19	0.00284	3
Transformer, Liquid	0.994797669	0.999950735	0.998990580	8819.2	46	0.00522	1
Forced Air	0.989259891	0.999836759	0.996601877	2593.0	28	0.01080	{
Item: 206 Transformer,	0.992879584	0.999797696	0.990915913	419.8	3	0.00715	
Liquid, Forced Air, ≤ 10,000kVA.							
Item: 205 Transformer,	0.987452327	0.999994736	0.999987215	1821.5	23	0.01263	•
Liquid, Forced Air, ≤ 5,000kVA.							
Item: 207 Transformer, Liquid, Forced Air, >10,000kVA ≤	0.994329760	0.999065253	0.985856760	351.7	2	0.00569	
50,000kVA.							
Non-Forced Air	0.997113141	0.999998203	0.999985412	6226.1	18	0.00289	3
Item: 208 Transformer, Liquid, Non-Forced Air,	0.998891114	0.999999367	0.999996102	5407.8	6	0.00111	,
≤3000kVA.						0.04=-0	
Item: 241 Transformer, Liquid, Non-Forced Air, >10000kVA ≤ 50000kVA.	0.982624792	0.999987813	0.999893406	627.6	11	0.01753	2
Item: 209 Transformer, Liquid, Non-Forced Air, >3000kVA ≤10000kVA. Copyright NFPA	0.994771048	0.999999402	0.999985038	190.7	1	0.00524	

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
UPS	0.999078297	0.999998349	0.999951289	553.1	4	0.00092	
Rotary	0.995983397	1.000000000	0.999895500	126.7	0	0.00402	2
Item: 213 UPS, Rotary.	0.995983397*	1.000000000	0.999895500	126.7	0	0.00402*	2
Small Computer Room Floor	0.990661925	0.999997858	0.999967870	426.4	4	0.00938	
Item: 216 UPS, Small Computer Room Floor.	0.990661925	0.999997858	0.999967870	426.4	4	0.00938	
Valve	0.999995192	0.999999568	0.999977752	106073. 6	183	0.0000	1
3-way	0.999727982	1.000000000	0.999987577	1874.6	0	0.00027	3
Item: 236 Valve, 3-way, Diverting/Sequencing.	0.999257278*	1.000000000	0.999999501	686.4	0	0.00074*	1
Item: 237 Valve, 3-way, Mixing Control.	0.999570876*	1.000000000	0.9999806890	1188.2	0	0.00043*	21
Ball	0.999807822	0.9999999257	0.999999204	2653.5	2	0.00019	4
Item: 217 Valve, Ball, N.C.	0.999516658*	1.000000000	0.999998106	1054.9	0	0.00048*	1
Item: 218 Valve, Ball, N.O.	0.998749718	0.999999929	0.999999929	1598.6	2	0.00125	,
Butterfly	0.998692271	0.999999513	0.999995506	17576.2	23	0.00131	(
Item: 219 Valve, Butterfly, N.C.	0.991788585	0.999996931	0.999990199	2789.5	23	0.00825]
Item: 220 Valve, Butterfly, N.O.	0.999965510*	1.000000000	0.999996507	14786.8	0	0.00003*	2:
Check	0.999742108	0.999999971	0.999980199	3877.1	1	0.00026	3
Item: 221 Valve, Check.	0.999742108	0.999999971	0.999980199	3877.1	1	0.00026	3
Control	0.999937125	0.999999943	0.999996490	15904.0	1	0.00006	1
Item: 223 Valve, Control, N.C.	0.999922211	0.999999929	0.999997478	12854.8	1	0.00008	1
Item: 224 Valve, Control, N.O.	0.999832761*	1.00000000	0.999992325	3049.3	0	0.00017*	5.
Expansion	0.999742991	1.000000000	1.000000000	1984.1	0	0.00026	3
Item: 105 Valve, Expansion.	0.999742991*	1.000000000	1.000000000	1984.1	0	0.00026*	3,
Gate	0.999827547	0.999999888	0.999999642	17394.5	3	0.00017	5
Item: 225 Valve, Gate, N.C.	0.999421886	0.999999934	0.999998647	1729.3	1	0.00058	1
Item: 226 Valve, Gate, N.O.	0.999872337	0.999999883	0.999999752	15665.3	2	0.00013	6
Globe	0.999980570	1.000000000	0.999921533	26248.0	0	0.00002	4
Item: 227 Valve, Globe, N.C.	0.999975654*	1.000000000	0.999901766	20947.4	0	0.00002*	3:

Table 30.5.2.1 Reliability, Inherent Availability, Operational Avai

CATEGORY/ CLASS	Reliability	Inherent Availability	Operational Availability	Unit Years	Failures	Failure Rate (Failures/ Year)	
Item: 228 Valve, Globe, N.O.	0.999903788*	1.000000000	0.999999612	5300.5	0	0.00010*	9
Plug	0.990331504	0.999997992	0.999997984	15233.3	148	0.00972	ç
Item: 232 Valve, Plug, N.C.	0.986191497	0.999997832	0.999997819	8845.9	123	0.01390	•
Item: 233 Valve, Plug, N.O.	0.996093704	0.999998213	0.999998213	6387.4	25	0.00391	2
Reducing	0.998490771	1.000000000	0.999972616	337.7	0	0.00151	4
Item: 234 Valve, Reducing, Makeup Water.	0.998490771*	1.000000000	0.999972616	337.7	0	0.00151*	5
Relief	0.998671145	0.999999696	0.999994763	752.0	1	0.00133	(
Item: 235 Valve, Relief.	0.998671145	0.999999696	0.999994763	752.0	1	0.00133	(
Suction	0.998214603	0.999998521	0.999994094	2238.4	4	0.00179	4
Item: 181 Valve, Suction.	0.998214603	0.999998521	0.999994094	2238.4	4	0.00179	4
Valve Operator	0.992808232	0.999991177	0.999971677	9975.4	72	0.00722	
Electric	0.990159307	0.999979209	0.999934083	3640.2	36	0.00989	
Item: 229 Valve Operator, Electric.	0.990159307	0.999979209	0.999934083	3640.2	36	0.00989	
Hydraulic	0.915817948	0.999969884	0.999601804	68.2	6	0.08794	
Item: 230 Valve Operator, Hydraulic.	0.915817948	0.999969884	0.999601804	68.2	6	0.08794	
Pneumatic	0.995224402	0.999998361	0.999997541	6266.9	30	0.00479	1
Item: 231 Valve Operator, Pneumatic.	0.995224402	0.999998361	0.999997541	6266.9	30	0.00479	1
Voltage Regulator	0.964377637	0.999690405	0.999644857	358.4	13	0.03627	2
Static	0.964377637	0.999690405	0.999644857	358.4	13	0.03627	2
Item: 238 Voltage Regulator, Static.	0.964377637	0.999690405	0.999644857	358.4	13	0.03627	2
Water Cooling Coil	0.999577258	0.999999979	0.999993176	4730.0	2	0.00042	2
Fan Coil Unit	0.999577258	0.999999879	0.999993176	473.0	2	0.00042	2
Item: 239 Water Cooling Coil, Fan Coil Unit.	0.999577258	0.999999879	0.999993176	4730.0	2	0.00042	2

30.5.2.2 The RCM concept will completely change the way in which PM is viewed. It is widely accepted that not all items benefit from PM. It might be less expensive to allow an item to "run to failure," provided safety is not compromised, rather than to do PM. Although RCM should focus on identifying PM actions, corrective actions are identified by default. RCM should focus on optimizing readiness, availability, and sustainability through effective and economical maintenance. Pertinent information can be found in Annex K.

30.6 Operations and Maintenance (O&M) Documentation.

Before installing or employing a SCADA system, an O&M analysis should be performed to provide the maintenance parameter data.

30.7 Technical Support.

Ongoing maintenance of a SCADA system might require specialized technical support from the system vendor. This might require the vendor to have remote modem access to the system, though this provision represents a vulnerability to infiltration of the system by unauthorized personnel, and appropriate precautions need to be observed. Such access should be monitored while in use and physically disconnected when not in use.

Chapter 31 EPM from Commissioning (Acceptance Testing) Through Maintenance

31.1 Introduction.

- **31.1.1** Commissioning, also referred to as acceptance testing, integrated system testing, operational tune-up, and start-up testing, is the process by which baseline test results verify the proper operation and sequence of operation of electrical equipment, in addition to developing baseline criteria by which future trend analysis can help to identify equipment deterioration.
- **31.1.2** It is not unusual for electrical systems to have problems during startup and installation. Sometimes it takes experienced engineers and technicians to identify operational problems and provide solutions to fine-tune the system to operate as it was designed. When implemented correctly, a realistic commissioning plan minimizes startup and long-term problems, reduces operational costs, and minimizes future maintenance requirements.

31.2 Purpose.

The purpose of electrical testing on system and components is twofold. Electrical-system commissioning on new projects is critical to ascertain that the system is installed correctly and that it will remain in service for its projected life cycle.

31.3 Requirements.

The first requirement is to check the installation of the equipment and to perform component and system tests to ensure that, when energized, the system will function properly. The second requirement is to develop a set of baseline test results for comparison in future maintenance testing to identify equipment deterioration. This process or set of tests usually is performed by independent contractors, installation contractors, or the manufacturer and is usually called *commissioning*.

31.4 Commissioning Planning Stages.

The commissioning planning stages should be followed in the establishment of a Copyright NFPA

commissioning testing program as shown in Figure 31.4.

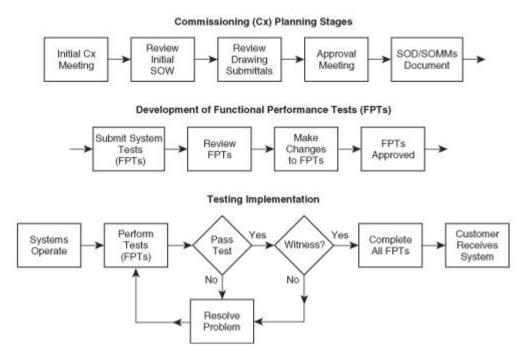


FIGURE 31.4 Sample of a Commissioning Plan. (Source: U.S. General Services Administration and U.S. Department of Energy, *Building Commissioning Guide*, July 30, 1998.)

- **31.4.1 Initial Commissioning (Kick-Off) Meeting.** The first commissioning meeting might start as early as before a contract is awarded or as late as after the system has been installed (before it is turned over to the customer). The participants in the meeting should include the customer, government contractor personnel, participating engineers, commissioning personnel (might be an independent commissioning contractor or government engineer), general contractor, and electrical and mechanical subcontractors. Topics of the meeting should include areas of responsibility, expectations, overall presentation of system, methodology, potential problem areas, and so on. All the participants should be considered part of the team.
- **31.4.2 Review Initial Statement of Work (SOW).** All participants should review the SOW that describes the requirements of the commissioning process. The customer (or designated authority) should have the ultimate control where decisions are required.
- **31.4.3 Review Drawing Submittals.** After the systems are installed, drawings should be submitted for review and comment. Sometimes the review is before systems are installed. Care must be taken to verify that the drawings submitted reflect the actual installed system.
- **31.4.4 Approval for SOW and Design Intent.** After the SOW and drawing submittals have been submitted, reviewed, comments made, and comments incorporated, approval of documents should be provided.
- 31.4.5 Obtain or Develop System Operating Documents (SOD) and System Operation Maintenance Manuals (SOMM) OTAY. The prime contractor should provide a SOD or Copyright NFPA

a SOMM. These documents are required to develop specific commissioning tests.

31.5 Developing of Functional Performance Tests (FPTs).

System/component tests are commonly known as functional performance tests (FPTs). FPTs are critical in establishing a baseline reference for future maintenance testing requirement criteria. Examples of sample documents that can be used in the development of FPTs can be found in the NETA *Acceptance Testing Specifications for Electrical Power Distribution Equipment and Systems*, Square D Services' *Procedures for Startup and Commissioning of Electrical Equipment*, or manufacturers' materials. The following steps should be taken during the development of FPTs.

31.5.1 Submit Functional Performance Tests (FPTs).

- **31.5.1.1** System/component tests, or FPTs, should be developed from submitted drawings, SODs, and SOMMs. The tests should include large-component testing (i.e., transformers, cable, generators, UPS) and how components operate as part of the total system. The commissioning authority should develop the test. The commissioning authority should not be the installation contractor (or subcontractor).
- **31.5.1.2** As the equipment/components/systems are installed, quality assurance procedures should be administered to verify that components are installed in accordance with minimum manufacturers' recommendations, safety codes, and acceptable installation practices. Quality assurance discrepancies should be identified and added to a commissioning action list, which must be rectified as part of the commissioning program. These items usually are discussed during commissioning meetings and discrepancies identified initially by visual inspection.
- **31.5.2 Review FPTs.** The tests should be reviewed by the customer, electrical contractors, quality assurance personnel, maintenance personnel, and the rest of the commissioning team. Areas of concern should include the following:
- (1) Are all functions of the system being tested?
- (2) Are all major components included?
- (3) Do the tests reflect the system operating documents?
- (4) Do the tests make sense? etc.
- **31.5.3 Make Changes to FPTs as Required.** This is where corrections, answers to questions, and additions will be implemented. The commissioning authority will do this.
- **31.5.4 Approval of FPTs.** After the changes have been made to the FPTs, they should again be submitted to the commissioning team. When they are acceptable, the customer or the designated approval authority should approve the FPTs. It should be noted that even though the FPT has been approved, problems that arise during the test or in areas not covered should be addressed.

31.6 Testing Implementation.

The third and final step in the successful commissioning plan is testing and proper execution of system-integrated tests. See the pertinent checklists in Annex F: Figure F.21, Figure F.23, Copyright NFPA

Figure F.24, Figure F.25, and Figure F.35.

31.6.1 Checklists. For consistency purposes, it is recommended that forms and checklists similar to those shown in Annex F be utilized. These forms will ensure that the results of the FPTs are accurately recorded, witnessed, and approved. In addition, these forms will ensure that baseline data exist to compare with future measurements, thus establishing needed maintenance requirements.

31.6.2 Systems Ready to Operate. The FPTs can be implemented as various systems become operative (i.e., test the generator system) or when the entire system is installed. However, the final "pull-the-plug" test is performed after all systems have been completely installed. If the electrical contractor (or subcontractor) implements the FPTs, a witness should initial each step of the test. The witness should not be employed by the electrical contractor either directly or indirectly.

31.6.3 Perform Tests (FPTs). If the system fails the test, the problem should be resolved and the equipment or system retested, or the testing requirements should be reanalyzed until successful tests are witnessed. Once the system or equipment passes the test, it should be verified by the designated commissioning official.

31.6.4 Customer Receives System. After all tests have been completed (including the pull-the-plug test), the system should be turned over to the customer.

31.7 Costs of Commissioning.

The costs of commissioning for an electrical system depend on many factors, including the system size, complexity, and the level of reliability desired. New-building construction, renovation of an existing building, or modernization also affect the cost of commissioning, which for a new building can range from 0.5 to 1.5 percent of the total construction cost, as shown in Table 31.7. The cost of commissioning is small compared to the potential overall system cost. Experience has shown that the initial commissioning cost is more than offset by increased system reliability and reduced operating costs.

Table 31.7 Costs of Commissioning, New Construction

Commissioning Scope	Cost
Entire building (HVAC, controls, electrical, mechanical)	0.5%-1.5% of total construction cost
commissioning	
HVAC and automated control system commissioning	1.5%–2.5% of mechanical system cost
Electrical systems commissioning	1.0%–1.5% of electrical system cost

Annex A Explanatory Material

Annex A is not a part of the recommendations of this NFPA document but is included for informational purposes only. This annex contains explanatory material, numbered to correspond with the applicable text paragraphs.

- **A.3.2.1 Approved.** The National Fire Protection Association does not approve, inspect, or certify any installations, procedures, equipment, or materials; nor does it approve or evaluate testing laboratories. In determining the acceptability of installations, procedures, equipment, or materials, the authority having jurisdiction may base acceptance on compliance with NFPA or other appropriate standards. In the absence of such standards, said authority may require evidence of proper installation, procedure, or use. The authority having jurisdiction may also refer to the listings or labeling practices of an organization that is concerned with product evaluations and is thus in a position to determine compliance with appropriate standards for the current production of listed items.
- **A.3.2.2 Authority Having Jurisdiction (AHJ).** The phrase "authority having jurisdiction," or its acronym AHJ, is used in NFPA documents in a broad manner, since jurisdictions and approval agencies vary, as do their responsibilities. Where public safety is primary, the authority having jurisdiction may be a federal, state, local, or other regional department or individual such as a fire chief; fire marshal; chief of a fire prevention bureau, labor department, or health department; building official; electrical inspector; or others having statutory authority. For insurance purposes, an insurance inspection department, rating bureau, or other insurance company representative may be the authority having jurisdiction. In many circumstances, the property owner or his or her designated agent assumes the role of the authority having jurisdiction; at government installations, the commanding officer or departmental official may be the authority having jurisdiction.
- **A.3.2.3 Listed.** The means for identifying listed equipment may vary for each organization concerned with product evaluation; some organizations do not recognize equipment as listed unless it is also labeled. The authority having jurisdiction should utilize the system employed by the listing organization to identify a listed product.
- **A.3.3.10 Corona.** High electrical gradients exceeding the breakdown level of air lead to corona discharges. Mild corona has a low sizzling sound and might not be audible above ambient noise in the substation. As the corona increases in activity, the sizzling sound becomes louder and is accompanied by popping, spitting, or crackling as flashover level nears. Corona ionizes the air, converting the oxygen to ozone, which has a distinctive, penetrating odor.
- **A.3.3.20 Electrical Preventive Maintenance (EPM).** Electrical preventive maintenance relies on knowing the electrical systems and equipment being maintained and on knowing the operating experience, loss exposures, potential for injury, and maintenance resources.
- **A.3.3.35 Ground-Fault Circuit Interrupter (GFCI).** A GFCI does not eliminate the electric shock sensation since normal perception level is approximately 0.5 mA; nor does it protect from electric shock hazard from line-to-line contact.
- **A.3.3.36 Ground-Fault Protection of Equipment (GFP).** There are two applications where ground-fault protection of equipment is intended to be used: where there may be excessive ground-fault leakage current from equipment and where equipment and conductors are to be protected from damage in the event of a higher-level ground fault (either solid or arcing). These types of protective equipment are for use only on ac, grounded circuits; they cause the circuit to be disconnected when a current equal to or higher than its pickup setting

or rating flows to ground. They are not designed to protect personnel from electrocution. Equipment ground-fault protective devices are intended to operate on a condition of excessive ground-fault leakage current from equipment. The ground current pickup level of these devices is from above 6 mA to 50 mA. Circuit breakers with equipment ground-fault protection are combination circuit breaker and equipment ground-fault protective devices designed to serve the dual function of providing overcurrent protection and ground-fault protection for equipment. The ground current pickup level of these breakers is typically 30 mA. They are intended to be used in accordance with NFPA 70, *National Electrical Code*, Articles 426 and 427. Ground-fault sensing and relaying equipment is intended to provide ground-fault protection of equipment at services and feeders. They are rated for ground current pickup levels from 4 amperes to 1200 amperes.

A.4.2.8 Table A.4.2.8 represents the results of a study performed by only one of the major insurance groups (Factory Mutual) that specialize in industrial fire and machinery insurance. The table indicates that in a 2-year period, half of the losses associated with electrical equipment failures might have been prevented by an effective EPM program.

Table A.4.2.8 1987–1991 Losses Associated with Electrical Failures, Including Electric

Class of Equipment	Number of Losses from All Causes, Including Unknown	Gross Dollar Loss from All Causes, Including Unknown (\$1000)	Number of Losses from Causes Unknown	Gross Dollar Loss from Causes Unknown (\$1000)	Number of L from Knov Causes Duc Inadequa Maintenar
Transformers	529	185,874	229	27,949	71
Generators	110	110,951	31	39,156	14
Cables	230	99,213	68	59,881	23
Motors	390	57,004	199	17,027	34
Circuit breakers	104	24,058	32	6,874	10
Controllers, switches, switchgear, and switchboards	108	17,786	36	5,537	17
Total	1,471	494,886	595	156,424	169

Notes:

Annex B Suggestions for Inclusion in a Walk-Through Inspection Checklist

This annex is not a part of the recommendations of this NFPA document but is included for informational purposes only.

B.1 General.

⁽¹⁾ Statistics compiled by only one of the major insurance groups (Factory Mutual) that specialize in industrial insurance.

⁽²⁾ Gross dollar losses are indexed to 1992 values.

These suggested items are directed toward minimizing day-to-day electrical hazards. The list is not complete, nor do the items necessarily appear in order of importance. It is presented as a guide for the preparation of a checklist that should be developed for each plant. Because of the similarity to the plant fire prevention inspection, both inspections can be carried out by the same personnel.

- **B.1.1 Flexible Cords (Including Those on Appliances).** Heater-type cords are recommended for portable heating appliances, such as toasters, grills, and coffee makers. An inspection should be made for badly worn or frayed spots, splices (not permitted), improper type, or current-carrying capacity that is too small.
- **B.1.2 Plugs and Connectors.** A check should be made for stray strands and loose terminals. They should be grounding type where required for specific appliances. The green conductor should be connected to the grounding terminal.
- **B.1.3 Extension Cords.** Are extension cords used in place of permanent wiring, and are they of excessive length and of proper type? They should not pass through walls, partitions, or doors.
- **B.1.4 Multiple Current Taps.** Are multiple current taps used because of too few receptacles? In particular, are they used in areas such as canteens, lunchrooms, and offices?
- **B.1.5 Appliances.** Grills, toasters, and similar equipment should be permanently spaced from combustible material.
- **B.1.6 Heating Appliances.** Where used with combustible material, such appliances generally require a signal light to indicate when they are "on."
- **B.1.7 Hot-Water Heaters.** A check should be made for proper electrical protection. The combination temperature- and pressure-relief valve should be manually operated to be sure it is free and the drain line is clear. The setting should be visually checked.
- **B.1.8 Office Equipment.** The condition of flexible cords, plugs, and connectors should be checked, and excessive use of extension cords and multiple current taps should be noted.
- **B.1.9 Receptacle Outlets.** Grounding-type receptacles are generally required. Each receptacle should be checked for continuity of grounding connection, using a suitable test instrument. Are special receptacle configurations used for those supplying unusual voltages, frequencies, and so on? Are they well marked or identified? In particular, missing faceplates, receptacles showing signs of severe arcing, loose mounting, and so on, should be noted.
- **B.1.10 Portable Equipment (Tools, Extension Lamps, and Extension Cords).** In the shop or tool room, a check should be made after each use for isolation between live parts and frame. The condition of cords and plugs should be noted. Is continuity maintained between the frame and the grounding pin of the plug? The green conductor should connect only to the plug grounding pin. On lamps, the condition of guards, shields, and so on, should be checked. See NFPA 70, *National Electrical Code* for portable hand lamps; metal-shell and paper-lined lampholders for hand lamps are not permitted.
- **B.1.11 Lighting Fixtures.** All lighting fixtures should be labeled and grounded. See NFPA 70, *National Electrical Code*, for connection of electric-discharge lighting fixtures. These Copyright NFPA

are permitted to be connected by suitable, three-conductor flexible cord where visible for its entire length and terminated at outer end in a grounding-type attachment plug or busway plug. No fixtures should be located close to highly combustible material. The location of fixtures with burned out bulbs or tubes; fixtures that are heavily coated with dust, dirt, or other material; and reflectors that are in need of cleaning should be noted.

- **B.1.12 Equipment Grounding.** Where machinery or wiring enclosures are grounded through the conduit system, broken or loose connections at boxes and fittings, flexible connections, and exposed ground straps should be identified. Multiple bonding of conduit and other metallic enclosures to interior water piping systems, including sprinkler systems, is sometimes used as a precaution where building vibration is severe, even though a separate equipment-grounding conductor is run with the circuit conductors inside the conduit.
- **B.1.13 Yard Transformer Stations.** The condition of transformers, fence, gates, and locks should be noted. Yard and equipment should be free of storage of combustible material, weeds, grass, vines, birds' nests, and so on. Localized overheating, indicated by conductor discoloration, should be watched for. Indication of excessive transformer temperature, pressure, or oil leakage should be noted.
- **B.1.14 Services.** The condition of weatherheads and weatherhoods should be visually checked to determine that they remain in good condition. Birds' nests, rats' nests, and so on, should be eliminated. At the same time, the apparent condition of lightning arresters, surge capacitors, grounding conductors, and grounds should be determined. Are switches safely and readily accessible?
- **B.1.15 Switch Rooms and Motor Control Centers.** Switch rooms and motor control centers should be clean, used for no other purpose, and free of storage of any kind, especially combustible material. Ventilation equipment should be in working condition and unobstructed. Any unusual noises or odors should be noticed and reported promptly. Metering equipment should be checked for high or low voltage and current and any indication of accidental grounding (ungrounded systems). Are switches and motor controllers properly identified as to function; are fire extinguishers in place, of suitable type, and charged?
- **B.1.16** Grouped Electrical Control Equipment (Such as Might Be Mounted on Walls). Is grouped electrical control equipment protected from physical damage and readily accessible? Are any equipment enclosures damaged, or do any have missing or open covers? Are any live parts exposed? Any condition that prevents quick or ready access should be reported.
- **B.1.17 Enclosures of Electrical Parts (Motor Control Equipment, Junction Boxes, Switches, etc.)** Are covers secured in place? The location of broken or loose conduit, wiring gutters, and so on, should be reported. Missing dust caps should be replaced.
- **B.1.18 Hazardous (Classified) Location Equipment.** All cover bolts should be in place and tight. Permanent markings should not be obstructed by paint. Joints between cover and case should be examined for signs of having been pried open in the removal of the cover. This might have damaged the mating surfaces of the joints. Excessive accumulations of dust and dirt should be noted for removal from all enclosures, including motors, which also

should be examined for obstructed ventilation. The use of nonexplosion proof electric equipment, including lighting that might have been installed in the hazardous (classified) location area, should be noted and reported.

B.1.19 Emergency Equipment.

- **B.1.19.1** All exit lights should be functioning properly.
- **B.1.19.2** Emergency lights should all be in working condition. Periodic tests are recommended to ensure that emergency lights function when normal lighting is lost.
- **B.1.19.3** Emergency power supplies, such as batteries and engine-driven generators, normally receive scheduled tests. Records of periodic tests should be checked. Are fuel and cooling supplies for engine drives adequate? Are fire extinguishers in place, of proper type, and charged?
- **B.1.19.4** Alarm systems, such as for fire, intrusion, smoke detection, sprinkler water flow, and fire pumps, also receive periodic tests. Records of these tests should be checked to ensure that all signals are properly transmitted and that equipment is in good working condition.

Annex C How to Instruct

This annex is not a part of the recommendations of this NFPA document but is included for informational purposes only.

C.1 Introduction.

Training is basically a process for changing behavior. Behavioral changes are the product of new knowledge, reshaped attitudes, replaced skills, and newly acquired skills that express themselves or become observable as improved work techniques of the learner.

The trainer's function is to structure the instruction process in a manner that makes learning take place more effectively and in the shortest period of time.

C.2 The Shortcomings of Learning by Trial and Error.

Trial-and-error learning is learning at random. It is slow and costly in terms of time and mistakes. It also is costly because it involves so much "unlearning" of incorrect practices and "relearning" after mistakes have been made.

Trial and error is the instructional process that continues to dominate industry. Its inefficiency is illustrated by the example of a newly hired maintenance electrician assigned to instrument circuit repair work until "he gets the feel of the plant and 'learns' his way around." The new electrician's assignment is to disconnect an instrument from the power source so an instrument technician can change out a defective chart drive motor. Consistent with apparent good safety practice but without consulting anyone, the electrician opens the switch that feeds power to the entire instrument panel. Loss of control of the process results in major product spoilage.

This example illustrates what can happen when people are put on jobs, simple or complex, without first being given organized instruction, either personally on the job or in groups off the job.

An even clearer illustration of the inefficiency of trial-and-error learning is the example of an inexperienced maintenance electrician who is charged with responsibility for motor trip-out troubleshooting but who receives no formal instruction on this subject. His first attempts include many blind alleys, such as going to the job location without the proper tools; a random inspection of the motor starter, the motor, and the driven load; or a random replacement of heater elements. As the number of his attempts to correct motor trip-outs increases, he learns to avoid many of the blind alleys and eventually comes up with a logical (to him) sequence of steps that will shorten his job time.

However, if he had been properly trained, the maintenance electrician could have performed the job correctly in a minimum amount of time because he would have had full knowledge of the task and confidence in his own abilities to perform it. The further benefit of training would have been less downtime, less material waste, and less chance of injury to himself and to other employees.

The justification for planned on- and off-the-job training, therefore, is to get better results in the form of greater job knowledge, greater skills, and better job attitudes toward such factors as quality, cost, and productivity and in the shortest amount of time.

The job of the instructor is to direct learning activities of trainees to avoid the blind alleys and mislearning that are inevitable with trial and error. This requires organized presentation.

C.3 Philosophy of Training.

The organization of a training program for a new learning situation involves the following major tasks:

- (1) Selection of experiences that will help the trainee learn what needs to be done
- (2) Guiding the trainee's efforts toward the proper learning objectives
- (3) Applying the trainee's past experience
- (4) Avoiding failures, frustrations, and loss of interest because the trainee does not perceive the relationships between what is being taught and future activity

For the purpose of discussing how the instructor can organize the presentation of subject material, assume that motivation has been provided and that the trainee recognizes the need for the training and has a desire to learn.

Whenever a skill is being taught, the instructor is not only presenting facts but also forming attitudes. For example, when a trainee is learning how to make a relay adjustment, new information is being acquired. In addition, the trainee is forming attitudes and a mindset concerning the information presented as well as performance, precision standards, quality, safety, and equipment design. It is these attitudes and mindsets that determine how the employee will approach or handle the job.

C.4 The Four-Step Method of Instruction.

A proven method of instruction is the "four-step method." These four steps are as follows:

- (1) Preparation
- (2) Presentation
- (3) Application
- (4) Observation

C.4.1 Step 1: Preparation.

C.4.1.1 Preparation of Subject Matter. A carefully laid out plan of action is necessary for the presentation of new information and skills. Mistakes made in presenting new material early in the teaching process might permanently confuse the trainee. To avoid teaching mistakes, the instructor should use a clearly worked-out subject content outline and a step-by-step breakdown of the operations to be covered during instruction.

C.4.1.2 Subject Content Outline. A carefully worked-out subject content outline is important to both the beginning instructor and the expert. The new instructor might not deal fully with all the steps of the explanation, whereas the expert might overlook steps that seem to be obvious. Both the new instructor and the expert should plan their presentations from the viewpoint of the trainee.

C.4.1.3 Breakdown of the Subject Matter. Instruction proceeds from the known to the unknown. It begins with the simple and proceeds to the complex.

Use of a step-by-step breakdown ensures that the instruction moves progressively through a job, presenting it as it should be done from start to completion.

Instruction is accomplished by making certain that each new step is thoroughly explained and demonstrated in proper order and that after each step the trainee understands what has been covered.

The process of instruction is a natural process, with each step falling logically into place.

The problems encountered in instruction are generally due to the instructor's failure to take the time beforehand to carefully develop each explanation so that the entire topic makes sense

When the presentation has been carefully broken down so that each unit being taught is clear and logical, the major obstacle to successful training has been overcome.

C.4.1.4 Preparation of Trainees. The following four steps should be followed:

(1) Put the trainees at ease. The trainees should be receptive. Tensions should be minimized. This can be achieved by creating an atmosphere of personnel security. Trainees should be introduced, a friendly manner demonstrated, and the business at hand promptly introduced. The situation should be relieved by anticipating the questions that normally are raised by trainees, by clearly describing the objectives, by making the trainees aware of the advantages, and by letting them know how the

- program will affect them personally.
- (2) Develop favorable attitudes. Attitude is a by-product of everything that occurs. The instructor will influence the shaping of the trainees' attitudes. Because attitude is a by-product, the development of a favorable attitude or outlook toward the program cannot be obtained by the simple process of talking about attitude directly. Instead, the instructor's responsibility is to do a good job of presenting the course, pointing out what is going to be covered, and explaining how the program serves both the trainees' and the company's interest.
- (3) Find out what the trainees already know. Individual interest and receptivity of trainees to the subject material can be determined by briefly reviewing the backgrounds of members of the training group. This will avoid duplication and provide the instructor with information that will reveal the gap between what members of the group already know and the material to be presented.
- (4) Preview material to be covered. Having determined background knowledge already known to the group, the instructor should brief the trainees on the ground to be covered. This briefing need not come in the same order as outlined here. The important consideration is that at some point before getting into the body of the lesson the instructor should tell the trainees what is going to be covered during the period.

Preliminary groundwork is frequently looked on as a waste of time. But in training, it should be remembered that part of getting the job done is dealing first with the intangible assignment of psychologically preparing the trainee. Step 1 failure is the most common among new instructors. No lesson should be considered ready for presentation until specific measures to prepare the trainees have been developed.

C.4.2 Step 2: Presentation. The main points in a successful presentation follow.

C.4.2.1 Show How to Do the Job. The instructor should demonstrate the operation carefully and accurately. If the operation is difficult, two or three demonstrations of the operation should be made. The instructor should not lose sight of the fact that *showing is very important in teaching*. The instructor should demonstrate, or show how, before the trainee tries to do the job.

C.4.2.2 Tell and Explain the Operation. After the class has seen the job demonstrated, the instructor should tell how the job is performed. It is important that the instructor let the class learn by doing *only after they have had the necessary instruction. Trainees should never be put in the position of having to learn only by trial and error or by simple observation.* In other words, trainees should be *shown* and *told* exactly *what is expected and how to do it.* The details that should be remembered should be pointed out to the trainees.

C.4.2.3 Present Related Theory. Electrical maintenance workers might actually carry out the sequence of actions required to do a job without knowing the basic principles that underlie the action. They might not understand why they do what they do; however, they will be better technicians if they do know why. This makes the difference between mechanical, machinelike, unmotivated performance and purposeful, participative workmanship.

C.4.2.4 Direct the Attention of the Learners. Showing and telling require that the instructor direct the attention of the trainees to the job. Describing an operation, showing a picture, or demonstrating an action is not enough. The important details should be pointed out and emphasized by directing the attention of the trainees to them. Attention can be directed in a number of ways.

One method of directing attention is to point out the item. Such emphasis will usually be coupled with telling, with a question, or with a demonstration. Attention might also be directed by the use of graphic devices, sketches, diagrams or board drawings, mobiles, and colors in printed material and on charts.

Board work can be emphasized by use of colored chalks. Changing the voice, slowing down the rate of talking, pausing, and the hundreds of devices of showmanship that dramatize a point are all effective means for directing learners' attention.

C.4.3 Step 3: Application (Try-Out Performance). Application provides a checkpoint on what has been learned. It is accomplished by having the class members carry out or show back how the job or operation is done. There are four major reasons for Step 3:

- (1) To repeat instructions
- (2) To show the trainees that the job can be done by following the instructions as given
- (3) To point out and to learn at which points the trainee might be experiencing difficulty
- (4) To indicate to the instructor whether or not the instructions given in Steps 1 and 2 have been effective

Performing the physical steps to actually do a job does not test all the learning that should have been acquired. The instructor should check the trainees by additional means such as questioning, having them identify parts, asking them to summarize the steps verbally, and having them state reasons for functions.

C.4.3.1 Have the Trainees Explain and Perform Each Step. To keep mistakes to a minimum, the instructor should have the trainees do the following:

- (1) Tell *what* they are going to do
- (2) Tell how they are going to do it
- (3) Do the job

Telling "what" and "how" should come in advance of doing the job. The trainees should carry out the necessary physical movements *after*, not before, the instructor is satisfied that they know how to do the job.

The instructor should have the trainees show how to do the job by the same method the instructor used in performing the operations. Because Step 3 is the trainees' first opportunity to actually apply what has been taught, it is important to avoid incorrect practices from the start.

C.4.3.2 Have the Trainees Do Simpler Parts of the Operation First. At this point, encouragement and success are important conditioners. Early successes are beneficial to Copyright NFPA

learning, to remembering, and to building interest in future learning.

Trainees should be into the job with as few errors as possible. As the most expert member of the group, the instructor might have to assist the trainees by handling the more difficult parts the first time through.

C.4.3.3 Question the Trainees on Key Points. One of the training hazards encountered in Step 3 is the instructor's tendency to overlook slight omissions and details of the job that require explanation. *The instructor should never assume that the trainees understand what has been taught but should verify it by asking questions.* If there are omissions of details in the trainees' demonstrations and explanations, the instructor should raise questions to cover the details and have complete discussion of the points involved.

C.4.3.4 Make Corrections in a Positive and Impersonal Manner. It should be remembered that the trainees are in the psychological position of trying to do what the instructor wants. The instructor should not lose sight of this and should not attempt to rush the learning or become impatient. In particular, the instructor should carefully consider each corrective step taken and praise good work, even if it is minor. Then the instructor should tell how some operations might have been performed more effectively. During a trainee's demonstration, it is sometimes better to permit minor mistakes to pass until the trainee has completed the explanation. Questions raised after the demonstration cause less interference and can be used effectively to get across the correct knowledge, methods, and points of view. If a trainee's mistakes are too frequent, the instructor can usually find the cause by going back to the instruction provided in Steps 1 and 2. In other words, rather than attempt to explain mistakes made in Step 3 presentations as being due to the trainees' failure to learn, the instructor's own handling of the trainees up to Step 3 should be re-examined. When the frequency of errors in the presentation step is high or when the same errors are being made by several trainees in the group, the cause usually can be traced to ineffective instruction in Step 1 or Step 2.

In summary, the instructor should observe the following basic rules to obtain better results and to build more favorable work-related attitudes:

- (1) Make corrections in a *positive* manner.
- (2) Make corrections in an *impersonal* manner.
- (3) Focus attention on the *causes* of mistakes.
- (4) Help the trainees to detect their own mistakes and make their own critiques.
- (5) Correct with leading *questions*.
- (6) Get every trainee into the act and provide as much practice under direct observation as possible in the time allotted.

After members of the training group have shown they understand and can perform the operation, and after the instructor is satisfied that a solid foundation of basic learning has been acquired, the group is ready to move to the final phase of instruction.

C.4.4 Step 4: Observation (Follow-Up and Performance Testing). The final step in the cycle of instruction is observation of the trainees. The instruction process up to this point is Copyright NFPA

Table C.4.4 Instruction Process Summary

Step	Purpose
Step 1: Preparation	Organization
Step 2: Presentation	Motivation, showing, and telling
Step 3: Application	Trainee demonstration

The purpose of Step 4 is to show what the trainees have learned by putting them in a work situation as nearly typical of the normal maintenance environment operations as possible.

Step 4 provides an opportunity for the trainees to practice and gain experience in phases of the job that the instructor has covered. Job knowledge is reinforced and job skills are acquired only by doing. Without practice, skills cannot be developed.

The guidance factors given in C.4.4.1 through C.4.4.3 are critical in Step 4.

C.4.4.1 Provide Close Follow-Up on the Job. When training is provided simultaneously to a group, it is practically impossible for the instructor to do an adequate job of follow-up on each trainee. Despite this, *prompt follow-up is the most important aspect of Step 4*. Unless the trainees put the techniques they have been taught into practice, instruction has no purpose.

It takes application to learn techniques. It takes correct application to learn correct techniques. Trainees, if left on their own, often develop incorrect ways of doing their jobs. Follow-up is the only means to prevent this. Responsibility for providing follow-up should definitely be assigned. Although it is common practice for the instructor to provide Step 4 follow-up, there are definite advantages in sharing follow-up responsibilities with the supervisors of the employees in training.

The training of maintenance electricians finds greater acceptance when there has been active line-supervision involvement. One way that this can be achieved is by using engineering and maintenance supervision as a pilot group before the program is presented to the trainees. Another common practice is to use engineers or maintenance supervisors as instructors, which provides a variety of benefits, the most important being a bond between the classroom and on-the-job performance. Also, inadequacies in training show up quickly, and on-the-job follow-up is efficiently implemented.

C.4.4.2 Provide Immediate Follow-Up on the Job. Heavy emphasis has been placed on follow-up, and the timing of follow-up is crucial. Unfortunately, trainees sometimes view training as having ended when the presentation phase is completed.

Follow-up is an easy function to put off. Its benefits are intangible, while daily maintenance demands are not. It is something supervisors might not be accustomed to, and other demands on their time get priority. Meanwhile, "wrong learning" multiplies. *Learning is learning, right or wrong*. Each error repeated is just that much more firmly instilled in the memory, which makes timing important. On-the-job follow-up should be phased out as performance Copyright NFPA

demonstrates that correct methods and procedures have been learned and are being applied.

C.4.4.3 Maintain Performance Standards. Performance expectations should be high. There is no room for exceptions. If a quality standard is right, it should be observed in appraising trainee performance. If the standard is not right, it should be changed, not ignored.

Fault-free performance should be the training standard. Uniform results depend on uniform methods. High standards of equipment performance depend equally on high standards of equipment installation, operation, and maintenance.

Performance observation is the final filter in the developmental process. If the mesh is coarse, the product will be irregular. Trainees should not be graduated until they demonstrate capability using prescribed methods to obtain prescribed quality standards.

There might be times when many members of a training group exhibit inadequate understanding of maintenance practices or quality requirements. Re-instruction of the entire group might be the most economical means for bringing about the improvement desired in such instances. Two items of correction technique have immense bearing on the success of retraining. First, emphasis should be placed on what to do instead of concentrating on what was done incorrectly. Each correct detail should be commended. The step that is right should be emphasized. The operation should be commenced at that point and the next right step supplied. Then each phase of the operation should be repeated as it should be done. This is positive reinforcement.

Second, questions should be asked instead of statements made. Correct information should be drawn out instead of being supplied again. The purpose should be to establish a learning situation in which the trainees are active participants. Trainees should be encouraged to analyze their own performance. The goal is maximum trainee involvement.

C.5 Summary of the Instruction Process.

- **C.5.1** Instruction is the process of teaching trainees the knowledge, skills, and attitudes they need to do their jobs.
- **C.5.2** Instruction involves a variety of methods and techniques. The acquisition of knowledge, skills, and attitudes is the objective. How effectively instruction is organized and carried out determines the amount, rate, and permanence of new learning.

The industrial instructor's challenge is to develop ways to involve trainees and to discard the passive, lecture-based, nonparticipative methods inherited from the old-line techniques of academic institutions. Involvement is recommended if trainees are to acquire new information and practical skills effectively in the least amount of time. Equally important are the interest and desire to apply the new learning in the work situation.

- **C.5.3** Organized instruction is effective only when it is based on training methods that motivate the trainees.
- **C.5.3.1** Instruction should be presented so that it has practical meaning. The instructor should practice the following:

- (1) Present practical applications.
- (2) Use familiar experiences and words.
- (3) Get the trainees to participate in the instruction.
- (4) Use problem-solving discussions.
- (5) Relate class work to on-the-job situations.
- **C.5.3.2** Instruction should be purposeful, that is, it should have a goal. To give purpose to training, the instructor should do the following:
- (1) Make certain the reasons for the training are clear.
- (2) Emphasize the benefits to the trainees.
- (3) Point out the practical applications of what is being taught.
- (4) Let the trainees know how they are doing.
- **C.5.4** Instructions should be organized in a way that generates active trainee participation. Participation can be increased by methods such as the following:
- (1) Using models, mockups, graphs, charts, exhibits, and inspection tours of actual operations
- (2) Using discussion and questions, having trainees prepare class materials, and encouraging trainee solutions of problems brought up in class
- (3) Making specific assignments to trainees, providing individual practice, and having trainees research information
- **C.5.5** The instruction process can be broken into four steps.
- **C.5.5.1 Step 1: Preparation of the Trainees.** The instructor should do the following:
- (1) Develop motivation, reasons, advantages, and objectives
- (2) Get the students interested in the training project
- (3) Become familiar with what trainees already know about the operation
- (4) State the job to be done, covering the whole job briefly
- C.5.5.2 Step 2: Presentation (Present the Operation). The instructor should do the following:
- (1) Tell, explain, show, and illustrate one step at a time, going from simple to complex
- (2) Stress each key point
- (3) Instruct clearly, completely, and patiently
- **C.5.5.3 Step 3: Application (Try-Out Performance).** The instructor should do the following:
- (1) Have trainees perform operations step by step

Copyright NFPA

- (2) Make certain that errors are corrected
- (3) Have each trainee perform the operation again while explaining each key point

C.5.5.4 Step 4: Observation (Follow-Up). The instructor should do the following:

- (1) Put trainees on their own
- (2) Designate to whom trainees should go for help
- (3) Establish definite arrangements for frequent checks
- (4) Encourage discussions and questions
- (5) Taper off follow-up

Annex D Symbols

This annex is not a part of the requirements of this NFPA document but is included for informational purposes only.

D.1

Figure D.1 contains some typical electrical symbols that are used on electrical power and control schematic drawings.

		Switches				
Disconnect	Circuit breaker	Circuit breaker witl thermal trip	1	Liqu Normally open	Normally closed	
			C	H	oTo	
Pressure or	vacuum	Temp	perature		Foot	
Normally open	Normally closed	Normally open	Normally closed		Normally open	
26	T	20%	25	1	070	
Foot, cont'd.		Flow		- 1	Limit	
Normally closed	Normal open	ly Norma close	ally d	Normally open	Normally closed	
مآو	2	7	σ ο	√ °	040	
Toggle		R	otary selector			
	Non-brid	ging contacts		Bridging	contacts	
00	000	OR 0 0	97	0°0 OR 0 P		
		Pushbuttons				
Normally open	Normally closed	Two circuit	Mushroor safety fe		Maintained contact	
0 0	010	010	Lo)o	000	

FIGURE D.1 Some Typical Electrical Symbols for Power and Control Schematics.

(Courtesy of ANSI/IEEE 315, Graphic Symbols for Electrical and Electronic Diagrams.)

D.2

Figure D.2 contains some typical electrical symbols that are used on electrical control schematic drawings.

		Contacts	,		
Normally open-timed closed	Normally closed-timed open	Normally closed-timed open	Normally open-timed closed	Normally open	Normally closed
$\frac{1}{2}$	To	4	To		*
	(Coils		Cor	nections
Relay, timer, contactor, etc.	Solenoid	Thermally operated relay	Magnetic core transformer	Wires	connected
		<u>-</u>	<u></u>	4	or
		Connections, cont'd.		•	Motors
Wires not connected	Plug and receptacle	Ground to earth	Connection to chassis, not necessarily to ea		3-phase induction motor
-	¥	-	7		M
Motor	s, cont'd.		Resistors, capacitors	s, etc.	
	current t motor	Resistor	Capacito	or	Fuse
) {		+		
		Resistors, capacitors, e	tc., cont'd.		
Ammeter	Voltmeter	Pilot light (red lens)	Horn	Bell	Multicell battery
A	v	RL	=[=

FIGURE D.2 Some Typical Electrical Symbols for Electrical Control Schematic Copyright NFPA

Drawings.

D.3

Figure D.3 contains some typical miscellaneous electrical symbols and tables that are used on electrical control schematics.

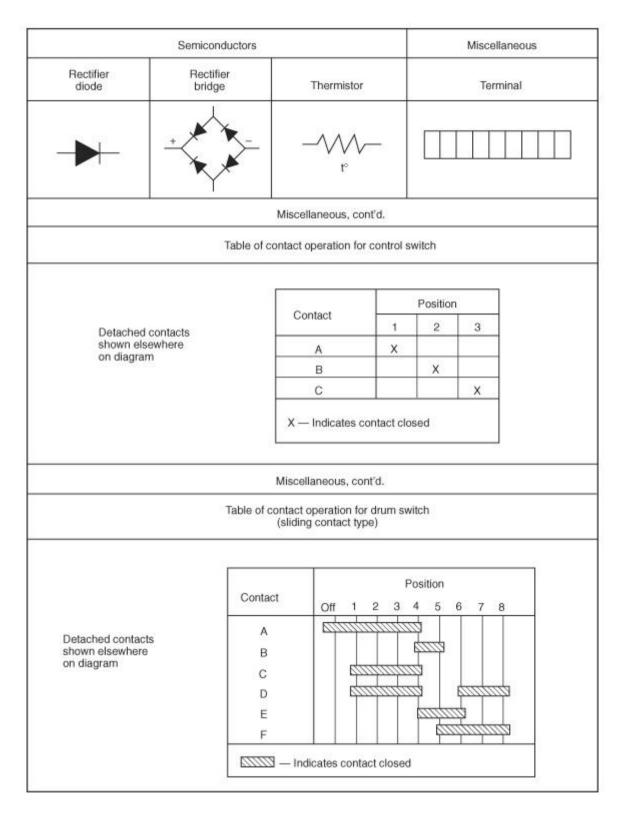


FIGURE D.3 Some Typical Miscellaneous Electrical Symbols.

Annex E Diagrams

This annex is not a part of the requirements of this NFPA document but is included for informational purposes only.

E.1

Note that Annex E is presented to show use of symbols and should not be construed to indicate recommendations. Figure E.1 shows the use of some typical symbols in a single-line power distribution program.

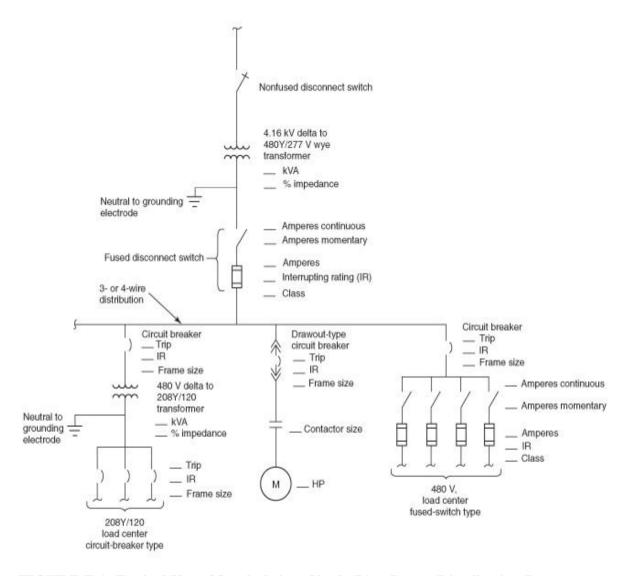


FIGURE E.1 Typical Use of Symbols in a Single-Line Power Distribution Program.

E.2

Figure E.2 shows a wiring diagram for a reversing starter with control transformer.

Copyright NFPA

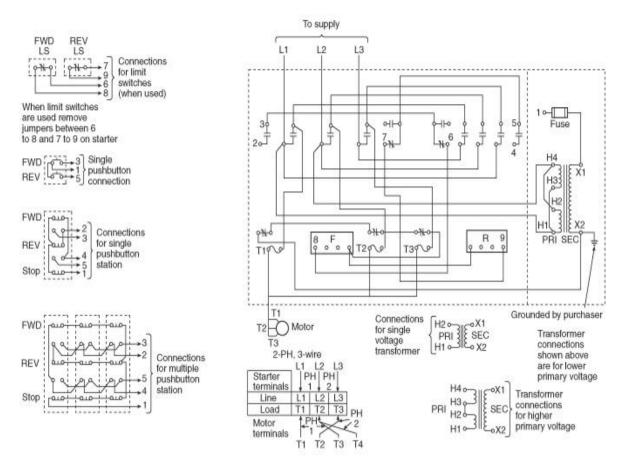


FIGURE E.2 Wiring Diagram for a Reversing Starter with Control Transformer.

E.3

Figure E.3 shows a power and control schematic for reversing starter with low-voltage remote pushbuttons. Forward, reverse, and stop connections are shown.

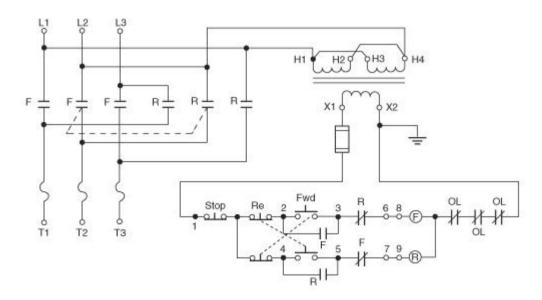


FIGURE E.3 Power and Control Schematic for Reversing Starter with Low-Voltage Remote Pushbuttons. Forward, reverse, and stop connections are shown.

Annex F Forms

This annex is not a part of the requirements of this NFPA document but is included for informational purposes only.

F.1

Figure F.1 shows a typical work order request form.

			WORK	UNDER	REQUEST		72.	
						Work Order N	Vo.	Cra
								- 1
				Plant Depa				
eparate request	for each job.	This request	will be returned	to you and be	o the Plant Departm ecomes a work order Please TYPE your re	ent. Maintain last c r only when approve quest.	opy for your file d and assigned	s. Prepare a work ord
. To be complete	ed by reques	ter:				Date		/
Summary of w	ork request							
Location of wo	rk: Room(s)					Building		
Details of work	k request _							
lepartment (or pl	ant enginee	r), data proce	of five parts — inc essing, receiving s a spelled out in de	tores, reques				
5.0						eason		
						□ Plan atta		
Authorized sig	mature			Title		Approval if req	uired	
A. Your reque for action.	st has been Use the assi	☐ Approve gned work or	rder number wher	n referring to	I Forwarded to this request.	eceived		
A. Your reque	st has been Use the assi	☐ Approve gned work or	rder number wher	n referring to	I Forwarded to this request.			
A. Your reque for action.	st has been Use the assi s: Craft	☐ Approve gned work or	rder number when	n referring to	Forwarded to this request. Total Labor	Material	Gra	
A. Your reque for action. B. Instruction	st has been Use the assi s: Craft	□ Approve gned work or	rder number when	n referring to	Forwarded to this request.			
A. Your reque for action. B. Instruction Job Estimates	st has been Use the assi s: Craft Hours	□ Approve	rder number when	n referring to	Forwarded to this request. Total Labor	Material	Gra \$	and Total
A. Your reques for action. B. Instruction Job Estimates Assigned to Foreman — C. Completed Can recurred	st has been Use the assi Craft Hours per plant in ence be prev	Approve a Approve of the Approve of		n referring to	Total Labor Craft Requester —	Material \$ ur request?	Gra \$ Day	and Total
A. Your reque for action. B. Instruction Job Estimates Assigned to Foreman — C. Completed Can recurre If yes, indice	st has been Use the assi Craft Hours per plant in ence be prev	□ Approve gned work of		n referring to	Total Labor Craft Requester — Completed per you	Material \$ ur request?	Gra \$ Day	and Total
A. Your reque for action. B. Instruction Job Estimates Assigned to Foreman— C. Completed Can recurr If yes, indic Actual hours	Craft Hours per plant in ence be prevented.	Approve gned work or structions?	Total Pes No Yes No	n referring to	Total Labor Craft Requester Completed per you	Material \$ ur request?	Gra \$ Day	and Total
A. Your reque for action. B. Instruction Job Estimates Assigned to Foreman— C. Completed Can recurre If yes, indice Actual hours used Date	Craft Hours per plant in ence be preveate Tot. reg.	structions? Tot. O/T	Total Yes No Yes No Tot. equiv. hrs.	n referring to	Total Labor Craft Requester Completed per you	Material \$ ur request? □ Yes er note variations	Gra \$	und Total
A. Your reque for action. B. Instruction Job Estimates Assigned to Foreman— C. Completed Can recurre If yes, indice Actual hours used Date	craft Hours per plant in ence be prevate Tot. reg.	structions? Tot. O/T	Total Yes No Yes No Tot. equiv. hrs.	n referring to	Total Labor Craft Requester Completed per you	Material \$ ur request? □ Yes er note variations	Gra \$	und Total
A. Your reque for action. B. Instruction Job Estimates Assigned to Foreman — C. Completed Can recurre If yes, indice Actual hours used Date	craft Hours per plant in ence be prevate Tot. reg.	structions? rented? □ Tot. O/T Forer	Total Yes No Yes No Tot. equiv. hrs.	Hours	Total Labor Craft Requester — Completed per you Plant and request	Material \$ ar request? □ Yes er note variations _ quester's signature	Gra \$ Day	und Total
A. Your reque for action. B. Instruction Job Estimates Assigned to Foreman — C. Completed Can recurre If yes, indice Actual hours used Date	craft Hours per plant in ence be preveate Tot. reg.	structions? rented? □ Tot. O/T Forer	Total Total Yes No Yes No Tot. equiv. hrs. Class	Hours	Total Labor Craft Requester — Completed per you Plant and request	Material \$ ar request? □ Yes er note variations _ quester's signature	Gra \$ Day	und Total
A. Your reques for action. B. Instruction Job Estimates Assigned to Foreman— C. Completed Can recurrent fyes, indicated Actual hours used Date	craft Hours per plant in ence be preveate Tot. reg.	structions? rented? □ Tot. O/T Forer only: Bldg.	Total Total Yes No Yes No Tot. equiv. hrs. Class	Hours Category	Total Labor Total Labor Craft Requester — Completed per you Plant and request Re Re Cause	Material \$ ur request? □ Yes er note variations quester's signature Pay	Gra \$ Day	
Job Estimates Assigned to Foreman— C. Completed Can recurr If yes, indic Actual hours used Date II. For data proc Dept.	craft Hours per plant in ence be preveate Tot. reg.	structions? rented? □ Tot. O/T Forer only: Bldg.	Total Total Yes No Yes No Tot. equiv. hrs. Class	Hours Category	Total Labor Total Labor Craft Requester — Completed per you Plant and request Re Re Cause	Material \$ ur request? □ Yes er note variations quester's signature Pay	Gra \$ Day	und Total

FIGURE F.1 Typical Work Order Request Form.

F.2

Figure F.2 shows a typical air circuit breaker inspection record.

	Mfr No Drawout □ No Rating: Volts Operation: Manual Volts cl	n-dr										Date	
	Drawout No Rating: Volts Operation: Manual Volts cle	n-dr										Serial No	
	Rating: Volts Operation: Manual Volts cl-		TO VALUE									Type or Model	
å	Operation: Manual Volts cl		on-drawout 🗆 Switchboard 🗅					wit	chb	oar	d 🔾	Metal clad □	
	Volts el	O										Interrupting Amperes	
	Protective Devices:	ose_		ar.	7.566	_	a	c u		de	o .	Volts trip ac □ de □	
		Inc	duc	tion	n Re	lay	8 C	1		Dir	ect T	ps 🗅 Direct Trips 🗅	
		CI	. F	use	s 🔾		1	TD	Set	ting	X	Inst. Setting	
									A	nn	ual l	spection	
Date		Т								П		Date	Т
Inspector's	Initials		\neg		- 74		- 3			-	12	Inspector's Initials	
		Į.	E	2	in	×	in	į,	9	×.	Ξ	Operating Mechanisms	
		Am	Ma	Au	Ma	Aux.	Ma	Am	Ma	Au	Ma	Checks	
Contact Co	ndition					T			7			Positive Close and Trip	
	Surface Smooth											Bushing and Pin Wear	1
	Minor Burns	П	П			\top	-1		7		3.5	Set Screws and Keepers	1
	Burned and Pitted	Н	П			1	Ť		7			Protective Devices	+
200	are a control of the	H	Н			+	-		+	+		Lubricate Wear Points	+
Contact Ch	eck						_	-			.55		+
Pressur	e (Good, Weak, Bad)	Н		_	, to see	_	4		-			Clean Pots and Replace Oil with Equipment Mfrs. Recommended Oil	4
Drawout Co	ontacts	_										Recommended on	+
Pressur	e (Good, Weak, Bad)		П						П		- 17	Insulation Condition	
Alignmo	ent (Good, Bad)		\exists		-				╛		-10	Loose Connections	
3335 10	te (Must Do —	-	\exists				7		7	-	-075	Discolored Areas	
Use a N	lo-Oxide											Corona Tracking	
Lubrica	nt by Mfr.)	-	\dashv	33	- 0		-2	_	+	_	-03	Clean Surfaces	
Arcing Asse	emblies												
	nd Check the											Insulation Tests	+
	itting Plates Conditions											Phase to Phase (Megohm)	+
Juliace	Committee		-						+			Phase to Ground (Megohm)	
Bushings												Test Operation	
	nd Check	_	_	-	-	_	-	_	4	_		Close and Trip	
Surface	Condition	_	_	-	- 1	_	_		4	_	-		Ť
												Counter Reading	
		1										(No. of Ops.)	+
			- 1									Electrical Load	
				1									- 1

FIGURE F.2 Typical Air Circuit Breaker Inspection Record.

F.3

Figure F.3 shows a typical air circuit breaker test and inspection report.

Customer			Date		Work Order	No.				
Address			USB 2 6 (R)			10000				
Breaker Owner/User			지어에는 조하를 하다고			50				
Address										
Equipment Location										
Owner Identification										
Breaker Data:	****									
Manufacturer										
Serial No	Type (Oper. Mec	h	Age	Other N.P	. Data _				
407012000	Tank 1	Tonk 9	Tank 3	200000000000000000000000000000000000000						
Fest Data:	-	Tank 2	Tank o	Inspection and Maintenance:	- 1	ř S	5000 500	1 1000		
ns. Res kV, Megohms					Inen	Dirty	Cleaned/ Lubed	See Remark		
Contact Resistance, Microhms	1 1		 2		-	Dirty	Lauca	avenua n		
Closing Speed/Opening Speed	1 12			Overall Cleanliness		+ +		-		
Reference, P.F. Test Sheet No	-			Insulating Members		-		-		
	Mfr's.	As	As	Mech. Connections		-		-		
Adjustments:	Rec.	Found	Left	Structural Members _				-		
Arcing Contact Wipe	-			Cubicle						
Main Contact Gap				Pri. Contact Fingers		-				
Main Contact Wipe	-			Shutter Mech						
Latch Wipe	-			Relays						
Latch Clearance				Auxiliary Devices				-		
Contact Travel	-			Racking Device				-		
Prop Clearance	-			Arc Chutes				-		
Stop Clearance	-			Blow Out Coil						
	-			Puffers		-		-		
	-			Liner				-		
	-			Arc Runners				-		
	-			Main Contacts	0.00	_				
	-			Cubicle Wiring						
	-			Breaker Wiring						
	-			Heaters						
	-			Panel Lights						
	-			Bearings						
	-		- 17		_					
			-							
					-	0				
				Contact Sequence						
				Ground Connection						
				Counter Reading	_					
Remarks:										
-										
nspections and Test by:			Fouinmon	t Used:		Shoot	No.:			

FIGURE F.3 Typical Air Circuit Breaker Test and Inspection Report.

F.4

Figure F.4 shows a typical medium-voltage vacuum breaker form.

CUSTOMER ADDRESS OWNER/USER ADDRESS EQUIPMENT LOCATION OWNER IDENTIFICATION			AIR TEN	MP. AST INSPECTION ISPECTION REPORT NO.	PROJE REL. HI	NO. CT NO. UMIDITY		F
BREAKER DATA: Manufacturer Serial No.	Tun		Туре	Int. Hating				
TEST DATA:	1394	Speciment		INSPECTION AND MAINT				
Ins Res @ kV	A to G	B to G	C to G	mor conorrano manti	INSP	NA	CLEAN	SEE REMARKS
Results In Gigaohms	A to B	B to C	C to A	Overall Cleanliness Insulating Members				
Megohms	A-L to L	B-L to L	C-L to L	Mech. Connections				
Contact Resistance				Structural Members Cubicle				
Microhms - As Found Microhms - As Left				Pri. Contact Fingers Shutter Mech.				1
HiPot Test @	A-L to L	B-L to L	C-L to L	Relays Auxiliary Devices				
Dende Introduction				Racking Device				
ADJUSTMENTS:	MFR'S. REC.	AS FOUND	AS LEFT	Main Contacts Cubicle Wiring				
Erosion Indicator				Breaker Wiring Heaters				
Main Contact Gap				Panel Lights Bearings				
				Contact Sequence				
	-			Ground Connection Counter Reading				
Remarks								
Equipment Used Submitted By								

FIGURE F.4 Typical Medium-Voltage Vacuum Breaker Form.

F.5

Figure F.5 shows a typical oil circuit breaker test report.

CUSTOMER ADDRESS OWNER/USER			AIR	TE	PROJE	CT NO.	OF	
ADDRESS EQUIPMENT LOCATION OWNER IDENTIFICATION				E LAST INSPECTION T INSPECTION REPORT				
BREAKER DATA:								
Manufacturer		Voltage	Ту	rpe	Amps		Age	<u></u>
Serial No.	Type C	per Mech		Int. Rating	Other		- 14 50	
Bushing Data								
TEST DATA:				INSPECTION AND MAINTEN	IANCE:			
Ins Res @ kV	A to G	B to G	C to G		INSP	NA	CLEAN	SEE REMARKS
Results In	A to B	B to C	C to A	Tank Liners			LOBE	HEMADIN.
Gigaohms				Insulating Members				
Megohms	A-L to L	B-L to L	C-L to L	Oil Gauges Opening Spring				
Contact Resistance Microhms - As Found				Bushings				
Microhms - As Left				Main Contacts Secondary Contacts				
Reference PF Test Sheet				Interrupters				
				Linkage				
ADJUSTMENTS:	100222020	11 321	1 7555	Dashpots Shutter Mechanism				-
	MFR'S. REC.	AS FOUND	AS LEFT	Elevating Mechanism				
Stop Clearence				Compressor Air Strainer				
Contact Travel				Unload Valve				
Overtravel				Check Valve				
Contact Wipe				Compressor Belt				
	-			Air Leaks Compressor Oil				
Trip Roller				Compressor Oil Gaskets				
Latch Wipe Latch Clearance				Nuts, Bolts, Pins	-			
Prop Wipe				Closing Sequence				
Prop Clearance				Heater				
Cut-off Switch				Oil Level				
AA Switch				Ground Connection			(4)	
			-	Counter Reading As-Found				
				Counter Reading As-Left				

FIGURE F.5 Typical Oil Circuit Breaker Test Report.

F.6

Figure F.6 shows a typical disconnect switch test report.

CUSTOMER ADDRESS OWNER/USER ADDRESS EQUIPMENT LOCAT OWNER IDENTIFIC	IION _			AIR 1	E TEMP. E LAST INSPECTION I INSPECTION REPORT NO.	PROJE	CT NO.		00
SWITCH DATA:		Fused	<i>a</i>		Non-Fused		8		
Manufacturer			Voltage		Туре	Amps		Age	
Serial No.									
rest data: Ins Res @	kV	A to G	B to G	C to G	INSPECTION AND MAIN	INSP	NA	CLEAN LUBE	SEE REMARKS
Results In Gigachms Megohms Contact Resistance Microhms-As Found Microhms-As Left		A to B	B to C	C to A	Overall Cleanliness Insulating Members Mech. Connections Structural Members Cubicle Pri. Contact Fingers Main Contacts Are Chutes		0.900	Lose	PERMINO
FUSE DATA:		A	В	С	Arc Runners Manual Operation Contact Lube Mechanical Lube Paint				
Size Catalog No. I.C. Rating Contact Resistance Microhms-As Found Microhms-As Left					Door Interlock Ground Connection				
Remarks Equipment Used			1						

FIGURE F.6 Typical Disconnect Switch Test Report.

F.7

Figure F.7 shows a typical low-voltage circuit breaker 5-year tests form.

ubstation	Feeder		Load Reading		
	Breake	e Data			
Mfr.	Type				
Frip Coil Rating A	TO SHOULD AND A STATE OF THE SHOP OF				
Trip Devices: Long Time	Magnification and analysis and an articles		Instantaneo		
HITTHER THE PART	ker Dashpot 🗆 Air Bell	lows 🗅	Air Orifice		Oil Orifice 🗅
Settings:					
LT Delay — Amperes	Adjustable Range		_ Time A	djustable?	Yes 🗅 No 🗅
ST Delay — Amperes	Adjustable Range		_ Time A	ljustable?	Yes 🗆 No 🗅
nstantaneous Trip — Amperes _	99 (ED)		_ Adjusta	ble?	Yes 🗆 No 🗅
	Test 1	Data			
Date of Test	V-7-00-85	30.31	20%)	531.10	77 E
Inspector's Initials		Left Pole	Center Pole	Right Pole	Time Range from Curve
As Found Test (Trip Time in Sec	onds)	4			28
% Pickup Amperes	B.				
Time Delay	(As Found — Amperes)				
Minimum Pickup (Nullify Time Delay)	(Adjusted — Amperes)				
Time Delay Tests (Trip Time in	Seconds)				
% Pickup Amperes	1				
	3				
Short Time					
Resettable Delay	(Satisfactory)				
(% forsec)	(Tripped)				3 7
Instantaneous Trip	(As Found — Amperes)				
	(Adjusted — Amperes)				3
Remarks (record unusua) condit	ions, corrections, needed repairs, etc.	use separate fe	orm to record ann	al breaker ii	spection details):

FIGURE F.7 Typical Low-Voltage Circuit Breaker 5-Year Tests Form.

F.8

Figure F.8 shows a typical electrical switchgear—associated equipment inspection record.

Location			
		Year Installed	
		Capacity Amperes	
Type: Switchboard	Indoor Metal Clad 🖵	Outdoor Metal Clad 🖵	
	Annual Inspection (Disre	gard items that do not apply.)	
Date		Date	
inspector's Initials		Inspector's Initials	
Switchboards		Disconnect Switches	
Clean		Check Contact Surfaces	
Check Wiring		Check Insulation Condition	
Inspect Panel Insulation		Lubricate per Mfr's. Instructions	
Exposed Bus and Connections		Test Operate	
Clean and Check Porcelain			
Check Insulators for Cracks or Chips		Fuses and Holders Check Contact Surfaces	
Check and Tighten Connections		Lubricate per Mfr's. Instructions	
Inspect Potheads for Leaks			100 100 30
Check for Environmental		Meters and Instruments Check Operation	
Hazards Toot Insulation (Manahana)		Test Meters per Eng. Std.	
Test Insulation (Megohms)		Test Relays per Mfr's.	
Metal Clad Enclosures		Instructions	
Clean		Interlocks and Safety	
Check for Openings That Permit Dirt, Moisture and		Check for Proper	
Rodent Entrance — Repair		Operations	
Check Hardware for Rust or Corrosion		Check Lightning Arresters Check Ground Detectors	
Paint Condition		Check Equipment Grounds	10000
Check Heaters and Ventilators			
Metal Clad Bus and Connections		Station Battery	
Clean Insulators and Supports		Periodic Routine	1 1 1
Check and Tighten Connections		Maintenance is performed	
Check for Corona Tracking			
Inspect Potheads for Leaks			
Test Insulation (Megohms)			

FIGURE F.8 Typical Electrical Switchgear-Associated Equipment Inspection Record.

F.9

Figure F.9 shows a typical current or potential transformer ratio test report.

						SHEET NO	OF
ISTOMER			DA	TE		PROJECT NO	1000000
DRESS			AIF	TEMP.	°C	REL HUMIDITY (%)
WNER/USER			DA	TE LAST INSPECT	TION	Arti	3000
DRESS			LA	ST INSPECTION RE	PORT NO		
UIPMENT LOCA	TION						
ROUIT IDENTIFIC	ATION						
CATION OF C.T.	OR P.T		v 80		87	×	7.
C.T. OR P.T. DENTIFICATION	C.T. OR P.T. SECONDARY TAPS	NAMEPLATE RATIO	APPLIED VOLTAGE OR CURRENT	MEASURED VOLTAGE OR CURRENT	PERCENT (%) ACCURACY	POLARITY PRIMARY	POLARITY BEDONDARY
POLE #1 (A)	X1-X2						
BURDEN TEST							AMPS VOLTS
SATURATION TEST							VOLTS MA
MEGGER TEST							MEGOHMS
POLE #2 (B)	X1-X2						
BURDEN TEST							AMPS VOLTS
SATURATION TEST							VOLTS MA
MEGGER TEST							MEGOHMS
POLE #3 (C)	X1-X2						
BURDEN TEST							AMPS VOLTS
SATURATION TEST							VOLTS MA
MEGGER TEST					F8		MEGOHMS
MARKS							

FIGURE F.9 Typical Current or Potential Transformer Ratio Test Report.

F.10

Figure F.10 shows a typical overload relay test report.

			Shee	TNO. OF
			TEST	REPORT NO.
CUSTOMER		DATE	PROJECT NO.	
ADDRESS		AIR TEMP.	C REL HUMIDITY	
OWNER/USER		DATE LAST INSPECTION		
ADDRESS		LAST INSPECTION REPORT		
EQUIPMENT LOCATION OWNER IDENTIFICATION				
MOTOR PROTECTED		MOTOR VOLTA	GE	
20 1 20 1 0 70 10 -	ov	ERLOAD INFORMATION	55. -	
OVERLOAD MANUFACTURER	Lacoura Company	CATALOG NUM	BER	
OVERLOAD RELAY HEATER O	OIL	HEATER POSIT	ION	
MANUFACTURERS CURVE NO	D	AMBIENT TEMP		igl.
FULL LOAD CURRENT AMPER	IES	MIN.	MA	X
		TEST RESULTS		
PHASE	HEATER CURRENT	TEST CURRE		TEST TIME
DUACE 4	CHEROLEGICAL TRAVELLA	PERCENTAGE	AMPS	SECONDS
PHASE 1 PHASE 2				
PHASE 3				
TIMOLO				
		ARTER INFORMATION		
STARTER MANUFACTURER STARTER SIZE		STARTER CATALOG N	O.	
STARTER		OTHER INFORMATION		
		CONDUCTOR INSULAT	TON	
		CONDUCTOR INSULAT	ION	
DATE				
INSULATION RESISTANCE R				
	Aø - GND	Aø - Bø		
	Bø - GND	Be - Ce		
	Ce - GND	Co - Ao		
DATE				
MEGGER MOTOR ø-GND: (1/	/2 MIN)		(1 MIN)	
DATE				
MEGGER MOTOR ø-GND W/0	CONDUCTOR INCLUDED:		(1 MIN)	
REMARKS:				
EQUIPMENT USED		SERIAL NUMBER		
		TITLE		
QUALITY CONTROL REP.		11156		

FIGURE F.10 Typical Overload Relay Test Report.

F.11

Figure F.11 shows a typical ground-fault system test report.

			392	2525			OF
CUSTOMER				ATE		PROJECT NO REL HUMIDI	
OWNER/USER					PECTION	ALL HOME	Wa a
ADDRESS EQUIPMENT LO	CATION		L	AST INSPECT	ON REPORT NO.		
CIRCUIT IDENTI							
			FIELD	DATA			
	RRENT DEVICE:				GROUND FAULT S	YSTEM:	
CIRCUIT	FUSE	ED SWITCH			NEUT-GND S	21,1440	O SEQUENCE
	R						
TYPE							
	NG						
	NG						
FOLIAGE RATI	NG.		INIOD		oznovni viti		
		111111111	INSP	ECTION			950
CORRECT	INCORRECT	INS	PECTION POINT			SIZE - REMARI	KS
		NEUT.	GRD LOCATION	8			
		CONTR	OL POWER				
			OR OR TEST PAI OPERATION	NEL			
		OTHE	R				
			ELECTR	ICAL TEST			
			ELECIN	ICAL IEST			
1 BREAK	ER/SWITCH REACTION	N TIME (RT)			SEC.	cyc.	
						407.538	
2. PICK U	P CURRENT		AMPS				
3. PICK U	P CURRENT MINUS 1	0% () A.	TRIP	NO TRIE		
A CHILIKIT	TRIP COIL PICK-UP	/OLTAGE		1001			
a. SHOW	THIP COIL PION-OF	VOLINGE	au E-au ana	VOL	15		
5. SYSTE	M NEUTRAL INSULAT	ION RESISTA	NCE TO GND	12	MEGO	HMS	
6. TIME-C	CURRENT CALIBRATIO	ON TESTS:					
	PRIMARY C		%	TOTAL	RT	RELAY	MFG.
	AMPERE-		PICKUP	TIME	1000	TIME	TOLERANCE
REMARKS:							

FIGURE F.11 Typical Ground-Fault System Test Report.

F.12

Figure F.12 shows a typical instrument/meter calibration and test report.

			SHEET NO.	OF
CUSTOMER	DATE		PROJECT NO.	Or
ADDRESS	AIR TEM	Ρ.		
OWNER/USER		ST INSPECTION		
ADDRESS		SPECTION REPORT NO.		
QUIPMENT LOCATION				
CIRCUIT IDENTIFICATION				
OCATION/FUNCTION OF INSTRUME	NT/METER			
YPE	MANUFACTURER		L	
ULL SCALE	A	CTUAL INPUT	201040	
T. RATIO	C.T. RATIO	CAL. W	ATTS	
2072202				
FULL SCALE				
CARDINAL POINTS				
BASIC RANGE				
CALCULATED VALUE				
JACOUCHTED VALUE				
STANDARD "AS FOUND"				
STANDARD "AS LEFT"				
"AS LEFT" ACCURACY (%)				
REMARKS				
	ENT/METER			
OCATION/FUNCTION OF INSTRUME		MODE	iL.	
OCATION/FUNCTION OF INSTRUME	MANUFACTURERA	MODE	EL_	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE	MANUFACTURER	CTUAL INPUT	EL_	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE .T. RATIO	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE Y.T. RATIO	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE T. RATIO FULL SCALE CARDINAL POINTS	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE T. RATIO FULL SCALE CARDINAL POINTS	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE LT. RATIO FULL SCALE CARDINAL POINTS	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE T.T. RATIO FULL SCALE CARDINAL POINTS BASIC RANGE CALCULATED VALUE	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE **ULL SCALE P.T. RATIO FULL SCALE CARDINAL POINTS BASIC RANGE CALCULATED VALUE STANDARD "AS FOUND"	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE 'ULL SCALE '.T. RATIO FULL SCALE CARDINAL POINTS BASIC RANGE CALCULATED VALUE STANDARD "AS FOUND"	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE T. RATIO FULL SCALE CARDINAL POINTS BASIC RANGE CALCULATED VALUE STANDARD "AS FOUND" STANDARD "AS LEFT" "AS LEFT" ACCURACY (%)	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE U.T. RATIO FULL SCALE CARDINAL POINTS BASIC RANGE CALCULATED VALUE STANDARD "AS FOUND"	MANUFACTURERA	CTUAL INPUT	\$-	
OCATION/FUNCTION OF INSTRUME YPE ULL SCALE T. RATIO FULL SCALE CARDINAL POINTS BASIC RANGE CALCULATED VALUE STANDARD "AS FOUND" STANDARD "AS LEFT" "AS LEFT" ACCURACY (%)	MANUFACTURERA	CTUAL INPUT	\$-	

FIGURE F.12 Typical Instrument/Meter Calibration and Test Report.

F.13

Figure F.13 shows a typical watt-hour meter test sheet.

						SH	EET NO.	0	=
CUSTOMER			DATE				OJECT N		
ADDRESS				EMP.					
OWNER/USERADDRESS				LAST INSPE INSPECTION		NO			
EQUIPMENT LOCATION			LAGI	INSECTION	· neroni				
CIRCUIT IDENTIFICATION	4								
TEST LOCATION			CIRC	UIT METERE	D				
METER MANUFACTURER			= 7//82	TYPE	2	SE	R. NO.		
VOLTS	AMPS		-	PHASE		WIRE			
C.T. RATIO	P.T. RATI	0	1ES	ST K		PRI.	IEST K		
		AS FOUND	AS LEFT	1				AS FOUND	AS LEF
KWH REGISTER READIN	G			POTENTIA	L IND LAMP	s		3	10.000.000.000
DEMAND REGISTER REA	DING			CHECK AN	D VERIFY F	REGISTER RA	TIO		
DISC R.P.M.				SYNCHRO	NOUS MOT	OR			
WORM WHEEL MESH				CHECK KW	PTR AGAI	NST KWH PT	R		
MAGNET CLEANLINESS				CREEP CH	ECK				
MAGNET TIGHTNESS				TIME INTER	RVAL				
	ACC	URACY CHECK				COIL BALA	NCE CHEC	ж	
		(% REG.)	045		NO. 1	COL	NO. 2	COIL	NO.3
TEST FUNCTION	AS FOUND		AS LEFT	AS FOUND	AS LEFT	AS FOUND	AS LEFT	21772	AS LEFT
LIGHT LOAD	F-GOUND.		LEFT	FOOND		POOLED.	Select	FOUND	- Labert
FULL LOAD									
POWER FACTOR									
REMARKS:									
EMAPINO:									
CUSTOMER REPRESENT.	ATIVE				TITI	E			
CUSTOMER REPRESENT.					TITL	E IAL #			

FIGURE F.13 Typical Watt-Hour Meter Test Sheet.

F.14

Figure F.14 shows a typical panelboard/circuit breaker test report.

CUSTOMER ADDRESS DWNER/USI ADDRESS EQUIPMENT DWNER IDE	ER	N		DATE PROJECT NO. AIR TEMP. REL. HUMIDITY DATE LAST INSPECTION LAST INSPECTION REPORT L BUS INSULATION RESISTANCE IN MEGOHMS										
PANEL B TEST VOI MFG. — MFG. — MFG. —	OARD R LTAGE:	- B-G — ATINGS:	AMPS:	C-G — MOI CURVE CURVE CURVE	DEL NO: —— NO. ——	B-C — CATALO RVE RAN	A-C							
CIRCUIT #	CKT. BKR. SIZE	TEST AMPS	TRIP	INST, TRIP	CONTACT RESIS.	CIRCUIT #	CKT. BKR, SIZE	TEST	TRIP	INST. TRIP	CONTACT RESIS.			
TEST EQUIP		NTATIVE _						E						

FIGURE F.14 Typical Panelboard/Circuit Breaker Test Report.

F.15

Figure F.15 shows a typical transformer test and inspection report.

					SHEE	T NO.	0	F			
CUSTOMER			DATE			ECT NO.	1000	120			
ADDRESS OWNER/USER			AIR TEMP. DATE LAST INSP	PECTION	°C REL H	HUMIDITY	(%)				
ADDRESS			LAST INSPECTION								
EQUIPMENT LOCATION OWNER IDENTIFICATION	976			815)110(2010)							
NAMEPLATE INFO	NOMATION:										
MANUFACTURER			KVA	PHASE		CYC	3 F				
SERIAL NO.			YPE			CLA					
PRI. VOLTAGE			RATED CURRENT		А	MPERES					
SEC. VOLTAGE		A OR Y	RATED		A	MPERES					
COOLANT	OIL	ASKAREL	☐ AIR	NITRO	OPERATOR IN	П отн	R				
COOLANT CAPACITY		TEMP. RISE (IMPEDANO							
NO LOAD TAP CHANG			XX.T-C *	- an award editi							
GAUGES AND CO	UNTERS										
TEMP.		TEMP. RANGE	RESET	GAUGE							
PRESSURE		OIL LEVEL			TAP	SETTING					
VISUAL INSPECTI	ON										
BUSHING		CONNECTIONS	PAINT		C	THER					
						OTHER					
LOAD TAP CHANGER		LEAKS	0.15		30000m						
FANS & CONTROLS WINDING INSULATION PRIMARY TO SECONDAR	N RESISTANCE O GROUND, SEG Y TO GROUND,	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED	KVDC KVDC	30 SEC.	1 MIN.	10 MIN.	D.A.	P.I.			
FANS & CONTROLS WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE	N RESISTANCE O GROUND, SEE BY TO GROUND, O SECONDARY	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED GROUND GUARDED	KVDC KVDC KVDC	30 SEC.		10 MIN.	D.A.	P.I.			
FANS & CONTROLS WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE	N RESISTANCE O GROUND, SEE BY TO GROUND, O SECONDARY	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI, GUARDED , GROUND GUARDED	KVD0	30 SEC.		10 MIN.		P.I.			
FANS & CONTROLS WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE	N RESISTANCE D GROUND, SEI Y TO GROUND, D SECONDARY	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED GROUND GUARDED	KVDC KVDC KVDC	30 SEC.	1 MIN.	35		X3			
WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST	N RESISTANCE D GROUND, SEE Y TO GROUND, D SECONDARY D H1 TAP	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			
WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST	N RESISTANCE D GROUND, SEI Y TO GROUND, D SECONDARY D H1 TAP POSITION	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			
WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST	N RESISTANCE D GROUND, SEE IY TO GROUND, D SECONDARY D H1 TAP POSITION A1	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			
WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST	N RESISTANCE D GROUND, SEE Y TO GROUND D SECONDARY D TAP POSITION A1 B2	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			
WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST	N RESISTANCE D GROUND, SEI Y TO GROUND, D SECONDARY D TAP POSITION A1 B2 C3	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			
WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST	N RESISTANCE D GROUND, SEI Y TO GROUND, D SECONDARY D TAP POSITION A1 B2 C3 D4	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			
SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST NAMEPLATE	N RESISTANCE D GROUND, SEI Y TO GROUND, D SECONDARY D TAP POSITION A1 B2 C3 D4	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			
WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST	N RESISTANCE D GROUND, SEI Y TO GROUND, D SECONDARY D TAP POSITION A1 B2 C3 D4	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			
FANS & CONTROLS WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST NAMEPLATE PRIMARY VOLTS	N RESISTANCE D GROUND, SEI Y TO GROUND, D SECONDARY D TAP POSITION A1 B2 C3 D4	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			
WINDING INSULATION PRIMARY TO SECONDAR PRIMARY TO EQUIPMENT USE TURNS RATIO TEST	N RESISTANCE D GROUND, SEI Y TO GROUND, D SECONDARY D TAP POSITION A1 B2 C3 D4	GAS REGULATO E TEST (MEGOHMS) C GUARDED PRI. GUARDED ABOUND GUARDED H2 H3 CONNECTION	KVDC KVDC KVDC X2 X0 X3 CONNECTION	30 SEC.	1 MIN. H3 NECTION	35	X2 CALCULA	X3			

FIGURE F.15 Typical Transformer Test and Inspection Report.

F.16

Figure F.16 shows a typical transformer (dry type) inspection record.

			Date		
			Serial No		
kVA		Voltage	Impedance_		
Phase	Taps _		ans. Fan 🗅 (
Cooling System:	Room Vent Fan	Tra	ans. Fan 🗅 💢	Gravity 🗅	
		Annual Ins	spection		
Date			Date		T
Inspector's Initials			Inspector's Initials		
Electrical Load			Bushings		
25.70.000.00460aV24			Cracks or Chips		+ +
			Cleanliness		1
Secondary Voltage			Cicaminos		++-
No Load Volts			Equipment Ground		
Full Load Volts			Check Connections		
			Measured V		
Dust on Windings			Resistance		
Minor Collection					
Major Collection			Temperature Alarms and Indicators		
Cleaned			Operation		
			Accuracy		_
Connections			Accuracy	2 (2	1 2 2
Checked			Case Exterior		
Tightened			Covers Intact		
			Paint Condition		
Cooling Systems					
Fan Operation		3	Lighting Arresters	1	15-15-
Filter Cleanliness			Check Connections		
System Adequate			Check Bushings		
	Co	mplete Intern	al Inspection		
Report of Condition	s Found:				
Cooling System					Ş
Coil Insulation					
Description of Work					
Other Repairs Reco	entranco, od oc				
Ch Ch				Cost:	

FIGURE F.16 Typical Transformer (Dry Type) Inspection Record.

F.17

Figure F.17 shows a typical transformer (liquid filled) inspection record.

Plant	I	ate		
Location				
Year Purchased	Year Installed	Mfr.		
kVA	Voltage		Taps	
Check type: Free Breathing Phase		Sealed □ Impeda		
Insulating Fluid: Type				
	Annual Insp			
Date		Date		
nspector's Initials		Inspector's Initials	1 1	4 4
'ank — Liquid Level		Exposed Bushings		3 3
Normal		Cracks or Chips		
Below		Cleanliness	2	č
Added Fluid		Equipment Ground		
Intrance Compartment		Connection		
iquid Level		Good		
Normal		Questionable		20
Below		Tested		
Added Fluid		WAS 51 9950000		
		Temperature Indicator		
Sectrical Load		Highest Reading		
Peak Amperes		Reset Pointer		
econdary Voltage		Pressure-Vacuum		
Full Load		Indicator		
No Load		Pressure		
110 110 110		Vacuum		
Saskets and Case Exterior				
Liquid Leaks		Ventilators, Dryers, Gauges, Filters, and		
Paint Condition		Other Auxiliaries		
		Operation OK		
		Maint. Req'd.		
Remarks (record action when ins				
Description of Work Performed: _				_
Other Repairs Recommended:				

FIGURE F.17 Transformer (Liquid Filled) Inspection Record.

F.18

Figure F.18 shows a typical transformer oil sample report.

CUSTOMERLOCATION				PROJECT NO. DATE	ES	
LOCATION			OIL	SAMPLE NO.		
IDENTIFICATION		H	ASKAREL NO GAUGE	DAINT		000
MFG. SERIAL NO.	KVA	— Н	PRESSURE	PAINT	— H	GOO!
CLASS	TYPE		VACUUM			FUU
INSUL CLASS	PHASE		INDOOR	GASKETS		ОК
VOLTAGE	- 1000000		OUTDOOR	-70000000	-H	LEAR
INSTR. BOOK			TEMP. GA.			
AVG. DIELECTRIC	KV			BUSHINGS		OK.
ACIDITY NO.	КОН				_ H	LEAR
ASTM COLOR NO.	LIQUID CAPACI	TY				
PARTICLES YES NO	TEMP	°C		OIL LEVEL		ок
		EATHER			- H	LOW
RECOMMENDATIONS						LOW
LOCATION			OIL	SAMPLE NO.		
IDENTIFICATION			ASKAREL	E. & & & & & & & & & & & & & & & & & & &		
MFG.	9300		NO GAUGE	PAINT		GOO
SERIAL NO.	KVA		PRESSURE			POO
CLASS	TYPE		VACUUM	101000000000000000000000000000000000000		
INSUL CLASS	PHASE		INDOOR	GASKETS		OK
VOLTAGE		— H	OUTDOOR		🗆	LEAR
INSTR. BOOK	101		TEMP. GA.	PHOLINICO.		
AVG. DIELECTRIC	KOH			BUSHINGS		OK
ACIDITY NO. ASTM COLOR NO.	LIQUID CAPACI	TV				LEAK
		10.223		00.1505		
PARTICLES YES NO		°C		OIL LEVEL	— B	OK
RECOMMENDATIONS	333					LOW
LOCATION IDENTIFICATION			OIL ASKAREL	SAMPLE NO.		
MFG.		Ō	NO GAUGE	PAINT		G00
SERIAL NO.	KVA		PRESSURE		_ H	P00
CLASS	TYPE		VACUUM			115172
INSUL CLASS	PHASE		INDOOR	GASKETS		ОК
VOLTAGE	Trans Misses		OUTDOOR	0.0000000000000000000000000000000000000	_ H	LEAR
INSTR. BOOK	Vince		TEMP. GA.	2012.01.000.000.000		
AVG. DIELECTRIC	KV	(25)29		BUSHINGS		ОК
ACIDITY NO.	КОН				- H	LEAR
ASTM COLOR NO.	LIQUID CAPACI	TY				
PARTICLES YES NO	Contract of the Contract of th	°C		OIL LEVEL		ок
RECOMMENDATIONS	W	EATHER			_ U	LOW

FIGURE F.18 Typical Transformer Oil Sample Report.

F.19

Figure F.19 shows a typical transformer oil trending report.

												10.					
OCATION											SAMPLE	NO.					
DENTIFICATIO								KAREL			2.50.000	× 5000					
MFG.						ᆜ		UGE					☐ GOO				
SERIAL NO				YPE					RE								
NSUL. CLASS				HASE							GASKET	S	Пок				
OLTAGE													☐ LEA				
NSTR. BOOK																	
ELECTRIC F	LUID AN	ALYSI	s														
YR - JOB#	DIELE (KV)		ACIDITY mgKOH/g)	IFT (dynes/cm	n2)	COLO	A	VISL	1.00	PECIFIC	WATER (PPM)	POWER FACTOR (%)	PCB (PPM)				
T (ASTR OLOR (ASTR	W D877) 300 W D974) 0.0 W D971) 35 W D1500) 1 W D15338) AS ANAL	KV MIN. 1 3 mgKOH dynes/cr MAX, NE 2SPPM N		OL / 0.20mgKO L / 24 dynes/cm2 . USED OIL / CI	HIG MAX. 2 MIN, US LEAR FOI SED OIL CAR MONC (C	USED OIL ED OIL / R SILICON / 50PPM BON DXIDE	CAF	mgKOH/ nes/cm2	g MAX. NEW S MIN. SILICONE	LICONE/0.2mg	ACETYLENE (C2H2)	OME TOTAL GAS CONTENT (%)	TOTAL COMBUSI GAS				

FIGURE F.19 Typical Transformer Oil Trending Report.

F.20

Figure F.20 shows a typical transformer insulation resistance record.

Plant _												_	_								Dat	e					_	_		
Scope:	Po of	wer 2300	trans volts	forn s or	ners high	of 15 er. D	0 k³ ired	VA a	ınd adii	gre ng -	ater	cap	oacit ded	y wi and	th p	rim ted.	ary	volta	age											
Transfor	mer S	erial	No.																			I	has	se _			_			
Location															I	nstr	ume	nt I	Jsec	ı										
Equipme	ent Inc	dude	d in '	Test	-																						_	_		
*	Date	1	Prir	nary	y to (Grou	nd	Sec	con	dar	y to	Gre	oun	d Pri	imar	y to	Sec	one	dary		Inte	rna	l Te	mp.			Am	bien	nt Ter	mp
														+																
pector's	Initials																													
ite	F		Pri	imar	ry to	Grou	ınd	_		-	_		Se	con	dary	to	Gro	und	_		H		F	rim	ary	to S	eco	nda	ry	_
Infinity									Τ			Ī						1						T						T
10,000	\pm		+		+		Н		÷		\pm	\pm	Н	+	Н	+	Н	+	÷			Н		H	+		Н	+	\forall	+
3,000 2,000	\pm			\Box			Н		+		\pm	+	Н	+	Н		Н			+		\Box					\Box	\pm	\forall	
1,000	\mathbf{H}			Н			Н		-		_	-			Н		Н		F	\perp	-	Н					Н	-	Н	1
800 600	\pm						Н										Н												\pm	
400	+	+	+	Н	+	Н	Н	-	+	Н	+	+	Н	+	Н	+	Н	+	+	4	+	Н	-	\vdash	-	+	Н	+	H	+
300	+			\Box			Н			Н	+				H	13	Н		+		+	Н	1			+	Н		Ħ	1
200 150	\Box		丰	\Box			П		İ	П	\downarrow	1	\Box	\perp	Ħ		Ħ	1	İ	\Box	1	Ħ	1	\perp	#	İ	Ħ	1	Ħ	#
100	\perp			Ц			Ц		L	Ц	4	1	Ш		Н		Н	_	L	4	1	Н			4	1	Ц	+	Н	4
80	+			+			Н		+	Н	+	+		+	Н		Н		+	+	+	Н		-	-	+	H	+	H	+
60 40	\pm			\Box			H						\Box		H		H				$^{+}$	\Box				+	\Box		\Box	
30	\mathbf{H}			П			П			Н	1		П		Н	- 3	Н		F			П	1		-		П		П	4
20	+			Н			Н		+	Н	+	+	Н	+	Н	-	Н		+	-	-	Н	-	-	-	-	Н		H	+
15 10	\Box	74			5		П		18					12		8	П	2						13			\Box			
6	\mathbf{H}						H			H	-				H	-	H		F		-	H				F	H	+	H	-
4	\mathbf{H}		-				П	1	F	П	-	F	П		\Box	F	П	F	F	-	F			F			\Box	F	H	1
2	\prod			\Box			П			H	1		П		П		П		F			П					H		Ħ	1
1	\perp						П							13			П						3						\Box	
0.6	+		-	П	\perp		Н		+	Ц	4	+		+	Н	+	\prod		1	-	+	П	-	1		+	П	+	H	1
0.2	++						Н		+	H	+	+	H	-	+		H		+		+	H	1	+		+	+	-	++	+
0.1	6		-	H			Ħ		F	Ħ		1			Ħ	-	Ħ	+	F		F	Ħ					H	+	Ħ	1
0.0 Zer				Ш			Ш			Ц							Ц					Ц					ш			1
narks:							_		_	_	_								_		_		_	_		_	_	_	_	_
											_																_	_		
																												_		_

FIGURE F.20 Typical Transformer Insulation Resistance Record.

F.21

Figure F.21 shows a typical battery record.

o. Cells			Type			Services			Bldg	ş	
ote: Cor	rect specific (gravity readi	ngs for t	emperatur	re,						
7	Weekly Pilot	Cell Readings	: Cell	No			Quarterly	Cell Readi	ngs: I	ate	1942
Date	Pilot Cell Specific Gravity	Pilot Cell Temp.	Bus Volts	Water Clean	Check Charger	Cell	Specific Gravity	Volts	Cell	Specific Gravity	Volt
	3					1			31		
						2			32		
						3		02	33		
						4			34		
			8		33	5		00	35		
						6			36		
						7		92	37		3
						8			38		
					33	9		Çâ	39		- 1
						10			40		
						11		ų:	41		3
						12			42		
					32	13			43		
						14			44		
						15			45		3
						16			46		
					S2	17		122	47		25
						18			48		
						19			49		
						20			50		
						21			51		
						22			52		
						23			53		
Remar	ks:				-	24			54		
						25			55		
9						26			56		
-					-	27			57		
						28			58		
						29			59		
						30			60		
						Bus V	olts	(Current_		
						Batte	ry Room Cond	lition	ection/Viole		
_						Cell T	emps: 1		15		
_					-		30		45	60	

FIGURE F.21 Typical Battery Record.

F.22

Figure F.22 shows a typical engine generator set inspection checklist.

				PHEET NO.	OF
USTOMER		DATE		PROJECT NO.	OF
DDRESS				REL. HUMIDITY	
WNER/USER_		DATE LAST	INSPECTION		
DDRESS QUIPMENT LOC	PATION	LAST INSPE	CTION REPORT		
IRCUIT IDENTII	NEUKOK-				
NGINE TYPE:	GASOLINE	DIESEL	GASTURBINE		
MAKE	MODEL	SEI	RIAL NO.	KS	e :
CVA	KW	VOLTAGE			
RPM			TECH. B		
s - 0 1 10 e s	ACCUMANTO A SERVICE OF COLUMN		1201112		
	ange oil and lube oil filters.				
	move unused oil from premises.				
	ange fuel oil elements.				
27	rvice crankcase breather.		7		
	pect air cleaner element, clean if requ ed separately. Price of element(s) no		ea, element(s) will be		
	ed separately. Price of element(s) no eck coolant level and maintain safe de	170	ounted radiators ask. (Pa-	note	
M	eck coolant level and maintain safe de liators, cooling towers & heat exchang				
	eck manifolds, brackets, mountings a			23	
		nd liex connections.			
-	pect fan belts, adjust if required. eck pulley hub, bearings, lubricate if r	non-freed			
-	eck pulley hub, bearings, lubricate if r eck operation of auxiliary water pump				
	eck operation of automatic louvers.	or san motor.			
· — -	pair minor fuel, coolant and lube oil le	aks			
* H ch	eck operation of jacket water heater(s				
"	pect generator, perform any routine m				
14	Megger	ina na roo ao roquiros:			
	pect governor/actuator linkage.	CATALANAN			
16Ch	eck battery electrolyte level and maint	ain to include:	Voltage		
			voltage		
	eck operation of charger and/or altern		200000000		
	pect fuel supply system for leaks or lo ain condensation from day tank and cl				
	ain condensation from day tank and cr equipped with a drain valve.	neck for any contamination. C	JINLY IF day tank		
	neck operation of transfer pump.				
	eck for correct generator output voltar	ge & frequency, adjust if requ	ired.		
	nulate & check operation of each safe			only.	
	eck operation of generator control inst		양 집에 하다니 않는데 하는데 되었다.	3350	
	st fault lamps & replace bulbs as requ				
	nk crankcase oil sample, owner to be				
	bmit report to owner				
	to start test.				
REMARKS					
UBMITTED BY		FOLUDA	MENT USED		

FIGURE F.22 Typical Engine Generator Set Inspection Checklist.

F.23

Figure F.23 shows a typical automatic transfer switch form.

							PROJECT NO.	OF
Type:	OWNER/USER			DATE	LASTINS		REL HUMIDITY	
Type: Bul #:				LAST	INSPECTI	ON HEPOHT NO.		
Serial # Voltage:								
Serial # Voltage:								
Phase Parts Bik Wire Diag								
Parts Bk. Wire Diag: From	7100 00							
Time Range "Transfer to Emergency" From To TEST OPERATIONS Transfer Time to Emergency As Found As Left NORMAL EMERGENCY Contact Resistance in Microhms: A B C A B C C A B C C A B C C C A B C C C A B C C C A B C C C A B C C C A B C C C A B C C C A A B C C C A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A B C C C A A C C C A A B C C C A A C C C A A C C C A A C C C A A C C C A A C C C A A C C C C A A C C C C A A C C C C A A C C C C A A C C C C C A C C C C A C C C C A C C C C C A C	V1010		1.10000	CTS.				-
Transfer Time to Emergency As Found As Left NORMAL EMERGENCY Contact Resistance in Microhms: A B C A B C C A B C C A B C C C A C C A C C C A C C C A C C C A C C C C A C C C C A C C C C A C C C C C A C C C C C A C C C C A C C C C C C A C C C C C C C C A C			1 3013			Wire Diag:		
Transfer Time to Emergency As Found As Left NORMAL EMERGENCY Contact Resistance in Microhms: A B C A B C C A B C C A B C C C A C C A C C C A C C C A C C C A C C C C A C C C C A C C C C A C C C C C A C C C C C A C C C C A C C C C C C A C C C C C C C C A C								
Transfer Time to Emergency As Found As Found As Found As Left NORMAL EMERGENCY Contact Resistance in Microhms: A B C A B C A B C C A B C C A B C C A B C C C A B C C C A B C C C A B C C C A B C C C A B C C C C	75	1988 N.	From					
Fransfer Time to Emergency Retransfer Time to Normal As Found As Left NORMAL EMERGENCY Contact Resistance in Microhms: A B C A B C A B C C A B C C A B C C A B C C A B C C C A B C C C A B C C C A B C C C A B C C C A C C C C	ime Range "Retransfer to N	iormali"	From			То		-
Normal				TEST OPE	RATIONS	8		
NORMAL				1201 01 2				
NORMAL EMERGENCY Contact Resistance in Microhms: A B C A B C A B C C A B C C A B C C A B C C A B C C A B C C A B C C A B C C A B C C C A B C C C A B C C C A B C C C A C C A B C C C A B C C C A C C A B C C C A C C A B C C C A B C C C A B C C C A B C C C A B C C C A B C C C A B C C C A B C C C A B C C C A B C C C A C C A B C C C A C C C A C C C A C C C C	ransfer Time to Emergency		As Found —			As Left -		
Contact Resistance in Microhms: A	etransfer Time to Normal		As Found			As Left		
Contact Resistance in Microhms: A				NORMAL			EMERGENO	Y
Voltage Drop in Millivolts: A B C A B C Voltage Readings: A-N B-N C-N A-N B-N C-N A-B B-C C-A A-B B-C C-A Amperage Readings: A B C C-A B-C C-A Amperage Readings: A B C C-A A-B B-C C-A Amperage Readings: A B C C-A A-B B-C C-A Amperage Readings: A B C C-A B-C C-A Amperage Readings: Pickup Dropout								
Voltage Readings: A-N B-N C-N A-N B-N C-N Amperage Readings: A-B B-C C-A A-B B-C C-A Undervoltage Relay: 1V 2V 3V Pickup Dropout Dropout Dropout Relay: Pickup Dropout Dropout Arc Chuttes: Voltage Pickup Dropout Dropout Arc Chuttes: Circuit Property Tagged: Bolted Connections; Megger: Mechanical Operation; Unusual Conditions; Lubrication; Unusual Conditions;		hms: A	В		c _	A	В	_ c
Amperage Readings: A-B B-C C-A A-B B C C C-A A B C C C-A A-B B C C C-A A-B B C C C-A A-B B C C C A B C C C-A B C C C A B C C C C A C C C C C C C C		100000					1000000	
Amperage Readings: A B C A B C Undervoltage Relay: 1V 2V 3V Pickup Dropout Pelay: Pickup Dropout Pelay: Voltage Pickup Dropout Frequency Pickup Dropout Arc Chutes: Contacts: Megger: Cleaned: Lubrication:	rotage meatings.				7. 6.	0.000	- N	C-N
Pickup Dropout Pelay: Pickup Dropout Pelay: Voltage Pickup Dropout Frequency Pickup Dropout Arc Chutes: Circuit Property Tagged: Bolted Connections; Megger: Mechanical Operation: Unusual Conditions: Lubrication:	Imperage Readings:							7.70
Pickup Dropout Pelay: Pickup Dropout Pelay: Voltage Pickup Dropout Frequency Pickup Dropout Arc Chutes: Circuit Property Tagged: Bolted Connections; Megger: Mechanical Operation: Unusual Conditions: Lubrication:								
Pelay: Pickup Dropout Relay: Voltage Pickup Dropout Frequency Pickup Dropout Arc Chules: Circuit Property Tagged: Bolted Connections; Megger: Mechanical Operation: Unusual Conditions: Lubrication:	Indervoltage Relay:			11		2V	3V	
Relay: Pickup Dropout Prequency Pickup Dropout Arc Chules: Contacts: Bolted Connections; Megger: Mechanical Operation: Unusual Conditions: Lubrication: Dropout Circuit Properly Tagged: Bolted Connections; Mechanical Operation: Unusual Conditions:			Pickup	-		-	-	
Relay: Voltage Pickup Dropout Frequency Pickup Dropout Arc Chutes: Circuit Property Tagged: Bolted Connections; Megger: Mechanical Operation: Unusual Conditions: Lubrication:			Dropout	2		-		
Relay: Voltage Pickup Dropout Frequency Pickup Dropout Arc Chutes: Circuit Property Tagged: Bolted Connections; Megger: Mechanical Operation: Unusual Conditions: Lubrication:	Relay:		Pickup			Dropout		
Arc Chutes: Contacts: Megger: Cleaned: Lubrication: Frequency Pickup Dropout Circuit Properly Tagged: Bolted Connections; Mechanical Operation: Unusual Conditions:			Voltage Dickum			Dropout		
Arc Chutes: Contacts: Megger: Cleaned: Lubrication: Circuit Properly Tagged: Bolted Connections: Mechanical Operation: Unusual Conditions:	Relay:					168 STA 188		
Contacts: Bolted Connections; Megger: Mechanical Operation: Cleaned: Unusual Conditions: Lubrication:				87*34		50.000,000		
Megger: Mechanical Operation: Cleaned: Unusual Conditions: Lubrication:	Arc Chutes:						2	
Cleaned: Unusual Conditions: Lubrication:	27000000000000000000000000000000000000							
Lubrication:	megger:							
iemarks:								
emarks:	anno de la							
	andiks.							
est Crew:	est Crew:							

FIGURE F.23 Typical Automatic Transfer Switch.

F.24

Figure F.24 shows a typical uninterruptible power supply system inspection checklist.

		SEC	TION A -	CUSTO	MER DA	TA					
1. PLANT/BUILDING	2. 1	LOCATIO	N				3. JOB	NUMBER			
4. EQUIPMENT	5. (CIRCUIT	DESIGNA	TION			SFER TEST ERGENCY & RETURN) F BOLTED CONNECTIONS CHARGE TEST FAULT INDICATORS				
7. TEST EQUIPMENT	- 13						8. TES	TED BY			
SECT	ON B - V	ISUAL A	ND ELEC	TRICAL	/MECH	ANICAL I	NSPECTI	ON			
9. CHECK POINT	CON	D.	NOTES			CHECK	POINT		con	ND*	NOTES
COMPONENT INSPECTION/TESTING	3			ENE	RGIZE AI	ND TEST 8	SYSTEM				
INSTALLATION INSPECTION/TESTING	95		UTIL	ITY TRIP	TEST				-5		
WIRING VISUAL VERIFICATION								RN)			
GENERATOR CONTROL FUNCTIONS				TIGH	TIGHTNESS OF BOLTED CONNECTIONS						
LOADING UPS TEST			BATTERY DISCHARGE TEST TEST ALL UPS DIAGNOSTIC FAULT INDICATORS								
DISCONNECT RECTIFIERS & INVERTERS SEPARATELY. DOES SYSTEM OPERATE CORRECTLY?							DICATOR	ŝ			
		SECT	ION D – E	LECTRI	CAL TE	STS					
10. UPS INPUT	A-N	B-N	C-N	A-B	B-C	C-A	Α	В	С	N	G
UPS OUTPUT	A-N	B-N	C-N	A-B	B-C	C-A	Α	В	С	N	G
UPS SWITCHBOARD HARMONIC (THD)	A-N	B-N	C-N	A-B	B-C	C-A	Α	В	С	N	G
11. NOTES											

FIGURE F.24 Typical Uninterruptible Power Supply System Inspection Checklist.

F.25

Figure F.25 shows a typical back-up power system inspection checklist.

For use	of this	form		TM 5-6				nt agend	y is (OE.				
1. PLANT/BUILDING		2. L	OCATIO	-	CUSTO	MEHDA	IA	3. JOB N	UMBER					
4. EQUIPMENT		5.0	PIDCUIT	DESIGNA	TION			6. DATE	/VVVVIII	MDD)				
4. EQUITMENT		3. (JINGOI I	DEGIGIYA	TION:			0. DATE	i i i i i m	WDD)				
7. TEST EQUIPMENT AND CALIBRA	TION DATE						a. TESTE	DBY						
			SECT	ION B -	EQUIPN	IENT DA	TA		02					
9. MANUFACTURER	10. STYL	ES/S.O			11.	VOLTAGE	TAGE RATING 12. CURRENT RATING							
13. EQUIPMENT CLASSIFICATION	14. FREC	NUENCY	6		15.	WET BUL	B TEMPE	RY BULB	TEMPE	RATURE				
	SECTION	I C – VI	SUAL A	ND ELEC	TRICA	_/MECH	ANICAL I	NSPECTION	4	.,				
17. CHECK POINT		CON	D*	NOTES			CHECK	POINT		COI	ND*	NOTES		
COMPONENT INSPECTION/TESTING					WIR	ING VISU	AL VERIFI	CATION						
ENERGIZE AND TEST SYSTEM						ITY TRIP	GENERA							
INSTALLATION INSPECTION/TESTIN	iG				TIGH	HTNESS C	F BOLTE							
GENERATOR CONTROLS AND FUND	TIONS				CHE	CK FOR I	PROPER S	SIZE BREAK	ER					
WIRING CONTINUITY TESTING					REF	ERENCE	DRAWING	SS						
WORKING CLEARANCE						PER PHA OR CODE	SING CO							
SWITCHGEAR CONTROL FUNCTION	s													
PERFORM AUTOMATIC TRANSFER SYSTEM (ATS) FUNCTIONS UNDER		A. OPE	RATE NO											
THE ADJACENT CONTROLLER		B. ALL	GENERA	TORS OF	ERATE									
		C. GEN	ERATOR	IS 1 AND	2 OPER/	ATE				8				
		D. GEN	ERATOR	S 2 AND	3 OPER/	ATE								
		E. GENERATORS 1 AND 3 OPERATE												
		F. RET	URN TO											
	0		ALLEL W											
10	-		SECTI	ON D – E				NE MEAGUE	CHECK TO	00		0		
18. MEASUREMENT DESCRIPTION	IN .	VOLTAGE AND CURRENT MEASUREMENTS VOLTAGE** CU								URRENT				
		A-N	B-N	C-N	A-B	B-C	C-A	A	В	С	N	G		
		A-N	B-N	C-N	A-B	B-C	C-A	A	В	С	N	G		
19. NOTES 1. CHECK FOR PROPER GROUNDS	ING CONN	ECTION	IS PRIO	R TO EN	ERGIZIN	IG.								
* CONDITION: A = ACCEPTABLE; R ** NOTE VALUE AND PHASING	= NEEDS R	EPAIR,	REPLAC	EMENT C	R ADJU	STMENT;	C = COR	RECTED; N	A = NOT	APPLICAB	LE			
THE THEOR AND PRINCIPAL											NFPA 7	0B (p. 1 of 1)		

FIGURE F.25 Typical Back-Up Power System Inspection Checklist.

F.26

Figure F.26 shows a typical insulation resistance—dielectric absorption test sheet for power cable.

-				Company				
Circuit —			Circuit	Location	9		183	EV 2290
500000	La.		Length	-		Aerial	Duct	Burned
Number of Conductors	Size	uctor	AWG MCM (kem	il)	Belted	Shielded	- 17/4	
Insulating Material			Insulating Thickness		Voltage Rating		Age	
Pothead or Terminal Type					Location	Indoors	Outd	loors
Number and Type of Joints						24100 3040201	2000	
Recent Operating History								
instany .						Mfr.		
State if Potheads or '						DILE-		
Were Guarded Durin List Associated Equip								
List Associated Equip Included in Test	0,000,000							
Misc. Information								
		9	Test Data -	– Megohms				
Part Tested					Test Made		Hours Days	After Shutdown
Grounding Pime					Dry-Bulb Temp.			
Test Voltage		-			Wet-Bulb Temp.			
Totalge	То	То	То	То	Dew			
Test	Line To	Line To	Line To	Line To	Point Relative			
Connections	Earth	Earth	Earth	Earth	Humidity			
	To Guard	To Guard	To Guard	To Guard	Absolute Humidity			Gr
¼ minute					Equipment Temp.			°F (
½ minute					How Obtained			
¾ minute								
1 minute	3 - 3				-			
2 minutes					"Megger" Inst			
3 minutes	5 5				Serial No.			
4 minutes					Range			
5 minutes					Voltage			
6 minutes								
7 minutes								
8 minutes					ž.			
9 minutes								
10 minutes								
10:1 min. Ratio					·			
Remarks								

FIGURE F.26 Typical Insulation Resistance–Dielectric Absorption Test Sheet for Power Cable.

F.27

Figure F.27 shows a typical cable test sheet.

Company								Date			Job No			
est Location				Circuit					Job No °C % Hum					
est Type: Accepta		die 🗆 . 9												
ess rype, recept										100	en tajor			
Cable Mfr.				10000	06 07	0000	10	.5	s	2 0	N	6	6	1 6
Rated kV		(Gr	d., Ungnd.)	9000	1	20		XXX				XXX	11	XX.
Oper, kV	-	(Gr	d., Ungnd.)	8000	W	W	WM	AXXX			MA		W	XX.
Length					77	77	77				999		W	
Age				7000	M		1///					1/1	1/	
No. Cond.				6000	W	111	1444			31111	WW	WX	H.	414 .
No. Size							XXXX	XXXX		HHH	1//	W	X	
Insul. Material				5000	W	111							1	
Insul. Thickness										\mathcal{M}			1	
Insul. Type	-			4000	MA	111			WHI.		1//		1	M.
Covering									ЖИ				1	
Installed in				3000	DAY.		XXX	11/1		XM			1	AM.
Factory Test kV				3000				XX		χ/χ		1//	1	
% Factory Test kV				2500			1/1/	11/	$\mathcal{M}_{\mathcal{M}}$			W	M	
Max. Test kV					MA	111		111			1/1/	WX		
Voltmeter kV				2000		200	111	M		XX			HA)	1
Time Volts	Leakage	Current-Mic	roamps			111	111	11	W	WW	1/1		XX	
Min. KV	Φ1-O	Ф2 - Д	Ф3-П			W	111	M	XX	XX.			7	
	_			1500	444	10	11/	777	W/	<i>A</i> MA			777	
				Megohms	199	10	\mathcal{H}		KИ)//// ///		HH.	
				obe	W)	M	M		HKK	dilik			M	1
				1000	44	4.7								
				900	11	1/1/		1/	M				4	
	-			800	1	100	1	1/1					X	
					11	W	111	XXX				///	M	1
				700	M			ANA					4%	1
				600	M	11					XXX	HAR	X	AH
	-			200	W		MA						1	
				500	AN	110				WI		M	W	
					1	1							A	7
	-			400	4	111		AAA		WW.			4	
-					1						\mathcal{M}		X	
			\vdash	300					100		\mathcal{M}		M	444
les.	ation Resistanc	o Toot	_							\mathcal{M}	1//			
	ation Hesistano 2.5 kV — 100		,	250		111		1//	11/1	M			100	
Ф то gnd	199		\vdash					XX	111					
ф то ф Ф т то ф				200			XX	M						
ФатоФ					W. W.	X	11	XX					XX	
distribution of the second of		55000		150		X		XX			1111		4X	
	Authorization of and Veritying V			(100	W	10	W						XX	W.
Test KV	and veniging v	omneter KV			1	11/	1//	200					11/2	M.
					M	11		M					W	11
2	Signature			100		8 9	10	15	20	25 30	40	50	60	70 80
temarks:						. 9		15	Kilovolts	- 30	4	50	du	10 00
teniai ka									NOVUIG					
												_		
	Т													

FIGURE F.27 Typical Cable Test Sheet.

F.28

Figure F.28 shows a typical insulation resistance test record.

	Scope:	Diel	ectri	c Ab	sorpt	ion \	Witho	out Te	mpe	eratui	re Co	rrecti	on					Dat	e									
	Apparatu	8_								4	E	lquip	ment	t Ten	np				Am	bien	t Ter	np.						
	Instrume	nt L	Ised	<u></u>											Pol	arizat	ion :	Index	No.									
	Conditio	í				10:1	Min.																					
					2562				an I	22					F	air				2 to	3							
										.0																		
	Q	1est	iona	able			1.5	to 2							Ŀ	xcelle	ent -		7053	Abo	ve 4							
	Time i	n M	inu	tes		0.	.25	0	.5	33	1	2	9	3	9	4	83	5	33	6	186	7		8	46	9	30	10
	Р	Pha	ise :	l:		e e		e e		i i	0				- 88		33		88		18				40		93. 93.	
É	Ground	Pha	ise 2	2															2.									
	9	Pha	se â	3																								
u.	100	Pha	se I	l-2																								
ptreo	Phases	Pha	ise 2	2–3																								
Z,	1 th	Pha	ise å	3–4		8		(d)		6 3	0		- 3		30		35		8		18				100		200	
lot	the lowe	at on	vone	rea	ding	on o	ranl	h																				
223	Infinity					L	П	23	T	П	1	T	П	T			T									T		
	10,000 5,000 3,000 2,000					E		1	E		=	ŧ		#	E								E		#	丰	\equiv	
				3		I		1			1	t		1	t							3			1	#		
	1,000 800 600			77	9			+	+	H	+	1		1			1		8							+	\vdash	
	400 300			- 3	3	\pm			\pm						1													
	200		200	3.3		H	\Box	4	+	\mathbb{H}	1	3 3		16	1	1	1	6 6								1	+	
	150			- 0.0		T								-	1													
2	100 80			33	100	F		-			+			18					i i		8 8	3						
Megonm	60 40			100	200																							
og N	30			3	3	F			1	Н	-		П		1							- 8		- 3		1	P	
70	20 15	13	333	63	8 1							3 3	1 10	48	48 -				18		9 8		9 9					
	10	1		3	3												1	9 9	į.			3						
	6				10. 1	F	H			Ħ				1	1				1							+	Ħ	1
	4					F	Ħ	+	+	Ħ	+	+	\vdash	+	=		+					100	+		+	+	\forall	
	2					=	\vdash	1	+	Ħ		1	\Box	1			+						+		1	+	\pm	
	1	100		77	92			+	+			1		100	1		+			\Box	. (3		9					
	0.6									Ħ				1												T	Ħ	
	0.1	00	000	- 10	70 1					\Box									100		0.0					\pm	\pm	
	0.06										- 0	G1 5	1 10	100	100	4.0	4.0	120	1.0	12	0.00	100	2 2	1	100	-0.1	41 17	

FIGURE F.28 Typical Insulation Resistance Test Record.

		^
н	. Z	y

Figure F.29 shows a typical insulation resistance test record for rotating machinery.

	ng Resistan		**************************************	18001171										ctric Abs machine		V	Cemperat or more	ure C	orrect	ed 7	
Date								-6					dc	machine	s 100	kW or	more				
\pp	aratus									Vo	ltag	e				. F	Rating _				_
ist	Conditions: Associated ' uded in Test	Test En	uipment																		
Vin	ding Ground	ling Tir	ne			-	Test	Made	_			_	Hou	rs After	Shute	lown					
Amb	ient Tempe	rature .			°F		Rela	tive H	ımid	ity_			_ %		Weat	her _					
qu	ipment Tem	peratu	re					I	Iow (Obtai	ined					- 500 %					
nstr	rument							— _F	tange	e					Volt	age _					
ľest	Data:							-													
Mir	nutes	0.25	0.5	1	0	2	.0	3.0	T	4.0		5.	0	6.0	1	7.0	8.0	g	0.0	10).0
Re	ading								1		4										
Co	rrection			32	- 1	L.,	_		+	_	_	_	\rightarrow		١.,	_		1	_		_
	Infinity 10,000																				
	5,000 3,000 2,000	\pm							+				\Box								
	1,000								\pm												
	800 -				3														1 2		-
	400	-		9	- 57		\perp		-		\perp	-	\Box			-	9-1-1				
	300	\pm					\forall		†		\forall		\forall		\Box						
	200 150						\blacksquare		1	-	\dashv	-	\Box		\Box	_			\perp		
	100	++						-	+	+	+	+	+			+	3 23			\vdash	Ц
E	80 60				1												3 1				
Megohms	40	+	-	-	+		+-		+	+	+	+	+	++	\vdash	-		+	-	\vdash	_
Me	30								$^{+}$	+		+	\forall		†						
	20 15			2	-				-	-	\exists	-	\blacksquare								_
	10	-							+	+	\pm	+	+	_		_					
	6 4																				
	2												\Box								
		-							+				+								
	0.6																				
	0.2	++					+		+		-	+	+								
	0.06	\blacksquare		- 3	-																
52.12	0.02 ± Zero																				
	rization No.										_		Test	ed by							_
Kem	arks:																				_

FIGURE F.29 Typical Insulation Resistance Test Record for Rotating Machinery.

F.30

Figure F.30 shows a typical motor test information form.

		SHEET NO. OF
CUSTOMER	DATE	TEST REPORT NO
DDRESS	AIR TEMP.	REL HUMIDITY
WNER/USER DDRESS	DATE LAST INSPECTION	SM39D-STV1+30-2-0
QUIPMENT LOCATION	LAST INSPECTION	
WNER IDENTIFICATION		
MOTO	OR TEST INFORMATION	
and the second	ISTANCE TEST RESULTS AT	CHONGRO, NACHON SCHOOL SPECIES
30 SEC.	ISTANCE TEST RESULTS AT	VDC IN MEGONINS
60 SEC.		
10 MIN.		
D.A. P.I.		
III/GTZ)	OTOD.	
A. NAME & IDENTIFYING MARK OF MO	JTOH	-
B. MANUFACTURER C. MODEL NUMBER	()	
D. SERIAL NUMBER	-	
E. RPM	· ·	
F. FRAME SIZE		
G. CODE LETTER	9 2	-
H. HORSEPOWER	55 55	
I. NAMEPLATE VOLTAGE & PHASE	<u> </u>	
J. NAMEPLATE AMPS	· ·	
K. ACTUAL VOLTAGE	· ·	
L. ACTUAL AMPS	<u> </u>	
M. STARTER MANUFACTURER	4	
N. STARTER SIZE	×	
O. HEATER SIZE, CATALOG # & AMP	()	
P. MANUFACTURER OF DUAL ELEME	NT	
Q. AMP RATING OF FUSE	₹ <u></u>	
R. POWER FACTOR	·	
S. SERVICE FACTOR	18 7	-
REMARKS:		
3		
TEST EQUIPMENT USED		SERIAL #
SUBMITTED BY		

FIGURE F.30 Typical Motor Test Information Form.

F.31

Figure F.31 shows a typical ground system resistance test report.

CUSTOMER			VATE					SI	HEET NO	NO.		OF	_
ADDRESS		A	JA TE	EMP.					HOUEGT	DITY			
OWNER/USER		0	ATE	LASTIN	ISPECT	ION		- 25	L. HOWI	0111			
ADDRESS		L	AST	INSPEC	TION RE	EPOR'	T NO.						
OCATION													_
SEASON	1												
SOIL TYPE			П										1
SOIL CONDITION			4								ш		il.
SINGLE ROD DEPTH													1
MULTIPLE RODS (Y/N)													
LONGEST DIMENSION			П										1
BURIED WIRE/STRIPS (Y/N)				ШШ									
LONGEST DIMENSION			Н										
DIST. TO AUX. ELECTRODE											Ш		
OTHER													
			П										1
													i
AUXILIARY POTENT	IAL ELECTRODE		Ħ										
DISTANCE (FEET)	RESISTANCE (OHMS)												
			П										i
													i
		ш.	ш			-	ш		4				4
													1
													1
			П										1
													1
			н			ш	ш						4
	4												ı
													ă.
			П										i
	0 0		ш				ш				ш		4
			н										ı
			Ħ				mi				Ħ		1
	<u> </u>												
							RESIS	TANCE	(OHMS)				
													_
REMARKS													
REMARKS													_
REMARKS													_
SUBMITTED BY			EQU	IPMENT	USED								

FIGURE F.31 Typical Ground System Resistance Test Report.

F.32

Figure F.32 shows a typical ground test inspection report for health care facilities.

USTOMER DDRESS			DATE	Ρ,	SHEET NO. PROJECT NO.	
WNER/USE	R		DATE LA	ST INSPECTION	— REL. HUMIDITY	
DDRESS				PECTION REPORT		
	LOCATION					
WNER IDEN	ITIFICATION		- 0			
GENERA CRITICA	IM TEST INTERVAL: AL CARE: 12 MONT LL CARE: 6 MONT CATIONS: 12 MONT	HS HS		*NOTE: MAXIMUM READ 20mv NEW CONSTRUCT 40mv CRITICAL EXISTING 500mv GENERAL CARE E 0.1 ohm NEW CONSTRUC 0.2 ohn QUIET GROUNDS	ON CONSTRUCTION EXISTING CONSTRUCTI CTION	
ROOM NO.	DESCRIPTION		VOLTAGE	MEASUREMENT	IMPEDANCE M	EASUREMENT
HOOM NO.	(C) CRITICAL	NUMBER OF	NUMBER OF		NUMBER OF	MAX READING
	(G) GENERAL	RECEPTABLES	OTHER	MAX READING (MILLIVOLTS)	RECEPTACLES	(OHMS)
			 		 	
			I			
	$\overline{}$					
			1 1			
			 			
			1			
			1 1			
	$\overline{}$		 			
			1 1			
			 		 	
	-		_			
			+			
			-			
			1 1		l .	l
			 			
	-		 			
			I			
			1 1			I
	\vdash					
					1	
EMARKS _						
USTOMER	REPRESENTATIVE			TITLE		
				RIAL#		
EST EQUIP	MENT		SI	HIAL #		

FIGURE F.32 Typical Ground Test Inspection Report— Health Care Facilities.

F.33

Figure F.33 shows a typical line isolation monitor test data report for health care facilities.

CUSTOMER ADDRESS OWNER/USE ADDRESS EQUIPMENT LOCATION CIRCUIT	DATE	CTION °C	PROJECT NO REL. HUMIDI	ΤΥ
	INSTRUMENT OR METER UNDER TES'	т		
TYPE	MANUFACTURER	- Not	TACE	
	MODEL NO.			
	STYLE NO.			
	TEST OPERATIONS JIPMENT NEEDED FOR THIS SECTION. RE BE TESTS. PATIENT MUST NOT BE SUBJECT			
		AS FO	JND	AS LEFT
1. AUDIBLE AND VISUAL	SELF TEST			
INDICATORS	SILENCE (MUTE)			
A CHECK ADDRODDIATE DOVIE	RED			
 CHECK APPROPRIATE BOX IF INDICATOR IS OPERATIONAL 	GREEN			
	YELLOW			
3. LIM	MANUFACTURER'S SPECIFIED ALARM POINT METER READING		MA MA	M/
TEST OPERATIONS USING TEST E TEST SET		AS FOU	IND	AS LEFT
	ONE mA			
4. LINE LEAKAGE	TWO mA			
TO GROUND	THREE mA			
	FOUR mA			
	FIVE mA			
	NAL AND CIRCUITS LABELED?			
5. ARE ALL BREAKERS OPERATIO				
5. ARE ALL BREAKERS OPERATION REMARKS				

FIGURE F.33 Typical Line Isolation Monitor Test Data Report — Health Care Facilities.

F.34

Figure F.34 shows a typical torque value record.

DDRESS QUIPMENT LOCATION WNER IDENTIFICATION		AIR TEN	IP. AST INSPE	CTION	PROJEC REL HUI	IO. OF OF T NO. OF MIDITY	
ite Performed:		Torqu Verifi	med By: se Marked: ed By:	Yes	No	5 Color:	
		the same of the sa	cation Marke	nd: Yes	□ N	o Color:	
unufacturer:	Model:	Арри	oved By:		1777-77		
	TC	RQUE AND V	ERIFICA	TION			
No. of	Ven	dor Specification	_	A Specification	T	Torque	T
No. Items Item Description/Location	NO.	FT-LB / IN-LB	NO.	FT-LB / IN-LB	NO.	FT-LB / IN-LB	Note
	1150.	FT-LB	100	FT-LB	11101	FT-IB	+
		IN-I B		IN-LB		IN-LB	1_
		FT-LB		FT-LB	-	FT-LB	-
+ +	2	IN-LB FT-LB		IN-LB FT-LB	+	IN-LB FT-LB	+
		IN-LB		IN-LB	1	IN-LB	1
		FT-LB		FT-LB		FT-LB	
		IN-I B		IN-I R	1—	IN-LB.	1
		FT-LB IN-LB	1	FT-LB IN-LB	-	FT-LB IN-LB	1
		FT-LB		FT-LB		FT-LB	
		IN-LB	1	IN-LB	1	IN-LB	1_
1 1		FT-LB		FT-LB	-	FT-LB	4
	_	IN-LB	-	IN-LB	+	IN-LB	₩
		FT-LB JNJ B	1 1	FT-LB INJ B	1	FT-LB INLB	1
		FT-LB		FT-LB		FT-LB	
	_	IN-LB		IN-LB.	-	IN-LB	-
		FT-LB	-	FT-LB	-	FT-LB	-
		IN-LB FT-LB		IN-LB FT-LB	1	IN-LB FT-LB	1
		IN-LB		IN-LB		IN-LB	1_
		FT-LB		FT-LB	-	FT-LB	-
	+	IN-LB FT-LB		IN-LB FT-LB	1	IN-LB FT-LB	+
1 1		IN-LB	1	IN-LB	1	IN-LB	1
5 .		FT-LB		FT-LB		FT-LB	
		11.50		IN CD	T	IN-LB	1
		IN-LB	-	IN-LB	_		_
				FT-LB IN-LB		FT-LB IN-LB	T

FIGURE F.34 Typical Torque Value Record.

F.35

Figure F.35 shows a typical main power energization checklist.

PLANT/BUILDING CIRCUIT DESIGNATION	IT FED	FROM DATE	141.27 f	6. C	IRCUIT F	ED TO	9. TES	7. DATE	E (YYYY	MMDD)	
CIRCUIT DESIGNATION	T FED	DATE	AND ELEC			1012/11/20	9. TES	7. DAT	Ξ (ΥΥΥΥ	MMDD)	
8. TEST EQUIPMENT TYPE/BRAND AND CALIBRE SECTION 10. CHECK POINT COMPONENT INSPECTION/TESTING COMPLETED WIRING VISUAL VERIFICATION	RATION	DATE SUAL A	455000.30			1012/11/20		TED BY	E (YYYY	MMDD)	
10. CHECK POINT COMPONENT INSPECTION/TESTING COMPLETED WIRING VISUAL VERIFICATION	B – VI	SUAL A	455000.30	TRICAL	./MECH/	ANICAL II					
10. CHECK POINT COMPONENT INSPECTION/TESTING COMPLETED WIRING VISUAL VERIFICATION	110/0188		455000.30	TRICAL	./MECH/	ANICAL I	NSPECTION	ON			
CHECK POINT COMPONENT INSPECTION/TESTING COMPLETED WIRING VISUAL VERIFICATION	CONI	D*	NOTES			18557 o 27655 d		1001010			
WIRING VISUAL VERIFICATION						CHECK	POINT		CON	D.	NOTES
					FY SWIT	CHGEAR	CONTROL				************
VERIFY WIRING DIAGRAMS				CHE	CK FOR I	WORKING	CLEARAN	(CE			
				ENE	RGIZE AN	ND TEST S	SYSTEM				
VERIFY CIRCUIT SWITCHER CONTROL FUNCTIONS		T			NSFORM CTIONS	ER TRANS	SFER CON	TROL			
ENERGIZE AND TEST SYSTEM FOR ALL CONDITIONS					CK FOR I		SOUNDS	AFTER			
CHECK BUSHING OR TERMINALS							F TRANSF	ORMER NCLOSURE			
CHECK FOR REMOVAL OF PAINT OR HEAVY DENTS						NORMAL//	ABNORMA N	L			
27		SECT	ION C - E				1 00 1 10 1 00				
11. MEASUREMENT DESCRIPTION			VOLTA		TAGE AN	D CONNE	NI MEAS	JREMENTS CU	RRENT*		
	A-N	B-N	C-N	A-B	B-C	C-A	Α	В	С	N	G
	A-N	B-N	C-N	A-B	B-C	C-A	A	В	С	N	G
-	A-N	B-N	C-N	A-B	B-C	C-A	A	В	С	N:	G
	A-N	B-N	C-N	A-B	B-C	C-A	A	В	С	N	G
	A-N	B-N	C-N	A-B	B-C	C-A	A	В	С	N	G

FIGURE F.35 Typical Main Power Energization Checklist.

Annex G NEMA Configurations

This annex is not a part of the recommendations of this NFPA document but is included for informational purposes only.

G.1

Figure G.1 shows the typical NEMA configurations for general-purpose nonlocking plugs and receptacles.

DES	SCRIPTION	WA	15 AN	IPERE	20 AM	IPERE	30 AN	MPERE	50 AN	IPERE	60 AM	PERE
877.00	TIM HON	NEWA	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG
2-WIRE	125V	1	1 Dw	POLAFIZEED POLAFI		S-SPP MATES WITH S-SSM		A TOP THE PROPERTY OF THE PROP				
	250V	2		On the second	2-20H	2-20P	2-30 H	11 %				
2-POLE	277V AC	3										
d	600V	4								1		
	125V	5	2 (1 m)	(M.) gr. 9	808-5 0 10 0 10 0 10 0 10 0 10 0 10 0 10 0 1	(N. 1)	2 0 2 W	(0.0 mg/s)	S O O	(MI 1) G		
	125V	5ALT			SALT-20A							
111	250V	6	FE COMPANY	@ G	6-20H	6-20P	H08.00	() %	8 (1 0) E (2 0)	(1 1) S		
2-POLE 3-WIRE GROUNDING	250V	6ALT			GALT-20R							
OLE 3	277V AC	7	1 (m)	€ 1 de	9 88 88 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	400 P	7-30R	(M. 1) G. G. G. G. G. G. G. G. G. G. G. G. G.	H (0,0)	(0.) Sign		
2-P	347V AC	24	24-15R	(a)	24-20A	S4-200	HO C C C C C C C C C C C C C C C C C C C	() () () () () () () () () ()	24-50H	4 digital 1		
8	480V AC	8	~ _	2	2	0 8		~	~)	0		
	600V AC	9				-				-	4	
	125 / 250V	10			10-20H	4, 10 - 20 P	FI WE	V V G	HO-60H	(N) dis		
3-WIRE			E (=A)	(=) B	700		-00	~	- CDS			
	3 Ø 250V	11	H21-15	(1) the	11-20R	(1) g	# (%)	A 10 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	1 100 m	To do do		
3-POLE	3 Ø 480V	12										
	3 Ø 600V	13										
IRE G	125 / 250V	14	7 (A)	£ 1 7 7 7 7 1 1 1 1 1 1 1 1 1 1 1 1 1 1	14-20H	The state of the s	A CAN		4 (1 m)	(k 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	2 ((14-600 P
3-POLE 4-WIRE GROUNDING	3 Ø 250V	15	\(\frac{\partial}{a}\) \(\frac{\partial}{a}\	(£ 2) 00 00 00 00 00 00 00 00 00 00 00 00 00	15-20R	15-20P	100 - 30 H	(x 2) 25 45 45 45 45 45 45 45 45 45 45 45 45 45	15-60H	(1x 2 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	15-BOH	400-51
GROL	3 Ø 480V	16				4						
e	3 Ø 600V	17										
4-WIRE	3 Ø Y 120 / 280V	18	₹ (10 kg)	(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	16-20R	Tix si des es	S (IZ X)	(x z) de	80 (2 (1) x	(1x x 3) 87 87 87 87 87 87 87 87 87 87 87 87 87	18-60H	15 - 80P
	3 Ø Y 277 / 480V	19										
4-POLE	3 Ø Y 347/600V	20										
WIRE	3 Ø Y 120 / 208V	21										
4-POLE 5-WIRE GROUNDING	3 Ø Y 277 / 480V	22										
4-POI	3 Ø Y 347/600V	23										
300	lank snaces rese											

Note: Blank spaces reserved for future configurations.

FIGURE G.1 NEMA Configurations for General-Purpose Nonlocking Plugs and Receptacles.

G.2

Figure G.2 shows the typical NEMA configurations for locking plugs and receptacles.

DES	SCRIPTION	NEWA	15 AM	IPERE	20 AM	PERE	30 AM	PERE	50 AM	PERE	60 AM	PERE
DE	JOHIF HON	N S	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG
E.	125V	1	L1-15H									
2-WIRE	250V	2			L2-20H	() doz-21						
2-POLE	277V AC	3										
2-1	600V	4										
	125V	5	HST-0-15H	(A) (2)	800 Ga	Ca) do	7 (m)	() g	\$ (%)		E Second	<u>م</u>
ш	250V	6	Le-15A	(1) di	Le-20 H	(C - 20 P	HOC. 9. J.	Ta dos - 9	Hos-son	Co de se de	Le eon H	(1) dop-9
POLE 3-WIRE GROUNDING	277V AC	7	L 7-15H 1	(3) H	1. Pos-7. J	-7-20P	HOR (IN)	(7-30P	7-600 A	Carlos Carlos	Hoo Co	
2-POLE	347V AC	24			24-20B	24-20p			1			
7,0	480V AC	8			H02-6 (16 %)	(10 mm)	# (10 X)	(Tol) og	10	() B B B B B B B B B B B B B B B B B B	Ca Libera	
	600V AC	9			HOS-G	(a) ag	H06-91	(1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	\$ (D)	() a	1 (P)	
Ę.	125 / 250V	10			The son	(m) of 100 of 10	Tip-30B	(F) 000-01-01-01-01-01-01-01-01-01-01-01-01-	-			
3-WIRE	3 Ø 250V	-11	# (S)	(1) H	1-808-1- (\$2)	(1) Sept = 1	# (k, ?)	(1 - 30 PL				
3-POLE	3 Ø 480V	12			12-30 AX	12-20p	12-30R	12-30P				
6	3 Ø 600V	13					Hot-di.	13-30P				
#	125 / 250V	14			14-20H	(***) 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4	L 14-30R	(M) 4-30.P	4 (5)	(1) A 1	TA-BUH	(14-60P
POLE 4-WIRE GROUNDING	3 Ø 250V	15			100 (100 No. XVI)	(1/2 of) (2/2 of)	15-30H	(1.76-30P)	15-60A	Te-sop	L 15-60AL	(1) days
POLE	3 Ø 480V	16			16-20H	(tvZof) on one	25 (% X/s)	(1,5 e.3 gp		(1) day of 1	L 16-60H	Carpon I
ė,	3 Ø 600V	17					17-308 (17-308	(NZ of S	LT7-608	O STATE OF THE STA	17-808-17- 803-77-	(C)
4-WIRE	3 Ø Y 120 / 208V	18			HD-20H	(1) de (1	L 18-30R (1-18-30R (1-18-30R	(1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0				
	3 Ø Y 277 / 480V	19			11-209 11-209	(19-20 P	L 19-30H L	(T) (T) (T) (T)				
4-POLE	3 Ø Y 347/600V	20			L 20-2dH	(1, M) (1, M)	L 20-308	(1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0				
G G	3 Ø Y 120 / 208V	21			J-SSI-SSI		L 21-30H L) (151-300PL	## (G)	(E)-sal	H (2)	(C) day
POLE 5-WIRE GROUNDING	3 Ø Y 277 / 480V	22			1 - 2 - 2 - 2 - 2 - 2 - 2 - 2 - 2 - 2 -		1 22-30FL				0	0
POL GRO	3 Ø Y 347/600V	23			-23-23H		1. 23-20H					

Note: Blank spaces reserved for future configurations.

FIGURE G.2 NEMA Configurations for Locking Plugs and Receptacles.

Annex H Long-Term Maintenance Guidelines

This annex is not a part of the recommendations of this NFPA document but is included for informational purposes only.

H.1 Introduction.

This annex deals specifically with the maintenance of equipment that, by nature of its application, necessitates long intervals between shutdowns. It should be stressed that environmental or operating conditions of a specific installation should be considered and might dictate a different frequency of maintenance than suggested in this annex.

Maintenance guidelines are presented in Sections H.2 through H.4.

H.2 Medium-Voltage Equipment.

Table H.2(a) through Table H.2(k) address equipment that should be considered items with long-term maintenance intervals, including the following equipment and techniques:

- (1) Cables, terminations, and connections
- (2) Liquid-filled transformers
- (3) Dry-type transformers
- (4) Metal-clad switchgear
- (5) Circuit breakers
- (6) Metal-enclosed switches
- (7) Buses and bus ducts
- (8) Protective relays
- (9) Automatic transfer control equipment
- (10) Circuit breaker overcurrent trip devices
- (11) Fuses
- (12) Lightning arresters

Table H.2(a) Medium-Voltage Equipment, Cables, Terminations, and Connections: Equipment Subject to Long Intervals Between Shutdowns — Electrical Dist

Туре	Inspections, Maintenance, and Tests	Typical Frequen
Solid Dielectric (Chapter 10)	Inspections (while energized) (10.2.1):	Annually.
	Conduit entrances (10.4).	Observe for deformation d bends with radius less than
	Poles and supports.	Same as above.

Table H.2(a) Medium-Voltage Equipment, Cables, Terminations, and Connections: Equipment Subject to Long Intervals Between Shutdowns — Electrical Dist

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Binder tape terminations (aerial cables) (10.3).	Same as above.
	Ends of trays (10.4).	Same as above.
	Splices (10.2.3).	Same as above.
	Terminations (stress cones and potheads) (10.2.3, 10.2.5).	Same as above plus dirt, to chipped porcelain, shield to visible), and adequate clea metal parts.
	Fireproofing (where required) (10.2.3).	Observe for continuity.
	Loading.	Make certain loads are wit
Varnished Cambric Lead	Inspections (while energized) (10.2.1):	
Covered and Paper Insulated Lead Covered	Same as above.	Same as above.
	Lead sheath (10.2.3).	Observe for cracks or cold indicated by leakage of cal
All Types	Major Maintenance and Test (deenergized) (7.3, 10.2.1):	3–6 years.
	Complete inspection same as above.	Same as above.
	Clean and inspect porcelain portions of potheads (10.2.5, 8.1.2.1):	For cracks and chips.
	Clean and inspect stress cones and leakage sections (10.2.3, 8.2.13).	For soundness of stress co X-ray or disassemble, if s For surface tracking.
	Check plastic jackets for longitudinal shrinkage from splices and terminations.	Jacket shrinkage might ha tapes or stress cones.
	Check integrity of shield grounding (10.2.3).	Observe ground connectio Suggest checking electrica tape.
	Check general condition of cable (10.2.3).	Does insulating material a damaged by overheating?
	Observe connectors for overheating (10.2.5, 8.1.3, 8.2.14).	Discoloration or oxidation problem. Check bolts for tightness, connectors are insulated w charring of tape is indicati connector, caused by loose Infrared survey while cond
	Test cable insulation with high potential dc (10.5, 20.9.1).	loaded to at least 40 perce beneficial to detect overhe good-quality infrared scan Disconnect cables from eq corona protection on ends not being tested. Record leakage current in voltage level. Record temperature and re

Table H.2(a) Medium-Voltage Equipment, Cables, Terminations, and Connections: Equipment Subject to Long Intervals Between Shutdowns — Electrical Dist

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Determine condition of cable insulation (20.9.2.6).	Interpret test results, consinumber of taps, shape of n curve, temperature and rel
	Reconnect cables to equipment.	Tighten connectors adequa
	Aluminum conductors.	Make certain that connect correctly installed.
		Use Belleville washers wh lugs to equipment.
		Advisable to determine co
		using microhmmeter or de under test load conditions

Table H.2(b) Medium-Voltage Equipment, Liquid-Filled Transformers: Maintenance of to Long Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequen
Oil and Askarel Sealed Tank, Conservator and Gas Sealed Systems (Chapter 9)	Inspections (while energized):	
	Top liquid temperature (9.2.4).	Weekly to monthly. Record findings. Current temperature and Reset drag needle; 80°C (permitted.
	Head space pressure (sealed-tank type) (9.2.5.2).	Should vary under change temperature. If gauge remains at zero, § exists in tank head space, to breathe and allows entre
	Nitrogen pressure (pressurized-tank type).	Check nitrogen bottle pres transformer head space.
	Liquid level in tanks (9.2.5.1).	Should be between min. a
	Liquid levels in oil-filled bushings (if so equipped).	Should be between min. a
	Evidence of oil leaks (9.2.7.4).	From tanks, fittings, cooli
	Automatic load tap changer mechanism.	General condition; note ar operations.
	Tests (while energized):	
	Oil — draw sample and test in laboratory (9.2.8).	Annually for normal servi for rectifier and arc furnac Dielectric strength, acidit low, determine water cont
	Askarel — draw sample and test in laboratory	Same frequency as for oil.

Table H.2(b) Medium-Voltage Equipment, Liquid-Filled Transformers: Maintenance of to Long Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections Maintanance and Tests	Typical Frequen
Туре	Inspections, Maintenance, and Tests (9.2.6). (Observe EFA regulations for handling and	Dielectric strength, acidity
	disposal.)	condition. If dielectric is l
		content.
	Comprehensive liquid tests.	3–6 years.
		In addition to above, tests
		water content, refractive ii
		(77°F) and 100°C (212°F)
		(askarel), and inclusion of
	Dissolved gas content in liquid of transformers in	6 years or as conditions in
	critical service or in questionable condition as	Draw sample in special co
	might be indicated by above liquid tests (20.16).	laboratory.
		Spectrophotometer test de
		certain abnormal condition
		A series of tests on sampl
		time might be necessary to
		condition exists and to det
		Devices are available for
		transformers to collect gas
		combustibility to determin problem exists.
	Major Maintenance and Testing (deenergized)	Three to six years or more
	(7.3, 9.2.7.2):	indicate.
	Make above tests well in advance of scheduled	Determine possible proble
	shutdown.	
	Inspect pressure-relief diaphragm for cracks or	Replace if defective.
	holes or mechanical pressure-relief device for	Possible cause of pressure
	proper operation (9.2.7.3). Pressure test with dry nitrogen the head space areas	transformers remaining at Apply liquid along seams,
	of sealed-type transformers if pressure gauge remains at zero and pressure relief device is satisfactory.	Make necessary repairs.
	Clean bushings and inspect surfaces (9.2.7.3).	Consider application of sil
		contaminated areas; shoul
		reapplied at maximum 2-y
		year.
	Inspect load tap changer mechanism and contact.	Follow manufacturer's ins
		and number of operations
	D: 1	replacements.
	Paint tank as required.	Wire-brush and prime rus
	Check ground system connections (9.2.7.5).	In each tap position; as an major repairs.
	Perform turns ratio test (20.11).	
	Perform power factor tests (disconnect from equipment) (20.9.3.2).	Windings, bushings, and i
	Consider making winding/tap changer resistance tests.	Use microhmmeter in eacl abnormally high contact re

Table H.2(b) Medium-Voltage Equipment, Liquid-Filled Transformers: Maintenance of to Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Make undercover inspection through manholes (provide positive protection to prevent entrance of	6-year frequency should derectifier and arc furnace tr
	moisture) (9.2.7.6). This inspection might not be necessary at 6-year intervals unless tests indicate problems.	Inspect for moisture or rus horizontal surfaces under (insofar as possible), trash bracing, and loose connec
	Consider high-potential dc tests (9.2.9.4) (20.5 through 20.8).	dc in excess of 34 kV can increase leakage currents.
	If above inspections and/or tests indicate possible internal problems, it might be necessary to transport transformer to shop to untank the core and coil assembly for cleaning, inspecting, testing and making repairs as found necessary.	_
	Filtering insulating liquid (deenergize transformer and ground windings).	Remove moisture by heating through cellulose filters, and dehydrator. Thoroughly clean hose and before switching from oil (9.2.1.2). Observe ANSI C disposal of askarel.
	Re-refining insulating oil (deenergize transformer and ground windings).	Frequency as required. Filter through fuller's earl compounds and acids. Add dibutylparacresol to inhibitors.
	Refilling transformer with insulating liquid (9.2.7.7, 9.2.7.8).	Refill under partial vacuul designed. Follow manufacturer's ins Always test insulating liqu (min. 26 kV for oil) prior transformer and pump thraskarel).
	Special Testing (deenergized):	To test phase-to-phase and (200 Hz to 300 Hz for 720
	Induced potential test (9.2.9.2).	Proof test.
	ac high potential test (20.9.3.1)	Proof test.

Table H.2(c) Medium-Voltage Equipment, Dry-Type Transformers: Maintenance of Ec Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
Ventilated (indoors) (9.1.9.3)	Inspections (while energized):	Weekly to monthly Recor

Table H.2(c) Medium-Voltage Equipment, Dry-Type Transformers: Maintenance of Ec Long Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequen
	Operating temperature (9.3.4).	Current temperature and I Reset drag needle. 150°C (302°F) is max. or transformers rated 80°C (220°C (428°F) is max. or transformers rated 150°C
	Cleanliness of screens located over or behind ventilation louvers in enclosure (9.3.6).	Clogged screens restrict verificerease operating temperassembly. If dust and lint are on outs screens without deenergize and lint are on inside, trandeenergized and enclosure
	Ventilating fan operation (if so equipped).	screens. Check operation of fans w "Manual" position.
	Room ventilation (9.3.6)	Do not operate fans contin "Manual"; leave in "Autor detectors will operate fans specified levels. Also check alarm contacts excessive temperature levels. Adequate ventilation system air. Air streams should no vent louvers in transforme so would restrict ventilatic cause overheating.
	Evidence of condensation and water leaks in room (9.3.6).	Inspect top of transformer Make necessary correction
	Major Maintenance (deenergized) (7.3, 9.3.7):	3–6 years, more often if re
	Remove enclosure covers and clean vent louvers and screens (9.3.7.2).	
	Clean insulators, core, and windings (9.3.7.2, 9.3.7.3).	Use bottle of dry nitrogen hose and small nozzle to t pressure to 207 kPa (30 ps Clean with soft bristle bru
	Inspect following components:	
	Interphase barriers (9.3.7.2).	Should not touch winding
	Wedges and clamping rings (9.3.7.2).	For proper clamping of wi required.
	Primary and secondary buses and conductors (8.1.3, 9.3.7.2).	For tightness of connection
	Porcelain insulators (8.1.2).	For chips, cracks, and wat
	Insulating materials (8.2.10 through 8.2.14, 9.3.7.2).	For surface tracking.

Table H.2(c) Medium-Voltage Equipment, Dry-Type Transformers: Maintenance of Ec Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Windings (8.2.14, 9.3.7.2, 9.3.7.3).	For damage to insulation,
	Tap connections (9.3.7.2).	For tightness and correctn voltage.
	Core assembly.	For loose or dislocated lan general overheating, and f strap, which is <i>only</i> place permitted to be grounded.
	Ventilating channels between core and windings and between windings (9.3.7.3).	For clogging with lint, dus spacers, etc., in place duri required to allow proper a
	Space heaters for proper operation.	Used to keep windings dry deenergized.
	Temperature detectors.	For proper location and pr
	Temperature indicators.	For accuracy and operation at proper temperatures.
	Cooling fans.	For free turning and prope
	Testing (deenergized) (20.1, 20.4 through 20.8):	3–6 years, more often if re
	Turns-ratio test (20.11).	In each tap position as an major repairs.
	Polarization index (PI) test (9.2.9.1 through 9.2.9.3, 20.9).	Use 1000-volt insulation r Low PI results often indica investigate cause and satis before making high potent transformer to service.
	High-potential dc test (9.2.9.4, 20.9.2.6).	Record leakage currents in temperature, and relative l
	Special Testing (deenergized):	
	Induced potential test (9.2.9.2).	To test phase-to-phase and (200 Hz to 300 Hz for 720 Proof test.
	ac high-potential test (20.9.3.1).	Proof test.

Table H.2(d) Medium-Voltage Equipment, Metal-Clad Switchgear: Maintenance of Eq Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
Indoor (Chapter 8)	Inspections (while energized):	3–6 months.
	Open external doors and inspect components:	
	Fronts of circuit breakers.	Record number of operation
	Protective and control relays (8.8.7).	Wiring and connections, r
	Auxiliary devices, wiring, and terminal blocks (8.4.6).	Proper indicating lights sh

Table H.2(d) Medium-Voltage Equipment, Metal-Clad Switchgear: Maintenance of Eq Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Space heaters (8.2.7).	Operate continuously to or malfunction of thermostat ammeters in heater supply load current of heaters on
		all are operating.
	Ventilation (8.2.8).	Ventilation louvers should
	Insulators and insulating materials (8.2.10 through 8.2.14).	
	Cable terminations (10.1 through 10.4).	Observe stress cones and l for cleanliness and trackin
	Batteries (8.9.4).	
	Also inspect for following conditions:	
	Loading.	Record loads.
	Cleanliness (8.2.9).	Moderate amount of dry n harmful.
	Dryness (8.2.5, 8.2.6).	Evidence of condensation
	Rodents and reptiles (8.2.4).	
	Overheating of parts (8.2.14).	Discoloration or oxidation problem.
	Tracking on insulating surfaces (8.2.13).	Take necessary corrective
	Major Maintenance or Overhaul:	3–6 years, depending on a
	Deenergize (7.3). Verify that no parts of the power or control circuitry are energized by "back feed" from alternate power or control sources. Completely clean, inspect, tighten, and adjust all components (8.4.1):	Follow manufacturer's ma
	Structure and enclosure (8.2.3, 8.2.4).	Wire-brush and prime rus Finish paint.
	Ventilating louvers and air filters (8.2.8).	Clean or replace filters as
	Buses, splices, and bolts (8.1.3, 8.2.14).	Check bolts for manufactu If inaccessible, check insu compound box over bus sr due to loose bolts, etc.
	Insulators and insulating materials (8.1.2, 8.2.10 through 8.2.14).	Clean and inspect for surf
	Circuit breakers (8.4 through 8.6).	Refer to oil and air circuit
	Breaker disconnect studs and finger clusters (8.4.3.7).	Lubricate, unless manufac that they should not be lub
	Drawout breaker racking mechanisms (8.1.7). Cable terminations and connections (10.1 through 10.4).	Alignment and ease of ope Clean and inspect for surf
	,	Check connections for tigl
	Meters (8.8.7).	Test for accuracy.
	Controls, interlocks, and closing power rectifiers (8.8.8).	Make functional tests. Check voltages.

Table H.2(d) Medium-Voltage Equipment, Metal-Clad Switchgear: Maintenance of Eq Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
	CTs, PTs, and control power transformers (8.8.5).	
	Fuseclips and fuses (15.2).	Check clips for adequate s
	Grounding (8.1.5, 8.8.9).	Proper fusing.
	Components and conditions in above block.	Make necessary repairs.
	Testing (7.3, Chapter 20):	3-6 years, depending on a
	Test buses, breakers, PTs, CTs, and cables with high-potential dc.	Record leakage currents in 20.9.2.6).
	Calibrate and test protective relays (20.10.3).	Refer to protective relays s
	Functionally trip breakers with relays (20.10.3.2).	Preferably, inject test curr circuits.
	Test conductivity of aluminum cable connections (20.12) (8.1.3).	Use microhmmeter or detect load conditions.
	Test wiring for controls, meters and protective relays for insulation resistance (20.9.2.3).	1000-volt de for control w 500-volt de for meters and
Outdoor	Inspections (while energized):	1–3 months.
	Same as for indoor gear except:	
	Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6).	Rust spots on underside of condensate.
	Special emphasis on space heater operation (8.2.7).	
	Ventilating louvers and air filters (8.2.8).	Clean or replace air filters
	Major Maintenance or Overhaul:	3 years, more often if cond
	Deenergize (7.3). Verify that no parts of the	Follow manufacturer's ma
	power or control circuitry are energized by	
	"back feed" from alternate power or control	
	sources. Same as for indoor gear.	
	Testing (7.3, Chapter 20):	
	Same as for indoor gear.	3 years, more often if cond

Table H.2(e) Medium-Voltage Equipment, Circuit Breakers: Maintenance of Equipme Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
**	Inspection and Maintenance (withdrawn from switchgear and deenergized) (7.3):	Max. of 3 years or at man number of operations sinc whichever occurs first. Immediately after breaker serious fault. Follow manufacturer's mabreaker is stored-energy cl manufacturer's safety prec closing springs are discharblocked to prevent persona from contacts and mechan
		breaker (8.4.1.1).

Table H.2(e) Medium-Voltage Equipment, Circuit Breakers: Maintenance of Equipme Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Remove arc chutes. Inspect, adjust and clean where	
	necessary:	
	Main contacts (8.4.3).	For pitting, spring pressur overtravel, or wipe; adjust
	Arcing contacts (8.4.3.2).	For alignment, overtravel, erosion; adjust or replace:
	Moving parts and linkages (8.4.5.1 through 8.4.5.3).	For freedom of movement
	Closing mechanism (8.4.5).	For quick and positive clo
	Tripping mechanism (8.4.5).	For freedom of movement breaker contacts.
	Interlocks and safety devices (8.4.6.2, 8.8.8).	Functionally test to prove
	Primary disconnect finger clusters (8.4.3.7).	For proper adjustment and unless manufacturer's inst should not be lubricated.
	Secondary disconnect contacts (8.4.3.7).	For alignment and spring Lubricate.
	Closing and trip coils (8.4.6.1).	General condition and evi-
	Spring charging motor and mechanism (stored energy type) (8.4.6.1).	Proper operation. Oil leak
	Shunt trip device (8.4.6.1).	For freedom of movement
	Undervoltage trip device.	For freedom of movement
	Auxiliary contacts.	For proper operation with breaker.
	Closing (x and y) relays (electrically operated breakers).	Contact erosion. Dress or
	Current transformers (8.2.10, 8.8.7.2).	General condition. Check
	Connection bolts (11.3.1 through 11.3.3).	Check for tightness.
	Structure or frame.	For proper alignment and
	Fuses and mountings (15.1, 15.2).	General condition and tigl
	Frame-grounding device.	Connect before and discon
	Position indicators (8.4.6.2, 8.8.6.2).	For proper operation.
	Auxiliary wiring.	General condition and tigl
	Arc chutes (8.4.4).	For broken parts, missing of metal spatter and burning Snuffer screens should be Repair or replace as neces
	Operation counter.	For proper operation. Record number of operation
	Insulators and insulating materials (8.2.10, 8.2.12, 8.2.13, 8.4.2).	For cracks, breaks, corona overheating.
	Breaker auxiliary devices (8.4.6).	Make necessary repairs.

Table H.2(e) Medium-Voltage Equipment, Circuit Breakers: Maintenance of Equipme Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequen
	Testing (withdrawn from switchgear and	Max. of 3 years, etc., same
	deenergized) (7.3, 20.5 through 20.8):	High-potential test each m
	Insulation (20.9.1, 20.9.2.3, 20.9.2.4, 20.9.2.6).	open and all other main co
		grounded. Record results.
		megohmmeter on auxiliar associated wiring.
	Contact conductivity or resistance (20.12).	Use microhmmeter or dete test load conditions.
	System Testing (breaker installed):	_
	Electrically operated breaker.	After above maintenance a satisfactorily completed, in breaker in proper switchga "Test" position, or when to provided, connect breaker with cord and plug provid Operate closing control de breaker closes and latches operations. Operate trip control devica trips open in a reliable ma Functionally test all electr devices. After satisfactorily passing
		breaker can be racked into and placed in normal serv
Oil-immersed, Drawout Type (8.6)	Inspection and Maintenance (withdrawn from switchgear and deenergized) (7.3):	Max. of 3 years or at man number of operations sinc maintenance, whichever o immediately after breaker serious fault. Follow manufacturer's ma
	Lower oil tank. Inspect, adjust, and clean where necessary:	
	Main contacts (8.6.3).	For pitting, spring pressur overtravel, or wipe. Adjust or replace accordin
	Arc-quenching assemblies (8.6.4).	For alignment, overtravel, erosion.
	Moving parts and linkages (8.4.5.1 through 8.4.5.3).	Adjust or replace accordin For freedom of movement
	Closing mechanism (8.4.5).	For quick and positive clo
	Tripping mechanism (8.4.5).	For freedom of movement breaker contacts.
	Interlocks and safety devices (8.4.6.2, 8.8.8).	Functionally test to prove
	Primary disconnect finger clusters (8.4.3.7).	For proper adjustment and

Table H.2(e) Medium-Voltage Equipment, Circuit Breakers: Maintenance of Equipme Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequen
		Lubricate, unless manufac
		that they should not be lut
	Secondary (control) disconnect contacts (8.4.3.7).	For alignment and spring
		Lubricate.
	Closing and trip coils (8.4.6.1).	General condition and evi
	Shunt trip device (8.4.6.1).	For freedom of movement
	Undervoltage trip device.	For freedom of movement
	Bushings (8.6.2.1).	Cracked and chipped porc
	A 21	Condition of surfaces.
	Auxiliary contacts.	For proper operation with breaker.
	Closing (x and y) relays (electrically operated	Contact erosion.
	breakers).	Contact crosson.
	,	Dress or replace as require
	Current transformers (8.2.10, 8.8.7.2).	General condition. Check
	Connection bolts (11.3.1 through 11.3.3).	Check for tightness.
	Inspection and Maintenance (withdrawn from	_
	switchgear and deenergized):	
	Structure or frame.	For proper alignment and
	Fuses and mountings (15.1, 15.2).	General condition and tigl
	Frame-grounding device.	Connect before and discor
	Position indicators (8.4.6.2, 8.8.6.2).	For proper operation.
	Auxiliary devices (8.6.6).	
	Auxiliary wiring.	General condition and tigl
	Arc quenchers (8.6.4).	For broken and missing pa
		spatter and burning on int
		Repair or replace as neces
	Operation counter.	For proper operation.
	In1-4	Record number of operation
	Insulators and insulating materials (8.6.2.1).	For cracks, breaks, and ch
	Insulating oil (8.6.2.2 through 8.6.2.4, 9.2.8, 20.17).	acidity.
		Make necessary repairs.
	Testing (withdrawn from switchgear and	Max. of 3 years, etc., same
	deenergized) (7.3, 20.5 through 20.8):	wax. or 5 years, etc., sum
	Insulation (20.9.1, 20.9.2.3, 20.9.2.4, 20.9.2.6).	High-potential test each m
		open and all other main co
		grounded. Use 1000-volt i
		on auxiliary devices and c wiring.
		Test oil for dielectric stren
		breaker mechanism. Filter
		(8.6.2.4).
	Contact conductivity or resistance (20.12).	Use microhmmeter or deta
		test load conditions.

Table H.2(e) Medium-Voltage Equipment, Circuit Breakers: Maintenance of Equipme Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequer
	dc high-potential and/or power-factor test (20.9.1, 20.9.2, 20.9.3.2).	Record results.
	Overcurrent trip devices (electromechanical type) on breakers so equipped (8.4.6.4).	Pass specified currents fro coils of trip devices to ope time limits according to m designed time-current coor Adjust trip devices as requiresults.
		Test set should be equippe accuracy of instantaneous Record results.
	System Testing (breaker installed):	
	Electrically operated breaker.	After above maintenance a satisfactorily completed, coperated breaker to switch wiring by means of the test Operate closing control debreaker closes and latches operations.
		Operate trip control device trips open in a reliable ma Functionally test all electric devices.
		After satisfactorily passing breaker can be placed in in into the "Connected" posiservice.
Air-break and Oil-immersed, Fixed Type (8.4.1.2)	Maintenance and Testing: Open all disconnect switches to isolate main contacts from electrical supply and load wiring (7.3). Verify that no parts of the power or control circuitry are energized by "back feed" from alternate power or control sources. Open	Same frequency as similar preceding blocks. Use adequate safety proced
	closing and tripping power switches to deenergize	
	control devices and wiring (8.1.4.1, 8.1.4.3). Perform maintenance and test work in accordance with applicable portions of preceding sections.	Follow manufacturer's ins
	Close switches to restore closing and tripping power. Functionally test controls and protective relays for proper operation of breaker.	
Pneumatically and Hydraulically Operated Type (Usually Fixed, Outdoor Type)	Inspection (while energized):	Monthly. Follow manufac
(Usuany Fixed, Outdoor Type)	Check for proper air or hydraulic pressure in storage tank for closing mechanism.	

Table H.2(e) Medium-Voltage Equipment, Circuit Breakers: Maintenance of Equipme Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Operate motor-driven compressor.	
	Check interior of control cabinet for evidence of	
	water leaks and condensation (8.2.5, 8.2.6).	
	Check space heater for proper operation (8.2.6,	
	8.2.7).	
	Check machined parts of mechanism for rust spots.	Should be covered with th
	Check operation counter.	Record number of operation
	Check control battery (8.8.4).	
	Check oil gauges on high-voltage bushings and breaker tanks (8.6.6).	For proper oil level.
	Porcelain bushings (8.6.2.1).	For cracks, chips, and brea
	Insulating oil (8.6.2.2 through 8.6.2.4, 9.2.8, 20.17)	For level, general conditionacidity.
	Check oil level in compressor crank case.	
	Inspect control wiring for evidence of damage.	
	Inspect breaker tanks for evidence of oil leaks.	
	Inspect breaker tanks for rust spots.	Make necessary repairs.
	Maintenance and Testing (while deenergized)	Follow manufacturer's ins
	(7.3):	procedures.
	Same as applicable portions of preceding sections plus:	
	Complete check of pneumatic or hydraulic operating mechanism.	
	Power factor test.	Record results.
	On some breakers, timing of contact closing and opening might be required (20.14).	Use circuit breaker time—t timer.
	Measure contact resistance.	
	Measure contact penetration.	
	Measure resistance of internal resistors.	
	Check lever systems, stops, and adjustments.	
	Check dashpot or shock absorber operation.	
	Inspect contact interrupting plates.	
	Inspect gaskets, joints, conduit, and tank fittings.	
	Check pressure switch operation.	
	Check for loose bolts, tightness of joints, etc.	Make necessary repairs.
Vacuum and Gas-Filled Type (8.5)	Inspections, Maintenance, and Testing:	<u> </u>
	Follow manufacturer's instructions.	Under certain conditions, cause x-ray emission from manufacturer's recommen

Table H.2(e) Medium-Voltage Equipment, Circuit Breakers: Maintenance of Equipment Intervals Between Shutdowns — Electrical Distribution

Type Inspections, Maintenance, and Tests Typical Frequen

Table H.2(f) Medium-Voltage Equipment, Metal-Enclosed Switches: Maintenance of Education Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
ndoor Air (8.1.4, 8.3, 8.7)	Inspections:	6 months.
	Observe components visible through inspection	
	windows (if provided):	
	Switch contacts (8.2.14).	
	Auxiliary devices, wiring, and terminal blocks.	
	Fuseclips and fuses (15.2).	
	Insulators and insulating materials (8.1.2, 8.2.10	
	through 8.2.14).	
	Space heaters (8.2.7).	Operate continuously to or
		malfunction of thermostat
		Consider installation of ar
		circuits to monitor full loa each circuit to ensure that
	Cable terminations (10.1 through 10.4).	Observe stress cones and 1
	Cable terminations (10.1 tillough 10.4).	for cleanliness and trackin
	Adequate grounding (8.1.5, 8.8.9).	
	Also observe conditions:	
	Loading.	Record loads if gear is equ
	Cleanliness (8.2.9).	Moderate amount of dry n harmful.
	Dryness (8.2.6).	Evidence of condensation
	Rodents and reptiles.	
	Overheating of parts (8.2.14).	Discoloration or oxidation problem. Infrared survey r good-quality infrared scan should be loaded to at leas while being scanned.
	Tracking on insulating surfaces (8.2.13).	Make necessary repairs.
	Major Maintenance or Overhaul:	3–6 years, depending on a
	Deenergize (7.3). Verify that no parts of the	Follow manufacturer's ma
	power or control circuitry are energized by	
	"back feed" from alternate power or control sources. Completely clean, inspect, tighten and adjust all components (8.4.1):	
	Structure and enclosure (8.2.3, 8.2.4).	Wire-brush and prime rus Finish paint.
	Ventilating louvers and air filters (8.2.8).	Clean or replace air filters
	Buses, splices, and bolts (8.1.3, 8.2.14).	Check bolts for manufactu
	· · · · · · · · · · · · · · · · · · ·	

Table H.2(f) Medium-Voltage Equipment, Metal-Enclosed Switches: Maintenance of Education Long Intervals Between Shutdowns — Electrical Distribution

Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Outdoor Air Inspections (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7).	Type	Inspections, Maintenance, and Tests	Typical Frequen
Main switch blades and contacts (8.2.14, 8.4.1, 8.4.3). Arcing switch blades and contacts (8.2.14, 8.4.1, 8.4.3). Arcing switch blades and contacts (8.4.3.2). Arc chutes or interrupter devices (8.4.4). Switch-operating mechanism and linkage (8.4.5). Switch/fuse door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential de. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Outdoor Air Inspections (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness Clean or replace air filters			
Main switch blades and contacts (8.2.14, 8.4.1, 8.4.3). Arcing switch blades and contacts (8.2.14, 8.4.1, 4.4.3). Arcing switch blades and contacts (8.4.3.2). Arc chutes or interrupter devices (8.4.4). Switch-operating mechanism and linkage (8.4.5). Switch fluse door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuscelips and fluses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays (20.10 ovel to megohmmeter for the test load conditions (20.12 follow-ovel megohmmeter for 500-volt megohmeter for 500-volt megohmet			
Main switch blades and contacts (8.2.14, 8.4.1, 8.4.3). Arcing switch blades and contacts (8.2.14, 8.4.1, 8.4.3). Arcing switch blades and contacts (8.4.3.2). Arc chutes or interrupter devices (8.4.4). Switch-operating mechanism and linkage (8.4.5). Switch/fuse door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test uses, breakers, PTs, CTs, and cables with high-potential de. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Functions (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (Clean or replace air filters (Clean or replace air filters).			
8.4.3). Arcing switch blades and contacts (8.4.3.2). Arc chutes or interrupter devices (8.4.4). Switch-operating mechanism and linkage (8.4.5). Switch/fuse door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential de. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Outdoor Air Inspections (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Lubricate. Dress or replace if are ero Do not lubricate. Check for acquiate contact Lubricate. Adjust for adequate contact and acquire sequence. Lubricate. Adjust for adequate contact and acquire sequence. Lubricate. Adjust for adequate contact and acquire sequence. Lubricate. Adjust for adequate contact and acquire sequence. Lubricat		Main and 1.11. 1.1. and and (0.2.14. 0.4.1	=
Arcing switch blades and contacts (8.4.3.2). Arc chutes or interrupter devices (8.4.4). Arc chutes or interrupter devices (8.4.4). Switch-operating mechanism and linkage (8.4.5). Switch/fuse door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Toutdoor Air Inspections (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Lubricate. Check for condition, align operation. Adjust for adequate contact. Lubricate. Lubricate. Check for condition, align operation. Adjust for adequate contact. Lubricate. Lubricate. Check for accontact. Lubricate. Check for accontact. Adjust for adequate contact. Lubricate. Check for accontact. Attact by should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut chart that they should not be lut c			
Arc chutes or interrupter devices (8.4.4). Arc chutes or interrupter devices (8.4.4). Arc chutes or interrupter devices (8.4.4). Switch-operating mechanism and linkage (8.4.5). Switch/fuse door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential de. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays of insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Clean or replace if are cro. Do hock cluster. Check for acdurate. Lubricate. Adjust for adequate contact. Lubricate. Adjust for adequate contact. Lubricate. Adjust for adequate contacture that they should not be lub clusters (if that they should not be lub clusters (if that they should not be lub clusters (if that they should not be lub clusters (if that they should not be lub clusters (if that they should not be lub clusters (if that they should not be lub clusters (if that they should not be lub clusters (if that they should not be lub clear and inspect for surfactive connections of the tatt they should not be lub clear and its proper fuse rating. Clean and inspect for surfactive connections (s.8.5). Make necessar		8.4.3).	
Arc chutes or interrupter devices (8.4.4). Arc chutes or interrupter devices (8.4.4). Switch-operating mechanism and linkage (8.4.5). Switch/fuse door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuscelips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Outdoor Air Inspections (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).		A : (0.422)	
Are chutes or interrupter devices (8.4.4). Switch-operating mechanism and linkage (8.4.5). Lubricate. Switch fisce door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuscelips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Cutdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Check for condition, alignoperation. Adjust for adequate contact Lubricate. Make functional check for sequence. Lubricate. Make functional check for sequence. Lubricate. Make functional check for sequence. Lubricate. Make functional check for sequence. Check for conditions (20.1 end). Clean and inspect for surficence nergitate, unless manufact they should not be lut Clean and inspect for surficence nergitate, unless manufaction sequence. Lubricate. Make functional check for sequence. Check for conditions (20.1 end). It betwicate, unless manufaction for sequence. Check for conditions (8.5.5). Adjust for adequate sproper for surficence of sequence. Sale for individual tops and a sequence. Lubricate. Make necessary repairs. 3-6 years, depending on a george ty		Arcing switch blades and contacts (8.4.3.2).	-
Switch-operating mechanism and linkage (8.4.5). Switch/fuse door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Dutdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).		A 1	
Switch/fuse door and other interlocks (8.8.8). Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Dutdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Lubricate. Make functional check for sequence. Lubricate, make functional that they should not be lut that they s			operation.
Switch disconnect studs and finger clusters (if switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Dutdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).		Switch-operating mechanism and linkage (8.4.5).	
switch is drawout type) (8.4.3.7). Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential de. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wire for controls (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).		Switch/fuse door and other interlocks (8.8.8).	Make functional check for sequence.
Cable terminations and connections (10.1 through 10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Toutdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Clean and inspect for surficonnections for tightness. Check for accuracy. Check clips for dequate s Proper fuse rating. Make necessary repairs. 3-6 years, depending on a Record leakage currents in 20.9.2.6). Refer to protective relays set test load conditions (20.12.1). Use microhmmeter of det test load conditions (20.12.1). 1000-volt megohmmeter for 500-volt megohmme		•	Lubricate, unless manufac
10.4). Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential de. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Tungections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Check for accuracy. Check clips for adequate s Proper fuse rating. Check clips for adequate s Proper fuse rating. Check clips for adequate s Proper fuse rating. Check clips for adequate s Proper fuse rating. Check clips for adequate s Proper fuse rating. Check clips for adequate s Proper fuse rating. Check clips for adequate s Proper fuse rating. Make necessary repairs. 3–6 years, depending on a Record leakage currents in 20.9.2.6). Refer to protective relays s 120.9.2.6. Refer to protective relays s 120.9.2. Record leakage currents in 20.9.2.6. Record leakage currents in 20.9.2.6. Record leak			
Meters (8.8.7). Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Dutdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).		· · · · · · · · · · · · · · · · · · ·	-
Fuseclips and fuses (15.2). Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays (20.12). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Dutdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Check clips for adequate sproper fuse rating. Proper fuse rating. Check clips for adequate sproper fuse rating. Make necessary repairs. 3–6 years, depending on a Record leakage currents in 20.9.2.6). Use microhmmeter or detectest load conditions (20.12 10.3). 10.9 make necessary repairs. 10.9 cyears, depending on a Record leakage currents in 20.9.2.6). Use microhmmeter or detectest load conditions (20.12 10.3). 10.9 make necessary repairs. 10.9 cyears, depending on a Record leakage currents in 20.9.2.6). 10.9 cyears, depending on a Record leakage currents in 20.9.2.6). 10.9 make necessary repairs. 10.9 cyears, depending on a Record leakage currents in 20.9.2.6). 10.9 cyears, depending on a Record leakage currents in 20.9.2.6). 10.9 make necessary repairs. 10.9 cyears, depending on a Record leakage currents in 20.9.2.6). 10.9 cyears, depending on a 20.9.2.6). 10.9 cyears, depending on 20.9.2.6). 10.9 cyears, depending on 20.9.2.6. 10.9 cyears, de			_
Grounding (8.1.5, 8.8.9). Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Use microhmmeter or dete test load conditions (20.12 test load conditions (20.12 test) for insulation resistance (20.9.2.3). Dutdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).			-
Potential and control power transformers (8.8.5). Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Use microhmmeter or dete test load conditions (20.12 test load conditions (20.12 test load conditions) Tinspections (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Current transformers (8.8.5). Make necessary repairs. Record leakage currents in 20.9.2.6). Refer to protective relays (20.9.2.6). Refer to protective relays (20.10.3.2). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). 1000-volt megohmmeter for 1000-volt mego		1 , , ,	
Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Use microhmmeter or dete test load conditions (20.12 test load conditions (20.12 test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Outdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Clean or replace air filters (20.9.2.3).		Grounding (8.1.5, 8.8.9).	
Current transformers (8.8.5). Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Use microhmmeter or dete test load conditions (20.12 test load conditions (20.12 test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Undoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Clean or replace air filters (20.9.2.3).		Potential and control power transformers (8.8.5).	
Auxiliary devices (8.4.6). Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays (20.10 door Air lood-volt megohmmeter for selays for insulation resistance (20.9.2.3). Use microhmmeter or dete test load conditions (20.12 door Air lood-volt megohmmeter for 500-volt megohmmeter for 1-3 months. Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).			
Components and conditions in preceding blocks. Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Use microhmmeter or dete test load conditions (20.12 1000-volt megohmmeter for relays for insulation resistance (20.9.2.3). Dutdoor Air Inspections (while energized): Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).		Auxiliary devices (8.4.6).	
Testing (7.3, Chapter 20): Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Tinspections (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).		Components and conditions in preceding blocks.	Make necessary repairs.
Test buses, breakers, PTs, CTs, and cables with high-potential dc. Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Use microhmmeter or detective test load conditions (20.12). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Use microhmmeter or detective test load conditions (20.12). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Use microhmmeter or detective test load conditions (20.12). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Use microhmmeter or detective test load conditions (20.12). Test wiring for controls, meters, and protective relays (20.10.3.2). Test wiring for controls, meters, and protective test load conditions (20.12). Test wiring for controls, meters, and protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum test load conditions (20.12). Test wiring for controls, meters, and protective relays (20.10.3.2). Test wiring for controls, meters, and protective relays (20.10.3.2). Test wiring for controls, meters, and protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum test load conditions (20.12). Test wiring for controls, meters, and protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum test load conditions (20.12). Test wiring for controls, meters, and protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum test load conditions (20.12). Test wiring for controls, meters, and protective relays (20.10.3.2). Test wiring for controls, meters, and protective relays (20.10.3.2). Test wiring for controls, meters, and protective relays (20.10.3.2). Test wiring for controls, meters, and pr			3–6 years, depending on a
Calibrate and test protective relays (20.10.3). Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulations (20.12 for insulations (20.12 for insulations (20.13 for insulations (20.13 for insulations (20.13 for insulations (20.13 for insulations (20.14 for insulations (20.15 for insulations (20.		• • •	Record leakage currents in
Functionally open electrically operated type switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective for 1000-volt megohmmeter for 500-volt megohmmeter for 500-volt megohmmeter for 1000-volt megoh		high-potential dc.	20.9.2.6).
switches with protective relays (20.10.3.2). Test conductivity of switch contacts and aluminum cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). Test wiring for controls, meters, and protective for loop-volt megohmmeter for some stance (20.9.2.3). Test wiring for controls, meters, and protective for loop-volt megohmmeter for some stance (20.9.2.3). Test wiring for controls, meters, and protective for loop-volt megohmmeter for some stance (20.9.2.3). Test wiring for controls, meters, and protective for loop-volt megohmmeter for some stance (20.9.2.3). Test wiring for controls, meters, and protective for loop-volt megohmmeter for loop-v		Calibrate and test protective relays (20.10.3).	Refer to protective relays s
cable connections. Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). 1000-volt megohmmeter for the solution for insulation resistance (20.9.2.3). 1-3 months. Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Clean or replace air filters (8.2.8).		7 2 72	
Test wiring for controls, meters, and protective relays for insulation resistance (20.9.2.3). 1-3 months. Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Clean or replace air filters		The state of the s	Use microhmmeter or detetest load conditions (20.12
Outdoor Air Inspections (while energized): Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).		Test wiring for controls, meters, and protective	1000-volt megohmmeter f
Same as for indoor gear except: Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).	Outdoor Air		
Special emphasis on evidence of condensation and water leaks (8.2.3, 8.2.5, 8.2.6). Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8). Rust spots on underside of condensate. Condensate. Clean or replace air filters			
Special emphasis on space heater operation (8.2.7). Ventilating louvers and air filters for cleanliness (8.2.8).		Special emphasis on evidence of condensation and	Rust spots on underside of condensate.
Ventilating louvers and air filters for cleanliness Clean or replace air filters (8.2.8).			
		Ventilating louvers and air filters for cleanliness	Clean or replace air filters
			3 years more often if conc

Table H.2(f) Medium-Voltage Equipment, Metal-Enclosed Switches: Maintenance of Education Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Freque
	Deenergize (7.3). Verify that no parts of the	
	power or control circuitry are energized by	
	"back feed" from alternate power or control	
	sources. Same as for indoor gear (8.4.1).	
	Testing (7.3, Chapter 20):	
	Same as for indoor gear.	3 years, more often if con-
Oil and Gas	Exterior Inspection:	Annually.
	Check oil level and gas pressure in switch.	
	Take oil or gas sample.	Test as recommended by a
	Check for evidence of leakage.	Repair if necessary.
	Inspect exterior of switch for corrosion.	Paint as required.
	Major Maintenance or Overhaul:	After 500 operations.
	Deenergize (7.3, 8.4.1). Verify that no parts of th	e
	power or control circuitry are energized by	
	"back feed" from alternate power or control	
	sources.	
	Drain or vent insulating medium.	
	Check gaskets for cracks and flexibility.	Replace where necessary.
	Check cable entrances for mechanical damage or tracking.	
	Inspect all mechanical and electrical connections	
	for tightness.	
	Clean switch interior.	
	Refill.	Use new or reconditioned
	Testing:	
	Actuate each operating mechanism.	Check for proper operation
	Test with dc high-potential tester.	

Table H.2(g) Medium-Voltage Equipment, Buses and Bus Ducts: Maintenance of Equip Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
Indoor	Inspections (while energized):	3–6 months.
	Open buses:	
	Condition of bus conductors (8.1.3).	
	Evidence of overheated joints (8.1.3, 8.2.14).	Discoloration or oxidation problem. Infrared survey r good-quality infrared scan should be loaded to at leas while being scanned.
	Condition of insulators and insulated sleeving (8.1.2).	Cleanliness and breaks.

Table H.2(g) Medium-Voltage Equipment, Buses and Bus Ducts: Maintenance of Equip **Intervals Between Shutdowns — Electrical Distribution**

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Clearance from grounded metal surfaces and above	2
	floor.	
	Guards and caution signs.	Where required.
	Loading.	Make certain load is withi
	Bus duct (covers in place):	
	Condition of enclosures (8.2.3).	
	Evidence of water drips on enclosure.	Investigate and correct im
	Adequate grounding (8.1.5, 8.8.9).	
	Loading.	Make certain load is withi
	Maintenance and Testing (deenergized):	1–6 years, depending on c
	Deenergize (7.3). Verify that no parts of the	
	power or control circuitry are energized by	
	"back feed" from alternate power or control	
	sources.	
	Open buses:	
	Check for evidence of overheated joints (8.1.3, 8.2.14).	Discoloration or oxidation possible problem. Charred insulated joint indicates pr
	Check connection bolts for tightness where not covered (8.1.3).	Torque according to manuinstructions.
	Clean and inspect insulators (8.1.2).	For cracks, chips, breaks,
	Clean and inspect insulated sleeving over buses, if provided.	For cracks, breaks, proper tracking.
	dc high-potential test (20.9).	Record results.
	Bus duct (covers removed):	
	Clean and check condition of sleeving over buses (8.2.1.3, 8.2.10 through 8.2.13).	For cracks, breaks, proper surface tracking.
	•	Make necessary repairs.
	Clean and inspect insulators (8.1.2).	For cracks, chips, breaks ε burning.
	Check for evidence of internal moisture (8.2.6).	From water leaks or conde
	Check for proper ventilation (8.2.8).	All ventilating louvers sho
	Check for proper space heater operation (8.2.7).	Operate continuously to or malfunction of thermostat ammeters in heater supply load current of heaters on all are operating. The amr check of heater operation
	Check space heater wiring.	For proper clearances from
	Check condition of enclosure (8.2.3).	Close all unused holes.
	Check grounding connections (8.1.5).	For tightness.
	Check integrity of barriers.	<i>5</i>
	de high-potential test (20.9).	Record results.
utdoor	Inspections (while energized):	3–6 months.

Open buses:

Table H.2(g) Medium-Voltage Equipment, Buses and Bus Ducts: Maintenance of Equip Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Same as for indoor buses	
	Bus duct (covers in place):	
	Condition of enclosure (8.2.3):	Enclosure should be weath
	Adequate grounding (8.1.5, 8.8.9).	
	Loading.	Make certain load is withi
	Maintenance and Testing (deenergized):	3–6 years.
	Deenergize (7.3). Verify that no parts of the	
	power or control circuitry are energized by	
	"back feed" from alternate power or control	
	sources.	
	Open buses: Same as for indoor buses.	
	Bus duct (covers removed): Same as for indoor bus duct plus following:	
	Check condition of cover gaskets (8.2.5, 8.2.6).	For deterioration, breaks,
	Check operation of space heaters (8.2.7).	Operate continuously to or malfunction of thermostat ammeters in heater supply load current of heaters on all are operating. The amr check of heater operation
	Check enclosure ventilating louvers (8.2.8).	Clean or replace air filters Check for ability to exclude and metal rods.

Table H.2(h) Medium-Voltage Equipment, Protective Relays: Maintenance of Equipment Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
Induction Disk Relays	Inspection, Cleaning, Maintenance, Calibration,	2–3 years, more often whe
(drawout type) (20.10.3)	and Testing (while associated circuit breaker is	corrosion, vibration, or wi
	closed and supplying load):	present.
		Follow manufacturer's instand test set.
	Brush or blow dust off top edge of relay cover and remove cover.	Use caution to not acciden to close, which would trip and shut down load.
	Remove relay disconnect device or open relay trip	Remove only one relay fro
	circuit switch and then open supply circuit switches in relay case.	Leave other relays in servi for circuit.
	Release locking mechanisms, withdraw relay from case, and place on workbench in clean area adjacent to test equipment.	Handle with care to avoid mechanism.

Table H.2(h) Medium-Voltage Equipment, Protective Relays: Maintenance of Equipment Intervals Between Shutdowns — Electrical Distribution

Clean mechanism with soft, long-bristle brush or very light air pressure from hose. Tighten all screws and nuts. Inspect for broken or defective connections. Inspect closely for dust and iron filings clinging to magnet and in air gap, which might restrict rotation of disk. Inspect for correct alignment of disk and proper clearances from mechanism, magnet, etc. Burnish contact surfaces and inspect contacts for burning and pitting. Burnish contact surfaces and inspect contacts for burning and pitting. Inspect disk restraint spring. Record "as-found" time lever setting and Do not overtighten. Repair defective connectic Thoroughly clean to remo make necessary adjustmer clearances so disk does no magnet. Use relay contact burnishi Replace badly burned or p For proper shape, tension, overheating due to excessi same. Check to detect if disk bin	Туре	Inspections, Maintenance, and Tests	Typical Frequen
Tighten all screws and nuts. Inspect for broken or defective connections. Inspect closely for dust and iron filings clinging to magnet and in air gap, which might restrict rotation of disk. Inspect for correct alignment of disk and proper clearances from mechanism, magnet, etc. Burnish contact surfaces and inspect contacts for burning and pitting. Burnish contact surfaces and inspect contacts for burning and pitting. Inspect disk restraint spring. Do not overtighten. Repair defective connectic Thoroughly clean to remo make necessary adjustment clearances so disk does no magnet. Use relay contact burnishi Replace badly burned or p For proper shape, tension, overheating due to excessi same.		·	
Inspect closely for dust and iron filings clinging to magnet and in air gap, which might restrict rotation of disk. Inspect for correct alignment of disk and proper clearances from mechanism, magnet, etc. Burnish contact surfaces and inspect contacts for burning and pitting. Burnish contact surfaces and inspect contacts for burning and pitting. Inspect disk restraint spring. Thoroughly clean to remo Make necessary adjustmer clearances so disk does no magnet. Use relay contact burnishi Replace badly burned or p For proper shape, tension, overheating due to excessi same.		Tighten all screws and nuts. Inspect for broken or	-
magnet and in air gap, which might restrict rotation of disk. Inspect for correct alignment of disk and proper clearances from mechanism, magnet, etc. Burnish contact surfaces and inspect contacts for burning and pitting. Inspect disk restraint spring. Make necessary adjustmer clearances so disk does no magnet. Use relay contact burnishi Replace badly burned or p For proper shape, tension, overheating due to excessi same.			=
clearances from mechanism, magnet, etc. Burnish contact surfaces and inspect contacts for burning and pitting. Inspect disk restraint spring. Clearances so disk does no magnet. Use relay contact burnishi Replace badly burned or p For proper shape, tension, overheating due to excessi same.		magnet and in air gap, which might restrict rotation	Thoroughly clean to remo
Burnish contact surfaces and inspect contacts for burning and pitting. Inspect disk restraint spring. magnet. Use relay contact burnishi Replace badly burned or p For proper shape, tension, overheating due to excessi same.			
burning and pitting. Inspect disk restraint spring. Replace badly burned or p For proper shape, tension, overheating due to excessi same.		clearances from mechanism, magnet, etc.	
Inspect disk restraint spring. For proper shape, tension, overheating due to excessi same.		Burnish contact surfaces and inspect contacts for	Use relay contact burnishi
overheating due to excessi same.		burning and pitting.	Replace badly burned or p
Record "as-found" time lever setting and Check to detect if disk bin		Inspect disk restraint spring.	overheating due to excessi
		Record "as-found" time lever setting and	Check to detect if disk bin
temporarily set time lever adjustment on position Examine spring and conta		· · ·	Examine spring and conta
10. Turn disk with thumb until relay contacts close. Make necessary adjustmer replacements.		10. Turn disk with thumb until relay contacts close.	• •
Release disk and allow it to reset until contact Watch disk movement to c			Watch disk movement to c
bracket is resting against "full-open" stop device. or stops before contact bra "full-open" stop device. If adjustments, repairs, or re		bracket is resting against "full-open" stop device.	"full-open" stop device. If
Reset time lever to "as-found" position or to the Refer to applicable time/ci		Reset time lever to "as-found" position or to the	= -
desired new position, if different one is specified on the applicable coordination or instruction sheet. or setting instructions, where the correct coordination with a downstream protective devices.		desired new position, if different one is specified on	or setting instructions, wh correct coordination with
Check current tap plug for correct position and tightness. Reposition, if necessary, to agree with		tightness. Reposition, if necessary, to agree with	-
setting specified on applicable coordination sheet. If precise relay operation accuracy is required, it For "in-case" testing, cont		If precise relay operation accuracy is required, it	For "in-case" testing, con
might be necessary to test some types of relays in proper type relay test jack			
their own cases in switchgear or in an unwired disconnect contacts, being duplicate case located on workbench. disconnect contacts, being connections in accordance instructions and diagrams		<u> </u>	connections in accordance
If relay is in its own case, disconnected from the swi			If relay is in its own case,
case by means of open swi wiring to only the relay significant.			1
certain that switchgear sid installed to short out the C			certain that switchgear sid
Some relays can be satisfactorily tested outside of case. Place withdrawn relay on connect test leads to prope clips.			connect test leads to prope

Table H.2(h) Medium-Voltage Equipment, Protective Relays: Maintenance of Equipment Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequen
	Select test points from applicable coordination or instruction sheet and calculate amount of current or voltage to be applied to relay operating coil. Adjust test set to apply proper values of test current or voltage.	Consider switchgear PT or proper amount of test curr current through current cc across potential coils.
	Test relay pickup point by applying test set voltage or current (determined from coordination curve) at which disk begins to turn very slowly.	After disk begins to turn s voltage slightly and check rests. Make necessary adjustme Record results.
	Connect desired relay contact to timer circuit of test set. Adjust test set for current or voltage specified to test time contacts of relay. Push "Initiate" button on test set and check actual time required for relay time contacts to close.	When contacts close, test: applied test current or volt will stop.
	Compare actual time with time specified on coordination curve.	If actual time is close enor satisfy the required coordi results and proceed to nex If not, readjust time lever test. Continue until the desired attained.
	If relay is equipped with instantaneous current attachment, adjust test set for current or voltage specified for testing same on coordination sheet. Apply and check accurate timer for time required for instantaneous contacts to close. Adjust instantaneous setting to close contacts at current value specified on coordination sheet. Test seal-in contacts for closing at specified values.	After desired results are of slightly and check that rel value below that specified adjustment and retesting a be required until the close within the allowed toleran
	Check target flags for proper operation each time relay contacts close. Leave all targets in "dropped" position. Record "as-found" and "as-left" settings, test current values and operating results, and maintenance and corrective action taken.	Reset target flags and cheadoes not cause a false oper
	Clean and inspect interior of relay case located in switchgear.	Use soft-bristle brush or st clean air, being careful to contacts or short potential circuit terminals, etc.
	Clean glass or plastic window in relay cover and check target reset mechanism for free movement. Insert relay into its case in switchgear and secure locking devices. Insert connection device or close	Use cleaning materials the Observe that disk does not remove connection device
	switches inside relay case.	trip breaker, investigate re correction.

Table H.2(h) Medium-Voltage Equipment, Protective Relays: Maintenance of Equipment Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
		On relays with individual potential switches and obs rotate before closing trip c
	Replace relay cover and secure fastenings. Operate target reset mechanism to determine that targets reset properly.	
	Seal relay cover to discourage unauthorized entry.	
Induction Disk Relays (nondrawout type) (20.10.3)	Inspection, Cleaning, Maintenance, Calibration, and Testing:	Same frequency and remarclays. Make certain that t jack are correct before instreceptacle.
	Same general procedures as for drawout type, except relays cannot be easily removed from their cases and switchgear. A test receptacle is usually provided in the switchgear adjacent to each relay to facilitate testing. A suitable isolating test jack is connected to the relay test set and inserted into the test receptacle. This disconnects the relay contacts from the breaker trip circuit in the switchgear and connects the test set current or potential leads to the proper operating coils in the relay.	
All Types (20.10.3)	General Maintenance and Functional Testing (switchgear deenergized and associated breakers out of service) (7.3):	3–6 years to coincide with maintenance.
	Same as above, except checking condition of wiring and terminals.	Check wiring for condition insulation. Check terminals for tightr
	Functionally test by closing associated circuit breaker and injecting proper value of test current into associated CT circuit or applying proper value of test voltage to associated potential wiring after disconnecting same from its supply PTs.	Check to determine that co close and that associated be determine cause and make

Table H.2(i) Medium-Voltage Equipment, Automatic Transfer Control Equipment: Equipment Subject to Long Intervals Between Shutdowns — Electrical Dist

Type	Inspections, Maintenance, and Tests	Typical Frequen
Indoor and Outdoor	Inspections (while energized):	3–6 months.
	Protective, sensing, timing, and control relays.	For condition of contacts.
	Control wiring and terminals.	General condition.
	Control power batteries (8.8.4).	
	Enclosure (8.2.3, 8.2.5, 8.2.6, 8.2.9).	Cleanliness and evidence

Table H.2(i) Medium-Voltage Equipment, Automatic Transfer Control Equipment: Equipment Subject to Long Intervals Between Shutdowns — Electrical Dist

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Space heaters (outdoor enclosures) (8.2.7).	Operate continuously to or malfunction of thermostat ammeter in heater supply monitoring of full load cur that all are operating. The check of heater operation
	Maintenance and Testing (while deenergized) (7.3): Clean enclosure, relays, control devices, etc. (8.8.7). Clean, inspect, and burnish contacts.	3 years, more often if conc
	Test and calibrate protective relays (20.10.3). Tighten terminals.	Refer to protective relays s
	Test circuits and devices insulation. Maintain enclosure. Functionally test by placing selector switch in manual position and operating control switches to open and close associated circuit breakers.	Use 500-volt dc insulation Wire-brush and prime rus Remove breakers from ser
	Functionally test by placing selector switch in automatic position and simulating conditions that should cause controls to operate associated breakers to effect transfer of power.	Remove breakers from ser

Table H.2(j) Medium-Voltage Equipment, Fuses: Maintenance of Equipment Subject Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
All Types (Chapter 15)	Visual Inspections (while energized):	3–6 months. Binoculars m
		inspect fuses on overhead
	Evidence of contact overheating.	Discoloration or oxidation problem. Infrared survey r good-quality infrared scan should be loaded to at leas while being scanned.
	Cracked, chipped, or broken insulation of fuse	
	barrels and mounting insulators (8.1.2, 15.2.3.1).	
	Cleanliness of insulation surfaces.	
	Overload.	Steady load should not exc
	Proper oil level in barrel of oil-filled type.	
	Maintenance (while deenergized) (7.3, 15.2.2):	3–6 years, depending on a
	Remove fuses from mountings and inspect for:	
	Cleanliness (8.1.2, 15.2.3.1).	Clean insulating and conta
	Cracked, chipped, or broken insulation (15.2.3.1).	Replace defective insulation

Table H.2(j) Medium-Voltage Equipment, Fuses: Maintenance of Equipment Subject Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Evidence of overheating and arc erosion on fuse ferrules and spring clips on mountings (15.2.3.2).	Replace defective parts.
	Tension of spring clips and pressure against contact surfaces (15.2.3.3).	Replace weakened or anne
	Tightness of connections (15.2.3.3).	
	Ampere rating agreement with specified rating (15.1.3).	Disassemble refill-type fus information on refill unit. Check contact surfaces for Reassemble and tighten se
	Interrupting rating adequacy for fault capability of system on which fuse is installed (15.1.3).	
	Testing (while deenergized):	3–6 years.
	Mounting insulators can be dc high-potential tested (20.9.2.6).	High-potential testing of f standard maintenance pra

Table H.2(k) Medium-Voltage Equipment, Lightning Arresters: Maintenance of Equipm Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
All Types	Visual Inspection (while energized):	3–6 months. Binoculars m inspect arresters on overha
	Cleanliness of porcelain surfaces (8.8.2.1).	
	Cracked, chipped, or broken porcelain (8.1.2).	
	Disconnected line or ground connections.	
	Maintenance (while deenergized) (7.3):	3–6 years, depending on a
	Clean porcelain surfaces (8.8.2.1).	Consider application of sil contaminated areas; shoul reapplied at max. 2-year, 1 Wire-brush and prime rus
	Check tightness of line and ground connections.	
	Inspect nameplate data for voltage rating suitability for system voltage and grounding.	
	Clean internal porcelain surfaces of nonsealed arresters if test results indicate contamination present.	
	Testing (while deenergized) (7.3):	3–6 years.
	Power factor test (8.8.2.2).	Record results.
	Test insulation resistance (8.8.2.2).	Record results.
		Compare resistances of all and type, which should be

H.3 Medium- and Low-Voltage Equipment.

Copyright NFPA

The medium- and low-voltage equipment that should be considered items for long-term maintenance intervals are outside overhead electric lines.

Table H.3 shows medium- and low-voltage equipment, outside overhead electric lines; maintenance of equipment subject to long intervals between shutdowns — electrical distribution.

Table H.3 Medium- and Low-Voltage Equipment, Outside Overhead Electric Lines: Equipment Subject to Long Intervals Between Shutdowns — Electrical Disti

Equipment	Inspections, Maintenance, and Tests	Typical Frequen
Wood Poles	Inspect from Ground Level for:	4–6 months.
	Leaning.	Binoculars usually require
	Washout.	
	Splitting.	
	Bird damage.	
	Lightning damage.	
Wood Crossarms	Twisting.	4–6 months.
	Splitting.	Binoculars usually require
	Decay.	
	Loose or missing braces.	
	Loose pins.	
	Surface tracking or burning (8.2.13).	
Insulators and Bushings	Cracks (require careful inspection) (8.1.2.1).	4–6 months. Binoculars usually require
	Chips or bad breaks (8.1.2.1).	Dinoculars assaulty require
	Unscrewed from pin.	
	Leaning at bad angle.	
	Cleanliness (8.1.2.1).	If atmosphere is contamin
	(e.1. 2 .1).	cleaning and coating of po
		with silicone grease might
		be done with lines energiz
		equipment, materials, and
Lightning Arresters	Cracked, chipped, and broken insulators (8.1.2.1,	4–6 months.
	8.8.2.1).	Binoculars usually require
	Ground connection (8.1.5, 8.8.9).	
	Cleanliness.	If atmosphere is contamin
		cleaning and coating of po
		with silicone grease might
		be done with lines energiz equipment, materials, and
Guys and Anchors	Broken strands.	4–6 months.
	Corrosion.	Binoculars usually require
	Looseness and slippage.	· •
	Loose clamps.	
	Excessive tension.	
	Anchor eye above ground.	
G	,	

Table H.3 Medium- and Low-Voltage Equipment, Outside Overhead Electric Lines: Equipment Subject to Long Intervals Between Shutdowns — Electrical Disti

Equipment	Inspections, Maintenance, and Tests	Typical Frequen
	Adequate clearance from conductors.	
	Insulators properly located.	
Conductors	Off insulator and resting on crossarms.	4–6 months.
	Broken strands.	Binoculars usually require
	Blisters or burned spots.	
	Excessive or uneven sagging.	
	Loose connections (8.1.3, 8.2.14, 20.16).	
	Horizontal and vertical clearances.	
	Trees that touch or can fall across conductors.	
Hardware	Looseness.	4–6 months.
	Corrosion.	Binoculars usually require
Switches and Fuses	General condition.	4–6 months.
	Broken arcing horns.	Binoculars are usually req
	Bent or misaligned arms.	
Connections	Evidence of overheating (8.1.3, 8.2.14, 20.16).	4–6 months.
		Binoculars usually require
		Infrared survey can be ber
Ground Wires	Breaks (8.1.5).	Report on all conditions th
	Attachment to pole.	Make necessary repairs.
All Poles	Climbing or Bucket Truck Inspection for	3–5 years.
	Detailed Inspection of Foregoing Items and	Tighten hardware and ma
	Conditions	replacements.
		Wire-brush, prime, and fi
	<u></u>	metal poles.
Wood Poles and Crossarms	Ground-Line Inspection and Preservative	8–10 years in southern are
	Treatment:	10–15 years in northern a
	Sound pole with hammer to 1.83 m (6 ft) above ground.	
	Excavate to 0.46 m–0.51 m (18 in.–20 in.) belowground, wire-brush, inspect for surface decay.	Cut out moderate decay po
	Test bore to determine internal decay; if found,	If not too extensive, inject
	determine extent.	plug holes.
	Apply preservative to external surface from 0.51 m (20 in.) belowgrade to 0.15 m (6 in.) above.	
	Wrap treated area with protective film and backfill excavation.	If decay is excessive, reinf
	Aboveground Inspection and Preservative	
	Treatment:	
	Sound pole with hammer. Bore hollow areas and	
	inject preservative fluid; plug holes.	
	Bore pole 0.15 m (6 in.) above bolts and inject	
	preservative fluid; plug holes.	
	Inspect crossarms for decay pockets.	
	Apply preservative treatment.	Replace crossarm if decay

Table H.3 Medium- and Low-Voltage Equipment, Outside Overhead Electric Lines: Equipment Subject to Long Intervals Between Shutdowns — Electrical Disti

Equipment	Inspections, Maintenance, and Tests	Typical Frequen
	Inspect roof for decay. Apply preservative and cover.	If decay is present but doe crossarm, cut off pole to so preservative, and install co
	Inspect all wood for termites.	Treat if not excessive.
	Tighten pole hardware.	
	Inspect for bird (woodpecker) damage.	Fill holes with compound weakened by damage. We reinforced.
Current-Carrying Parts	Thermal Scanning or Infrared Inspection (20.16):	5–8 years, depending on a
	Scan all conductors, connectors, switches, fuses, etc., with special thermal detecting equipment to locate hot spots caused by loose connectors and bad	Conductors should be load of the rating while being s Use good-quality infrared
	contacts.	Small gun-type thermal de effective at overhead line emuch time.
		Make repairs or replacement results.

H.4 Low-Voltage Equipment.

Table H.4(a) through Table H.4(k) address equipment that should be considered items for long-term maintenance intervals. This includes the following equipment and techniques:

- (1) Low-voltage cables and connections
- (2) Dry-type transformers
- (3) Switchgear
- (4) Drawout-type circuit breakers
- (5) Buses and bus ducts
- (6) Panelboards
- (7) Protective relays
- (8) Automatic transfer control equipment
- (9) Circuit breaker overcurrent trip devices
- (10) Fuses

- (8) Automatic transfer control equipment
- (9) Circuit breaker overcurrent trip devices
- (10) Fuses
- (11) Lighting arresters

Table H.4(a) Low-Voltage Equipment, Low-Voltage Cables and Connections: Mainten Subject to Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
Solid Dielectric, Elastomeric,	Inspections (while energized) (10.2.1):	Annually.
PVC, etc. (Chapter 10)	Conduit entrances (10.4).	Observe for deformation d
		bends with radius less than
	Poles and supports.	Same as above.
	Binder tape terminations (aerial cables) (10.3).	Same as above.
	Ends of trays (10.4).	Same as above.
	Splices (10.2.3).	Same as above.
	Terminal lugs and connectors (10.2.3, 10.2.5).	Observe for evidence of or might be beneficial. Use g scanning equipment. Cond at least 40 percent capacit
		Discoloration or oxidation problem.
	Fireproofing (where required) (10.2.3).	Observe for continuity.
	Loading.	Make certain loads are wi
Varnished Cambric Lead Covered	Inspections (while energized) (10.2.1):	
	Same as preceding block.	Same as preceding block.
	Lead sheath (10.2.3).	Observe for cracks or cold
		indicated by leakage of cal
All Types	Major Maintenance and Testing (deenergized):	3–6 years.
	Deenergize (7.3, 10.2.1). Verify that no parts of	
	the power or control circuitry are energized by	
	"back feed" from alternate power or control sources.	
	Complete inspection same as preceding blocks.	Same as preceding blocks.
	Clean porcelain of potheads (10.2.5) (8.1.2.1).	Inspect for cracks and chij
	Check general condition of cable.	Does insulating material a damaged by overheating?
	Observe lugs and connectors for overheating (8.1.3, 8.2.14, 10.2.5).	Discoloration or oxidation problem.
		Check bolts for tightness.
	Test cable insulation with high-potential dc (10.5, 20.9.1, 20.9.2, 20.9.2.6).	Disconnect cables from eq current in microamperes a Record temperature and re
	As an alternative, test cable insulation resistance (20.9.2.3).	Use 2500-volt or 5000-vol

Table H.4(a) Low-Voltage Equipment, Low-Voltage Cables and Connections: Mainten Subject to Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
		Use Belleville washers wh
		lugs to equipment. Advisa
		conductivity of connection
		to determine voltage drop
		(20.12).

Table H.4(b) Low-Voltage Equipment, Dry-Type Transformers: Maintenance of Equipment Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequen
Ventilated and Nonventilated	Inspections (while energized):	Monthly.
	Operating temperature (9.3.4).	Odor of overheated insular ventilated transformer mig problem.
		150°C (302°F) is max. operansformers rated 80°C (220°C (428°F) is max. operansformers rated 150°C Nonventilated enclosure o
		too hot to touch.
	Cleanliness of ventilation louvers in enclosure and excessive accumulation of dust on top of nonventilated enclosure (9.3.6).	Clogged louvers restrict value increase operating temperassembly.
		Vacuum louvers without d dust and lint are on outsid
		If dust and lint are inside, be deenergized and enclos louvers, etc.
		Clean excessive accumula nonventilated enclosure.
	Area ventilation and temperature (9.3.6).	If ambient temperature extransformer should be deri
	Loading.	Make certain loading is w
	Major Maintenance (deenergized):	3–6 years, more often if re
	Deenergized (7.3) (9.3.7). Verify that no parts of the power or control circuitry are energized by "back feed" from alternate power or control sources.	
	Remove enclosure covers and clean vent louvers (9.3.7.2).	
	Clean insulators, core, and windings (9.3.7.2, 9.3.7.3).	Use bottle of dry air or nit regulator, hose, and small Restrict pressure to 207 kl Clean with soft-bristle bri

Table H.4(b) Low-Voltage Equipment, Dry-Type Transformers: Maintenance of Equipm Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
	Inspect following components:	
	Wedges and clamping rings (9.3.7.2).	For proper clamping of wi Tighten as required.
	Primary and secondary buses and conductors (8.1.3, 9.3.7.2).	For tightness of connection excessive heat.
	Porcelain insulators (8.1.2).	For chips, cracks, and wat
	Insulating materials (8.2.10, 8.2.14, 8.3.7.2).	For breaks and damage du
	Windings (8.2.14, 9.3.7.2, 9.3.7.3).	For damage to insulation,
	Tap connections (9.3.7.2).	For tightness and correctn voltage.
	Core assembly.	For loose or dislocated lan general overheating, and i which is only place where permitted to be grounded.
	Ventilating channels between core and windings and between windings (9.3.7.3).	For clogging with lint, dus spacers, etc., in place duri Clean as required to allow
	Testing (deenergized):	3–6 years. More often if re
	Deenergize (7.3, 9.3.7). Verify that no parts of	
	the power or control circuitry are energized by "back feed" from alternate power or control sources.	
	Polarization index (PI) test (9.2.9.1 through	Use 1000-volt megohmme
	9.2.9.3).	Low PI results often indicaso, investigate cause and s transformer before making returning transformer to so
	High-potential dc test (9.2.9.4, 20.9.2.6).	Record leakage currents ir temperature, and relative l
	As an alternative, test transformer with 1000-volt, 2500-volt, or 5000-volt megohmmeter.	Use 1000, 2500, or 5000 v and voltage rating of trans

Table H.4(c) Low-Voltage Equipment, Switchgear: Maintenance of Equipment Subjective Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequen
Indoor (Chapter 8)	Inspections (while energized):	3–6 months.
	Open doors and inspect components:	Detect overheating.
	Fronts of circuit breakers.	
	Protective and control relays (if used) (8.8.7).	Control wiring, not intern
	Auxiliary devices, wiring, and terminal blocks (8.4.6).	Proper indicating lamps sl
	Insulators and insulating materials (8.1.2, 8.2.10 through 8.2.14).	
	unougn 6.2.14).	

Table H.4(c) Low-Voltage Equipment, Switchgear: Maintenance of Equipment Subjective Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequen
	Cable connections (8.2.14).	Observe for evidence of over might be beneficial. Use go scanning equipment. Concat least 40 percent of capa
	Batteries (if used) (8.8.4). Also inspect for following conditions:	
	Loading.	Record loads.
	<u> </u>	Make certain loads are with breakers and their overcur
	Cleanliness (8.2.9).	Moderate amount of dry n harmful.
	Dryness (8.2.5, 8.2.6).	Evidence of condensation
	Rodents and reptiles (8.2.4).	
	Overheating of parts (8.2.14).	Discoloration or oxidation problem. Infrared survey r good-quality infrared scan Components should be loa of capacity while being scan Make necessary repairs.
	Major Maintenance or Overhaul:	3–6 years, depending on a
	Deenergize (7.3). Verify that no parts of the power or control circuitry are energized by "back feed" from alternate power or control sources. Completely clean, inspect, tighten, and adjust all components (8.4.1).	Follow manufacturer's ins
	Structure and enclosure (8.2.3, 8.2.4).	Wire-brush and prime rus Finish paint.
	Ventilating louvers (8.2.8).	Clean.
	Buses, splices, and bolts (8.1.3, 8.2.14). Insulators and insulating materials (8.1.2, 8.2.10 through 8.2.14).	Check bolts for manufactu Clean and inspect for crac
	Circuit breakers (8.4 through 8.6).	Refer to circuit breaker sea
	Breaker disconnect studs (8.4.3.7).	Inspect for pitting and evil Lubricate, unless manufac that they should not be lub
	Breaker disconnect finger clusters (8.4.3.7).	Inspect for proper adjustm and overheating. Inspect retainer rings for Lubricate, unless manufar that they should not be lub
	Cable connections (8.1.3, 8.2.14, 10.1 through 10.4).	Inspect for evidence of ove tightness. Use Belleville washers on
	Drawout breaker racking mechanisms (8.1.7). Meters (8.8.7).	Alignment and ease of ope Test for accuracy.

Table H.4(c) Low-Voltage Equipment, Switchgear: Maintenance of Equipment Subjective Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequen
	Controls, interlocks, and closing power rectifiers (8.8.8).	Make functional tests. Ch
	CTs, PTs, and control power transformers (8.8.5).	
	Fuse clips and fuses (15.2).	Check clips for adequate s rating.
	Grounding (8.1.5, 8.8.9).	
	Components and conditions in above block.	Make necessary repairs.
	Testing (deenergized) (Chapter 20):	
	Deenergize (7.3). Verify that no parts of the power or control circuitry are energized by "back feed" from alternate power or control sources.	3–6 years, depending on a
	Test buses, breakers, PTs, CTs, wiring, and cables for insulation resistance (20.9.2.3).	2500-volt dc on buses, bre equipment. 1000-volt dc on control wi 500-volt dc on meters and
	Calibrate and test protective relays (20.10.3).	Refer to protective relays s
	Functionally trip breakers with relays (20.10.3.2).	Preferably, inject test currecircuits.
	Calibrate and test overcurrent trip devices (8.4.6.4, 8.4.6.5, 20.10).	Use high-current test equi- operate in accordance with specially prepared time—cu Adjust for proper conform
	Test conductivity of aluminum cable connections (8.1.3, 20.12).	Use microhmmeter or dete test load conditions. Use Belleville washers wh lugs to equipment.
Outdoor (Chapter 8)	Inspections (while energized):	1–3 months.
(. ,	Same as for indoor gear plus:	
	Space heaters (8.2.7).	Operate during cool weath
	Special emphasis on condensation and water leaks (8.2.3, 8.2.5, 8.2.6).	= =
	Air filters behind ventilating louvers (8.2.8).	Clean or replace as require
	Major Maintenance or Overhaul:	3 years, more often if conc
	Deenergize (7.3). Verify that no parts of the power or control circuitry are energized by "back feed" from alternate power or control sources. Same as for indoor gear (8.4.1).	Follow manufacturer's ma
	Testing (deenergized) (Chapter 20): Deenergize (7.3). Verify that no parts of the power or control circuitry are energized by "back feed" from alternate power or control sources. Same as for indoor gear.	3 years, more often if conc

Table H.4(c) Low-Voltage Equipment, Switchgear: Maintenance of Equipment Subject Between Shutdowns — Electrical Distribution

Type Inspections, Maintenance, and Tests Typical Frequen

Table H.4(d) Low-Voltage Equipment, Drawout-Type Circuit Breakers: Maintenance of to Long Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequency and
Air-Break (8.4)	Inspection and Maintenance (withdrawn from	Max. of 3 years or at mar
	switchgear and deenergized):	number of operations sin-
		whichever occurs first. In
		opens to interrupt a serio
		manufacturer's maintenaris stored-energy closing t
		safety precautions, deterr
		are discharged or mechan
		personal injury. Keep har
		and mechanism while tes (8.4.1.1).
	Remove arc chutes. Inspect, adjust, and clean	
	where necessary:	
	Main contacts (8.4.3).	For pitting, spring pressu overtravel, or wipe.
		Adjust or replace accordi
	Arcing contacts (8.4.3.2).	For alignment, overtrave erosion.
		Adjust or replace accordi
	Moving parts and linkages (8.4.5.1 through 8.4.5.3).	For freedom of movemen
	Closing mechanism (8.4.5).	For quick and positive cl
	Tripping mechanism (8.4.5).	For freedom of movemen breaker contacts.
	Interlocks and safety devices (8.4.6.2, 8.8.8).	Functionally test to prove
	Primary disconnect finger clusters (8.4.3.7).	For proper adjustment an
		Lubricate, unless manufa specify that they should r
	Secondary disconnect contacts (8.4.3.7).	For alignment and spring
		Lubricate.
	Closing and trip coils (8.4.6.1).	General condition and ev
	Spring charging motor and mechanism (stored-energy type) (8.4.6.1).	Proper operation. Oil leal
	Shunt trip device (8.4.6.1).	For freedom of movemen
	Undervoltage trip device.	For freedom of movemen
	Anti-single-phase or blown fuse lockout devices	General condition.
	(fused breakers only).	Functionally test with prolock out breaker.

Table H.4(d) Low-Voltage Equipment, Drawout-Type Circuit Breakers: Maintenance of to Long Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequency and
	Connection bolts (11.3.1).	Check for tightness.
	Structure or frame (11.3.1, 11.3.2, 11.3.3).	For proper alignment and
	Fuses and mountings (15.1).	General condition and tig
	Frame grounding device.	Connect before and disco
		fingers.
	Position indicators (8.4.6.2, 8.8.6.2).	For proper operation.
	Auxiliary wiring (8.4.4).	General condition and tig
	Arc chutes.	For broken parts, missing
		of metal spatter and burn
		Snuffer screens should be
		Repair or replace as nece
	Operation counter (if so equipped).	For proper operation.
		Record number of operat
	Insulators and insulating materials (8.2.10, 8.2.14).	For cracks, breaks, and o
	Breaker auxiliary devices (8.4.6).	Make necessary repairs.
	Testing (withdrawn from switchgear and	Max. of 3 years, etc., san
	deenergized) (7.3, 20.5 through 20.8): Test insulation resistance (20.9.1 through 20.9.2.4).	2500-volt megohmmeter
	Test insulation resistance (20.9.1 tillough 20.9.2.4).	breaker open and all othe
		grounded.
		1000-volt megohmmeter
		controls and associated w
		trip devices.
	Contact conductivity or resistance (17.12).	Use microhmmeter or de test load conditions.
	Overcurrent (OC) trip devices (electromechanical, series type) (8.4.6.4).	Pass specified currents fr through coils of series ty
		Trip devices should open
		time limits according to 1
		designed time-current co
		Adjust trip devices as req desired results.
		Test set should be equipp
		accuracy of short-time an
		Record results.
	Overcurrent trip devices (electromechanical, 5 amp	Test 5 amp, type OC trip
	CT type).	using reduced current pro
		in switchgear that norma
		OC trip coils.
		Record results.
	Overcurrent trip devices (solid-state type) (8.4.6.5).	Use manufacturer's instru
		specifically designed for
		being tested, or use prima
		high-current test set.

Table H.4(d) Low-Voltage Equipment, Drawout-Type Circuit Breakers: Maintenance of to Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequency and
		Adjust trip device setting
		times and currents to con coordination curves.
		Record results.
		Do not use megohmmete
		tester on solid-state trip c wiring.
	System Testing (breaker installed):	wiring.
	Electrically operated breaker	After preceding maintena
	7 · 1 · 1 · 1 · 1 · 1 · 1 · 1 · 1 · 1 ·	satisfactorily completed,
		operated breaker in proper it into "Test" position.
		Operate closing control d
		breaker closes and latche operations.
		Operate trip control device
		trips open in a reliable m
		Functionally test all elect devices.
		After satisfactorily passir
		breaker can be racked int
		position and placed in no
Oil-Immersed	Inspection and Maintenance (withdrawn from	Max. of 3 years or at mar
	switchgear and deenergized):	number of operations sin
		maintenance, whichever
		Immediately after breake Follow manufacturer's m
	Lawar ail tank Ingrest adjust and alson where	rollow manufacturers in
	Lower oil tank. Inspect, adjust, and clean where necessary:	
	Main contacts.	For pitting, spring pressu overtravel, or wipe.
		Adjust or replace accordi
	Arcing contacts.	For alignment, overtrave erosion.
		Adjust or replace accordi
	Moving parts.	For freedom of movemen
	Closing mechanism.	For quick and positive clo
	Tripping mechanism.	For freedom of movemen breaker contacts.
	Mechanical interlocks.	Functionally test to prove
	Primary disconnect finger clusters.	For proper adjustment an
		Lubricate, unless manufa specify that they should r
	Secondary (control) disconnect contacts.	For alignment and spring Lubricate.

Table H.4(d) Low-Voltage Equipment, Drawout-Type Circuit Breakers: Maintenance of to Long Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequency and
	Closing and trip coils.	General condition and ev
	Shunt trip device.	For freedom of movemen
	Undervoltage trip device.	For freedom of movemen
	Bushings.	Cracked and chipped por
		Condition of surfaces.
	Auxiliary contacts.	For proper operation with breaker.
	Closing (x and y) relays (electrically operated breakers).	Contact erosion. Dress or
	Current transformers.	General condition. Check
	Connection bolts.	Check for tightness.
	Structure or frame.	For proper alignment and
	Fuses and mountings.	General condition and tig
	Frame grounding device.	Connect before and disco fingers.
	Position indicators.	For proper operation.
	Auxiliary wiring.	General condition and tig
	Arc quenchers.	For broken and missing I spatter and burning on in
		Repair or replace as nece
	Operation counter (if so equipped).	For proper operation.
	T 17 17 17 7 17	Record number of operat
	Insulators and insulating materials.	For cracks, breaks, and c
	T .: ('41 1	Make necessary repairs.
	Testing (withdrawn from switchgear and deenergized):	Max. of 3 years, etc., san
	Insulation.	2500-volt megohmmeter breaker open and all othe grounded.
		1000-volt megohmmeter controls and associated w
	Contact conductivity.	Use microhmmeter or de test load conditions.
	Overcurrent trip devices (electromechanical type).	Pass specified currents fr coils of trip devices to op time limits according to 1 designed time—current co Adjust trip devices as re- desired results. Test set should be equipl accuracy of instantaneous Record results.

Table H.4(d) Low-Voltage Equipment, Drawout-Type Circuit Breakers: Maintenance of to Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequency and
Type	System Testing (breaker installed): Electrically operated breaker.	After above maintenance completed, connect electric switchgear or test stand of the test cord and plug. Operate closing control of breaker closes and latche operations. Operate trip control devitarips open in a reliable m Functionally test all elect devices. After satisfactorily passible breaker can be placed in into the "Connected" pos
		service.

Table H.4(e) Low-Voltage Equipment, Buses and Bus Ducts: Maintenance of Equipment, Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequei
Indoor	Inspections (while energized):	3–6 months.
	Open buses:	
	Condition of bus conductors (8.1.3).	
	Evidence of overheated joints (8.1.3).	Discoloration or oxidatio problem. Infrared survey good-quality infrared sca should be loaded to at lea while being scanned.
	Condition of insulators (8.1.2.1).	Cleanliness and breaks.
	Clearance from grounded metal surfaces and above floor.	;
	Loading.	Make certain load is with
	Bus duct (covers in place):	
	Condition of enclosure (8.2.3).	
	Evidence of water drips on enclosure.	
	Security of switches attached to plug-in type bus duct.	
	Adequate grounding (8.1.5, 8.8.9).	
	Loading.	Make certain load is with
	Maintenance and Tests (deenergized):	3–6 years.
	Deenergize (7.3). Verify that no parts of the power or control circuitry are energized by	
	"back feed" from alternate power or control sources.	

Table H.4(e) Low-Voltage Equipment, Buses and Bus Ducts: Maintenance of Equipme Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Freque
	Open buses:	
	Check connection bolts for tightness (8.1.3).	Torque according to man instructions.
	Clean insulators and inspect (8.1.2).	Check for cracks, chips, a
	Test insulation resistance (20.9.2.3).	2500-volt megohmmeter, 1000-volt megohmmeter
	Bus duct (covers removed):	
	Check condition of bus conductors (8.1.3).	
	Check for evidence of overheated joints (8.1.3, 8.2.14).	Discoloration or oxidatio problem.
	Check connection bolts for tightness (8.1.3).	Torque according to man instructions.
	Check switches attached to plug-in type bus duct (8.1.5, 8.8.9).	For condition of contacts fuse clips, fuses, and load repairs.
	Check ground connections (8.2.3).	For tightness.
	Check condition of enclosure.	Close all unused holes.
	Check for proper ventilation (8.2.8).	All ventilating louvers sh
	Check for evidence of internal moisture (8.2.6).	From water leaks or conc
	Clean and inspect insulators (8.1.2).	Check for cracks, chips,
	Test insulation resistance (20.9.2.3).	Manufacturer usually per 1 minute.
Outdoor	Inspections (while energized):	3–6 months.
	Open buses:	
	Same as for indoor open buses.	
	Bus duct (covers in place):	
	Condition of enclosure (8.2.3).	Enclosure should be wear
	Adequate grounding (8.1.5, 8.8.9).	
	Loading.	Make certain load is with
	Maintenance and Testing (deenergized):	3–6 years.
	Deenergize (7.3). Verify that no parts of the	
	power or control circuitry are energized by	
	"back feed" from alternate power or control	
	sources.	
	Open buses:	
	Same as for indoor open buses.	
	Bus duct (covers removed):	
	Check condition of bus conductors (8.1.3).	5 . 1
	Check for evidence of overheated joints (8.1.3, 8.2.14).	Discoloration or oxidatio problem.
	Check connection bolts for tightness (8.1.3).	Torque according to man instructions.
	Check ground connections (8.1.5, 8.8.9).	For tightness.
	Check condition of enclosure (8.2.3).	Close all unused holes. V spots.
C 1. NED A		

Table H.4(e) Low-Voltage Equipment, Buses and Bus Ducts: Maintenance of Equipme Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequei
		Finish paint.
	Check for evidence of internal moisture (8.2.6).	From water leaks or conc
	Clean and inspect insulators (8.1.2).	For cracks, chips, and bro
	Test insulation resistance (20.9.2.3).	Manufacturer usually per 1 minute.
	Check operation of space heaters (8.2.7).	Operate during cool weat
	Check enclosure ventilating louvers (8.2.8)	All ventilating louvers sh exclude insects, rodents,

Table H.4(f) Low-Voltage Equipment, Panelboards: Maintenance of Equipment Subjectives Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequei
Fused Switch Type	Inspections (while energized):	3–6 months.
	Switches for overheating (11.4.4).	Feel front of each switch Arrangements should be overheated switch to dete replace.
	Portion of enclosure over supply cable terminals for overheating (11.3.1, 11.3.2).	Feel enclosure. If overheatinspect supply cables and overheating. Discoloration possible problem.
	Loading.	Constant load on switch percent of switch namepl rated for 100 percent con
	Enclosure for general condition (11.2).	Arrange to have unused of plugged with knockout cl
	Ground connections (8.1.5).	For integrity.
	Directory.	For accuracy of loads ser
	Evidence of water dripping on or striking NEMA 1 enclosure.	Stop water leaks.
	Cleaning, Inspection, and Maintenance (deenergized) (7.3, 11.4.2):	3–6 years.
	Clean interior of enclosure and switches (11.2).	
	Inspect fuses for overheating (11.5, 15.1).	Refer to low-voltage fuse
	Inspect fuseclips for overheating and weakness (15.1.2).	Replace weak or burned (
	Inspect fuses for proper ampere rating for cable size and for interrupting adequacy for fault current capability of supply system (15.1.3).	ampacity of cables. Fuse exceed fault current avail
	Check connection bolts for tightness (8.2.14).	Do not overtighten and s

Table H.4(f) Low-Voltage Equipment, Panelboards: Maintenance of Equipment Subjectives Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Freque
	Check set screws in all cable connectors for tightness (8.1.3).	AL/CU set screw-type co Set screws in many old-s
		unplated aluminum on w and cause set screws to b sufficiently against cable: if necessary.
	Open and close switches. Inspect contact surfaces and operating mechanism (11.4.5).	Repair or replace burned switch contacts close full
	Inspect all insulating materials (8.2.10, 8.2.14).	For cracks, breaks, clean damage.
	Inspect arc chutes.	For broken parts and mis
	Check door/switch mechanical interlocks (11.9.3).	That switch door cannot handle is in "On" positio mechanism is operated.
		That switch handle cannot position while switch doo defeat mechanism is open
	Check padlock devices (11.9.5).	That switch handle cannot position with padlock in
	Check door latches.	That doors do not open w "On" position.
	Check directory for accuracy.	
	Enclosure (11.2).	Wire-brush and prime ru
	Test supply cables, switches, and load cables for insulation resistance (20.9.2.3).	2500-volt megohmmeter megohmmeter acceptable
Molded-Case Circuit-Breaker Type Chapter 13, 20.10)	Inspections and maintenance similar to fused switch type except:	3–6 years.
	Circuit breakers usually cannot be opened for	
	inspection and maintenance.	
	Breakers usually operate at a higher temp.	
	Breakers usually contain no fuses.	
	Breakers often not equipped with external door or operating handle other than handle integral with breaker.	
	Breaker overcurrent trip operation can be tested with high-current test set (20.10).	

Table H.4(g) Low-Voltage Equipment, Protective Relays: Maintenance of Equipmen Intervals Between Shutdowns — Electrical Distribution

Туре	Inspections, Maintenance, and Tests	Typical Frequei	
Induction Disk (20.10.3)	Same as for medium-voltage protective relays.	Refer to medium-voltage	

Table H.4(g) Low-Voltage Equipment, Protective Relays: Maintenance of Equipmen Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequei

Table H.4(h) Low-Voltage Equipment, Automatic Transfer Control Equipment: Mainte Subject to Long Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequei
Indoor and Outdoor	Same as for medium-voltage auto transfer control	Refer to medium-voltage
	equipment.	section.

Table H.4(i) Low-Voltage Equipment, Circuit Breaker Overcurrent Trip Devices: Equipment Subject to Long Intervals Between Shutdowns — Electrical Dist

Type	Inspections, Maintenance, and Tests	Typical Frequei
Series and 5 Amp Type	Same as OC trip item in low-voltage drawout	Refer to low-voltage drav
(20.10.2.9)	circuit breaker section.	section.

Table H.4(j) Low-Voltage Equipment, Fuses: Maintenance of Equipment Subject to Loi Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Freque
Cartridge-and-Plug Type (15.1)	Same as for medium-voltage fuses except:	Refer to medium-voltage
	Inspect for discoloration or charring of fiber barrel ends adjacent to ferrules (8.2.14).	This can be done while fi Indicates probability of la ferrules or blades and spr
	Check for assembly rightness of renewable fuse ferrules on barrels (8.1.3).	Looseness can possibly ca ferrules and fiber barrel ε
	Check for constant moderate overload on circuit supplied by fuses.	Fuses should not be conti percent of ampere rating.

Table H.4(k) Low-Voltage Equipment, Lightning Arresters: Maintenance of Equipme Intervals Between Shutdowns — Electrical Distribution

Type	Inspections, Maintenance, and Tests	Typical Frequei
Indoor and Outdoor Type	Same as for medium-voltage lightning arresters	Refer to medium-voltage
(8.8.2)	except:	Use 500-volt megohmme
	Test insulation resistance. Arresters in metal	Inspect conductors for da
	containers.	container.

Annex I Maintenance Intervals

This annex is not a part of the recommendations of this NFPA document but is included for informational purposes only.

I.1 Introduction.

This annex provides, in Table I.1, an initial guideline for maintenance intervals for equipment. It should be stressed that environmental or operating conditions of a specific installation should be considered and might dictate a different frequency of maintenance than suggested in this annex (see 8.2.5). Chapter 22 and Annex H deal specifically with the maintenance of equipment that, by nature of its application, necessitates long intervals between shutdowns. It should be noted that maintenance, inspection, and test methods for

equipment that can operate for long periods are essentially the same as for equipment that might be shut down frequently. However, the recommended work should be performed with more care and diligence to obtain the desired reliability for service to loads that can operate continuously for months or years.

Table I.1 Interval Guidelines

	Task/Function	Interval
Substations (Outdoor)	Infrared scanning	Annually
Insulators	Visual inspection	4–6 months
	Corona detection	4–6 months
	Electrical tests	As indicated by other PM
Conductors	Visual inspection of connections	4–6 months
	Check connections for tightness	As indicated by other PM
Air-disconnecting switches	Visual inspection	4–6 months
_	Operation check	Annually
	Contact inspection	Annually
Grounding equipment	Visual inspection	Annually
	Check connections for tightness	1–2 years
	Electrical test	3 years
Enclosures	Security/operational check	1–3 months
Switchgear Assemblies	Infrared scanning	Annually
Enclosures	Security/operational check	, and the second
	Outdoor	1–3 months
	Indoor	6 months
	Visual inspection	
	Outdoor	1–3 months
	Indoor	6 months
Ventilation	Visual inspection	1–3 months
Space heaters	Operational check	Annually
Insulation	Visual inspection/clean	Annually
	Electrical tests	2 years
Air Circuit Breakers, Mediu	m Voltage	
Insulation	Visual inspection/clean	Annually
	Electrical tests	3 years
Contacts	Visual inspection/clean	Annually
	Adjust	Annually
	Electrical test	3 years
Arc interrupters	Visual inspection/clean	Annually
-	Electrical test	3 years
	Air-puffer operational check	Annually
Operating mechanism	Visual inspection	Annually
- -	Operational check/adjustment	Annually
Trip device circuit	Operational check	Annually
Air Circuit Breakers,	Visual inspection/clean/adjust	Annually
Low Voltage	Electrical tests	3 years
	TT: 1: / 1 / 1: /	A
Vacuum Circuit Breaker	Visual inspection/clean/adjust	Annually

Table I.1 Interval Guidelines

Item/Equipment	Task/Function	Interval
	Electrical tests	3 years
Oil Circuit Breaker	General inspections and tests	3 years
Bushings	Visual inspection/clean	3 years
Oil	Dielectric breakdown test	Annually
	level	Annually
Contacts	Resistance check	3 years
	Visual inspection	3 years
Interrupter Switches	See Air Circuit Breakers, Medium Voltage	
Surge Arresters	Visual inspection	
	Outdoor	3–6 months
	Indoor	Annually
	Electrical test	3–6 years
Capacitors	Visual inspection	3–6 months
	Fuse check	3–6 months
Stationary Batteries and	Visual inspection/clean	Monthly
Chargers		
	Torque intercell connectors	Annually
	Pilot cell measurements	Monthly
	All lead-acid cell-specific gravity	Quarterly
	Capacity test	1–5 years
	Sample connection resistances	Quarterly
	Infrared scanning	Annually
Protective Relays	Cleaning, calibration, and function tests	
	Electromechanical	1–2 years
	Solid state	3 years
Supervisory Control and Data	Acquisition (SCADA)	
Electrical/electronic Systems	Lamp test/verify indicators	Monthly
	Inspect enclosures for dirt, heat, water	Monthly
	Physically exercise valves and actuators	6 months
	Actuate switches	6 months
	Run PLC diagnostics	6 months
	Calibrate sensors and transmitters	Annually
	Calibrate actuators	Annually
	Calibrate meters	Annually
	Test batteries	6 months
	Test automatic control sequences	Annually
	Verify alarms	Annually
Pneumatic system/components	Check regulators and filters	Monthly
	Inspect tubing and piping	Monthly
	Actuate pressure switches	6 months
	Physically exercise valves and actuators	6 months
	Calibrate switches and sensors	Annually
	Calibrate pressure gauges	Annually
	Calibrate thermometers	Annually

Table I.1 Interval Guidelines

Item/Equipment	Task/Function	Interval
Power and Distribution		
Transformers		
Liquid filled	Current and voltage readings	Weekly-monthly
	Temperature readings	Weekly-monthly
	Liquid level check	Weekly-monthly
	Pressure/vacuum gauge readings	Weekly-monthly
	Liquid analysis	Annually
	Comprehensive liquid tests	Annually
	Insulation test	3–5 years
	Turns-ratio test	3–5 years
	Fault gas analysis	Annually
	Dissolved-gas-in-oil analysis	Annually
Dry type	Cleaning, inspection, and testing	2 years
Power Cables	Visual inspection	Yearly
	Electrical testing	1–3 years
Motor Control Equipment	Infrared scanning	Annually
Enclosures	Visual inspection/clean	Annually
Bus bar, wiring, and terminal	Check connections for tightness and	2 years
connections	proper torque	•
	Visual inspection of insulators	Annually
	Visual inspection of wiring	Annually
	Electrical tests	2 years
Disconnects	Visual inspection/clean	Annually
	Operation check	Annually
Contactors	Visual inspection/clean	Annually
Motor overload relays, nonthermal type	Check connections for tightness	2 years
	Cleaning, calibration, and function tests	3 years
Electrical interlocks	Inspection	Annually
Mechanical interlocks	Inspection	Annually
Electronic Equipment	Inspection	Annually
	Cleaning	3 years
	Adjustments/calibration	3–5 years
Molded-Case Circuit Breakers	Visual inspection/clean	3 years
	Mechanical test	2 years
	Electrical test	3–5 years
Fuses, 1000 Volts or Less		
Fuse terminals and fuseclips	Visual inspection	3 years
•	Clip contact pressure	3 years
	Cleaning of contact surfaces	3 years
Fuses	Visual inspection for discoloration and damage	3 years
Fuses, Over 1000 Volts	0 -	_
Insulators	Visual inspection/cleaning	3 years
Fuse terminals and fuseclips	Inspection of contact surfaces	3 years
_	inspection of contact surfaces	o youro
Copyright NFPA		

Table I.1 Interval Guidelines

Item/Equipment	Task/Function	Interval
Fuses	Visual inspection for corrosion	3 years
	Terminal connections and hardware	3 years
	Fuse tubes	3 years
Fuses, Vented Expulsion Type	Visual inspection of seals	3 years
Rotating Equipment	Vibration analysis	Continuously to 6-month intervals
Stator and rotor windings	Visual and mechanical inspection, cleaning	Annually
	Electrical testing	Annually
Brushes, collector rings, and commutators	Visual and mechanical inspection	Annually
Bearings, sleeved	Oil level check	Weekly-monthly
Waste-packed	Drain, flush, and lubricate	Annually
	Re-oil, check air gap	1000 hours
Ball and roller	Inspection and lubrication	Per manufacturer
Kingsbury thrust bearings	Drain, flush, and lubricate	Per manufacturer
Wiring Devices		
Attachment plugs, cord connector bodies	Inspection	Monthly and when used
Receptacles	Inspection	Monthly and when used
	Operation check	Monthly and when used
General-use snap switches	Operation check	When used
Pin-and-sleeve devices, heavy-duty industrial-type plugs, cord connectors, and receptacles	Inspections, cleaning, and checks	Monthly and when used
Portable Electric Tools	Inspections/cleaning	Monthly and when used
	Lubrication	Per manufacturer
	Electrical tests	Quarterly
Low-Voltage Busway	Infrared scanning	Annually
c v	Visual inspection	Annually
	Electrical test	2 years
Uninterruptible Power Supply	Infrared scanning	Annually
Systems	Visual inspection	Quarterly
	Routine maintenance	6 months
	System tests	2 years
	Battery tests	See Stationary Batteries and Chargers.
UPS support standby generator	Test run, exercise	Monthly

Annex J Equipment Storage and Maintenance During Construction

This annex is not a part of the recommendations of this NFPA document but is included for

J.1 Introduction.

Preferably, all types of electrical equipment should be stored in a clean, heated building affording good physical protection and providing controlled access to prevent unauthorized tampering with the equipment. However, equipment can be stored in other inside and outside environments with proper provisions to satisfy the following general recommendations and the recommendations specified in the particular equipment sections.

- **J.1.1** Before storage, when equipment is received, it should be inspected for shipping damage, and reports should be made as recommended to recover repair or replacement costs from the carrier in the event damage was sustained. In some cases, visual inspection might indicate a need to test for concealed damage before the equipment is removed from the carrier vehicle.
- **J.1.2** Covers are recommended unless storage conditions specified in J.1.1 exist. Canvas tarpaulins or the equivalent are preferred over other coverings because they provide better humidity control and enclosure scuff protection.
- **J.1.3** The manufacturer's shipping skids should be left on the equipment to provide structural support until the equipment is set in its final resting place.
- **J.1.4** Insulation tests should be conducted and test values recorded when the equipment is received. Periodic tests are recommended in the following sections for particular types of equipment. In all cases, insulation should be retested prior to start-up, with sufficient time provided for any necessary dry-out or repair prior to energizing.
- **J.1.5** Regular inspections should be made to check the general effectiveness of equipment storage provisions, and improvements should be made as indicated.

J.2 Equipment.

Where storage conditions specified in Section J.1 are not available, indoor or outdoor storage should comply with the following paragraphs.

- J.2.1 Switchgear, Switchboards, Motor Control, and Other Control Equipment.
- **J.2.1.1** Metal-enclosed equipment should be stored in the upright position. Good ventilation of the shelter and protection from dirt, moisture, and physical damage should be provided.
- **J.2.1.2** Space heaters furnished with the equipment should be connected to a continuous source of power of the proper rating.

CAUTION: Where space heaters are supplied from auxiliary power transformers, care should be taken that low-voltage heater circuits are properly isolated before power-source connection to prevent inadvertent energizing of the auxiliary transformer and associated high-voltage primary wiring.

J.2.1.3 Temporary heaters or lamp banks should be used where space heaters are not

furnished to maintain temperature at a level approximately 12°C (10°F) above ambient.

- **J.2.1.4** In humid locations, such as in the tropics, it might be necessary to remove the equipment from shipping cases to permit adequate ventilation and to avoid mildew.
- **J.2.1.5** Oil-immersed circuit breakers, starters, and similar items that are shipped dry should be stored indoors or should be filled with insulating liquid as soon as they are received on site. Units filled with liquid can be stored outdoors if raised above grade to prevent any damage from surface water and if a shed roof and tarpaulin siding (or equivalent) are provided.
- **J.2.1.6** Insulation-resistance values of such parts as operating coils should be spot-checked every 6 weeks. If any readings are low, the affected parts should be dried out before they are placed in operation.

J.3 Busway and Associated Fittings.

- **J.3.1** Busway sections and fittings preferably should be stored in a heated building that has adequate air circulation and is protected from dirt, water, and physical damage. Where this is not possible, sections and fittings should be stored in a clean, dry shelter that has provisions for maintaining temperature uniformity necessary to prevent condensation.
- **J.3.2** If busway sections and associated fittings are stored outdoors, they should be securely covered for protection from weather and dirt. Temporary electrical heating should be installed beneath the cover to prevent condensation. At least 0.0283 watt/m³ (3 watts/ft³) is adequate for the average environment.
- **J.3.3** Weatherproof busway should be treated exactly the same as indoor busway until after it is installed. It is not weatherproof until completely and properly installed.

J.4 Motors and Generators.

- **J.4.1** Indoor storage should be provided for all motors and generators except motors designed for outdoor use, which can be stored outdoors without protective covering. These generally are explosion proof motors, totally enclosed motors, and totally enclosed motors with integral coolers. However, in special cases where they are designed for indoor use only, they should be stored indoors. Other motors can be stored outdoors if protective covering that permits good ventilation is furnished.
- **J.4.2** For motors and mechanical equipment with motors such as motor-operated valve actuators stored outdoors without protective cover, the following should be observed:
- (1) All enclosure openings not intended to be open during operation of the equipment, such as conduit and cable entrances in terminal boxes, should be closed with watertight plugs. Temporary shipping plugs should be replaced with permanent storage plugs.
- (2) All motors and mechanical equipment with motors should be stored in their normal operating position (e.g., vertical motors in an upright position with their shaft extension downward).

- **J.4.3** If space heaters are furnished in the units, they should be connected to a continuous supply of power of the proper rating.
- **J.4.4** Insulation-resistance values of each winding should be measured and should be recorded for future reference. The first set of values should be reasonably consistent with the factory insulation-resistance measurement values. These measurements should be taken as soon as possible after a unit arrives at the site.
- **J.4.5** Brushes should be removed from brush holders and should be stored in a dry, warm place where condensation will not occur.
- **J.4.6** After installation at the final service location, motors with oil-lubricated bearings and ac motors and generators with collector rings should be protected as follows:
- (1) *Oil-lubricated bearings*. All internal surfaces of bearing housing should be coated with rust preventative. Vent and drain connections should be plugged, capped, or blinded, as applicable, using steel fittings. The internal surfaces should be recoated (by fill, fill and drain, slushing, spraying, or rotation, as appropriate) at 1-month intervals.
- (2) *Collector rings*. Applied protective coatings should be examined and renewed if not intact.
- **J.4.7** Every 3 months, insulation-resistance values of each winding of units rated 2300 volts and higher should be measured and recorded. Temperature and weather conditions should be recorded at time of reading. If resistance is low and cables have been connected, the cables should be disconnected and the measurements repeated. If resistance of winding insulation only is low, leads in a unit's terminal box should be dried out by removing the cover and exposing them to dry, clear weather or by placing an electric lamp or heater in the terminal box. If these measures do not result in acceptable insulation-resistance values, the windings should be dried out by an approved method until acceptable values are obtained.
- **J.4.8** Six weeks before start-up, insulation-resistance values of each winding of all units should be measured and recorded. Temperature and weather conditions should be recorded at time of reading. If resistance is low, J.4.7 should be followed.
- **J.4.9** If grease-lubricated units are on site more than 1 year from the date of shipment from the factory without having been operated, the bearing grease should be inspected. If there has been any visible deterioration of the lubricating properties of the grease, the grease should be cleaned out and the bearings replaced per the manufacturer's recommendations.
- **J.4.10** Immediately before start-up, the following should be performed:
- (1) Insulation values of all units with cables connected should be measured and recorded. If readings are low, the units should be dried out before starting.
- (2) Protective coatings should be cleaned from collector ring surfaces.
- (3) Surfaces of commutators should be cleaned per manufacturer's instructions.

J.5 Transformers.

- **J.5.1** Indoor storage should be provided for all transformers except the following:
- (1) Transformers intended for outdoor installation can be stored outdoors without protective covering.
- (2) Large indoor units can be stored outdoors if raised above grade to prevent any damage from surface water and if a shed roof and tarpaulin siding (or equivalent) are provided.
- **J.5.2** Ventilated dry-type units should have the same storage conditions as indoor switchgear.
- **J.5.3** Drums of insulating liquid stored outdoors should be laid on their sides with the large bung downward. Drums should be placed so that the large bung is at about a 45-degree angle from the bottom center position, to minimize contamination by moisture or other liquids.
- **J.5.4 Transformers Filled with Insulating Liquid.** If a transformer is shipped with its main tank filled with insulating liquid (except for expansion space), the level of the liquid and the ambient temperature should be measured and recorded when the unit arrives on site and every month thereafter. If the level falls, leaks should be repaired and insulating liquid added to keep the level within tolerances.
- **J.5.5 Gas Under Pressure.** If a transformer is shipped with its main tank filled with insulating liquid and blanketed with gas under pressure or filled with gas under pressure, the gas pressure and the ambient temperature should be measured and recorded when the unit arrives on site and every month thereafter. If the pressure falls, leaks should be repaired and gas added to keep the pressure within tolerances.
- **J.5.6** Primary disconnect switches should be handled per the recommendations for switchgear, motor control, and control equipment.

J.6 Cables.

- **J.6.1** Reels of paper-insulated, lead-sheathed cable should be rotated 90 degrees every 2 weeks. Sealed ends should be checked for leaks and patched if necessary.
- **J.6.2** Low-pressure, gas-filled cable should be handled as follows:
- (1) Gas pressure should be measured and recorded when the cable is received at the site and every month thereafter. The pressure should be between 34.48 kPa (5 psig) and 89.64 kPa (13 psig). If falling pressure indicates a leak in the cable, a cylinder of dry nitrogen should be connected to the cable to maintain pressure until the leak is located and sealed.
- (2) Nitrogen used to maintain pressure during storage, if needed, should be in accordance with ASTM D 1933, *Standard Specification for Nitrogen Gas as an Electrical Insulating Material*. Where available, nitrogen type III is preferred. Manufacturer's recommendations should be followed during installation and operation of any nitrogen cylinders.

J.6.3 Physical protection from vehicles or striking objects is recommended for solid dielectric types (XLP or EPR) on reels. Cable ends should be sealed at the factory and maintained until cables are terminated properly.

J.7 Storage Batteries.

- **J.7.1** All batteries should be stored indoors, in a dry place.
- **J.7.2** Batteries that have been shipped dry and charged should have the seals inspected when they are received at the site. Any seals that are damaged should be renewed per the manufacturer's instructions.
- J.7.3 Lead–acid batteries that have been shipped wet should be handled as follows:
- (1) Electrolyte level should be inspected when batteries are received at the site. Electrolyte should be added to the proper level, if any has been lost.
- (2) Three months after date of shipment from the factory, and every three months thereafter, batteries should be given a freshening charge to restore the voltage to 2.15 volts per cell and the specific gravity to 1.21 at 25°C (77°F). The charging rate should not exceed the manufacturer's recommended value; batteries should not be overcharged.
- (3) Other type batteries that have been shipped wet should be handled per the manufacturer's instructions.

Annex K Reliability Centered Maintenance

This annex is not a part of the recommendations of this NFPA document but is included for informational purposes only.

K.1 Definitions.

These definitions are referenced in several reliability publications and the formulas can be verified in MIL-STD-339, *Wiring and Wiring Devices for Combat and Tactical Vehicles, Selection and Installation of*, or in IEEE 100, *Authoritative Dictionary of IEEE Standards Terms*.

K.1.1 Availability. The probability that a system or product will be available to perform its intended mission or function when called upon to do so at any point in time. It can be measured in one of several ways.

K.1.1.1 Function of Uptime. Availability can be considered as the percent of total time that a system is available. It is measured using Equation 1 (note that the period of time over which this measure of availability is made must be defined). Downtime includes administrative time and delays, as well as time for maintenance and repair.

Availability =
$$\frac{\text{Uptime}}{\text{Downtime} + \text{Uptime}}$$
 (Total time)

K.1.1.2 Operational Availability.

K.1.1.2.1 Another equation for availability directly uses parameters related to the reliability and maintainability characteristics of the item as well as the support system. Equation 2 reflects this measure.

Availability =
$$\frac{\text{Mean Time Between Maintenance (MTBM)}}{\text{Mean Downtime + MTBM}}$$

- **K.1.1.2.2** In Equation 2, MTBM includes all maintenance required for any reason, including repairs of actual design failures, repairs of induced failures, cases where a failure cannot be confirmed, and preventive maintenance.
- **K.1.1.3 Inherent Availability.** When only maintenance required to correct design failures is counted and the effects of the support system are ignored, the result is inherent availability, which is given by Equation 3.

Availability =
$$\frac{\text{Mean Time Between Failures (MTBF)}}{\text{Mean Time to Repair} + \text{MTBF}}$$

- **K.1.2 RCM Maintenance.** Those activities and actions that directly retain the proper operation of an item or restore that operation when it is interrupted by failure or some other anomaly. (Within the context of RCM, proper operation of an item means that the item can perform its intended function.) These activities and actions include removal and replacement of failed items, repair of failed items, lubrication, servicing (includes replenishment of consumables such as fuel), and calibrations. Other activities and resources are needed to support maintenance. These include spares, procedures, labor, training, transportation, facilities, and test equipment. These activities and resources are usually referred to as logistics. Although some organizations might define maintenance to include logistics, it is used in this section in the more limited sense and does not include logistics.
- **K.1.2.1 Corrective Maintenance.** Actions required to restore a failed item to proper operation. Restoration is accomplished by removing the failed item and replacing it with a new item, or by fixing the item by removing and replacing it with a new item, or by fixing the item by removing and replacing internal components or by some other repair action.
- **K.1.2.2 Preventive Maintenance.** Scheduled activities based on an interval to ensure safety, reduce the likelihood of operational failures, and obtain as much useful life as possible from an item.
- **K.1.2.3 Condition-Based Maintenance.** Actions performed on the basis of observed wear or on predicting when the risk of failure is excessive.
- **K.1.2.3.1** Some items exhibit wear as they are used. If the probability of failure can be related to a measurable amount of wear, it might be possible to prescribe how much wear can be tolerated before the probability of failure reaches some unacceptable level. If so, then this point becomes the criterion for removal or overhaul. Measurement can be done using a variety of techniques depending on the characteristic being measured. The temperature of electrical equipment, for example, can be measured using infrared thermography.
- **K.1.2.3.2** In predictive maintenance, a given operating characteristic of the item, current, or

temperature, for example, is trended and compared with the known "normal" operating levels. An acceptable range is established with either upper and lower limits or some maximum or minimum level. As long as the trend data remain inside the acceptable values, any variation is considered to be normal deviation due to variances in materials, operating environment, and so forth. When the trend line intersects the "unacceptable" limit line, preventive maintenance is required to avoid a failure in the future. The limits are based on knowledge of the normal operating characteristics and the level of risk of failure that is acceptable.

K.1.3 Reliability. The probability that an item will perform its intended function(s) without failure for a specified time under stated conditions.

K.1.4 Reliability-Centered Maintenance (RCM). A logical, structured framework for determining the optimum mix of applicable and effective maintenance activities needed to sustain the operational reliability of systems and equipment while ensuring their safe and economical operation and support.

K.2 Benefits of RCM.

K.2.1 Reduced Costs. Savings have been achieved by industries for equipment when going from a traditional to an RCM-based PM program. It is important to note that these costs savings were achieved with no reduction in safety.

K.2.2 Increased Availability. For many systems, availability is of primary importance. The level of availability achieved in actual use of a product is a function of how often it fails and how quickly it can be restored to operation. The latter, in turn, is a function of how well the product was designed to be maintainable, the amount of PM required, and the logistics resources and infrastructure that have been put in place to support the product. RCM directly contributes to availability by reducing PM to that which is essential and economic.

K.3 Relationship of RCM to Other Disciplines.

K.3.1 Reliability. Much of the analysis needed for reliability provides inputs necessary for performing an RCM analysis. The fundamental requirement of the RCM approach is to understand the failure characteristics of an item. As used herein, failure characteristics include the consequences of failure, and whether or not the failure manifests itself and, if it does, how. Reliability is measured in different ways, depending on one's perspective: inherent reliability, operational reliability, mission (or functional) reliability, and basic (or logistics) reliability. RCM is related to operational reliability.

K.3.1.1 Inherent Versus Operational Reliability. From a designer's perspective, reliability is measured by "counting" only those failures that are design-related. When measured in this way, reliability is referred to as "inherent reliability." From a user's or operator's perspective, any event that causes the system to stop performing its intended function is a failure event. These events include all design-related failures that affect the systems' function. Also included are maintenance-induced failures, no-defect-found events, and other anomalies that might have been outside the designer's contractual responsibility or technical control. This type of reliability is called "operational reliability."

K.3.1.2 Mission-Critical or Functional Reliability Versus Basic or Logistics Reliability.

Any failure that causes the product to fail to perform its function or critical mission is counted in "mission-critical reliability." Redundancy improves mission-critical reliability. Consider a case where one part of a product has two elements in parallel where only one is needed (redundant). If a failure of one element of the redundant part of the product fails, the other continues to function, allowing the product to do its job. Only if both elements fail will a mission-critical failure occur.

K.3.1.3 Basic Reliability. In "basic" reliability, all failures are counted, whether or not a mission-critical or functional failure has occurred. This measure of reliability reflects the total demand that will eventually be placed on maintenance and logistics.

K.3.1.3.1 Safety. RCM specifically addresses safety and is intended to ensure that safety is never compromised.

K.3.1.3.2 Environmental Concerns. In the past several years, environmental concerns and issues involving regulatory bodies have been accorded importance in the RCM approach for some items that are equal (or nearly so) to safety. Failures of an item that can cause damage to the environment or that result in some federal or state law being violated can pose serious consequences for the operator of the item. So the RCM logic can be modified to specifically address environmental or other concerns.

K.3.1.3.3 Maintainability. RCM is a method for prescribing PM that is effective and economical. Whether or not a given PM task is effective depends on the reliability characteristics of the item in question. Whether or not a task is economical depends on many factors, including how easily the PM tasks can be performed. Ease of maintenance, corrective or preventive, is a function of how well the system has been designed to be maintainable. This aspect of design is called maintainability. Providing ease of access, placing items requiring PM where they can be easily removed, providing means of inspection, designing to reduce the possibility of maintenance-induced failures, and other design criteria determine the maintainability of a system.

K.4 Supporting Data.

Data are critical to the success of an RCM analysis. Since conducting an RCM analysis requires an extensive amount of information, and much of this information is not available early in the design phase, RCM analysis for a new product cannot be completed until just prior to production. The data fall into four categories: failure characteristics, failure effects, costs, and maintenance capabilities and procedures. Table K.4 illustrates reliability and maintainability information crucial to an RCM analysis.

Table K.4 Reliability and Maintainability Information for RCM Analysis

Calculated Data	Formula for Calculation
Operational Availability, Ao	Ao = (MTBM/MTBF + MDT)
Inherent Availability, Ai	Ai (MTBF/MTBF=MTTR)
Reliability, R	$Rel = e - \lambda_t$

Table K.4 Reliability and Maintainability Information for RCM Analysis

Calculated Data	Formula for Calculation
Failure rate (per year), FR	FR/yr = Total failures/
	(Tp/8760)
Mean time between failures, MTBF	MTBF = Tp/Total_fails
Mean time to repair, MTTR	MTTR = Rdt/Total_fails
Mean time to maintain, MTTM	MTTM = Mdt/Total_maint
Mean time between maintenance,	MTBM = Tp/All maintenance
MTBM	actions
Mean down time, MDT	MDT = (Rdt + Mdt)/
	All actions, maintenance and repair
Probability of satisfactory start,	prob_s_s = total_start/
prob_s_s	total_attempt
Probability of failure to start,	prob_f_s = total_file_start/
prob_f_s	total_attempt
Hours downtime per year, Hrdt/yr	Hrdt/yr = (rpt_repair_time +
	rpt_maint_time)/(Tp/8760)

Annex L Bibliography

This annex is not a part of the recommendations of this NFPA document but is included for informational purposes only.

L.1 Introduction.

- **L.1.1** This bibliography lists some of the more widely recognized sources of maintenance and testing information. Because they are so numerous, many excellent textbooks by individual authors are not listed; information on them is available from the various publishers.
- **L.1.2** For those who are interested in implementing an effective EPM program or improving an existing one, a suitable reference library should be readily available. The size of the plant and the extent of its maintenance and servicing operations will determine the desired publications for the reference library.
- **L.1.3** The need to use the manufacturer's service manuals and instructions furnished with specific equipment or apparatus has been previously mentioned and cannot be overemphasized. Additionally, there are many sources of helpful information on general and specific maintenance, troubleshooting, test methods, test instruments, and their use. Some of these are available without cost, but most entail a nominal charge. Publishers of technical and trade magazines are another important source of pertinent literature. Some can provide, without charge, reprints of specific articles, or, for a nominal fee, a compilation of reprints of articles on a particular subject.
- L.1.3.1 American Association of Textile Chemists and Colorists (AATCC). P.O. Box Copyright NFPA

12215, Research Triangle Park, NC 27709.

ANSI/AATCC-27, Wetting Agents: Evaluation of Rewetting Agents, 1994.

L.1.3.2 American National Standards Institute, Inc. (ANSI). 25 West 43rd Street, 4th Floor, New York, NY 10036.

ANSI C2, *National Electrical Safety Code*, Part 1, Rules for the Installation and Maintenance of Electric Supply Stations and Equipment, 1993.

L.1.3.3 American Petroleum Institute (API). 1220 L St. NW, Washington, DC 20005-4070.

Guide for Inspection of Refinery Equipment, Chapter XIV, Electrical Systems.

L.1.3.4 American Society for Testing and Materials (ASTM). 100 Barr Harbor Drive, West Conshohocken, PA 19428-2959.

ASTM D 120, Standard Specifications for Rubber Insulating Gloves, 1995.

ANSI/ASTM D 664, Standard Test Method for Acid Number of Petroleum Products by Potentiometric Titration, 1995.

ASTM D 1048, Standard Specification for Rubber Insulating Blankets, 1999.

ASTM D 1049, Standard Specification for Rubber Insulating Covers, 1998 (E1-1995).

ASTM D 1050, Standard Specification for Rubber Insulating Line Hose, 1990 (R-1999).

ASTM D 1051, Standard Specification for Rubber Insulating Sleeves, 1995.

L.1.3.5 Crouse-Hinds. P.O. Box 4999, Syracuse, NY 13221.

Crouse-Hinds Code Digest, Suggestions for Installation and Maintenance of Electrical Equipment for Use in Hazardous Areas, 1996.

L.1.3.6 Factory Mutual Engineering Corporation. 1151 Boston-Providence Turnpike, Norwood, MA 02061.

Handbook of Industrial Loss Prevention, Chapter 32.

L.1.3.7 Institute of Electrical and Electronics Engineers (IEEE). 445 Hoes Lane, P.O. Box 1331, Piscataway, NJ 08855-1331.

ANSI/IEEE 56, Guide for Insulation Maintenance of Large AC Rotating Machinery (10,000 kVA and Larger), 1977 (Reaff. 1991).

ANSI/IEEE 67, Guide for Operation and Maintenance of Turbine Generators, 1990.

ANSI/IEEE 80, Guide for Safety in AC Substation Grounding, 2000.

ANSI/IEEE 141, Recommended Practice for Electric Power Distribution for Industrial Plants (Red Book), 1993.

ANSI/IEEE 142, Recommended Practice for Grounding of Industrial and Commercial Power Systems (Green Book), 1991.

ANSI/IEEE 241, Recommended Practice for Electric Power Systems in Commercial Buildings (Gray Book), 1990.

ANSI/IEEE 242, Recommended Practice for Protection and Coordination of Industrial and Commercial Power Systems (Buff Book), 1986 (Reaff. 1991).

ANSI/IEEE 315 (ANSI Y32.2-75), *Graphic Symbols for Electrical and Electronics Diagrams*, 1975 (Reaff. 1993).

ANSI/IEEE 400, Guide for Making High-Direct-Voltage Tests on Power Cable Systems in the Field, 1991.

ANSI/IEEE 432, Guide for Insulation Maintenance for Rotating Electrical Machinery (5 HP to less than 10,000 HP), 1992.

ANSI/IEEE 446, Recommended Practice for Emergency and Standby Power Systems for Industrial and Commercial Applications (Orange Book), 1995.

ANSI/IEEE 450, Recommended Practice for Maintenance, Testing, and Replacement of Vented Lead-Acid Batteries for Stationary Applications, 1995.

ANSI/IEEE 519, Recommended Practice and Requirements for Harmonic Control in Electrical Power Systems, 1992.

IEEE 602, Recommended Practice for Electrical Systems in Health Care Facilities (White Book), 1996.

ANSI/IEEE 739, Recommended Practice for Energy Management in Industrial and Commercial Facilities (Bronze Book), 1995.

IEEE C37.41, Standard Design for High-Voltage Fuses, Distribution Enclosed Single-Pole Air Switches, Fuse Disconnecting Switches and Accessories, 1994.

ANSI/IEEE C37.95, Guide for Protective Relaying of Utility-Consumer Interconnections, 1989 (Reaff. 1994).

ANSI/IEEE C37.96, Guide for AC Motor Protection, 2000.

IEEE C57.94, Recommended Practice for Installation, Application, Operation and Maintenance of Dry-Type General Purpose Distribution and Power Transformers, 1982 (Reaff. 1987).

ANSI/IEEE C57.106, Guide for Acceptance and Maintenance of Insulating Oil in Equipment, 1991.

IEEE C57.111, Guide for Acceptance and Maintenance of Silicone Insulating Fluid and Its Maintenance in Transformers, 1989.

ANSI/IEEE C57.121, Guide for Acceptance and Maintenance of Less Flammable Hydrocarbon Fluid in Transformers, 1998.

L.1.3.8 International Electrotechnical Commission (IEC). 3 rue de Varembé, P.O. Box 131, 1211 Geneva 20, Switzerland. (In the United States, IEC Publications are available from American National Standards Institute, ANSI.)

IEC No. 417M and supplements, Graphical Symbols for Use on Equipment, 1994.

L.1.3.9 Intertec Publishing Corp. 9800 Metcalf Avenue, P.O. Box 12901, Overland Park, KS 66282-2901.

EC&M Magazine.

L.1.3.10 McGraw-Hill Publishing Co. 1221 Avenue of the Americas, New York, NY 10020.

D. Beeman, Industrial Power Systems Handbook.

E. W. Boozer, Motor Applications and Maintenance Handbook.

C. I. Hubert, *Preventative Maintenance of Electrical Equipment*.

L.1.3.11 National Electrical Contractors Association (NECA). 3 Bethesda Metro Center, Suite 1100, Bethesda, MD 20814-5372.

Total Energy Management — A Practical Handbook on Energy Conservation and Management, Index No. 2095.

L.1.3.12 National Electrical Manufacturers Association (NEMA). 1300 North 17th Street, Suite 1847, Rosslyn, VA 22209.

NEMA 280, *Application Guide for Ground-Fault Circuit Interrupters* (see Section 7, Field Test Devices, and Section 8, Field Troubleshooting), 1990.

NEMA AB 3, *Molded Case Circuit Breakers and Their Application* (see Section 7, Maintenance and Field Testing), 1996.

NEMA AB 4, Guidelines for Inspection and Preventive Maintenance of Molded-Case Circuit Breakers Used in Commercial and Industrial Applications, 1996.

NEMA ICS 1.3, Preventive Maintenance of Industrial Control and Systems Equipment, 1986 (Reaff. 1991).

NEMA ICS 2.3, Instructions for the Handling, Installation, Operation, and Maintenance of Motor Control Centers Rated Not More Than 600 Volts, 1995.

NEMA ICS 7, Industrial Control and Systems Adjustable — Speed Drives, 1993.

ANSI/NEMA MG 2, Safety Standard for Construction and Guide for Selection, Installation and Use of Electric Motors and Generators (see Section 2.17.3, Maintenance), 1989 (Reaff. 1999).

NEMA PB 1.1, General Instructions for Proper Installation, Operation, and Maintenance of Panelboards Rated at 600 Volts or Less, 1996.

NEMA PB 2.1, General Instructions for Proper Handling, Installation, Operation, and Maintenance of Deadfront Distribution Switchboards Rated 600 Volts or Less, 1996.

L.1.3.13 National Institute for Occupational Safety and Health (NIOSH). 4676 Columbia Parkway, Cincinnati, OH 45226.

Guidelines for Controlling Hazardous Energy During Maintenance and Servicing.

L.1.3.14 National Safety Council (NSC). 444 North Michigan Avenue, Chicago, IL 60611.

NSC 129.46, Electrical Inspections Illustrated.

NSC 635, Lead-Acid Storage Batteries.

L.1.3.15 U.S. Department of the Army. U.S. Army Corps of Engineers, 441 G Street NW, Washington, D.C. 20314-1000.

TM-5-682, *Electrical Safety, Facilities Engineering U.S. Army*, November 1999.

TM-5-683, Electrical Interior, Facilities Engineering U.S. Army, November 1995.

TM-5-684, Electrical Exterior, Facilities Engineering U.S. Army, November 1996.

TM-5-685, Operation, Maintenance and Repair of Auxiliary Generators U.S. Army, August 1996.

TM 5-686, Power Transformer Maintenance and Acceptance Testing, November 1998.

TM 5-688, Foreign Voltages and Frequencies Guide, November 1999.

TM 5-691, Utility Systems Design Requirements for Command, Control, Communications, Computer, Intelligence, Surveillance, and Reconnaissance (C41SR) Facilities, December 2000.

TM 5-692-1, Maintenance of Mechanical and Electrical Equipment at Command, Control Communications, Computer, Intelligence, Surveillance, and Reconnaissance (C41SR) Facilities-Recommended Maintenance Practices, April 2001.

TM 5-692-2, Maintenance of Mechanical and Electrical Equipment at Command, Control Communications, Computer, Intelligence, Surveillance, and reconnaissance (C41SR) Facilities-System Design Features, April 2001.

L.1.3.16 Additional Addresses for Bibliography.

Chemical Rubber Co., 18901 Cranwood Parkway, Cleveland, OH 44128.

E. P. Dutton & Co., 201 Park Avenue S., New York, NY 10003.

Gale Research Co., 1400 Book Tower, Detroit, MI 48226.

Hayden Book Co., Inc., 50 Essex Street, Rochelle Park, NJ 07662.

National Fire Protection Association (NFPA), 1 Batterymarch Park, P.O. Box 9101, Quincy, MA 02269-9101.

Plant Engineering, 1350 E. Touhy Avenue, Des Plaines, IL 60018.

Prentice-Hall, Inc., Englewood Cliffs, NJ 07632.

Howard W. Sams Co., Inc., 4300 W. 62nd Street, Indianapolis, IN 46268.

TAB Books, Blue Ridge Summit, PA 17214.

Underwriters Laboratories Inc., 333 Pfingsten Road, Northbrook, IL 60062-2096.

U.S. Government Printing Office, Superintendent of Documents, Mail Stop: SSOP, Washington, DC 20402-9328.

Van Nostrand Reinhold Publishing Company, 135 W. 50th Street, New York, NY 10020

Westinghouse Electric Corp., Printing Division, 1 Stewart Station Drive, Trafford, PA 15085.

John Wiley & Sons, Inc., 605 Third Avenue, New York, NY 10016.

L.2 Power Quality References.

L.2.1 This bibliography lists the sources used in Chapter 27.

L.2.2 Harmonics.

Power Quality for the Utility Engineer, Electric Power Research Institute, 1988, p. VIII-12.

Van Wagner, et al., *Industrial Power Quality Case Study: General Motors Corporation Buick-Oldsmobile-Cadillac Group Powertrain Group — Livonia Engine*, Detroit Edison, March 1990, p. 43.

L.2.3 Sags and Swells.

Berutti, Al, and R. M. Waggoner, "Practical Guide to Quality Power for Sensitive Electronic Equipment," *EC&M*, Intertec Publishing, 1993. Based on materials originally written by John A. DeDad and editors of EC&M.

Chavousite, David M., "Selective Power Conditioning Keeps Plant Operating," *Power Quality Assurance*, July/August 1994, pp. 72–75.

Conrad, L., K. Little, and C. Grigg, "Predicting and Preventing Problems Associated with Remote Fault-Clearing Voltage Dips," *IEEE Transactions on Industry Applications*, January 1991, Vol. 27, pp. 167–172.

DeDad, John A., "Power Quality and Electronic Equipment Protection. What to Use, When to Use It," *EC&M*, January 1991, pp. 37–46.

Dorr, Douglas S., "Point of Utilization Power Quality Study Results," National Power Laboratory Power Quality Study, October 1994.

Douglas, John, "Power Quality," EPRI Journal, December 1993, pp. 8-15.

Dranetz Field Handbook for Power Quality Analysis, Dranetz Technologies, Inc., 1989.

IEEE 1159, Recommended Practice on Monitoring Electric Power Quality, 1995.

Kreiss, David, "Determining the Severity and Cause of Voltage Sags Using Artificial Intelligence," PQ Conference, October 1994.

Lamoree, Jeff, "How Utility Faults Impact Sensitive Customer Loads," *Electrical World*, April 1992, pp. 60–63.

Martzloff, Francois D., and Thomas M. Gruz, "Power Quality Site Surveys; Facts, Fiction, Copyright NFPA

and Fallacies," *IEEE Transactions on Industry Applications*, November/December 1988, Vol. 24, No. 6.

McGrahaghan, Mark, David R. Mueller, and Marek J. Samothj, "Voltage Sags in Industrial Systems," *IEEE Transactions on Industry Applications*, March/April 1993, Vol. 29, No. 2, pp. 397–403.

Smith, Charles J., et al., "The Impact of Voltage Sags on Industrial Plant Loads."

"Voltage Sags in Industrial Systems," *IEEE Transactions on Industry Applications*, March/April 1993.

L.2.4 Noise.

Dranetz Field Handbook for Power Quality Analysis, 1991.

Federal Information Processing Standards Publication 94, U.S. Department of Commerce, 1983.

IEEE 100, Standard Dictionary of Electrical and Electronic Terms, 1996.

IEEE 1100, Recommended Practice for Powering and Grounding Sensitive Electronic Equipment, (Emerald Book), 1992.

L.2.5 Interruptions.

IEEE 1159, Recommended Practice for Monitoring Electric Power Quality, 1995.

IEEE 1250, Guide for Service to Equipment Sensitive to Momentary Voltage Disturbances, 1995.

ANSI/NEMA C84.1, *Electric Power Systems and Equipment, Voltage Ratings (60 Hertz)*, 1995.

L.2.6 Interharmonics.

Gunther, Erich, Draft document on interharmonics.

Annex M Informational References

M.1 Referenced Publications.

The documents or portions thereof listed in this annex are referenced within the informational sections of this recommended practice and are not part of the recommendations of this document unless also listed in Chapter 2 for other reasons.

M.1.1 NFPA Publications. National Fire Protection Association, 1 Batterymarch Park, Quincy, MA 02169-7471.

NFPA 70, National Electrical Code®, 2005 edition.

NFPA 70E, Standard for Electrical Safety in the Workplace, 2004 edition.

M.1.2 Other Publications.

M.1.2.1 ASTM Publication. American Society for Testing and Materials, 100 Barr Harbor Drive, West Conshohocken, PA 19428-2959.

ASTM D 1933, Standard Specification for Nitrogen Gas as an Electrical Insulation Material, 1997.

M.1.2.2 IEEE Publications. Institute of Electrical and Electronics Engineers, 445 Hoes Lane, P.O. Box 1331, Piscataway, NJ 08855-1331.

ANSI/IEEE 43, Recommended Practice for Testing Insulation Resistance of Rotating Machinery, 1974 (Reaff. 2000).

IEEE 100, Authoritative Dictionary of IEEE Standards Terms, 2000.

ANSI/IEEE 315 (ANSI Y32.2-75), *Graphic Symbols for Electrical and Electronics Diagrams*, 1975 (Reaff. 1993).

IEEE 1100, Recommended Practice for Powering and Grounding Sensitive Electronic Equipment, (Emerald Book), 1999.

IEEE 1125, *IEEE Guide to Moisture Measurement and Control in SF*₆ *Gas Insulated Equipment*, 1993.

IEEE C37.122.1, IEEE Guide for Gas Insulated Substations, 1999.

M.1.2.3 NETA Publications. InterNational Electrical Testing Association, P.O. Box 687, Morrison, CO 80465.

Maintenance Testing Specifications for Electrical Power Distribution Equipment and Systems.

M.1.2.4 Other Publications.

M.1.2.4.1 *Power Quality for the Utility Engineer*, Electric Power Research Institute, 1988, p. VIII-12.

M.1.2.4.2 MIL-STD-339, Wiring and Wiring Devices for Combat and Tactical Vehicles, Selection and Installation of, December 7, 1987, available from Defense Automated Printing Service (Customer Service), 700 Robbins Avenue, Building 4D, Philadelphia, PA 19111-5094.

M.1.2.4.3 Van Wagner, et al., *Industrial Power Quality Case Study: General Motors Corporation Buick-Oldsmobile-Cadillac Group Powertrain Group — Livonia Engine*, Detroit Edison, March 1990, p. 43.

M.2 Informational References. (Reserved)

M.3 References for Extracts in Informational Sections. (Reserved)

Click here to view and/or print an Adobe® Acrobat® version of the index for this document